


# Panasonic

## DVD/CD Player / Video Cassette Recorder NV-VP31 / NV-VP26 / NV-VP21

### Operating Instructions

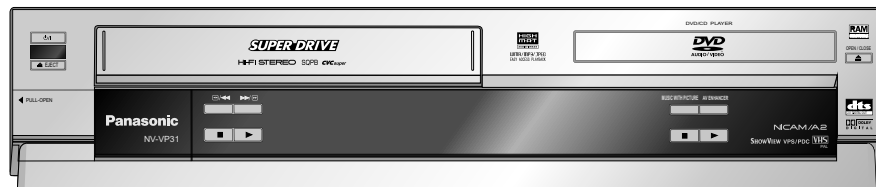

*CVC super*

**SHOWVIEW**

***SUPER DRIVE***



Before connecting the device, operating it or adjusting settings please read these operating instructions completely; especially the safety precautions on pages 2 and 3.

Contents	Page
Inserting Batteries	2
Safety Precautions	3
Front Panel	4
Remote control	5-7
Connecting with RF Coaxial cable	8-9
Setting Time and Date	9
Connecting with a 21-pin Scart cable	10
Connecting with Audio-Videocable	11
External Devices	12
Connectors	13
VCR menu control	14
Manual Setup	
Creating a new station table	15
Changing the name of TV stations	16
Changing the order of TV stations or deleting a station	16
Creating a new station table	17
Shipping condition/factory defaults	17
Menu Others	18
Menu language/ NICAM sound system	19
Recording	20
Timer recording	21-22
Recording with INTELLIGENT TIMER	23
Recording with ShowView	24
Recording with external recording controls	25
Playback	26
General convenient functions	27-28
DVD-QUICK SETUP	29
Playback functions	30-32
VCR-DVD functions	33
Navigation Menu	34-35
HighMAT / CD-Text	36
DISPLAY menu	37-39
SETUP menus	40-41
Information	42
Before requesting service	43-45
Remote control codes	46
Specifications	47
Index / Country codes	Last page

## Dear customer

Thank you for your trust and your decision to purchase this top-quality device. Panasonic is one of the leading manufacturers of entertainment electronics devices. We are sure that you will be completely satisfied with this device.

**Matsushita Electric Industrial Co., Ltd.**

<http://www.panasonic.co.jp/global/>

# Included accessories



Remote control

### AC Mains Lead

RJA0043-1C



### Batteries

AA, UM3 or R6



### RF Coaxial cable



### Operating Instructions


### Guarantee Card

EUR7720X10 (NV-VP31 / NV-VP26)  
EUR7720X30 (NV-VP21)

## Inserting Batteries

The batteries last for about a year, depending on how often you use the remote control unit.

- Do not mix old with new batteries, or batteries of different types.
- Only use batteries without any harmful substances (lead, cadmium, mercury).
- Do not use rechargeable type batteries.
- Remove the batteries if the remote control unit will remain unused for longer periods of time.
- Do not heat or short-circuit the batteries. Immediately remove used-up batteries and replace with batteries of type AA, UM3 or R6.
- Be sure to put in the batteries the right way round (+ and -).

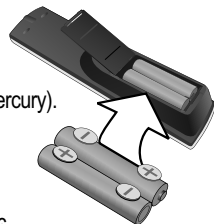

Dispose of **batteries**, packaging material and the unit according to statutory regulations. They must not be thrown into the household refuse.



## WARNING:

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR PRODUCT DAMAGE, DO NOT EXPOSE THIS APPARATUS TO RAIN, MOISTURE, DRIPPING OR SPLASHING AND THAT NO OBJECTS FILLED WITH LIQUIDS, SUCH AS VASES, SHALL BE PLACED ON THE APPARATUS.

## CAUTION!

- DO NOT INSTALL OR PLACE THIS UNIT IN A BOOKCASE, BUILT-IN CABINET OR IN ANOTHER CONFINED SPACE. ENSURE THE UNIT IS WELL VENTILATED. TO PREVENT RISK OF ELECTRIC SHOCK OR FIRE HAZARD DUE TO OVERHEATING, ENSURE THAT CURTAINS AND ANY OTHER MATERIALS DO NOT OBSTRUCT THE VENTILATION VENTS.
- DO NOT OBSTRUCT THE UNIT'S VENTILATION OPENINGS WITH NEWSPAPERS, TABLECLOTHS, CURTAINS, AND SIMILAR ITEMS.
- DO NOT PLACE SOURCES OF NAKED FLAMES, SUCH AS LIGHTED CANDLES, ON THE UNIT.
- DISPOSE OF BATTERIES IN AN ENVIRONMENTALLY FRIENDLY MANNER.

## CAUTION!

THIS PRODUCT UTILIZES A LASER. USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE. DO NOT OPEN COVERS AND DO NOT REPAIR YOURSELF. REFER SERVICING TO QUALIFIED PERSONNEL.

THIS UNIT IS INTENDED FOR USE IN MODERATE CLIMATES.

This product may receive radio interference caused by mobile telephones during use. If such interference is apparent, please increase separation between the product and the mobile telephone.

The socket outlet shall be installed near the equipment and easily accessible or the mains plug or an appliance coupler shall remain readily operable.

**Voltage:** Only use power sources complying with the specifications for this device.

**AC mains lead protection:** Ensure the AC mains lead is connected correctly and not damaged. Poor connection and lead damage can cause fire or electric shock.

**Service:** Never attempt to repair this unit by yourself. If a problem occurs that is not described in these operating instructions, disconnect the power supply and contact your dealer or an authorised after sales service centre.

# Safety Precautions

Install this device in a horizontal position.  
Do not place anything heavy on it.



Keep this device away from high temperatures and avoid changes in temperatures.



Keep away from humidity and dust.




Inside of product

Produktets innsida  
(Norsk)

Tuotteen sisällä  
(Suomi)

CAUTION	- LASER RADIATION WHEN OPEN. DO NOT STARE INTO BEAM. FDA 21 CFR / Class II
CAUTION	- VISIBLE AND INVISIBLE LASER RADIATION WHEN OPEN. AVOID EXPOSURE TO BEAM. IEC9809-1 / Class 3b
ATTENTION	- RAYONNEMENT LASER VISIBLE ET INVISIBLE EN CAS D'OUVERTURE. EXPOSITION DANGEREUSE AU FAISCEAU.
ADVARSEL	- SYNLIG OG USYNLIG LASERSTRÅLING VED ÅBNING. UNNGÅ UDSÆTTELSE FOR STRÅLING.
VARO!	- AVATTAESSA OLET ALTIITINA NÄKYVÄÄ JA NÄKYMATÖN LASERSTRÄLYLLÄ. ÄLÄ KATSO SÄTEESEEN.
VARNING	- SYNLIG OCH OSYNLIG LASERSTRÅLING NÄR DENNA DEL ÄR ÖPPNAD. BETRÄKTA EJ STRÅLEN.
ADVARSEL	- SYNLIG OG USYNLIG LASERSTRÅLING NÄR DEKSEL ÅPNES. UNNGÅ EKSPONERING FOR STRÅLEN.
VORSICHT	- SICHTBARE UND UNSICHTBARE LASERSTRAHLUNG. WENN ABDECKUNG GEÖFFNET NICHT DEN STRAHLEN AUSSETZEN.
注意	- 打开时有可见及不可见激光辐射。避免激光照射。
注意	- ここを開くと可視及び不可視レーザー光が出ます。 ビームを見たり、触れたりしないで下さい。 RQLCA0141

Back of product,  
see page 13.  
På baksiden  
av produktet  
(Norsk).  
Laitteen takaosa  
(Suomi).

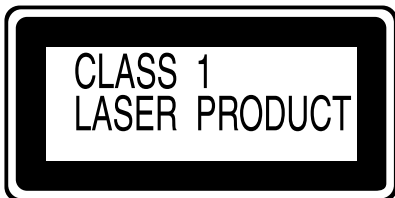

LUOKAN 1 LASERLAITE  
KLASS 1 LASER APPARAT

The model and serial number of this product can be found on the back of the unit. Please note them and keep for future reference.

Model No. .... Serial No. ....

## SUOMI

### VAROITUS:

TULIPALO-, SÄHKÖISUKVAARAN TAI TUOTETTA KOHTAAVAN MUUN VAHINGON VÄHENTÄMISEKSI EI LAITETTA SAA ALTISTAA SATEELLE, KOSTEUDELLE, VESIPISAROILLE TAI ROISKEELLE, EIKÄ NESTETTÄ SISÄLTÄVIÄ ESINEITÄ, KUTEN ESIMERKIKSI MALJAKOITA, SAAASETTAA LAITTEEN PÄÄLLE.

### VAROITUS!

- ÄLÄ ASENNATA TAI LAITA TÄTÄ LAITETTA KABINETTITYYPPISEEN KIRJAKAAPPIN TAI MUUHUN SULJETTUUN TILAAN, JOTTA TUULETUS ONNISTUISI. VARMISTA, ETTÄ VERHO TAI MIKÄÄN MUU MATERIAALI EI HUONONNA TUULETUSTA, JOTTA VÄLTETTÄISIIN YLIKUUMENEMISESTA JOHTUVA SÄHKÖISKU TAI TULIPALOVAARA.
- ÄLÄ PEITÄ LAITTEEN TUULETUSAUKKOJA SANOMALEHDELLÄ, PÖYTÄLINALLA, VERHOLLA TAI MUULLA VASTAAVALLA ESINEELLÄ.
- ÄLÄ ASETA PALAVAA KYNTTILÄÄ TAI MUUTA AVOTULEN LÄHDETTÄ LAITTEEN PÄÄLLE.
- HÄVITÄ PARISTOT LUONTOA VAHINGOITTAMATTOMALLA TAVALLA.

### VAROITUS!

LAITTEEN KÄYTTÄMINEN MUULLA KUIN TÄSSÄ KÄYTTÖOHJEESSA MAINITULLA TAVALLA SAATTAA ALTISTAA KÄYTTÄJÄN TURVALLISUUSLUOKAN 1 YLITTÄVÄLLE NÄKYMÄTTÖMÄLLE LASERSÄTEILYLLE.

TÄMÄ LAITE ON TARKOITETTU KÄYTETTÄVÄKSI LEUDOSSA ILMASTOSSA.

Tämä tuotteen toimintaan saattaa tulla häiriöitä lähellä olevasta matkapuhelimesta. Mikäli matkapuhelimesta johtuvia häiriöitä ilmenee, siirrä matkapuhelin mahdollisimman kauas laitteesta jotta häiriöt poistuvat.

Laitte tulee asettaa lähelle verkkopistorasiaa ja pistokkeen täytyy olla sellaisessa asennossa, että siihen on helppo tarttua ongelman sattuessa.

## NORSK

### ADVARSEL:

FOR Å REDUSERE FAREN FOR BRANN, ELEKTRISK STØT ELLER SKADER PÅ PRODUKTET, MÅ DETTE APPARATET IKKE UTSETTES FOR REGN, FUKTIGHET, VANNDRÅPER ELLER VANNSPRUT. DET MÅ HELLER IKKE Plasseres GJENSTANDER FYLT MED VANN, SLIK SOM BLOMSTERVASER, OPPÅ APPARATET.

### ADVARSEL!

- APPARATET MÅ IKKE Plasseres I EN BOKHYLLE, ET INNEBYGGET KABINETT ELLER ET ANNET LUKKET STED HVOR VENTILASJONSFORHOLDENE ER UTILSTREKKELIGE. SØRG FOR AT GARDINER ELLER LIGNENDE IKKE FORVERRER VENTILASJONSFORHOLDENE, SÅ RISIKO FOR ELEKTRISK SJOKK ELLER BRANN FORÅRSAKET AV OVERHETING UNNGÅS.
- APPARATETS VENTILASJONSÅPNINGER MÅ IKKE DEKKES TIL MED AVISER, BORDDUKER, GARDINER OG LIGNENDE.
- Plasser IKKE ÅPEN ILD, SLIK SOM LEVENDE LYS, OPPÅ APPARATET.
- BRUKTE BATTERIER MÅ KASSERES UTEN FARE FOR MILJØET.

### ADVARSEL!

DETTE PRODUKTET ANVENDER EN LASER. BETJENING AV KONTROLLER, JUSTERINGER ELLER ANDRE INNGREP ENN DE SOM ER BESKREVET I DENNE BRUKSANVISNING, KAN FØRE TIL FARLIG BESTRÅLING. DEKSLER MÅ IKKE ÅPNES, OG FØRSØK ALDRI Å REPARERE APPARATET PÅ EGENHÅND. ALT SERVICE OG REPARASJONSARBEID MÅ UTFØRES AV KVALIFISERT PERSONELL.

DETTE APPARATET ER BEREGNET TIL BRUK UNDER MODERATE KLIMAFORHOLD.


Dette apparatet kan under bruk fange opp høyfrekvente forstyrrelser forårsaket av en mobiltelefon som benyttes i nærheten. Hvis slik forstyrrende påvirkning konstateres, bør mobiltelefonen benyttes på større avstand fra dette apparatet.

Utstyret bør plasseres i nærheten av AC-stikkontakten, og sjekkes må være lett tilgjengelig hvis det skulle oppstå problemer.

# Front Panel

VCR= Video Cassette Recorder

Detailed information is available on the specified pages.

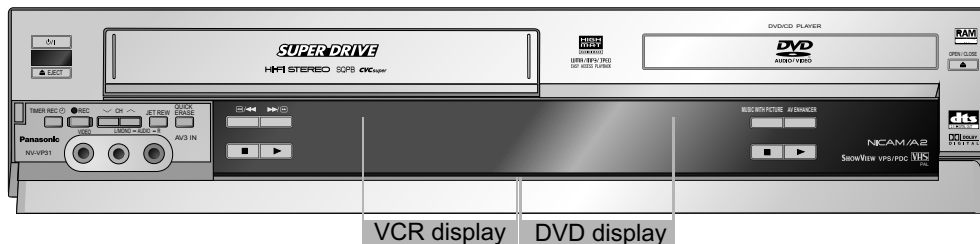

## Device control

	<b>Stand-by/on switch</b> $\text{O/I}$	<b>MUSIC WITH PICTURE</b>	<b>MUSIC WITH PICTURE</b>	
	To eject the cassette			
	Opens and closes the disc tray	<b>AV ENHANCER</b>	Automatically optimises and adapts the audio and video settings to the disc used. The menus [Picture Menu] and [Audio Menu] of DVD DISPLAY are not available when this function is enabled.	
	To erase a cassette			

Description of some function buttons on the front panel is to be found under Remote control.

## Display

	Active picture signal. The symbol appears on the VCR or DVD display. Use the <b>VHS/DVD OUTPUT</b> button to switch between picture signal. To directly change the VCR or DVD output use the VHS, DVD toggle switches in combination with a function button (e.g. <b>PLAY</b> $\blacktriangleright$ ).		Playback
	A video cassette is in.		Pause playback (still image)
	A disc is in.		Slow motion
			Forward/Backward search
			VCR: Fast winding

# Remote control

## General functions

### Stand-by/on switch

Press to switch the unit from on to stand-by mode or vice versa.

In stand-by mode, the unit is still consuming a small amount of power.

Switching this appliance into stand-by mode does not disconnect it from the mains.

Press the button a couple of times to select Sound mode.

**VCR:** stereo (L R), left channel (L -), right channel (- R), mono (- -) playback.

**DVD:** Select the appropriate audio channel (L R) or track, which depends on the disc you use.

**Output signal select button** to toggle between VCR and DVD (for AV1, VCR/DVD OUT)

### Numeric keypad

Direct input via numeric key pad (18= )

**CANCEL/RESET:** Undoes entries or selections

### To eject cassette or disc


Press **STOP** for more than 3 seconds.

OSD menu selection buttons.

- **DVD:** to select JPEG, WMA or MP3 groups ( ) or titles ( .
- **ENTER:** Selects or saves a setting.

**VCR:** Press the button repeatedly to display the time, tape counter or remaining tape.

**DVD:** To display the DISPLAY menu.

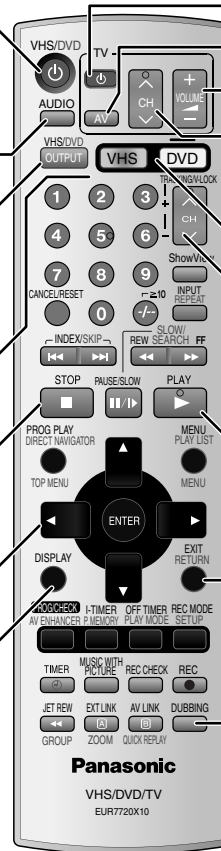

## TV functions

TV set On/Off switch.

TV set AV input selection.

TV set volume control.

To select the respective TV program memory location.

Remote control's VHS/DVD toggle switches to toggle between VCR and DVD functions.

VCR functions are enabled.

DVD functions (blue labels) are enabled.

Channel selector

Press **PLAY** to start playback.

Quits a menu.

To copy a DVD RAM to VHS cassette.

 



## Remote control VCR functions


### Tape counter

The tape counter will be automatically reset to [0:00:00] when you insert a video cassette.


- Or you can press the **CANCEL/RESET** button on the remote control unit to manually reset the tape counter to [0:00:00].


Finding the start of a recording.  27

  Pause a recording session.  
Still or slow motion playback.  27

Press **STOP**  to stop recording, playing back or winding.

 
Plays back programmed recordings.  22

 
Defines programmes transmitted to the same program memory location at the same time.  23


To display the Timer recording menu.  21


Activates the recording timer.

### MUSIC WITH PICTURE

  For fast rewinding to the beginning of the tape.  27

 To record using the external recording level control.  
**A:** To delete tagged station.  25

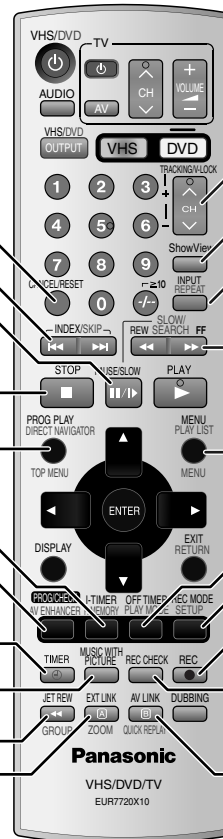



Tracking control of disturbed images during playback  26


ShowView menu  24


### AV input select button

 Toggles between input A1, A2, A3 (front) or dc (DVD internal).

 Goes from Stop into Fast Forward or Fast Rewind mode. Forward and backward search during playback.  27

Displays the VCR menu.  14

  Switches the unit into stand-by mode after the set time.  26

Sets the tape speed.  20

Video recording

You will be displayed either the Timer recording menu or an information on the current recording.

Toggles between TV reception and video playback channel.  
**B:** Move tagged station.

# Remote control DVD functions

## Skip chapters, titles or frames

- Press **SKIP** during playback or in pause mode.

## Stop playback

- Press **STOP** ■ twice.

## Resume

- Press **STOP** ■ during playback to store the current position on the disc.
- Press **PLAY** ► while [▷] is flashing on the display. Playback will be resumed at the point where you stopped it.

## Cancel the Resume function

- Press **STOP** ■ until [▷] is disappears from the display.
- \* Opening the disc tray or the unit going into stand-by mode also clears the stored position on the disc.

Displays the DVD-RAM menu.

Displays the main menu.

Resumes playback at stored position following an interruption. 31

## AV ENHANCER 39

## Zoom


- Press **ZOOM** during playback. Press ▼▲ to set the zoom factor, to select a Zoom mode: **ENTER** plus ◀▶.

Restore factory setting

- Press **ZOOM** until x1.00 is shown. The zoom functionality may be restricted depending on the disc format.

Group Search 38

For some disc formats not all of the described DVD functions are available.

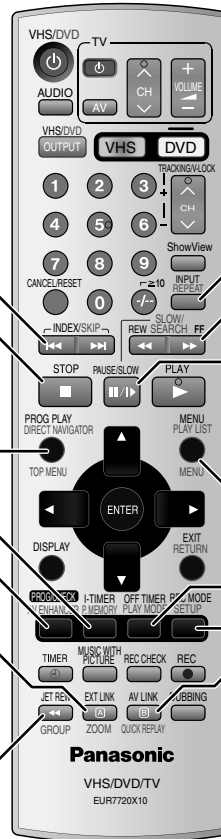

## Repeat

- Press **REPEAT** during playback. There is no mode for repeatedly playing back entire discs.

## Slow motion (backwards/forwards)

- Press **SLOW** in Pause mode. Keeping the button pressed increases the speed of search at 5 steps.
- Press **PLAY** ► to resume normal playback.
- \* VCDs do not support reverse slow motion playback.

## Search

- Press **SEARCH** during playback. Keeping the button pressed increases the speed of search at 5 steps.

## Pause playback (still image)

- Press **PAUSE** during playback. Playback stops at the current picture frame.
- Press **PLAY** ► to resume playback.

Displays a Playlist  
Displays the menu.

Random Playback/Program Play 31 32


Displays the SETUP menu. 40

## Scene replay

- Press **QUICK REPLAY** during playback. Every push of the button replays a couple of seconds of the current track or programme. However, you cannot go back to before the beginning of a title.
- \* **QUICK REPLAY** is not supported by all discs.

## Connecting with RF Coaxial cable

You can connect the VCR/DVD to your TV set by using a RF coaxial cable.

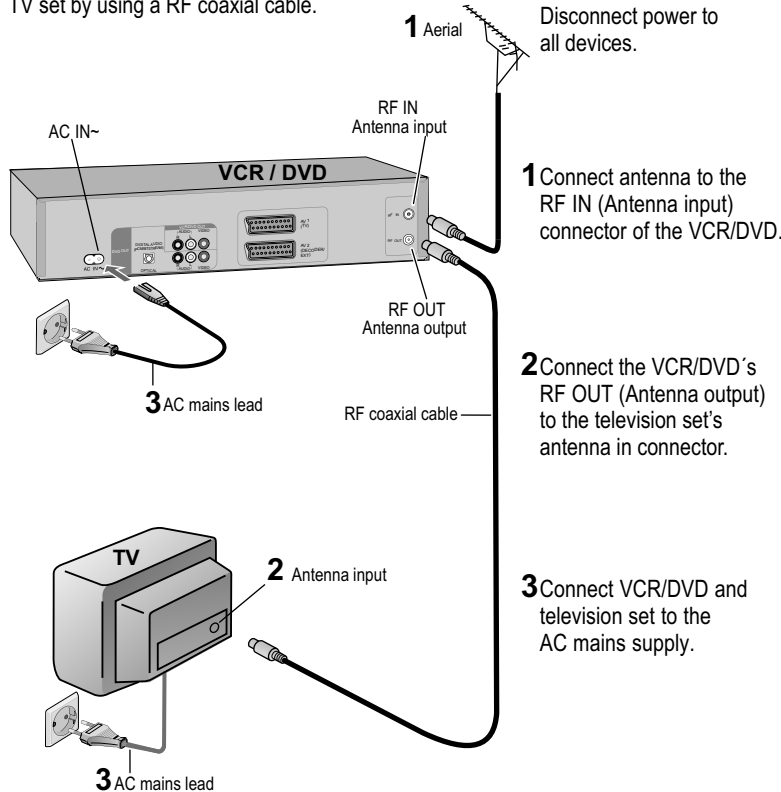

Follow the steps described below.

## VCR Auto Setup with RF Coaxial cable

(Automatic tuning)

Country		
Belgien	Italia	Sverige
Belgique	Nederland	Schweiz
België	Norge	Suisse
Danmark	Österreich	Svizzera
España	Deutschland	others
Ελλάδα	Portugal	
France	Suomi	

\* If the Country menu does not appear after turning the device on, you may reset the device to its factory defaults (page 17). Upon doing so the VCR Auto Setup will start again.

### The Country menu appears.

- With the arrow buttons ◀▶ select the according country, and confirm with **ENTER**. Automatic tuning for all receivable TV stations begins. Approximate duration is 5 minutes.

### If menu Clock set appears

If time and date are not transmitted by a TV station, they must be set manually.

- Enter Time and Date with ▲▼◀▶ or ① ② ③...⑩, then save with **ENTER**.
- \* Mind that a wrong date or time will influence the programmed recording of TV programmes (don't forget to change summer time and winter time).


Optionally, you can have a QUICK SETUP following VCR Auto Setup for the DVD player.



## Channel tuning / Correcting interferences

If you decide to just use the RF coaxial cable to connect the TV set you must adjust the video output channel with the TV set's input channel.

### Screen Display

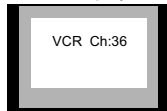

Test pattern


### VCR Display



RF Output Channel



RF Output Channel

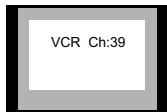

Test pattern

- Turn on your television set.
- Turn on the VCR by pressing the **Stand-by/on switch**.
- Press **MENU** for about 5 seconds. The preset channel is displayed on the VCR-display.
- Adjust television set to show the test picture.  
If there are any interferences select another channel on the television set and the VCR.


- Press the **CH** button to change the channel (e.g. Channel 39). Fine-tune television set until a clear picture is displayed.



- Confirm with **ENTER**.  
Continue VCR Auto Setup (Automatic tuning).


- \* The VCR will not initiate the VCR Auto Setup if it was run once before.  
Reset the device to factory defaults (page 17). Upon doing so you will be able to start VCR Auto Setup again.
- \* Press **EXIT** to abort VCR Auto Setup. You can run VCR Auto Setup again at another time.

If a 21-pin Scart cable is used, please adjust the following settings to disable the VCR's RF-output channel.

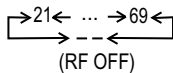


- Press **MENU** for about 5 seconds. The preset channel will be displayed on the VCR-display.
- Press channel select buttons **CH** or **0** to invoke [- -].
- Confirm with **ENTER**.

## Setting Time and Date

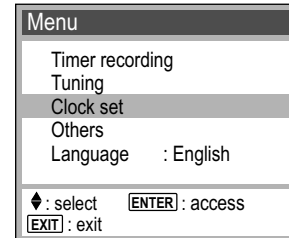

- Press **MENU**, the Menu screen appears.
- With **▲▼** select Clock set.
- Press **ENTER**.


### Automatic tuning (not for VP21)

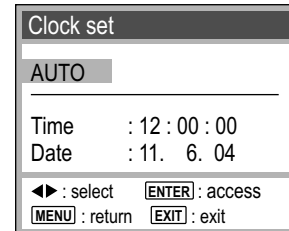

- Select [AUTO] and confirm with **ENTER**.


If the device does not find a TV station broadcasting the time signal, set Time and Date manually.

### Manual tuning

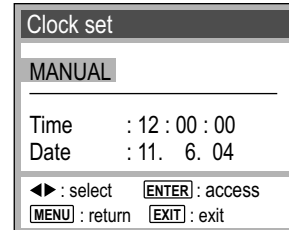

- Select [MANUAL] and confirm with **ENTER**.
- With **▲▼◀▶** or **1 2 3 ... 0** enter Time and Date, then store with **ENTER**.

## Connecting with a 21-pin Scart cable

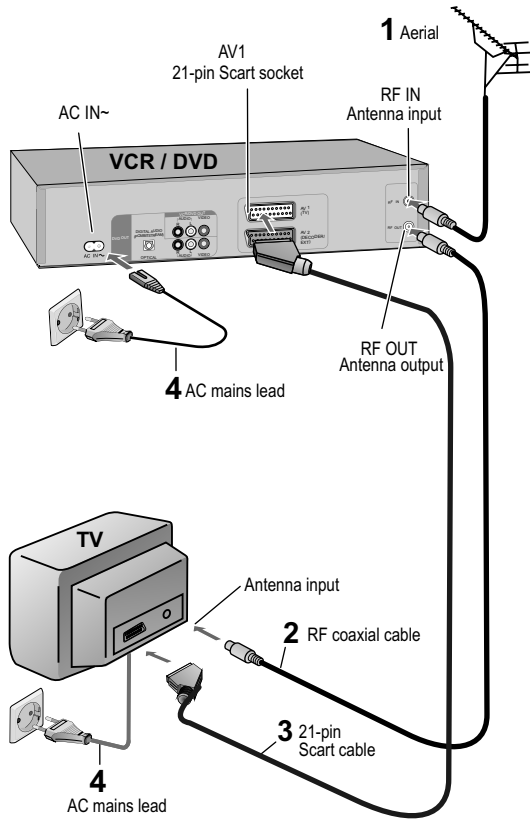

Follow the steps described below.

Disconnect power to all devices.

- 1 Connect antenna to the RF IN (Antenna input) connector of the VCR/DVD.
- 2 Connect the VCR/DVD's RF OUT (Antenna output) to the television set's antenna input connector.
- 3 Connect the VCR/DVD's AV1 socket (21-pin Scart socket) to the TV set's Scart In socket.
- 4 Connect VCR/DVD and TV set to the AC mains supply.

## VCR Auto Setup with 21-pin Scart cable (Automatic tuning)

Country		
Belgien	Italia	Sverige
Belgique	Nederland	Schweiz
België	Norge	Suisse
Danmark	Österreich	Svizzera
España	Deutschland	others
Ελλάδα	Portugal	
France	Suomi	

\* If the Country menu does not appear after turning the device on, you may reset the device to its factory defaults (page 17). Upon doing so the VCR Auto Setup will start again.

- Turn on your television set.
- With the **Stand-by/on switch** turn on the VCR/DVD. The Country menu appears.
- With the arrow buttons **◀▶** select the according country, and confirm by pressing **ENTER**. Automatic tuning for all receivable TV stations begins. Approximate duration is 5 minutes.

### If menu Clock set appears


If time and date are not transmitted by a TV station, they must be set manually.

- Enter Time and Date with **▲▼◀▶** or **① ② ③...④**, then save with **ENTER**.
- \* Mind that a wrong date or time will influence the programmed recording of TV programmes (don't forget to change summer time and winter time).

Optionally, you can have a QUICK SETUP following VCR Auto Setup for the DVD player.

## Connecting with Audio-Videocable

Follow the steps described below.

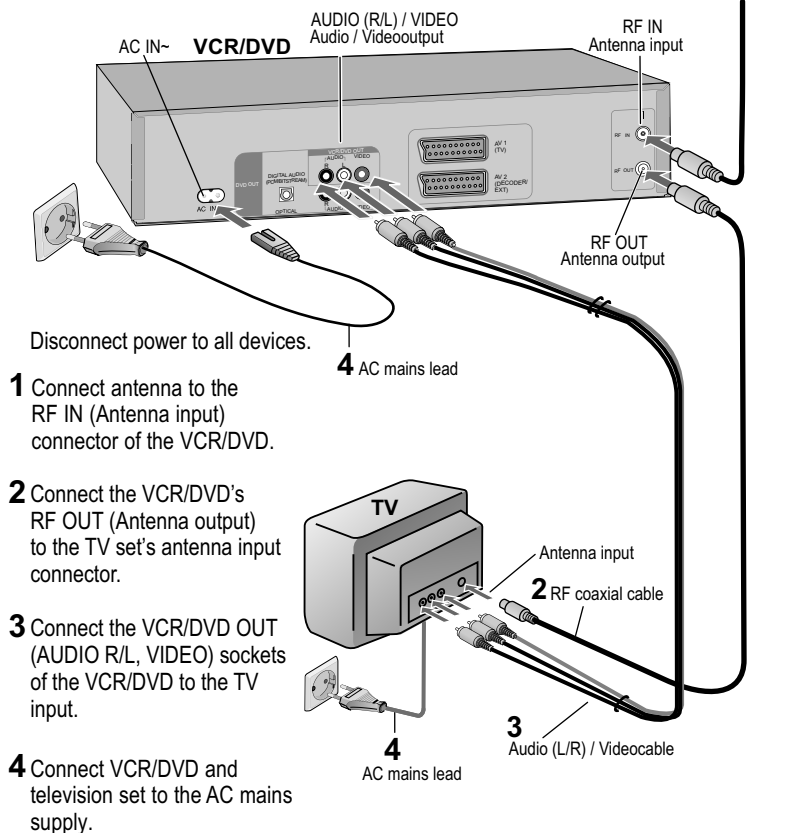

## VCR Auto Setup with Audio-Videocable

(Automatic tuning)

Country		
Belgien	Italia	Sverige
Belgique	Nederland	Schweiz
België	Norge	Suisse
Danmark	Österreich	Svizzera
España	Deutschland	others
Ελλάδα	Portugal	
France	Suomi	

\* If the Country menu does not appear after turning the device on, you may reset the device to its factory defaults (page 17). Upon doing so the VCR Auto Setup will start again.

- Turn on your television set.
- With the **Stand-by/on switch** turn on the VCR/DVD. The Country menu appears.
- With the arrow buttons **◀▶▲▼** select the according country, and confirm by pressing **ENTER**. Automatic tuning for all receivable TV stations begins. Approximate duration is 5 minutes.

### If menu Clock set appears

If time and date are not transmitted by a TV station, they must be set manually.

- Enter Time and Date with **▲▼◀▶** or **1 2 3... 0**, then save with **ENTER**.
- \* Mind that a wrong date or time will influence the programmed recording of TV programmes (don't forget to change summer time and winter time).

Optionally, you can have a QUICK SETUP following VCR Auto Setup for the DVD player.







## External Devices

Others		1 / 2
Tape length	: AUTO (◀E-240)	
AV2	: EXT	
TV system	: AUTO	
SQPБ	: AUTO	
OSD	: 4 : 3	
VCR/DVD OUTPUT	: AUTO	
RFC system	: DK	

Others		1 / 2
Tape length	: AUTO (◀E-240)	
AV2	: DECODER	
TV system	: AUTO	
SQPБ	: AUTO	
OSD	: 4 : 3	
VCR/DVD OUTPUT	: AUTO	
RFC system	: DK	

Tuning					
Pos	Name	Ch	Pos	Name	Ch
1	ARD	7	6	VOX	8
2	ZDF	4	7	PRO7	95
3	N3	2	8	RTL2	85
4	RTL	12	9	PREM	97
5	SAT1	13	10	SRTL	98

 : delete	 : move
 : select	 : access
 : return	 : exit

### Connecting a Set Top Box, satellite receiver, decoder or a second recorder.

You can connect a Set Top Box to receive digital broadcast by antenna (DVB-T) signals, a satellite receiver (digital/analogue) or a decoder to decrypt encrypted programmes.

Disconnect power to all devices.

Connect the external device to the AV2 input of the VCR/DVD by using a 21-pin Scart cable.

Connect VCR/DVD, television set and the external unit to the AC mains supply and switch them on.


- Press **MENU**.
- With ▼ select the Others menu and confirm with **ENTER**.

### Set Top Box, satellite receiver, second recorder:

- Select AV2 with ▼, and set to [EXT] with ◀▶.

### Decoder:

- Select AV2 with ▼, and set to [DECODER] with ◀▶.  
Press **MENU** to return to the Menu screen.  
When using a decoder switch channel to decoder.

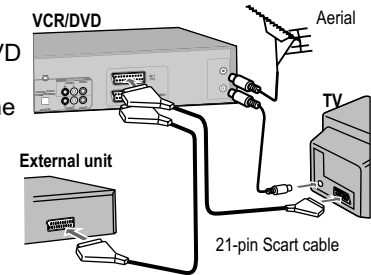




### Setting the channel to decoder

- Press **MENU**.
- With ▼ select menu Tuning.  
and confirm with **ENTER**.
- With **ENTER** select Manual.
- With ◀▶, ▲▼ select the encrypted channel and confirm with **ENTER**.
- With ▼ select Decoder, then select [ON] with ◀▶.
- Press **MENU** to return to the Tuning menu.

Pos	: 9
Name	: PREM
Channel	: 97
Fine tuning	: AUTO
Decoder	: <b>ON</b>
Video system	: PAL
Mono	: OFF
Audio mode	: DK

 : select	
 : return	 : exit

# Connectors

## Before connecting

- Verify that all devices to be connected up are unplugged from the AC mains.

## Digital connectors (OPTICAL)

To play programmes with a 5.1-channel surround sound, connect the digital audio output ( OPTICAL ) with an external Multi-channel Dolby Digital Decoder, for example.



## Prerequisites for making recordings with an external digital recorder

- The original disc must not be copy-protected.
- The recorder must be able to process signals with a scanning frequency of 48 kHz/16 bit.
- You cannot make MP3/WMA recordings.

- \* Adapt the Audio SETUP menu settings to the following:  
 PCM Digital Output: [Up to 48 kHz]  
 Dolby Digital / DTS Digital Surround / MPEG: [PCM]
- \* Deactivate function Advanced Surround.



Push the jack all the way into the socket with this side facing up.

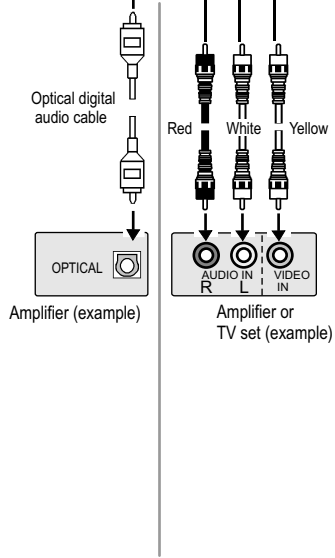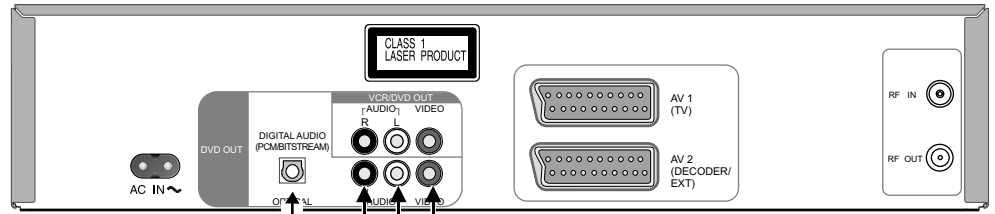

## DVD connectors

### Connection to a TV set without a scart socket or to an amplifier component (home cinema):

To be able to hear sound in stereo or Dolby Pro Logic quality, attach an amplifier or an analogue audio component supporting these features.

To avoid sound quality problems deactivate function Advanced Surround when you attach an amplifier with Dolby Pro Logic functionality.




## Connection to AV3 (front panel)

- Connect your external unit (e.g. a video camcorder) with the front panel input. Just seize the L/Mono port for mono recording of the audio signal.
- Use INPUT to select A3.



# VCR menu control

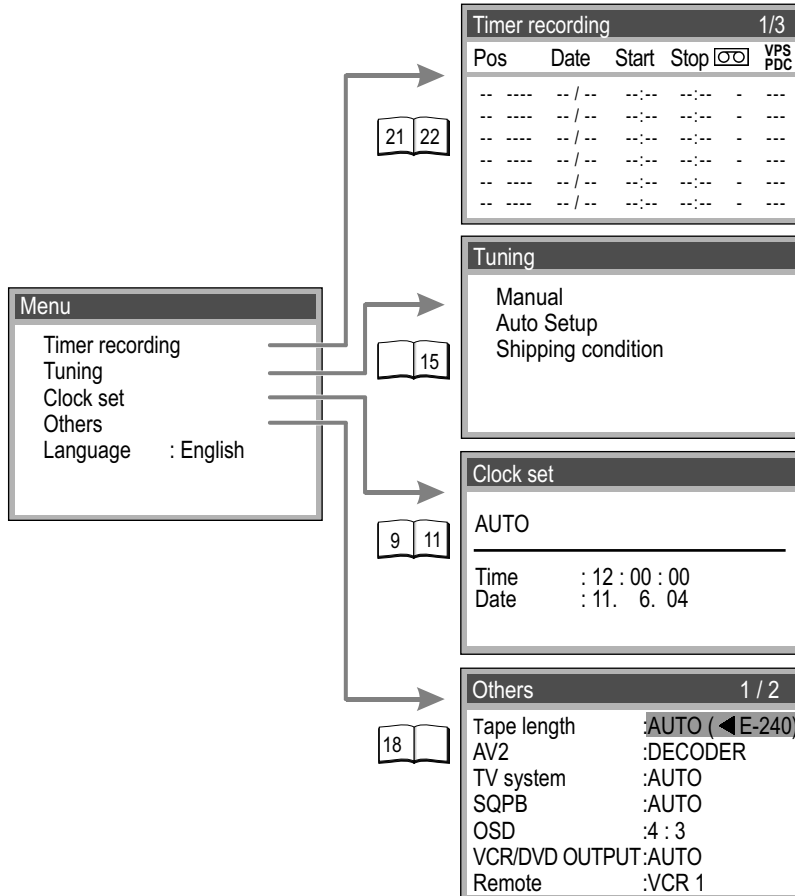

The cursor buttons on the remote control unit allow you to navigate through menus and change selected entries.

- Press **MENU**, the menu screen appears.
- With **▲▼** select the desired sub-menu.
- Press **ENTER**, the selected menu appears.
- With **▲▼** select the entry you would like to change, then confirm with **ENTER**.
- Make your changes following the menu steps.
- With **MENU** return to the previous menu.
- Press **EXIT** to leave the menu.
- \* Not every model supports all of the functions.

# Manual Setup

Tuning					
Pos	Name	Ch	Pos	Name	Ch
1	ARD	7	6	VOX	8
2	ZDF	4	7	----	---
3	N3	2	8	----	---
4	RTL	12	9	----	---
5	SAT1	13	10	----	---

: delete	: move
: select	: access
: return	: exit

Pos	: 7
Name	: ----
Channel	: ---
Fine tuning	: AUTO
Decoder	: OFF
Video system	: AUTO
Mono	: OFF
Audio mode	: DK

: select	: exit
: return	

## Creating a new station table

- Press **MENU**, the Menu screen appears.
  - Select the Tuning menu by pressing **▼** and confirming with **ENTER**.
  - Confirm Manual by pressing **ENTER**.
  - With the **◀▶** buttons, select an open storage position.
  - Press **ENTER**.
- 
- Enter channel with the **◀▶** or **1 2 3...0** buttons.  
Channel tuning starts. Wait until the desired station has been set.  
Fine tuning may help to minimise any interference.
  - Press **MENU** to return to the Tuning screen.

## Options available for tuning the channels

<b>Pos</b>		Station position.
<b>Name</b>		Station name setting.
<b>Channel</b>		Channel setting.
<b>Fine tuning</b>	AUTO / MAN.	Fine tuning of disturbed picture.
<b>Decoder</b>	ON / OFF	For reception of encrypted channels.
<b>Video system</b>	AUTO / PAL / MESECAM	TV system setup.
<b>Mono</b>	ON / OFF	Switch stereo to mono.
<b>Audio mode</b>	BG / I / DK	Audio system set-up

# Manual Setup

Tuning					
Pos	Name	Ch	Pos	Name	Ch
1	ARD	7	6	VOX	8
2	ZDF	4	7	PRO7	95
3	N3	2	8	RTL2	85
4	RTL	12	9	KABE	97
5	SAT1	13	10	SRTL	98

**[A]** : delete      **[B]** : move  
**[Left]** : select      **[ENTER]** : access  
**[MENU]** : return      **[EXIT]** : exit

Pos	:	1
Name	:	ARD
Channel	:	7
Fine tuning	:	AUTO
Decoder	:	OFF
Video system	:	AUTO
Mono	:	OFF
Audio mode	:	DK

**[Left]** : select  
**[MENU]** : return      **[EXIT]** : exit

Tuning					
Pos	Name	Ch	Pos	Name	Ch
▶ 1	ARD	7	6	VOX	8
2	ZDF	4	7	PRO7	95
3	N3	2	8	RTL2	85
4	RTL	12	9	KABE	97
5	SAT1	13	10	SRTL	98

**[A]** : delete      **[B]** : move  
**[Left]** : move      **[ENTER]** : store  
**[MENU]** : return      **[EXIT]** : exit

## Changing the name of TV stations




- Press **MENU**, the Menu screen appears.
  - With **▼** select the Tuning menu, confirm with **ENTER**.
  - Confirm Manual with **ENTER**.
  - With **◀▶▲▼** select the name entry.
  - Press **ENTER**.
- 
- With **◀▶** select the name entry.  
The cursor will mark the first letter **A**RD.
  - With **▲▼** change that letter.
  - With **▶** select the next letter **A**RD.
  - Press **MENU**.  
The new name will be stored in Tuning.

## Changing the order of TV stations or deleting a station

- Press **MENU**, the Menu screen appears.
- With **▼** select the Tuning menu, confirm with **ENTER**.
- Confirm Manual with **ENTER**.
- Press **[B]**. An arrow to the left will mark the selected field.
- With **◀▶▲▼** move the station to any other desired location.
- Press **ENTER**.
- Press **[A]** to delete the station.



## Manual Setup

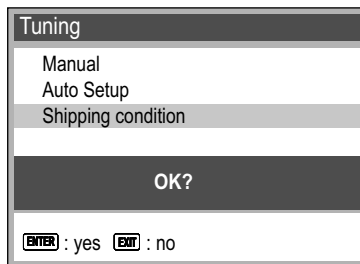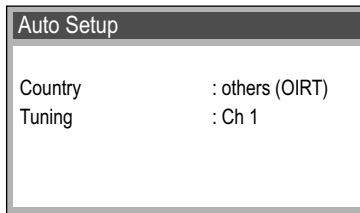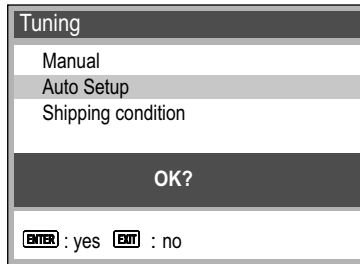

### Creating a new station table

- Press **MENU**, the Menu screen appears.
- With ▼ select the Tuning menu, confirm with **ENTER**.
- With ▼ select Auto Setup, confirm with **ENTER**.
- Press **ENTER** to confirm.

The Country menu appears.

- Select country with ◀▶▲▼ and confirm with **ENTER**.

The Auto Setup menu will be displayed.

The Automatic Tuning will start.

### Shipping condition/factory defaults

- Press **MENU**, the Menu screen appears.
  - With ▼ select the Tuning menu, confirm with **ENTER**.
  - With ▼ select Shipping condition and confirm with **ENTER**.
  - Press **ENTER** to confirm.
- \* To restore factory defaults briefly unplug the AC mains lead. Afterwards you will have to run VCR Auto Setup again.

# Manual Setup

VHS DVD

## Menu Others

- Press **MENU**
- Select Others **▲▼**
- Confirm with **ENTER**
- Select the Menu item **▲▼**
- Changes with **◀▶**
- Press **MENU** to quit the menu.


Others		1 / 2
Tape length	: AUTO (◀E-240)	
AV2	: DECODER	
TV system	: AUTO	
SQPB	: AUTO	
OSD	: 4 : 3	
VCR/DVD OUTPUT	: AUTO	
RF system	: DK	

Press **▲▼** to display the 2nd screen.

Others		2 / 2
Remote	: VCR 1	
EXT LINK	: 2	

<b>Tape length</b>	Sets the tape length of the cassette you use. <b>AUTO</b> (◀E - 240), E - 195, E - 260, E - 300
<b>AV2</b>	Selects the type of external unit connected to the VCR/DVD's AV2 socket. <b>DECODER</b> : If a decoder is connected. <b>EXT</b> : If another video recorder or satellite receiver is connected.
<b>TV system</b>	<b>AUTO</b> : Automatically detects PAL or MESECAM. <b>PAL</b> : If you are using the PAL system. <b>MESECAM</b> : If you are using the MESECAM system.
<b>SQPB</b>	<b>AUTO</b> : The VCR automatically detects the type of recording. <b>ON</b> : Plays back S-VHS format cassettes in quasi S-VHS format. <b>OFF</b> : Plays back cassettes recorded in VHS format only.
<b>OSD</b>	<b>4 : 3</b> : Displays appear at the edge of the screen displays not visible on 16:9 format screens). <b>WIDE</b> : Displays appear at the edge of the screen (displays appear in the middle on 4:3 format screens). <b>OFF</b> : No on-screen displays.
<b>VCR/DVD OUTPUT</b>	<b>AUTO</b> : When you press a function button the unit will activate the relevant video or DVD output, depending on the setting of the <b>VCR/DVD</b> toggle switch. <b>MANUAL</b> : Press the <b>VCR/DVD OUTPUT</b> button to manually toggle between the video and DVD outputs.
<b>RF system</b>	<b>DK / I / BG</b> : Sets the audio standard of RF converter output.
<b>Remote</b>	The device and the remote control may be switched to alternative frequencies. In the Menu select VCR1 or VCR2 to switch the device settings. Then press and hold the <b>ENTER</b> and <b>1</b> or <b>2</b> keys of the remote control, to switch it to the according device frequency.
<b>EXT LINK</b>	<b>2</b> : External recording control by satellite receivers or digital receivers (video signal). <b>1</b> : For digital receivers transmitting a special recording control signal, e.g. the F.U.N. receiver (TU-DSF41).

# Manual Setup

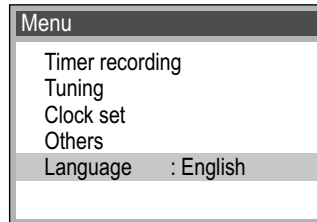

## Menu language

The language set for the Video menu does not depend on the DVD SETUP menu language




- Press **MENU**
- Select Language **▲▼**
- Select Language **◀▶**
- Press **EXIT** to quit the Menu screen.

## NICAM sound system


This unit can receive programmes transmitted together with NICAM sound. NICAM is a digital sound system featuring two audio channels that can be set to either two-channel stereo sound or two separate mono channels (M1 and M2).

**OFF:** Records stereo sound.



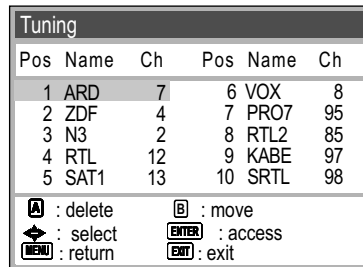


**ON :** Used during NICAM programmes to record normal (mono) sound on the Hi-Fi audio tracks or if the stereo sound is bad.

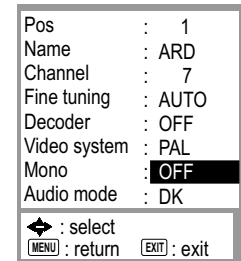

- Press **MENU**
- Select Tuning **▼**, press **ENTER** to confirm
- Select Manual, press **ENTER** to confirm
- Select the channel **◀▶▲▼**, press **ENTER** to confirm
- Mono to [ON] or [OFF] **◀▶**.




## Recording

Recording functions	
<b>REC</b>	
Direct recording of the VCR - TV picture.	
<b>Timer recording</b>	
Recording controlled by timer.	
<b>Recording with INTELLIGENT TIMER</b>	
Repeating programmed recordings.	
<b>Recording with ShowView</b>	
Programming recordings using the ShowView function.	
<b>Recording with external recording controls</b>	
Recording is controlled by an external device.	



Set the TV set to the video channel and insert a cassette into the VCR; make sure that the cassette's protection tab is intact.

- Select channel to record from.
  - When recording from an external device, select from Scart inputs AV1, AV2, or the front panel input AV3.
- Press **REC** to start recording.
- Press **STOP**  to stop recording.
- Press **PAUSE/SLOW** to pause recording.
  - To protect the video heads this function will be terminated after approx. 5 minutes.
- Press **PAUSE/SLOW** again to resume recording.



### Tape speed

- Prior to starting the recording session, press **REC MODE** to set the tape speed.



- |                                   |                           |
|-----------------------------------|---------------------------|
| <b>SP</b> : normal recording time | - optimal picture quality |
| <b>LP</b> : double recording time | - simple picture quality  |
| <b>EP</b> : triple recording time | - reduced picture quality |

When playing back LP or EP recordings, interferences may occur when using certain types of cassettes (e.g. Type E-300). These are not indicative of a VCR malfunction.


## Timer recording

Timer recording						1 / 3
Pos	Date	Start	Stop	VPS PDC		
1	ARD	31/12	10:30	11:30	SP	ON
1	ARD	31/12	11:30	12:30	SP	ON
2	ZDF	31/12	12:30	13:30	SP	ON
4	RTL	31/12	13:30	14:30	SP	ON
6	VOX	31/12	14:30	15:30	SP	ON
--	----	-/-	--:--	--:--	SP	---

 : select    **ENTER** : store  
**CANCEL** : delete    **EXIT** : exit




The Timer recording allows you to programme the recording time of TV programmes up to 1 month in advance. Use the on-screen menu to programme a maximum of 16 recordings.

- Press **PROG/CHECK** and select a free storage position **▲▼**.
- Confirm with **ENTER**.
- Select a station **▲▼**, and use **▶** to set date, week or weekday **▲▼**.
- Then enter start- and stop-time **▲▼**, **▶**.
- Hold buttons down to change time in 30-minute steps.
- Select tape speed: **A** (Automatic), **SP**, **LP**, **EP** **▲▼**, **▶**.
- The VPS/PDC settings may be changed with **▲▼** (does not apply to VP21).
- Press **ENTER** to save timer programme.
- Repeat these steps for further recordings you may wish to programme.
- Press **TIMER** to activate the VCR's timer mode.  
Make sure the VCR symbol  is displayed.

\* Do not forget to verify that there is enough tape left. The length of the recording must not exceed the tape left on the video cassette.



### Quitting the timer mode

- Press **TIMER**, the VCR symbol  will turn off.  
You can now play back a cassette or make a manual recording. Press **TIMER** again to reactivate the previously entered timer programme.

## Timer recording

### Checking the timer programme

- Press **PROG/CHECK**, the Timer recording menu appears.
- Press **PROG/CHECK** again or **EXIT** to quit the menu.

### Changing or cancelling a timer programme

- Press **PROG/CHECK**, the Timer recording menu appears.
- With **▲▼** select the entry you would like to edit, confirm with **ENTER**.
- Modify entries with **◀▶▲▼** and confirm with **ENTER**.
- Press **CANCEL/RESET** to delete a recording.

### Playing back programmed recordings

- Press **PROG PLAY**.  
The device will rewind to the beginning of the recording and automatically start playing it back.

### Automatic SP/LP selection

**A:** If there is not enough tape left at the beginning of a timer programme to complete it, the SP/LP function will automatically run the tape at LP speed.

This ensures that the entire programme will be recorded. If the LP mode is not enough to 'stretch' the remaining tape to fit, you will not be able to record all of the TV programmes.

\* It is not possible to automatically activate the EP mode.

### VPS/PDC function (not for VP21)

If a TV programme begins or ends earlier or later than planned, this function synchronises the beginning and end of the recording session with the actual beginning and end of the TV programme through a VPS signal transmitted by the TV station.

**ON :** The station transmits VPS/PDC signals. You must set the timer to the time specified in the TV magazines. Use the special VPS time the TV magazine may indicate.

**- - - :** The station does not transmit VPS/PDC signals. Try to set the start and stop time such that the entire film can be recorded even if a programme begins or ends earlier or later than planned.

# Recording with INTELLIGENT TIMER

The INTELLIGENT TIMER allows you to easily time the recording of programmes broadcasted by the same TV station at the same daytime at different days.

To use the INTELLIGENT TIMER function, at least one recording session must be programmed in the Timer recording menu (page 21). This information will be copied into the INTELLIGENT TIMER menu.

Upon completing the programmed recording session, such session information will be deleted from the Timer recording menu, but remain available in the INTELLIGENT TIMER menu. From there such information may be copied back to the Timer recording menu, thus allowing you to easily programme the recording session again with changed dates.

The INTELLIGENT TIMER menu will contain information about the last 5 programmed recording sessions.

INTELLIGENT TIMER							25/10/04
Pos	Date	Start	Stop		VPS PDC		
1	ARD	25/10	10:30 11:30	SP	ON		
1	ARD	25/10	18:30 19:30	SP	OFF		
2	ZDF	25/10	12:30 13:30	A	ON		

: select    : store  
 : edit    : unlock    : lock  
 : delete    : exit

I-TIMER  
P. MEMORY



## Copying stored recording sessions

- Press **I-TIMER**.
- With **▲▼** or **I-TIMER** select recording session.
- Press **TIMER** to activate the timer mode.

## Editing a programme

- Press **I-TIMER**.
- Press **▲▼** or **I-TIMER** to select a programme and confirm with **ENTER**.
- The Timer recording screen appears.
- With **◀▶** modify the desired data, and store changes with **ENTER**.
- Press **TIMER** to activate the timer mode.

Timer recording							1 / 3
Pos	Date	Start	Stop		VPS PDC		
1	ARD	26/10	10:30 11:30	SP	ON		
1	ARD	26/10	18:30 19:30	SP	OFF		
---	---	---	---	---	---		
---	---	---	---	---	---		
---	---	---	---	---	---		
---	---	---	---	---	---		

: select    : store  
 : delete    : exit



## Protecting I-TIMER programmes

If there are 5 entries in the INTELLIGENT TIMER menu, the next and every following entry overwrites the oldest programme setting.

- Press **I-TIMER**
- With **▲▼** select an entry.
- To protect the entry press **▶**. The symbol appears.
- To remove protection press **◀**. The symbol disappears.

# Recording with ShowView

(not for VP21)

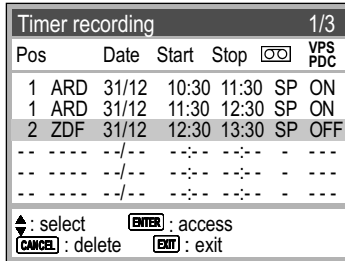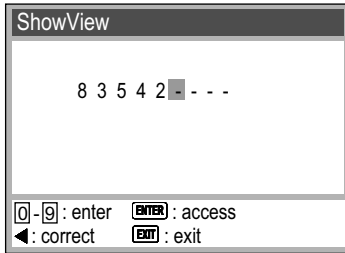

**ShowView**  
is a trademark of Gemstar Development Corporation. The ShowView system is manufactured under licence from Gemstar Development Corporation.

## Programming recordings with the ShowView function

The ShowView code simplifies entering programme information to record TV and SAT programmes.

- Press **ShowView**.
- Enter the ShowView number (◀ to correct entry).
- Confirm entry with **ENTER**.

The Timer recording screen appears.

If the device fails to recognise the TV station automatically, it must be entered manually with ▲▼. The VCR will store this information so it will not have to be entered again.

## Activating timer mode

- Press **TIMER** to activate the timer mode.
- The ⏸ symbol appears on the VCR display.


## Modifying programmed data

- Press **PROG/CHECK**,  
the Timer recording menu appears.
- With ▲▼ select the entry to be modified, confirm with **ENTER**.
- Select station ▲▼ and use ▶ to set date, week or weekday ▲▼, ▶.
- Then enter start and stop time ▲▼, ▶.
- Select tape speed: **A** (Automatic), **SP**, **LP**, **EP** ▲▼, ▶ and confirm with **ENTER**.
- Press **TIMER** to activate the VCR's timer mode.






## Recording with external recording controls

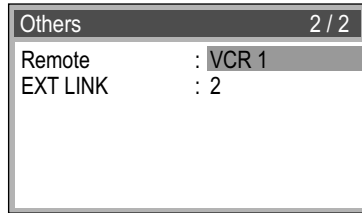

- Press **MENU**, the Menu screen appears.
- With **▼** select menu Others and confirm with **ENTER**.
- With **▲▼** select EXT LINK and turn to [2] or [1] **◀▶**.
- Press **MENU** to return to the Menu screen.


EXT LINK 2: External recording control for some satellite or digital receivers (video signal).

EXT LINK 1: For digital receivers transmitting a special recording control signal, e.g. the F.U.N. receiver (TU-DSF41).

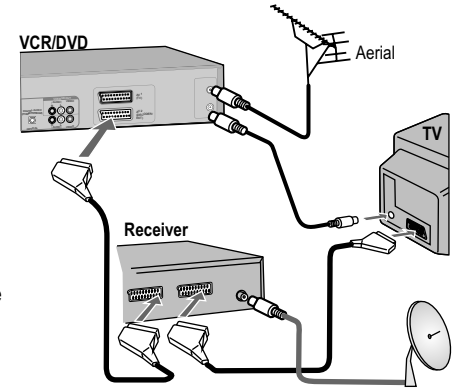

- Press **EXT LINK** to activate the VCR's recording stand-by mode. Make sure the VCR's display EXT Link appears. As long as the satellite or digital receiver transmits the special recording signal, or a video picture is transmitted, the VCR will continue to record.

The following screen will be shown if you select EXT LINK: [2]

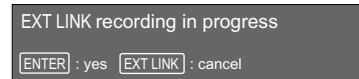

- Press **ENTER** to hide this message.
  - Press **EXT LINK** to stop recording.
- \* Be sure that the timer programmes stored by your VCR do not overlap with the ones of the satellite or digital receiver.

### Quitting recording stand-by mode

- Press **EXT LINK** to quit recording stand-by mode. The display EXT Link disappears. You can now play back a cassette or make a manual recording. You must press **EXT LINK** again to reactivate the recording stand-by mode.



# Playback

## Optimising the playback picture quality

Normally the VCR automatically adjusts the playback picture to the highest possible quality. Sometimes it may be necessary though to adjust the picture manually.

## Picture noise or unclear picture during playback. (Tracking)

While in regular playback or in slow motion press programme selection button  $\vee$  (-) or  $\wedge$  (+) until the noise disappears. If noise appears in a still picture, first switch VCR to slow motion, then adjust tracking.



\* In some video cassettes tracking can not be adjusted. This is not indicative of a VCR malfunction.

## Automatic tracking control

• Simultaneously press  $\vee$  (-) and  $\wedge$  (+).

## The still picture runs up or down

• In still playback mode hold  $\vee$  (-) or  $\wedge$  (+) until the picture stands still.

\* On some TV sets special playback functions may cause the picture to shift up or down. This is not a VCR malfunction.



## Normal playback

- Turn on the VCR.
- Be sure the TV set is turned on and tuned to the video playback channel.
- Insert a video cassette.
- Press **PLAY**  $\blacktriangleright$  to start playback.
- Press **STOP**  $\square$  to end playback.

## Playback from power stand-by mode

When inserting a cassette and pressing **PLAY**  $\blacktriangleright$ , the device will turn itself on and start playing back.

## Starting automatic playback

When inserting a cassette with removed protection tab, playback will start automatically.

## Repeat playback

R 0:05.57

The VCR repeats playback from beginning to the end of the recording.

- In stop or playback mode press **PLAY**  $\blacktriangleright$  for longer than 5 seconds.
- Press **STOP**  $\square$  to end playback.

## Time limited recording or playback

During recording, playback or stop mode the device switches to stand-by after a preset period of time.

Press the button repeatedly to increase this period from 30 to 60, 120, 180 or 240 minutes.

The set time appears in the VCR's display.

- Press **OFF TIMER**

OFF TIMER  
PLAY MODE



## General convenient functions

### Auto-Start

When inserting a cassette the VCR will automatically switch on.

### Automatic rewinding

When a cassette is played to the end, the VCR will automatically rewind it to the beginning of the tape.

\* This function is not available during programmed recording sessions.

### Search forward ►► or backwards ◀◀

- While playing back press ►► or ◀◀, the search begins.
  - When pressing the button twice (JET SEARCH) the search speed increases.
  - When holding the button down the search will run for the duration of the button being held.
  - Press **PLAY** ▷ to end search.
- \* This function is not available in some cases (e.g. at the beginning or end of the tape).

### Fast winding forward ►► or backwards ◀◀

- In stop mode press ►► or ◀◀.  
Press **STOP** □ to end winding.

### JET REW

For fast rewinding to the beginning of the tape.  
On a E180 cassette approx. 43 seconds.

\* Tape counter and tape remain display are unavailable during this function.

### Quick search for a beginning of a recording

While playing back or in stop-mode.

- **INDEX** ►► tape winds forward / **INDEX** ◀◀ tape rewinds.  
Every time you press the button (max. 20 times) the VCR will find the start of the next recording.  
Playback will start automatically.
- Press **STOP** □ to exit the Search function.

### Still playback

- Press **PAUSE/SLOW** during playback.
- To exit still playback press **PAUSE/SLOW** again or **PLAY** ▷.

### Slow playback

- During playback press **PAUSE/SLOW** for longer than 2 seconds.
- To exit slow motion playback press **PLAY** ▷.

### Automatic stop function

To protect the video heads the device will automatically quit the functions search backwards/forwards, quick search, still playback and slow playback after 5-10 minutes. Interference and motor noise are not a malfunction.

## General convenient functions

### **S-VHS cassette playback (SQPB=S-VHS Quasi Playback)**

You can play cassettes that were recorded on a S-VHS VCR.

- The quality of the picture will be that of a VHS recording.
- You cannot make S-VHS recordings on this VCR.

### **Playing back NTSC video cassettes (NV-VP31)**

You can play NTSC video cassettes for viewing on a PAL-type TV set (PAL 60).

You cannot record on, or copy video cassettes to NTSC-format cassettes.

### **CVC Super - Crystal View Control Super**

The CVC function provides a picture of perfect quality.

The picture is automatically rendered as clear and sharp as possible.

## **Device only operation.**

---

### **Automatic shut down and removing cassettes**

If the VCR is switched into stand-by mode, the cassette may be removed by pressing the **EJECT**-button.


Once done the VCR will switch back to stand-by mode.

### **QUICK ERASE**





To record on a cassette containing previous recordings without loss of quality, erase these recordings with the **QUICK ERASE** function.

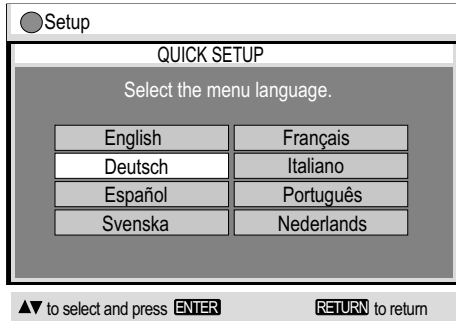- Press and hold the **QUICK ERASE** button for a few seconds.  
The time remaining for the erasing process is indicated on the VCR display.

# DVD-QUICK SETUP



The navigator keys of the remote control unit allow you to move between menus and to accept or change the selected settings.

-  Press **ENTER** to store a change.
-   Press **RETURN** to go back to the previous screen.
-  Press **SETUP** to quit the menu.

VHS DVD

DVD QUICK SETUP may follow VCR Auto Setup.

- Use **VHS/DVD** on the remote control to select DVD.
- Press **SETUP** to display the QUICK SETUP menu. Use the navigator keys **▲▼** to select a menu language, then press **ENTER** to confirm. To continue with setting the defaults, press **▲▼** to select [Yes] and **ENTER** to confirm. You can later go to the Setup menu to run QUICK SETUP again.
- Use the Setup menu options to adapt the default settings below to your appliance. Every menu item provides further information on the options you have.

40

- \* Please refer to the operating instructions of your TV set to read more about the best settings.

## Select your TV's aspect ratio.

The format of TV screens is either 4:3 (standard) or 16:9 (wide-screen). Select the aspect ratio that matches the screen setting of your TV set.

## Select the maximum sampling frequency of the PCM digital output.

Before you proceed please check which setting is supported by your digital audio component (connection via OPTICAL).

13


Following QUICK SETUP, you can use the options of the Setup menu to make further settings.

Press **RETURN** or **SETUP** to quit the Setup menu.

40

# Playback functions

DVD-Video	Video CD	CD	RAM
DVD-A	MP3	WMA	JPEG

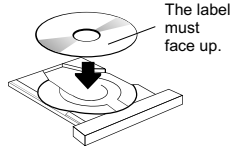

## Playback

- Press **OPEN/CLOSE ▲** to open the disc tray.
- Place the disc on the disc tray.
- Press **PLAY ►**.  
The disc tray closes and disc playback starts automatically.
- \* The player may take some time to read all of the disc information!

## MP3, WMA, JPEG:

The Playback menu appears on the screen.



## Pause playback (still image)

- Press **PAUSE** during playback.



## Interrupt playback

- Press **STOP ■**.
- Press **PLAY ►** to resume playback.



## Stop playback

- Press **STOP ■** twice.



## Repeat

- Press **REPEAT** during playback.

You can choose from the following settings, depending on the disc you use:

DVD-Video	Video CD	CD	RAM
DVD-A	MP3	WMA	JPEG

<b>DVD-Video</b>	Off	→	Chapter	→	Title
<b>DVD-RAM PG</b>	Off	→	Program	→	All
<b>DVD-RAM PL</b>	Off	→	Scene	→	Playlist
<b>DVD-A</b>	Off	→	Track	→	Group
<b>VCD/CD</b>	Off	→	Track	→	All
<b>WMA/MP3</b>	Off	→	Content	→	Group
<b>JPEG</b>	Off	→	Group		

\* The repeat function is available only if the disc runtime is displayed during playback. There is no mode for repeatedly playing back entire discs.



## Repeating a VCD using playback control (PBC)

- Press **STOP ■** during playback until [PBC] is no longer displayed.
- Type in the number of the CD track using the RC unit's numeric key pad.
- Press **REPEAT**.

The display shows the REPEAT function.

# Playback functions

## Chapter review

DVD-Video

This function lets you browse back through the chapters of a DVD-V by playing the first couple of seconds of every chapter.

- Press **STOP** ■ during playback.
- Press **PLAY** ►.

A message appears: Press PLAY to Chapter Review

- Press **PLAY** ► again.

The first couple of seconds of every chapter are played back. Normal playback is resumed at the point where you stopped it.

- \* Do not press **PLAY** ► if you do not wish to browse back through the chapters. After a couple of seconds, normal playback will be automatically resumed at the point where it was stopped.

## Random Playback

DVD-Video DVD-A Video CD CD  
MP3 WMA JPEG

All chapters/tracks are played once each in a random order.

- Press **PLAY MODE** while the disc is stopped. The Program Play screen is displayed.
- Press **PLAY MODE** again. The Random Playback screen is displayed.
- Press **PLAY** ► to start random playback.
- To deactivate the function, stop the disc and press **PLAY MODE**.

- \* DVD-V, MP3, WMA, JPEG: Press ▲▼ or the numeric keys of the remote control unit to select or specify the track/group to be played in a random order.

## Single frame mode

DVD-Video DVD-A Video CD RAM

In pause mode, press remote control buttons ◀ or ▶ .

Every push of one of these buttons takes the film a single frame forwards or backwards. Keeping one of these buttons pressed continuously displays the next single frame in the chosen direction. You can also press **PAUSE/SLOW** to move the film forward a single frame at a time.

- \* VCDs do not support a backward motion by single frames.

## Playback of a particular track or title

DVD-Video Video CD CD RAM  
DVD-A MP3 WMA JPEG

Type in a number using the RC unit's numeric key pad. For example, to select title 23:

DVD/RAM/VCD/CD : Press ⑩ + ② + ③.

MP3/WMA/JPEG : Press ② + ③ + **ENTER**.

The unit automatically starts playing the selected track.

- \* Certain discs may not provide this function at all, or only if the appliance is in stop mode.

## POSITION MEMORY

DVD-Video Video CD CD RAM  
DVD-A MP3 WMA JPEG

Use the **Position Memory** function to resume disc playback at a set position.


You can tag and directly access up to 5 discs.

The position tag is retained when you change discs or when the unit goes into stand-by mode.

- Press **POSITION MEMORY** during playback. A message appears: Position memorized. You can now change discs or go into stand-by mode.
- Press **PLAY** ► to play back the disc again. Playback is resumed at the stored position and the position tag is cleared.

- \* Some discs do not fully support all of this functions.

## Playback functions

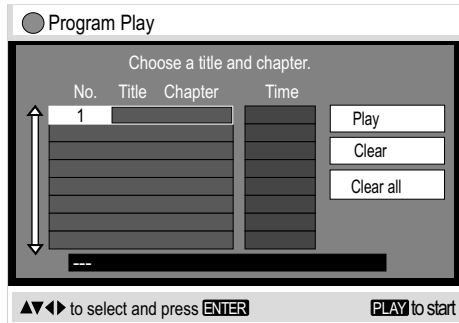


### Program Play

You can programme up to 32 chapters/tracks to be played in any order.

- Press **PLAY MODE** while the disc is stopped. The Program Play screen appears.
- \* Use the numeric keys to specify the Group/Title (not with CDs) and the Content/Chapter. In the case of MP3 or WMA discs or if you select the numbers using ▲▼, press **ENTER** to confirm each entry.
- Repeat this procedure to make further entries.
- Press **PLAY ►**. The unit starts to play the programme.
- \* Some discs may not provide this function.
- To clear an entry, press ▼▲ to select it first.
- Press ► and ▼ to select [Clear], then press **ENTER**.
- Choose [Clear all] and press **ENTER** to clear all entries.
- To change an entry, press ▲▼ to select it, then press **ENTER** to confirm.
- Press **ENTER** to confirm any changes to the Group/Title and Content/Chapter objects.

### To quit the Program Play mode

- Stop the disc and press **PLAY MODE** until Program Play disappears from the display. The actual programme is retained.
- \* To clear the programme, switch off the appliance or remove the disc.

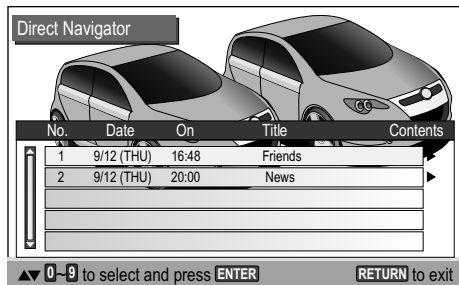

Your player can play DVD-RAM discs recorded in the video recording format, version 1.1, by a DVD video recorder, DVD video camera, computer etc.

### DVD-RAM Direct Navigator

RAM

- Press **DIRECT NAVIGATOR** to enter or exit the menu screen. Programme names are shown only if they were entered when the RAM was produced. Press ► to display the programme information. Press ◀▶ to browse. Press **RETURN** to go back to the previous screen.
- Press ▲▼ or use the numeric keys to select a programme. Playback starts in the background. Press **ENTER** to hide the menu screen.

### To play tracks from a Playlist

You can play tracks contained in a Playlist recorded on a DVD video recorder, for example.

- Press **PLAY LIST**. The Playlist screen is displayed if the disc has a play list on it. Press **PLAY LIST** again to quit the menu.
- Press ▲▼ or use the numeric keys to select a play list, then press **ENTER** to confirm. Playback starts. Press **SKIP** to leave out tracks down a play list.



## VCR-DVD functions

 

- \* Playing back music, NTSC formatted films or copy-protected discs might result in interferences.



### Synchronous recording



How to copy a non copy-protected disc to VHS type cassette.

- Select DVD on the remote control. 
- Use **PLAY** ► and ◀◀►► to select the disc's starting position.
- Press **II|>** to select Pause playback.
- Select VCR on the remote control. 
- Press **INPUT** to select the **dc** channel.
- Use ◀◀►► and **PLAY** ► to define the starting position for tape recording.
- Press **II|>** to pause VCR playback.
- Press **REC** to activate the recorder's recording stand-by mode.
- Press **II|>** to start synchronous VCR recording and DVD playback.



### DUBBING



**DUBBING** enables you to copy a DVD RAM to VHS cassette. In case you copied several programmes of one DVD RAM, the **INDEX** ◀◀►► function allows you to directly access these on the resulting tape.

- Insert DVD RAM and VHS video cassette, then press **DUBBING** for longer than 3 seconds in STOP mode.
- All programmes of the DVD RAM are copied to the VHS cassette.
- Recording is stopped automatically by the VCR once the copying process ended.
- Press **STOP** ■ to cancel the recording programme.

### MUSIC WITH PICTURE




**M--P 1:** It is possible to simultaneously use the DVD player for e.g. playing back a music disc and presenting video pictures.

**M--P 2:** It is possible to play back a video or JPEG disc on the DVD player and have the sound outputted via VCR or any other external unit simultaneously.

- Use **VHS/DVD** on the remote control to select DVD.
- Press **PLAY** ► to start playback.
- Use **VHS/DVD** on the remote control to select VHS.
- In VCR STOP mode, select M--P 1 or M--P 2 via **MUSIC WITH PICTURE**.  
The unit displays the video output and selects the AV3 front panel input.
- You can now use an external source, select the TV channel via **CH**, or press **INPUT** to specify AV1 / AV2 / dc.
- Press **PLAY** ► to play back a video cassette.
- Press **MUSIC WITH PICTURE** in VCR STOP mode to terminate this function.




# Navigation Menu

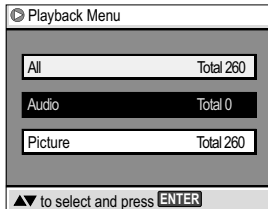

## To display the selection menu

- Display the Navigation Menu and press **DISPLAY**. The Selection menu is displayed.
- Press **▲▼** to select a menu item, then press **ENTER** to confirm or **RETURN** to quit the Selection menu.

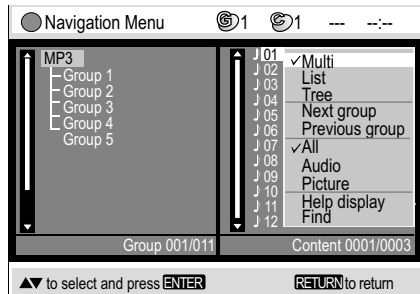

**Search with asterisk:** The match list covers all entries containing the word you specified.

**Search without asterisk:** To look for the first word in a title press **◀** to delete the asterisk.

## Playback Menu

JPEG MP3 WMA

- The Playback Menu appears on the screen when you insert a JPEG, WMA, MP3 or HighMAT disc.
- Press **▲▼** to select the contents you wish to play, then press **ENTER** or **PLAY** to confirm.
- \* To display the Navigation Menu for HighMAT Discs, change in the Setup menu in the sub-menu Others the HighMat setting to [Enable] (page 41) or select the [Play as Data Disc] option (page 39) in the Others menu via **DISPLAY**, while in Stop mode.


## To display the Navigation Menu

JPEG MP3 WMA


- Press **MENU**. The Navigation Menu is displayed.
- Press **▲▼** to select a title, then press **ENTER** to start playing it.
- Press **MENU** to quit the menu.

## Navigation Menu / Selection menu options

<b>Multi</b>	The Group and Content panels are tiled vertically. Press <b>◀▶</b> to move the cursor from Group to Content and back.
<b>List</b>	Shows the Content of the selected Group.
<b>Tree</b>	Displays a tree view of the groups. Press <b>▲▼</b> and <b>ENTER</b> to select a Group. The Group's contents are shown.
<b>Thumbnail</b>	Displays the JPEG Thumbnail Menu.  13
<b>Next group</b> <b>Previous group</b>	Moves to Next group or Previous group.
<b>All / Audio / Picture</b>	Selects the formats shown on the Navigation Menu.
<b>Help display</b>	Displays help on the menu control or the status indicator.
<b>Find</b>	<p><b>To find groups or content</b></p> <ul style="list-style-type: none"> <li>• Press <b>▲▼</b> to enter the target word into the text box. Press <b>ENTER</b> to confirm every letter. Press <b>◀</b>. To make corrections.</li> <li>• Press <b>▶</b> to select [Find] and <b>ENTER</b> to confirm. The match list contains the matching entries. If there are no matching entries you will see: Not found.</li> <li>• Press <b>▲▼</b> and <b>ENTER</b> to start playing the track you looked for.</li> <li>* In the Multi view press <b>◀▶</b> to select the Group or Content panel. The search is performed in the selected area.</li> </ul>

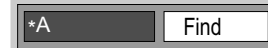

# Navigation Menu

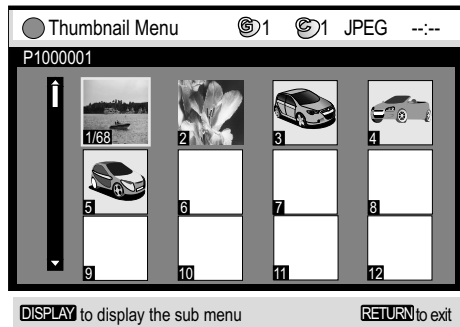

## WMA / MP3 / CD-Text

Group : Songs 3  
Content : 01 - Title 1

## JPEG

Group Pictures 5  
Content P1010002  
Date 2004/01/25 17:26  
Camera DMC-LC20

## JPEG Thumbnail Menu

JPEG

- Pick **DISPLAY** from the Navigation Menu and press **▲▼** to select Thumbnail.
- Press **ENTER** to confirm. The Thumbnail Menu is displayed.
- Press **▲▼◀▶** to select a picture.  
Press **▲▼◀▶** to page up or down. When you have browsed the pictures of a group, the pictures of the next group are shown.
- Press **ENTER** to confirm. The selected picture is shown full size.

## Rotate pictures

- Press **DISPLAY** during playback. The **DISPLAY** menu will be displayed.  
The available options depend on the current disc.
- Press **▲▼** and **ENTER** to select [Rotate Picture].
- Press **▲▼** and **ENTER** to specify the direction of rotation.
- Press **RETURN** or **DISPLAY** to quit the menu.

38

## Activate on-screen displays

CD-Text

JPEG

MP3

WMA

- Press **DISPLAY** during playback. The **DISPLAY** menu will be displayed.  
The available options depend on the current disc.
- Press **▲▼** and **ENTER** to select Other Settings.
- Press **▲▼** and **ENTER** to select Display Menu.
- Press **▲▼** and **ENTER** to select Information.
- Press **▲▼** and **ENTER** to select the respective option. JPEG: [Date], [Details].
- Press **RETURN** or **DISPLAY** to quit the menu.

39

## Select Group/Title

JPEG

MP3

WMA

- Play back a disc and select the group or title on it.
- Press **▲▼** to select the Group, press **◀▶** to select the Title.

- \* WMA: You cannot play copy-protected WMA files.
- \* MP3: The appliance is incompatible with ID3 tags.
- \* WMA, MP3, JPEG (CD-R / CD-RW): Make sure the discs are compatible with ISO 9660 (level 1 or level 2).

# HighMAT

HighMAT



HighMAT (High Performance Media Access Technology) is a joint Panasonic and Microsoft technology development. Diverse HighMAT-level2 format data (WMA, MP3 and/or JPEG) stored on a disc by a PC can be quickly played back by the appliance with the additional help of a menu.


While the HighMAT menu is displayed:

- Press **▲▼◀▶** to select and **ENTER** to confirm.

Menu: Takes you to a sub-menu containing further play lists or menus.

Playlist: Starts playback

- Press **TOP MENU** to show or hide the HighMAT menu.
- Press **RETURN** to go back to the previous menu.
- Press **DISPLAY** to show or hide the background stored on the disc.

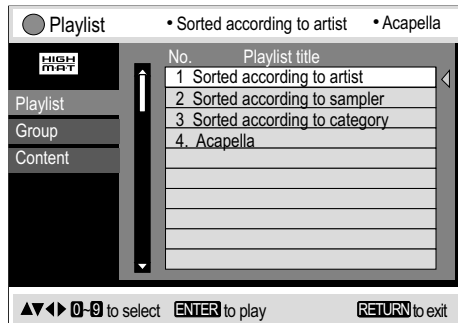


## Selecting from a Playlist

- Press **MENU** during playback.  
The play list appears (◀ indicates the currently playing item).
- Press **◀** and then **▲▼** to move from Playlist to Group and Content and back.
- Press **▶** and then **▲▼** to select an item, then press **ENTER** to confirm.
- Press **MENU** to quit the Playlist screen.

# CD Text


CD-Text

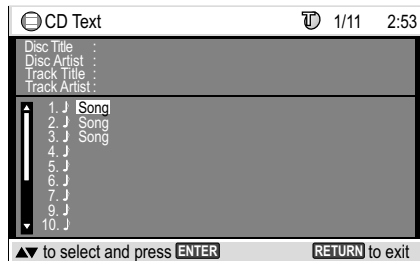

## CD Text menu

- Press **MENU**.  
The CD Text menu appears on the screen.  
The screen contains information on the disc and a list of tracks.
- Press **▲▼** to select a title.
- To play the selected track, press **ENTER**.
- Press **RETURN** to quit the menu.

# DISPLAY menu

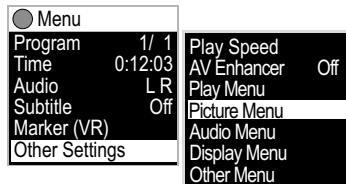

DVD-RAM menu illustration

DVD-RAM

## Picture Mode

- Normal:** Factory default
- Cinema1:** Cinema function for viewing in dark rooms. Bright picture areas are dimmed down.
- Cinema2:** Enhances brighter areas of dark scenes.
- Animation:** Intensifies the colours.
- Dynamic:** Brightens up the picture.
- User:** Provides changes of the Picture Adjustment menu.

## Playback status indicator



DISPLAY



- Press **DISPLAY** twice to activate the playback status indicator.
- Press ◀▶ to change the playback speed.
- Press ▲▼ to display the current and the remaining playback time.
- Press **DISPLAY** again to hide the status indicator.

DISPLAY



### To display the DISPLAY menu.

- Press **DISPLAY** to invoke the DISPLAY menu of the current disc. The available options depend on the current disc.
- Press ▲▼ to select a sub-menu, then press ▶ or **ENTER**.
- Press ▲▼ to select a setting as described on pages 16 and 17.
- Press **ENTER** to confirm. Press ▶ to display another sub-menu; press ▲▼ to select a setting as appropriate. Press ◀ to return to the previous menu.
- Press **ENTER** to confirm your selection. The items of the menus may vary depending on the contents of the disc.
- Press **RETURN** or **DISPLAY** to quit the menu.

### To modify the Picture Mode

- Press **DISPLAY**, the DISPLAY menu of the active disc is displayed. The available options depend on the current disc.
- Press ▲▼ and **ENTER** to select Other Settings. Press ◀ to go back to the previous menu.
- Press ▲▼ and **ENTER** to select Picture Menu. To display the settings, press **ENTER** again.
- Press ▲▼ and **ENTER** to select a setting. The menu item Picture Adjustment will be displayed if you select User. Press ▲▼ and **ENTER** to select Picture Adjustment. The Picture Adjustment menu will be displayed.
- Press ▲▼ to select an option for modification, then press ◀▶. [Contrast], [Brightness], [Sharpness], [Colour], [Gamma]
- Press **RETURN** or **DISPLAY** to quit the menu.


# DISPLAY menu

<ul style="list-style-type: none"> <li>● Menu</li> <li>Title 1/36</li> <li>Chapter 1/27</li> <li>Time --:--</li> <li>Audio ---</li> <li>Subtitle ---</li> <li>Angle -/-</li> <li>Other Settings</li> </ul>	DVD-Video
<ul style="list-style-type: none"> <li>● Menu</li> <li>Track 1/ 2</li> <li>Time 48:10</li> <li>Audio L R</li> <li>Other Settings</li> </ul>	Video CD
<ul style="list-style-type: none"> <li>● Menu</li> <li>Playlist 1/38</li> <li>Group 1/20</li> <li>Content 2/12</li> <li>Time 0:39</li> <li>Audio 96kbps</li> <li>Other Settings</li> </ul>	HighMAT
<ul style="list-style-type: none"> <li>● Menu</li> <li>Group 1/11</li> <li>Content 1/12</li> <li>Time --:--</li> <li>Audio</li> <li>Other Settings</li> </ul>	WMA/MP3
<ul style="list-style-type: none"> <li>● Menu</li> <li>Group 1/ 6</li> <li>Content 1/68</li> <li>Thumbnail</li> <li>Rotate Picture</li> <li>Slideshow On</li> <li>Other Settings</li> </ul>	JPEG
<ul style="list-style-type: none"> <li>● Menu</li> <li>Track 1/14</li> <li>Time 48:10</li> <li>Other Settings</li> </ul>	CD

**Title/Track Search:** Allows you direct access to a title/track if the disc hosts several.

**Program Search:** Allows you direct access to a program if the disc hosts several.

**Chapter Search:** Allows you direct access to a chapter if the disc hosts several.

**Group Search:** Allows you direct access to MP3/WMA tracks or JPEG images defined to make up a group. 

GROUP

**Content Search:** Directly select a MP3/WMA track or JPEG image stored on the disc.

**Playlist Search:** Directly select a Playlist stored on the disc.


**Time:** Display/select playback time: Alternative display of current or remaining playback time.

MP3, WMA, SVCD: Shows the playback time only.

Shows the current playback time or the remaining playback time.

**Time Slip:** Press ▲▼ to select the interval by which playback is to move back or forward.

**Time Search:** Use the numeric keys to specify the time at which playback is to be resumed.

 
**Audio/Karaoke:** Allows you to alter the preset language of synchronisation, provided the disc gives you an alternative. In the case of VCDs you can change the left/right audio channel setting. 

AUDIO

**Subtitle/Language:** Selects the language of on-screen subtitles. [Off]: No subtitles displayed.

**Marker (VR):** Select the marker tags set on a DVD-RAM by a DVD recorder.

**Angle:** Change between camera angles of films recorded from various camera locations.

**Thumbnail:** Displays the thumbnail menu. Press ▲▼◀▶ to select a JPEG image. Press ENTER to show the selected image full screen. 

35

**Rotate Picture:** Select [Right] or [Left] to rotate the image on the screen in the selected direction.

**Slideshow:** Starts and stops the on-screen slideshow.

Choose [Interval] to set the time every slideshow picture remains on the screen (0 to 30 seconds).

# DISPLAY menu

These settings are not available for every disc.

## Other Settings

Play Speed	x1.4
AV Enhancer	Off
Play Menu	x1.3
Picture Menu	x1.2
Audio Menu	x1.1
Display Menu	Normal
Other Menu	x0.9
	x0.8
	x0.7
	x0.6

AV Enhancer	Off
	On

Play Menu	Repeat Off
	A-B Repeat **
	Marker

Picture Menu	Picture Mode Normal
--------------	---------------------

Audio Menu	Advanced Surround Off
	Dialogue Enhancer Off

Display Menu	Subtitle Position
	Subtitle Brightness
	Just Fit Zoom
	Manual Zoom x1.00
	Bitrate Display Off
	GUI See-through Off
	GUI-Brightness 0

Other Menu	Play as Data Disc
------------	-------------------

**Play Speed:** Select a factor by which to change the playback speed.  
The audio output switches to PCM (2-channel).

**AV-Enhancer:** Automatically optimises and adapts the audio and video settings to the disc used.  
The Picture and Audio menus are not available when this function is enabled.

AV ENHANCER



**A-B Repeat:** Playback repeats a defined section between positions A and B of a title.  
Press **ENTER** to set starting point A and end point B. If you do not set point B, the end of the track is used as the end point. Press **ENTER** to terminate this function.

INPUT REPEAT



**Repeat:** Allows you to repeat the current track or chapter.

**Marker:** Up to 5 positions can be tagged pressing **ENTER**. Press **CANCEL** to delete any mistakes.  
Select a marker and press **ENTER**. Playback starts at the marker tag.  
The markers are cleared by opening the disc tray or switching off the appliance.

**Picture Mode:** Changes the image display settings



**Advanced Surround:** Produces an effect similar to surround sound at the two front speakers (SP) or the headphones (HP). Deactivate this function if the sound becomes distorted.

- Off - Effect off (factory default).
- SP1 Natural - Normal degree of effect on loudspeakers.
- SP2 Enhanced - Enhanced degree of effect on loudspeakers.
- HP1 Natural - Normal degree of effect on headphones.
- HP2 Enhanced - Enhanced degree of effect on headphones.

\* Advanced Surround is not supported by all discs.  
Deactivate the Advanced Surround effect if you experience distorted sound. Deactivate Advanced Surround if you are also using Dolby Pro Logic Amplifier. Dolby Pro Logic will not work properly if Advanced Surround is on.

**Dialogue Enhancer:** Puts up the volume of feature film dialogues.

**Information:** Display information of the title (on-screen display).

**Subtitle Position :** Vertically moves the subtitle shown.

**Subtitle Brightness:** Modifies the brightness of the subtitle shown.

**Just Fit Zoom:** Allows you to select a pre-defined picture size.

**Manual Zoom:** Zooms into the image to enlarge it by up to twice its original size.

**Bitrate Display:** The screen displays the image data rate per second (Mbps).

**GUI See-through:** The background of OSD text becomes transparent.

**GUI-Brightness:** User-defined brightness of OSD text.

EXT LINK



ZOOM

**Play as HighMAT / Play as Data Disc:** Stop the HighMAT disc and choose to play it as a data disc or as a HighMAT-format disc.




**Play as DVD-VR / Play as Data Disc:** Stop the DVD-RAM and choose to play JPEGs or the programme.

# SETUP menus

## To display the Setup menu

- Press **SETUP** to display the Setup menu.
- Press **▲▼** to select a sub-menu, then press **▶**.
- Press **▲▼** to select the option to be changed, then press **ENTER** to confirm.
- Press **▲▼** to select a setting option, then press **ENTER** to confirm.
- Press **◀▲▼** to select the next menu item.
- Press **RETURN** to quit the menu.

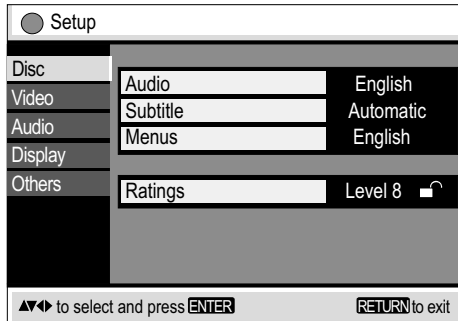

## 4:3 TV aspect ratio

Letterbox:



 
Pan&Scan:



## Menu Disc

<b>Audio</b>	Disc's Audio language / Subtitle language / Menu language.
<b>Subtitle</b>	Select the preferred language of either of the items. If the language you want is not on the list, select [Other] and type in the appropriate country code (see last page).
<b>Menus</b>	
<b>Ratings</b>	<p>Assign a ranking to disallow the viewing of some scenes [1-7] or the entire DVD video disc [0], and specify a password to guard access to the disc contents. This feature is not supported by all DVD video discs.</p> <ul style="list-style-type: none"> <li>• Type in a 4-digit code using the numeric key pad of your remote control unit, then press <b>ENTER</b> to confirm it.</li> <li>• Press <b>◀</b> or <b>CANCEL/RESET</b> to delete any mistakes.</li> </ul> <p>A closed padlock icon is displayed while this feature is enabled. Make sure not to forget your password code.</p> <p><b>To change the setting</b></p> <ul style="list-style-type: none"> <li>• Enter your password code and press <b>ENTER</b> to confirm.</li> <li>• Change the setting as appropriate and press <b>ENTER</b> to confirm.</li> </ul>

## Menu Video

<b>TV Aspect</b>	Sets the aspect ratio to 16:9 or 4:3 (Pan&Scan/Letterbox). 
<b>Time Delay</b>	When using an audio amplifier together with a plasma TV or a digital TV, the picture can be delayed in relation to the sound signal. You can synchronize the picture signal with the sound using the Time Delay setting.
<b>AV1 Output</b>	Selects the video signal from the scart socket (Video, RGB).
<b>Still Mode</b>	<p>Select a picture quality for still image mode:</p> <p><b>Automatic:</b> The unit selects the optically better type of image.</p> <p><b>Field:</b> Poorer quality than a picture frame.</p> <p><b>Frame:</b> Although the image may be somewhat fuzzy, its quality is better than that of a field-based still image.</p>
<b>NTSC Disc Output</b>	To play a NTSC disc, select a colour rendition standard (NTSC/PAL60) that matches the function of your TV set.



# SETUP menus

## Dolby Digital / DTS Digital Surround / MPEG:

Please choose the correct settings matching your audio system:

	Your equipment can not decode the signal	Your equipment can decode the signal
Dolby Digital	PCM	Bitstream
DTS Digital Surround	PCM	Bitstream
MPEG	PCM	Bitstream

## Menu Audio

### PCM Digital Output

PCM is the standard method used to record digital music signals on Audio CDs. For reasons of copyright protection the digital output of PCM audio signals may be limited to 48 kHz/16 bit. Choose [Up to 48 kHz] if the digital audio outlet is used to connect your player to an amplifier that only processes sampling frequencies of up to 48 kHz. For 96/192 kHz check the digital-in requirements of your connected device.

### Dolby Digital DTS Digital Surround MPEG

Change the setting to PCM if the connected equipment fails to decode the relevant signal. High noise levels may otherwise damage your ears or the loudspeakers. Adapt the settings to the ratings of your audio system.

### Dynamic Range Compression

Available in the Dolby Digital (DVD) format only. The volume range is compressed by dynamically putting up the level of soft passages and lowering the level of loud passages.

### Audio during Search

Choose to have the sound on or off during the search.

## Menu Display

### Menu Language

Select the language of the appliance's menus as appropriate.

### On-Screen Messages

Select [Off] to suppress the display of OSD text.

## Menu Others

### HighMAT

Enable: Activates HighMAT playback  
Disable: Plays HighMAT discs in the MP3/WMA/JPEG format.

### QUICK SETUP

Lets you change the basic settings or your appliance.



### Re-initialize Setting

Resets the appliance to factory defaults. Following reset and initialisation, press **SETUP** to run the QUICK SETUP utility again.



# Information

## Region codes



This player accesses the regional codes stored on DVDs. It supports all discs assigned regional code "2" or "ALL".  
**UK and continental Europe: "2".**

## Disc forms



Never play anything but circular discs with a diameter of 3" ( 8 cm ) or 5" ( 12 cm ). Discs of other shapes may damage the player hardware.

## HighMAT and the HighMAT logo



are trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries.

## Windows Media and the Windows logo



are trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries.

## Dolby Digital

Method of encoding digital signals. The signals are very much compressed in the process to enable recordings of large volumes of data.

Manufactured under license from Dolby Laboratories. "Dolby", "Pro Logic" and the double-D symbol are trademarks of Dolby Laboratories.

## DTS (Digital Theater Systems)


Sound system used in cinemas or movie theaters all over the world. "DTS" and "DTS 2.0 + Digital Surround" are trademarks of Digital Theater Systems, Inc.

## Playing DVDs and VCDs

The producer of the programme material can define the way in which the disc is played. Consequently, you may sometimes find that, you cannot control the playback the way you wish using all of the functions and operations described in these operating instructions. We therefore recommend that you always read the reference material delivered with the disc. The player may take some time to read all of the disc information!

## DVD menu

Some DVDs have multiple menus. Pressing **TOP MENU** to display the main menu may take you to another menu than pressing **MENU** to display the menu screen.

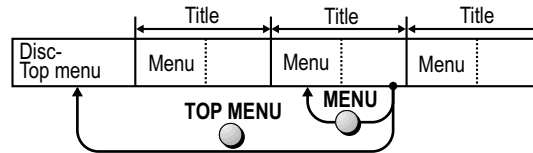

\* The functions assigned to these buttons depend on the disc. Please refer to the disc documentation leaflet.

MP3 or MPEG 1 Audio Layer 3 is a file compression format used for digital audio files. It provides files of an extremely small size and may cause a consequential loss of quality. WMA is a file compression format developed by Microsoft. It achieves the same sound quality as MP3 with a file size that is smaller than that of MP3. MPEG Layer-3 audio decoding technology licensed from Fraunhofer IIS and Thomson multimedia.

This product features a copyright protection implement whose technology is protected by US patents and intellectual property rights owned by Macrovision Corporation and other copyright proprietors. The use of this copyright protection implement is subject to permission of Macrovision Corporation and is restricted to purely private use only. It is prohibited to examine this appliance for the purpose of unlicensed construction.

 

 
 
 
## Decoder

This appliance features an internal Dolby Digital decoder and a DTS decoder. You can enjoy these systems in stereo quality without the need of a separate decoder.



## Before requesting service

### GENERAL DISTORTIONS

<p><b>There is no audio output and the sound is distorted:</b></p>	<ul style="list-style-type: none"> <li>• Check the connections.</li> <li>• Deactivate the Advanced Surround effect.</li> </ul>	
<p><b>The VCR display is not lit:</b></p>	<ul style="list-style-type: none"> <li>• Check AC mains connection.</li> </ul>	
<p><b>The VCR display is lit, the device does not respond to controls:</b></p>	<ul style="list-style-type: none"> <li>• Device is set to recording stand-by or timer mode. Quit with <b>TIMER</b> button.</li> </ul>	
<p><b>Error code «U □ □ » or «H □ □ » appears:</b></p>	<ul style="list-style-type: none"> <li>• H □ □: This is indicative of a malfunction. The digits following «H» depend on what state your player is in.</li> <li>• Press  to put the player into stand-by mode, then briefly unplug and re-attach the AC mains cable.</li> <li>• Contact the aftersales service if this does not remove the problem. Please state the error code displayed by the set.</li> </ul>	
<p><b>The picture is disturbed when searching:</b></p>	<ul style="list-style-type: none"> <li>• This is a technical issue and not indicative of a malfunction.</li> </ul>	
<p><b>No picture appears on the screen:</b></p>	<ul style="list-style-type: none"> <li>• Check the connections.</li> <li>• Verify that the correct video input of the TV set has been selected.</li> </ul>	
<p><b>The picture is cut off at its left or right edge:</b></p>	<ul style="list-style-type: none"> <li>• Check the Video menu's TV Aspect setting on the Setup screen.</li> <li>• Check that the player is directly plugged into the TV set's AV output and not to a video cassette recorder between the two units.</li> <li>• Check the Zoom setting.</li> </ul>	
<p><b>The remote control unit does not work properly:</b></p>	<ul style="list-style-type: none"> <li>• Check whether the remote control communicates VCR1 or VCR2 .</li> <li>• Check the distance between the RC unit and the appliance (max. 7 metres).</li> <li>• Check the batteries in the remote control unit.</li> <li>• Point the remote control unit straight at the remote control signal sensor on the front panel.</li> </ul>	
<p><b>No messages are output to the screen:</b></p>	<ul style="list-style-type: none"> <li>• Go to the DVD SETUP screen and set DISPLAY menu option On-screen Messages- to [On].</li> <li>• Go to the DVD SETUP screen and change the TV Aspect setting in the Video menu.</li> <li>• Go to the VCR menu Others and change the OSD setting.</li> </ul>	





## Before requesting service

### VCR DISTORTIONS

#### Manual correction of a bad picture:

- If you notice interference or a shift of the picture during normal, still, or slow motion playback, press the **TRACKING / V-LOCK** button towards + or - to correct the picture.
- Press + and - together to activate automatic correction. Some video cassettes do not support tracking control. This is not indicative of a malfunction.

#### Automatic Clock set doesn't work properly:

- Set Clock set to [AUTO] (not for VP21).
- If the device cannot find a TV station transmitting the time signal, set Time and Date manually.




#### Bad picture or sound:

- The use of E-300 cassettes may cause problems if the recordings were taken at low tape speeds LP or EP.
- Check [PAL] and [MESECAM] settings.
- Verify that the aerial and/or Scart cables are attached and work properly.
- Check the SQPB/ S-VHS playback setting for S-VHS cassettes.
- Faulty recordings taken at slow tape speed EP in [MESECAM] are not malfunctions.
- Please contact your service technician if the video heads are dirty or worn out. Having a technical service shop clean the video heads is not covered by the guarantee.



#### The recording functions do not work properly:

- If  flashes on the device, check if the protection tab of the video cassette is still in.
- Check Time and Date.
- Check the start and stop time of the timer programme.
- Check if the **TIMER** button has been pressed to put the device into timer mode after programming a recording.
- Check the start and stop time of a VPS/PDC recording. (not for VP21).



## Before requesting service

### DVD DISTORTIONS

**The loudspeakers emit loud noise:**

- Go to the Setup screen and check the Audio menu settings of Dolby Digital, DTS Digital Surround and MPEG.

 41

**The message "NO PLAY" appears:**

- The player cannot play discs of the current format.
- The disc contains no recorded material.
- The function Ratings is active.

**The OSD displays are cut off along their top edge:**

- Check the TV Aspect setting.

 40

**The player does not respond to function key commands:**

- Certain control operations are not available with some discs.
- There may be interference caused by lightning or static charge. Press [⏻/1] to put the player into stand-by mode. Restart the player.

**Playback does not start after pressing PLAY:**

- Condensation has accumulated inside the player. Wait for 1 to 2 hours.
- The player only supports DVDs with regional code 2, ALL or from a group of regional codes containing regional code 2.
- The disc is dirty or damaged.
- The disc is in the wrong way round. The label of the disc you wish to play must face up.

**Unable to change the audio track or the subtitle language:**

- You can only choose from the languages actually recorded on the disc
- Some discs require you to change the setting via the Disc menu.

**The subtitles are not shown:**

- The disc does not provide any subtitles.
- You deactivated the display of subtitles.
- The subtitles are at the wrong position. Move the position of subtitles.





**The audio track or subtitles do not use the language selected from the menu:**

- The disc does not provide the language you selected.

**Unable to change the aspect angle:**

- It depends on the disc whether this function is available.

**You forgot your password:**


- Stop the player and keep pressing player button  /  together with  (DVD) and also  until [Initialised] disappears from the screen. This restores all factory defaults. When you are done switch off the unit and back on afterwards.
- Afterwards, display the QUICK SETUP menu to re-initialise the appliance to your preferences.

 29

# Remote control codes

## Remote control codes

For TV set control change the remote control unit's code.

- Press and hold **TV Stand-by**. 
- Enter the two-digit code of your TV set. Try a different code if your TV set does not respond correctly.  
You will have to re-enter the code when replacing the batteries.

\* Some television set models of the listed manufacturers can not be operated using this remote control.

Trademark	Code	Trademark	Code	Trademark	Code	Trademark	Code
Panasonic	01-04,45	GOODMANS	05,06,31	NOKIA	25-27	SANYO	21
AIWA	35	GRUNDIG	09	NORDMENDE	10	SBR	06
AKAI	27,30	HITACHI	22,23,31,40-42	ORION	37	SCHNEIDER	05,06,29-31
BLAUPUNKT	09	INNO HIT	34	PHILIPS	05,06	SELECO	06,25
BRANDT	10,15	IRRADIO	30	PHONOLA	31,33	SHARP	18
BUSH	05,06	ITT	25	PIONEER	38	SIEMENS	09
CURTIS	31	JVC	17,39	PYE	05,06	SINUDYNE	05,06,33
DESMET	05,31,33	LOEWE	07	RADIOLA	05,06	SONY	08
DUAL	05,06	METZ	28,31	SABA	10	TELEFUNKEN	10-14
ELEMIS	31	MITSUBISHI	06,19,20	SALORA	26	THOMSON	44
FERGUSON	10	MIVAR	24	SAMSUNG	31,32,43	TOSHIBA	16
GOLDSTAR/LG	31	NEC	36	SANSUI	05,31,33	WHITE WESTINGHOUSE	05,06

## Problem caused by a disc

- Do not stick labels on the disc (this might render the disc useless).
  - Only use a suitable pen for writing on the disc.
  - Do not insert cleaning discs into the appliance.
  - Do not play discs with any glue from stickers still on them.
  - Do not play cracked discs.
  - Do not play warped or irregularly shaped discs.
- 
- First wipe the disc (DVD-A / DVD-V / VCD / CD) with a wet cloth, then with a dry cloth.
  - If available, use the optional DVD-RAM/PD disc cleaner (LF-K200DCA1) to clean the DVD-RAM / DVD-R.  
Do not use clothing or other disc cleaners.




## Video cassette handling

- We recommend to use branded, e.g. Panasonic, cassettes of superior quality.
- Whenever not in use, remove the cassettes from the recorder and keep them in a cover.
- For recordings always try to make full use of the entire tape.
- To prevent the tape from sustaining untimely wear and tear, do not re-use the same tape section for several recording sessions.
- To prevent the cassette from sustaining damage, employ due care while inserting it into the video recorder.
- Protect the cassettes against humidity or heat.
- Do not expose the cassettes to dust.
- Directly dispose of defective cassettes without trying to repair them.
- Never open the cassette's housing.
- Do not open the protective front flap.  
Never touch the recording tape.

## Cassette erasure protection

Break out the erasure protection tab to protect the cassette against accidental erasure of recordings you wish to keep. Stick adhesive tape over the gap if you wish to re-record a protected cassette.

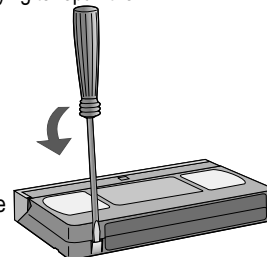

# Specifications

**Power supply:** 220-240 V AC, 50/60 Hz  
**Power consumption:** 21W (in operation)

**Controls** multifunctional remote control (VCR, TV and DVD), VCR / DVD, main functions on the unit

**VCR playback functions** PAL and NTSC Playback on PAL TV / S-VHS Quasi Playback (SQPB)

**Video- and Audio heads** 4 Video heads, 2 heads Hi-Fi

**VCR Recording system** 2 rotary heads, helical scanning system

**VCR tape speed** SP: 23.39 mm/s , 240 min / LP: 11.7 mm/s, 480min (E-240 cassette)

**VCR fast forward/fast rewind time** approx. 60 sec. (E-180 cassette)

**Video TV system** VCR: PAL 625/50  
 DVD: PAL 625/50, PAL 525/60, NTSC  
 1.0 Vpp (75 Ohm)

**Video input and output level** RGB-output connector: 0.7 Vpp (75 Ohm) / output connector: AV1

**DVD RGB-Video output** UHF-channel (21-69), 75 Ohm














**RF-converter VCR** more than 240 lines (SP)

**Horizontal resolution VCR** more than 43 dB (SP)

**S/N ratio VCR video**

**Input level audio**  
**Output level audio**

0.5V eff., more than 10 kOhm  
 VCR: 0.5V eff., less than 1 kOhm /  
 DVD: 2V eff. (1 kHz, 0 dB Fs)  
 output connector: Pin jack, AV, 2 channel (L/R)  
 VCR: more than 90 dB (Hi-Fi sound tracks)  
 DVD: (linear audio): 100dB / CD audio: 96dB, 115dB  
 Total harmonic distortion CD audio: 0.0025 %, S/N ratio CD audio: 115dB  
**Dynamic range Audio**  
**Frequency response VCR audio** 20 Hz to 20 kHz (Hi-Fi sound tracks)  
**Frequency response DVD audio (linear audio)** 4 Hz to 22 kHz (sampling frequency 48 kHz) / 4 Hz to 44 kHz (sampling frequency 96 kHz), CD audio: 4 Hz to 20 kHz  
**DVD Optical digital output**  
**Pick up:**  
 Wave length: 662 nm/785 nm  
 Laser classification: CLASS 2 / CLASS 3a  
 Norsk:  
 Bølgelengde: 662 nm/785 nm  
 Laserstyrke: Ingen farlig stråling sendes ut.  
**Operating temperature / humidity** 5°C to 35°C / 35-80% RH  
**Weight and dimensions** approx. value: 3.8 kg / 430 (width) x 89 (height) x 266 mm (depth)

DVD-Video	DVD-R	DVD-Audio	DVD-RAM	SVCD	Video-CD	CD	CD-R/RW
			 (without Cartridge)	 IEC62107			---
							

**Compatible disc formats:**  
 DVD-V, DVD-A, DVD-RAM, DVD-R, VCD, SVCD, CD-Audio (CD-DA), CD-R/CD-RW (discs formatted as CD-DA or Video CD).  
 WMA, MP3, JPEG :4000 tracks max. / 400 groups.

**Compatible compression rate:**  
 MP3 : 32 - 320 kbps  
 WMA : 48 - 192 kbps.  
 JPEG format : Exif version 2.1.  
 Resolution between 320 x 240 and 6144 x 4096;  
 sub sampling: 4:2:2 or 4:2:0;  
 HighMAT : Level 2 (audio and image)

- \* Depending on the disc type and the conditions of recording, the appliance may sometimes fail to play the listed discs.
- \* **DVD-RAM with JPEG:** Recorded with Panasonic DVD-Video recorders. To play JPEG files, select [Play as Data Disc] in DISPLAY menu (page 39).

# Index

	Page		Page		Page		Page
A-B Repeat	39	Erasure protection	46	MP3	30,34,35,38	Scart cable	10
Advanced Surround	39,43	EXT	18	MPEG	13,41,42,45	Slideshow	38
Angle	38	EXT LINK	18,25	MUSIC WITH PICTURE	33	SP/LP selection	22
Audio	34,41					SQPB	18
AUDIO IN/OUT	11,13	Field	40	NICAM	19	Still Mode	7,26,27,30,34,40,44
Audio language	40	Frame	40	NTSC	28,33,40	Subtitle	38,39,40
AV channels	20					S-VHS cassettes	18,28
AV ENHANCER	4,39	Group	30,38	OPTICAL	13		
AV2 socket	12,18	GUI-Brightness	39	OSD	18	Tape counter	6
						Tape length	18
Chapter	30,38	HighMAT	36,39	PAL	18,19,28,40,44	Tape remain display	5
Country	8,10,11	INDEX/SKIP	6,7,27	Pan&Scan	40	Tape speed	20
CVC Super	28	INTELLIGENT TIMER	23	Password	40,45	Time	8,9,10,11
				PBC	30	Title	30,38,42
Date	8,9,10,11	JET SEARCH	27	Picture Mode	39	TV system	18
DECODER	12,18	JPEG	33,35,38	Programme	7,30,32,33	VCR/DVD OUTPUT	18
Dialogue Enhancer	39	Laser	3	QUICK ERASE	4,28	VIDEO IN	13
DIRECT NAVIGATOR	32	Letterbox	40			VPS/PDC	22
Dolby Digital	13,41,45			Remote	18	WMA	30,34,35
DTS Digital Surround	13,41,45	Marker	39	Repeat	39		
DVD-RAM	32,33	MESECAM	18	RF-coaxial cable	8	Zoom	7,39,43

Country codes		Country codes		Country codes		Country codes		Country codes	
Abkhazian	6566	Bihari	6672	Esperanto	6979	Hindi	7273	Latin	7665
Afar	6565	Breton	6682	Estonia	6984	Hungarian	7285	Latvian	7686
Afrikaans	6570	Bulgarian	6671	Faroeese	7079	Icelandic	7383	Lingala	7678
Albanian	8381	Burmese	7789	Fiji	7074	Indonesian	7378	Lithuanian	7684
Ameharic	6577	Byelorussian	6669	Finnish	7073	Interlingua	7365	Macedonian	7775
Arabic	6582	Cambodian	7577	French	7082	Irish	7165	Malagasy	7771
Armenian	7289	Catalan	6765	Frisian	7089	Italian	7384	Malay	7783
Assamese	6583	Chinese	9072	Galician	7176	Japanese	7465	Malayalam	7776
Aymara	6588	Corsican	6779	Georgian	7565	Javanese	7487	Maltese	7784
Azerbaijani	6590	Croatian	7282	German	6869	Kanada	7578	Maori	7773
Bashkir	6665	Czech	6783	Greek	6976	Kashmiri	7583	Marathi	7782
Basque	6985	Danish	6865	Greenlandic	7576	Kazakh	7575	Moldavian	7779
Bengali	6678	Dutch	7876	Guarani	7178	Kirghiz	7589	Mongolian	7778
Bhutani	6890	English	6978	Gujarati	7185	Korean	7579	Nauru	7865
				Hausa	7265	Kurdish	7585	Nepali	7869
				Hebrew	7387	Laotian	7679	Norwegian	7879
								Oriya	7982
								Pashto	8083
								Persian	7065
								Polish	8076
								Portuguese	8084
								Punjabi	8065
								Quechua	8185
								Rhaeto-Rom.	8277
								Romanian	8279
								Russian	8285
								Samoan	8377
								Sanskrit	8365
								Sanskrit	8365
								Scots Gaelic	7168
								Serbian	8382
								Serbo-Croat.	8372
								Shona	8378
								Sindhi	8368
								Singhalese	8373
								Slovak	8375
								Slovenian	8376
								Somali	8379
								Spanish	6983
								Sundanese	8385
								Swahili	8387
								Swedish	8386
								Tagalog	8476
								Tajik	8471
								Tamil	8465
								Tatar	8484
								Telugo	8469
								Thai	8472
								Tibetan	6679
								Tigrinya	8473
								Tonga	8479
								Turkish	8482
								Turkmen	8475
								Ukrainian	8575
								Urdu	8582
								Uzbek	8590
								Vietnamese	8673
								Volapük	8679
								Welsh	6789
								Wolof	8779
								Xhosa	8872
								Yiddish	7473
								Yoruba	8979
								Zulu	9085