

# *CD/DVD Player*


Operating Instructions



*DVP-F21*

# WARNING

**To prevent fire or shock hazard, do not expose the unit to rain or moisture. To avoid electrical shock, do not open the cabinet. Refer servicing to qualified personnel only. Mains lead must only be changed at a qualified service shop.**

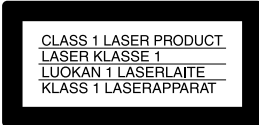


This appliance is classified as a CLASS 1 LASER product. The CLASS 1 LASER PRODUCT MARKING is located on the bottom exterior.

## CAUTION

The use of optical instruments with this product will increase eye hazard. As the laser beam used in this CD/DVD player is harmful to eyes, do not attempt to disassemble the cabinet.

Refer servicing to qualified personnel only.

The following caution labels are located on the laser protective housing inside the enclosure (except for Asian models).

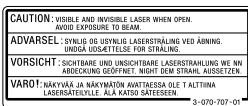

# Welcome!

Thank you for purchasing this Sony CD/DVD Player. Before operating this player, please read this manual thoroughly and retain it for future reference.

## Notice for customers in the United Kingdom and Republic of Ireland

A moulded plug complying with BS1363 is fitted to this equipment for your safety and convenience. Should the fuse in the plug supplied need to be replaced, a 5 AMP fuse approved by ASTA or BSI to BS1362, (i.e., marked with ⚡ or ⚡ mark) must be used.

If the plug supplied with this equipment has a detachable fuse cover, be sure to attach the fuse cover after you change the fuse. Never use the plug without the fuse cover. If you should lose the fuse cover, please contact your nearest Sony service station.

## Precautions

### Safety

- This unit operates on 100 – 240 V AC, 50/60 Hz. Check that the unit's operating voltage is identical with your local power supply.
- To prevent fire or shock hazard, do not place objects filled with liquids, such as vases, on the apparatus.
- Do not use the unit in a car. The operation cannot be guaranteed.

## Installing

- Allow adequate air circulation to prevent internal heat buildup.
- Do not install the unit in an inclined position. It is designed to be operated in a horizontal or vertical position only.
- Keep the unit and discs away from equipment with strong magnets, such as microwave ovens, or large loudspeakers.
- The nameplate is located on the bottom exterior.

---

# Precautions

## On safety

- Caution – The use of optical instruments with this product will increase eye hazard.
- Should any solid object or liquid fall into the cabinet, unplug the player and have it checked by qualified personnel before operating it any further.
- Do not put any foreign objects in the DC IN 10.5 V (external power input) jack.

## On power sources

- Use only the supplied AC power adaptor. Do not use any other AC power adaptor. It may cause a malfunction.

Polarity of the plug



- If the AC power adaptor causes interference to the radio reception, move it away from the radio.
- Do not touch the AC power adaptor with wet hands.
- The player is not disconnected from the AC power source (mains) as long as it is connected to the wall outlet, even if the player itself has been turned off.
- If you are not going to use the player for a long time, be sure to disconnect the player from the wall outlet. To disconnect the AC power cord (mains lead), grasp the plug itself; never pull the cord.

## On placement

- Place the player in a location with adequate ventilation to prevent heat build-up in the player.
- Do not place the player and the AC power adaptor on a soft surface such as a rug.
- Do not install the appliance in a confined space, such as a bookcase or built-in cabinet.
- Do not place the player and the AC power adaptor in a location near heat sources, or in

a place subject to direct sunlight, excessive dust, or mechanical shock.

- Do not put any object on top of the player. The player may be damaged.

## On operation

- If the player is brought directly from a cold to a warm location, or is placed in a very damp room, moisture may condense on the lenses inside the player. Should this occur, the player may not operate properly. In this case, remove the disc and leave the player turned on for about half an hour until the moisture evaporates.
- Do not insert a disc with non-standard shape (e.g., card, heart) into the player. The disc may not be ejected and cause a malfunction.
- When you move the player, take out any discs. If you don't, the disc may be damaged.

## On adjusting volume

Do not turn up the volume while listening to a section with very low level inputs or no audio signals. If you do, the speakers may be damaged when a peak level section is played.

## On installing the player on the wall

If the player falls down, a serious injury or damage may result. Observe the following instructions to prevent the player from falling down.

- Install the player on a wall strong enough to hold the player using two proper screws for the wall material and strength. Install the player on a vertical and flat wall where reinforcement is applied. If you are not sure about the wall strength or screws, contact a screw shop or installer.
- Install the player straight.
- Do not install the player at high position.
- Do not lean or hang on the player.
- Do not load anything on the player.
- Do not pull the connecting cords when the player is on the wall.
- Be careful not to trip on the connecting cords.

- When you operate the player, do not use excessive force to operate the player, or insert or remove the disc.
- When cleaning, do not put hand on the player or use excessive force.

### **On cleaning**

Clean the cabinet, panel, and controls with a soft cloth slightly moistened with a mild detergent solution. Do not use any type of abrasive pad, scouring powder or solvent such as alcohol or benzine.

If you have any questions or problems concerning your player, please consult your nearest Sony dealer.

### **On cleaning discs**

Do not use a commercially available cleaning disc. It may cause a malfunction.

#### **IMPORTANT NOTICE**

Caution: This player is capable of holding a still video image or on-screen display image on your television screen indefinitely. If you leave the still video image or on-screen display image displayed on your TV for an extended period of time you risk permanent damage to your television screen. Projection televisions are especially susceptible to this.





# Table of Contents

WARNING	2
Welcome!	2
Precautions	3
About this Manual	7
This Player Can Play the Following Discs	7
Notes about the Discs	8
Index to Parts and Controls	9
Guide to On-Screen Displays (Status Bar, Control Bar, Control Menu)	13
<hr/>	
<b>Getting Started</b>	<b>15</b>
Quick Overview	15
Step 1: Unpacking	15
Step 2: Inserting Batteries into the Remote	15
Step 3: TV Hookups	17
Step 4: Playing a Disc	18
<hr/>	
<b>Hookups</b>	<b>20</b>
Hooking Up the Player	20
Step 1: Connecting the Video Cords	20
Step 2: Connecting the Audio Cords	22
Step 3: Attaching the Jack Cover	30
Step 4: Connecting the Power Cord	31
Step 5: Quick Setup	32
<hr/>	
<b>Playing Discs</b>	<b>36</b>
Playing Discs	36
Resuming Playback from the Point Where You Stopped the Disc (Resume Play)	38
Using the DVD's Menu	39
Playing VIDEO CDs with PBC Functions (PBC Playback)	40
Various Play Mode Functions (Programme Play, Shuffle Play, Repeat Play, A-B Repeat Play)	41
<hr/>	
<b>Searching for a Scene</b>	<b>46</b>
Searching for a Particular Point on a Disc (Scan, Slow-motion Play)	46
Searching for a Title/Chapter/Track/Index/Scene (Search mode)	47
<hr/>	
<b>Viewing Information About the Disc</b>	<b>48</b>
Viewing the Playing Time and Remaining Time on the Front Panel Display	48
Checking the Playing Time and Remaining Time	49




<b>Sound Adjustments</b> . . . . .	<b>51</b>
Changing the Sound . . . . .	51
TV Virtual Surround Sound Settings (TVS) . . . . .	53
<hr/>	
<b>Enjoying Movies</b> . . . . .	<b>55</b>
Changing the Angles . . . . .	55
Displaying the Subtitles . . . . .	55
Adjusting the Picture Quality (BNR) . . . . .	56
<hr/>	
<b>Using Various Additional Functions</b> . . . . .	<b>58</b>
Locking Discs (Custom Parental Control, Parental Control) . . . . .	58
Operation Sound Effects (Sound Feedback) . . . . .	63
Controlling Your TV, etc. with the Supplied Remote . . . . .	64
<hr/>	
<b>Settings and Adjustments</b> . . . . .	<b>65</b>
Using the Setup Display . . . . .	65
Setting the Display or Sound Track Language (LANGUAGE SETUP) . . . . .	66
Settings for the Display (SCREEN SETUP) . . . . .	67
Custom Settings (CUSTOM SETUP) . . . . .	69
Settings for the Sound (AUDIO SETUP) . . . . .	70
<hr/>	
<b>Additional Information</b> . . . . .	<b>73</b>
Troubleshooting . . . . .	73
Self-diagnosis Function (When letters/numbers appear in the display) . . . . .	75
Glossary . . . . .	76
Specifications . . . . .	78
Language Code List . . . . .	80
List of Setup Display Items . . . . .	81
Index . . . . .	83

# About this Manual

- Instructions in this manual describe the controls on the remote. You can also use the controls on the player if they have the same or similar names as those on the remote.
- The icons used in this manual are described below:

Icon	Meaning	Icon	Meaning
	Functions available in DVD video mode		Functions available in music CD mode
	Functions available in VIDEO CD mode		More convenient features


# This Player Can Play the Following Discs

Format of discs	
DVD VIDEO	
VIDEO CD	
Music CD	


The “DVD VIDEO” logo is a trademark.

## Region code

Your player has a region code printed on the back of the unit and will only play DVDs labelled with identical region codes.

DVDs labelled  will also play on this player.

If you try to play any other DVD, the message “Playback prohibited by area limitations.” will appear on the TV screen. Depending on the DVD, no region code indication may be labelled even though playing the DVD is prohibited by area restrictions.

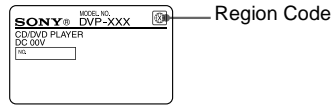

## Example of discs that the player cannot play

The player cannot play the following discs:

- CD-ROMs (PHOTO CDs included)
- All CD-Rs/RWs other than music and VCD format CD-Rs/RWs
- Data part of CD-Extras
- DVD-ROMs
- DVD Audio discs
- DVD-RWs recorded in video recording format (VR mode)
- HD layer on SACDs

Also, the player cannot play the following discs:

- A DVD with a different region code (page 77).
- A disc that has a non-standard shape (e.g., card, heart).
- A disc with paper or stickers on it.
- A disc that has the adhesive of cellophane tape or a sticker still left on it.

## Note

Some CD-Rs or CD-RWs cannot be played on this player depending upon the recording quality or physical condition of the disc, or the characteristics of the recording device.

Furthermore, the disc will not play if it has not been correctly finalized. For more information, see the operating instructions for the recording device.

## Note on playback operations of DVDs and VIDEO CDs

Some playback operations of DVDs and VIDEO CDs may be intentionally set by software producers. Since this player plays DVDs and VIDEO CDs according to the disc contents the software producers designed, some playback features may not be available. Also, refer to the instructions supplied with the DVDs or VIDEO CDs.

## Copyrights

This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents, other intellectual property rights owned by Macrovision Corporation, and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only, unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.


---

## Notes about the Discs

### On handling discs

- To keep the disc clean, handle the disc by its edge. Do not touch the surface.



- Do not expose the disc to direct sunlight or heat sources such as hot air ducts, or leave it in a car parked in direct sunlight as the temperature may rise considerably inside the car.
- After pressing  on the player to eject the disc, do not leave the disc as it is. Remove it completely from the player.
- After playing, store the disc in its case.
- If glue is present on the outer edge of the disc, wipe the edge of the disc with the side of a pen or pencil so that the glue is spread evenly along the edge before inserting the disc into the player. Be sure not to touch the playback side of the disc when wiping the edge.
- If burrs remain on the outer edge of the disc, remove them by rubbing with the side of a pen or pencil. If burrs are not removed, discs may not load properly into the player, or fragments of plastic adhering to the playback side of the disc may cause skipping in the sound.

### On cleaning

- Before playing, clean the disc with a cleaning cloth. Wipe the disc from the centre out.




- Do not use solvents such as benzene, thinner, commercially available cleaners, or anti-static spray intended for vinyl LPs.



# Index to Parts and Controls

For more information, refer to the pages indicated in parentheses.

## Front Panel

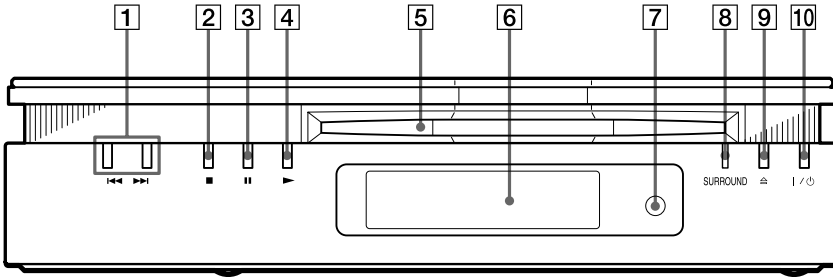


- 1** ◀◀/▶▶ (previous/next) buttons (37)
- 2** ■ (stop) button (37)
- 3** || (pause) button (37, 63)
- 4** ▶ (play) button (36)
- 5** Disc slot (36)


- 6** Front panel display (10)
- 7** ■ (remote sensor) (15)
- 8** SURROUND indicator (53)
- 9** ≡ (eject) button (37)
- 10** I/⏻ (power) button/indicator (36)

## Front Panel Display


### When playing back a DVD

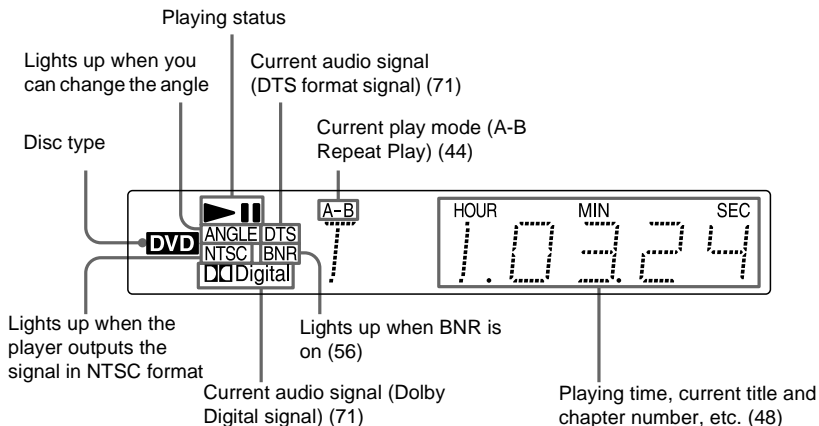


### When playing back a VIDEO CD (PBC)

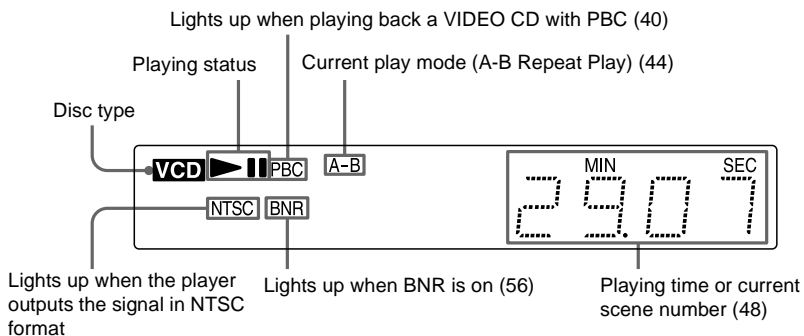

### When playing back a CD or VIDEO CD (without PBC)

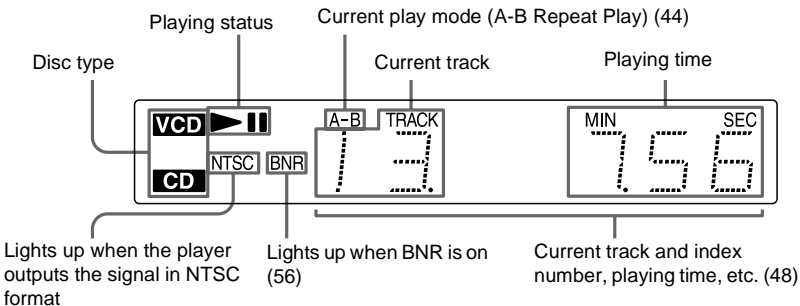


## Side Panel

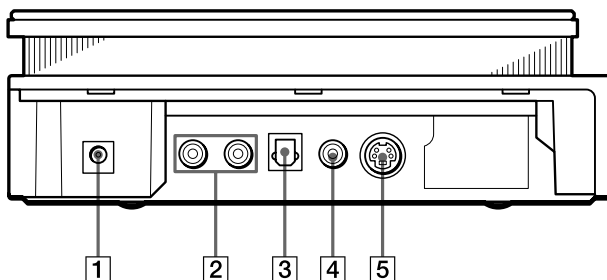

- 1** DC IN 10.5 V jack (17)
- 2** AUDIO OUT L/R jacks (17, 23, 24, 26)
- 3** DIGITAL OUT (OPTICAL) jack (24, 26, 28)
- 4** VIDEO OUT jack (17, 20)
- 5** S-VIDEO OUT jack (20)

## Remote

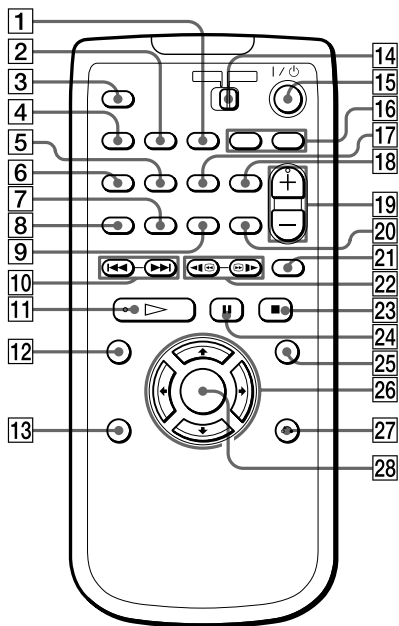

- 1** SEARCH MODE button (47)
- 2** BNR (Block Noise Reduction) button (56)
- 3** TIME/TEXT button (48)
- 4** SURROUND button (53)
- 5** ANGLE button (55)
- 6** AUDIO button (51)
- 7** PROGRAM button (41)
- 8** SHUFFLE button (43)
- 9** REPEAT button (44)
- 10** ◀◀/▶▶ PREV (previous) /NEXT buttons (37)
- 11** ▷ PLAY button (36)
- 12** TOP MENU button (39)
- 13** DISPLAY button (65)
- 14** TV/DVD switch (64)
- 15** I/⏻ (power) button (36)
- 16** TV operation buttons (64)
- 17** SUBTITLE button (55)
- 18** CLEAR button (41, 43, 44, 44)
- 19** VOL (volume) +/- buttons (64)
- 20** A-B button (44)
- 21** REPLAY button (37)
- 22** ◀◀/▶▶/▶▶▶▶ SCAN/SLOW buttons (46)
- 23** ■ STOP button (37)
- 24** || PAUSE button (37)
- 25** MENU button (39)
- 26** ◀/↑/↓/▶ buttons (32)
- 27** ↻ RETURN button (40)
- 28** ENTER button (32)

# Guide to On-Screen Displays (Status Bar, Control Bar, Control Menu)


The following explains the three types of on-screen displays used with this player: Status Bar, Control Bar, and Control Menu.

## Status Bar

Displays the current playing status.


This display appears when the DISPLAY button is pressed repeatedly during playback.

The numbers in parentheses indicate reference pages.

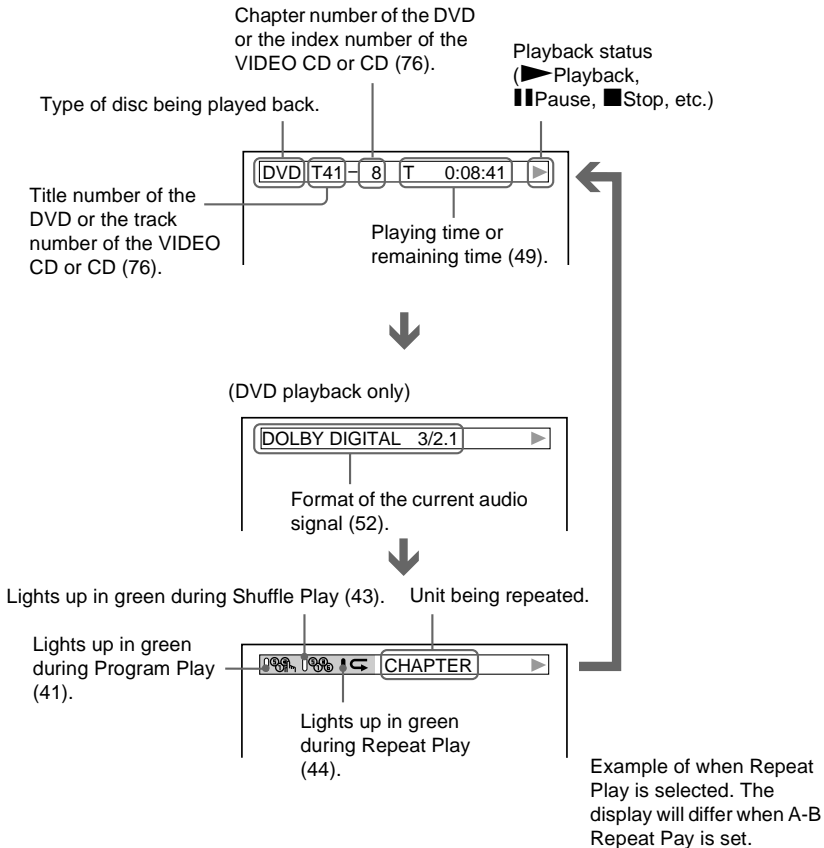


## Control Bar

The Control Bar appears when a playback function is selected by pressing the function's button on the remote.

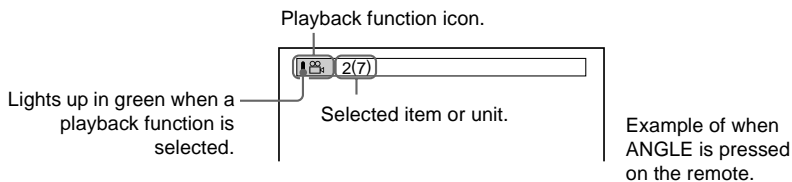

## Control Menu

The Control Menu appears when the DISPLAY button is pressed when the player is in stop mode. The number in parenthesis indicate reference pages.

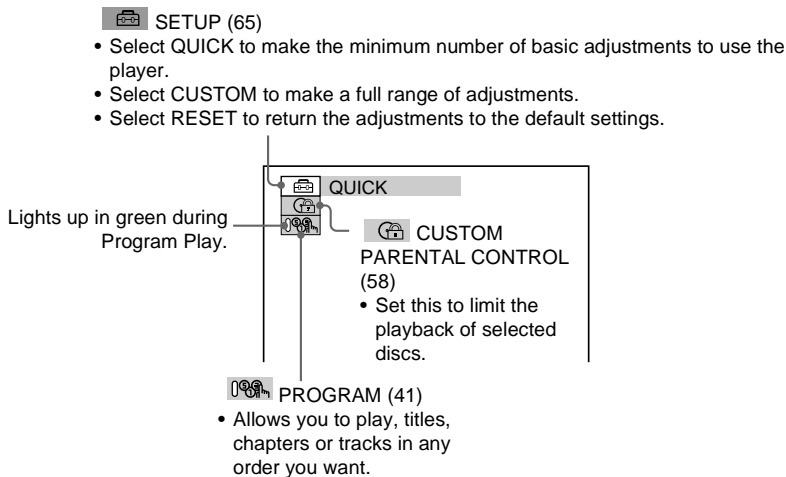

## Quick Overview

A quick overview presented in this chapter will give you enough information to start using the player for your enjoyment. To use the surround sound features of this player, refer to “Hookups” on page 20.

### Notes

- You cannot connect this player to a TV that does not have either a video input or SCART (EURO AV) jack.
- Be sure to turn off the power of each component before connecting.


## Step 1: Unpacking

Check that you have the following items:

- Audio/video cord (pinplug x 3 ↔ pinplug x 3) (1)
- Remote commander (remote) RMT-D137P (1)
- R6 (size AA) batteries (2)
- AC power adaptor AC-F21 (1)
- AC power cord (mains lead) (1)
- Jack cover for vertical installation (1)
- A EURO AV adaptor is included with some models.

## Step 2: Inserting Batteries into the Remote

You can control the player using the supplied remote. Insert two R6 (size AA) batteries by matching the ⊕ and ⊖ ends on the batteries to the markings inside the compartment. When using the remote, point it at the remote sensor on the player.

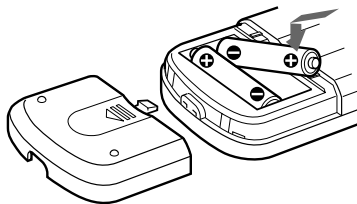


## If you cannot operate the player with the remote

The player has 2 remote sensors, one at the top and one on the front (page 18). If one of the remote sensor is exposed to direct sunlight or lighting apparatus, the remote may not operate correctly. If this happens, select a remote sensor in the following way until you find one that works.

When the power is on and no disc is inserted in the player, press **⏮** for more than 2 seconds while pressing **■**.

The selected remote sensor is displayed on the front panel display as follows:

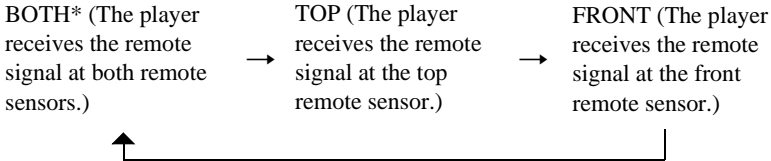

\* The default setting


### Notes

- Do not leave the remote in an extremely hot or humid place.
- Do not drop any foreign object into the remote casing, particularly when replacing the batteries.
- Do not expose the remote sensor to direct light from the sun or lighting apparatus. Doing so may cause a malfunction.
- If you do not use the remote for an extended period of time, remove the batteries to avoid possible damage from battery leakage and corrosion.



## Step 3: TV Hookups

Remove the jack cover from the player (see fig. **A**). Then connect the supplied audio/video cord and power cord in the order (**1**~**3**) shown below. Be sure to connect the power cord last.

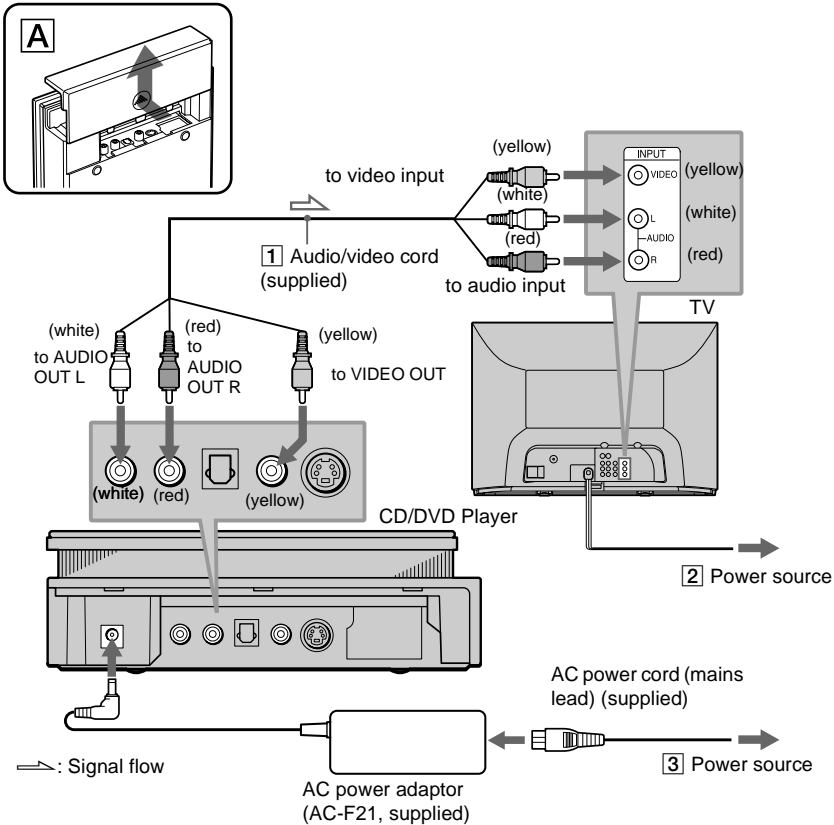

### When connecting to a standard 4:3 screen TV

Depending on the disc, the image may not fit your TV screen. If you want to change the aspect ratio, please refer to page 67.


### If your TV has a SCART (EURO AV) jack

Attach the supplied EURO AV adaptor to the TV, and connect to the player using the supplied audio/video cord.

continued →

## To change the colour system (Asian models only)

The colour system of the player is set to NTSC or PAL. If the on-screen menu of the player does not appear on the TV, change the colour system of the player to the same colour system (PAL or NTSC) of your TV. To change the colour system, hold **I/⏻** down for a few seconds while pressing **■** on the player.


 The player switches the colour system, PAL or NTSC, according to the connected TV. To check the colour system of the player, press **I/⏻**. The **I/⏻** indicator lights up in green. When “NTSC” appears on the front panel display, the colour system of the player is set to NTSC. When “NTSC” does not appear, the colour system is set to PAL.

---

## Step 4: Playing a Disc

**1** Turn on the TV.

**2** Switch the input selector on the TV to the player.

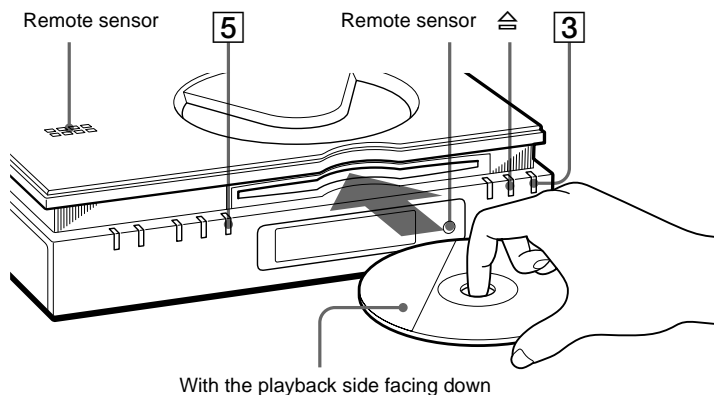

**3** Press **I/⏻** on the player.

**4** Insert the disc into the disc slot with the playback side facing down.

**5** Press **▶**.

The player begins playing the disc.

**After Step 5**

Depending on the disc, a menu may be displayed on the TV screen. If so, select the item you want from the menu and play the DVD (page 39) or VIDEO CD disc (page 40).

**To stop playing**

Press ■.

**To take out the disc**

Press ⏏ on the player, then remove the disc.

**To turn off the player**

Press I/⏻. The player is set to standby mode and the I/⏻ indicator lights up in red.

## Hooking Up the Player


Follow Steps 1 to 5 to hook up and adjust the settings of the player. Before you start, turn off the power, check that you have all of the supplied accessories, and insert the batteries into the remote (page 15). Remove the jack cover.

### Notes

- Plug cords securely to prevent unwanted noise.
- Refer to the instructions supplied with the components to be connected.


## Step 1: Connecting the Video Cords

Connect this player to your TV monitor, projector, or AV amplifier (receiver) using a video cord. Select one of the patterns **A** through **C**, according to the input jack on your TV monitor, projector, or AV amplifier (receiver).

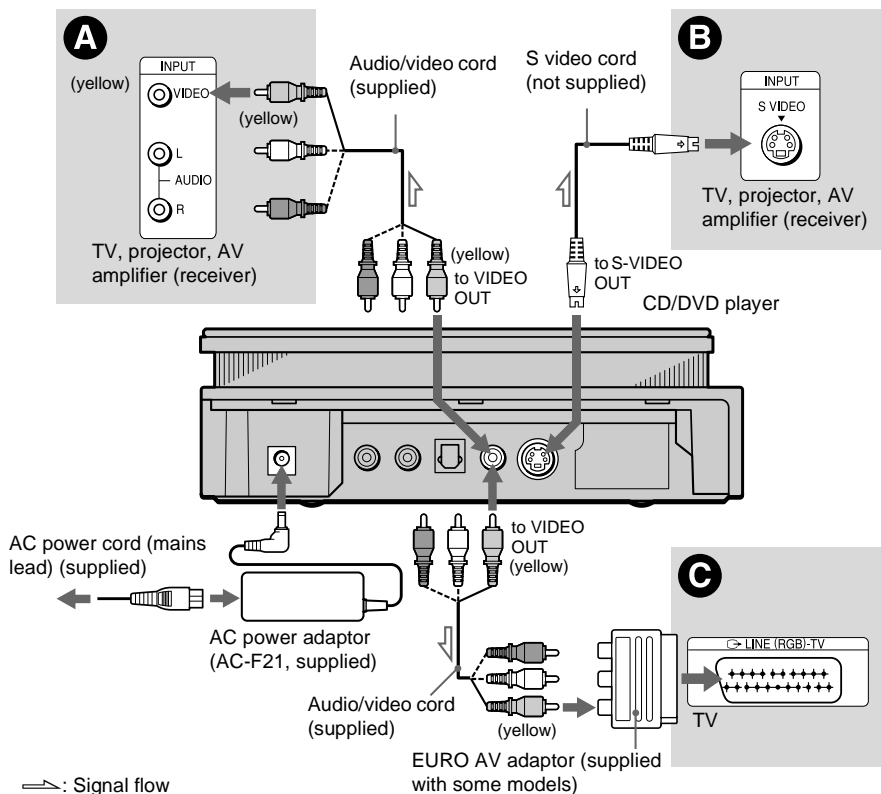

### A If you are connecting to a video input jack

Connect the yellow plugs of the audio/video cord (supplied) to the yellow (video) jacks. You will enjoy standard quality images.

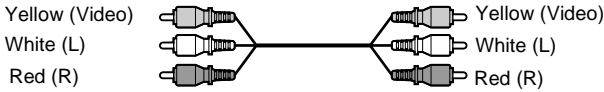

Use the red and white plugs to connect to the audio input jacks (page 23).


### B If you are connecting to an S VIDEO input jack

Connect the S VIDEO cord (not supplied). You will enjoy high quality images.




### C If you are connecting to a SCART (EURO AV) input jack


Connect the supplied EURO AV adaptor to the SCART (EURO AV) input jack of the TV and connect the player and the EURO AV adaptor using the audio/video cord (supplied). Connect the yellow plugs of the audio/video cord to the yellow (video) jacks. Use the red and white plugs to connect the audio input jacks (page 23).

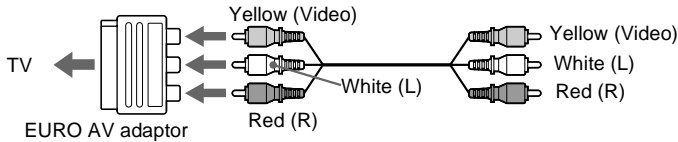

### Notes

- Do not connect your player to a VCR. You may not receive a clear image on the TV screen if you pass the player signals via the VCR.

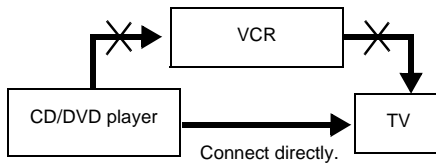

- When you play a disc recorded in the NTSC colour system, the player outputs the video signal or the setup display, etc., in the NTSC colour system and the picture may not appear on PAL colour system televisions. In this case, press  and remove the disc.
- The player switches the colour system, PAL or NTSC, according to the connected TV (page 18). (Asian models only)

## Step 2: Connecting the Audio Cords

Refer to the chart below to select the connection that best suits your system. The surround effects you will enjoy depend on the connections and components you use.

### Select a connection

Select one of the following connections, **A** through **D**.

Connection	Components to be connected
<b>A</b> (page 23)	TV (stereo)
<b>B</b> (page 24)	Stereo amplifier (receiver) (having L and R audio input jacks only, or having a digital input jack) <ul style="list-style-type: none"><li>• 2 speakers (front L and R)</li></ul>
<b>B</b> (page 24)	MD deck/DAT deck
<b>C</b> (page 26)	AV amplifier (receiver) with a Dolby* Surround (Pro Logic) decoder (having L and R audio input jacks only, or having a digital input jack) <ul style="list-style-type: none"><li>• 3 speakers (front L and R, and rear (monaural))</li><li>• 6 speakers (front L and R, centre, rear L and R, subwoofer)</li></ul>
<b>D</b> (page 28)	AV amplifier (receiver) having a Dolby Digital, MPEG audio, or DTS** decoder, and a digital input jack <ul style="list-style-type: none"><li>• 6 speakers (front L and R, centre, rear L and R, subwoofer)</li></ul>

\* Manufactured under license from Dolby Laboratories. "Dolby," "Pro Logic," and the double-D symbol are trademarks of Dolby Laboratories. Confidential unpublished works. © 1992-1997 Dolby Laboratories. All rights reserved.


\*\* "DTS" is a registered trademark of Digital Theater Systems, Inc.

## A Connecting to your TV

This connection will use your TV speakers for sound.

■ Recommended surround sound effects for this connection.

- TVS DYNAMIC (page 53)
- TVS WIDE (page 53)

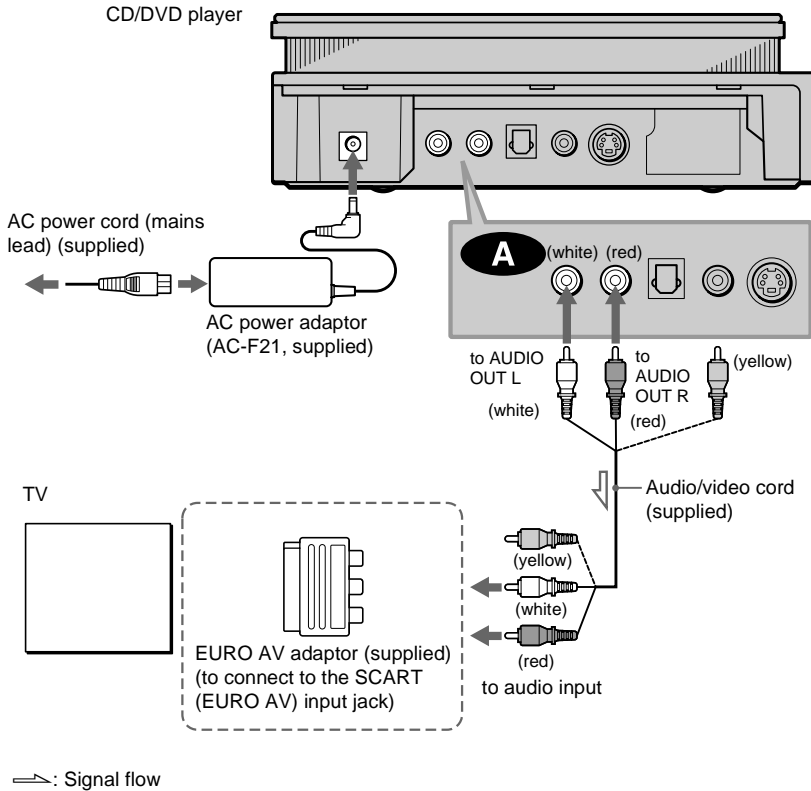

The yellow plug is used for video signals (page 20).

continued →

## **B** Connecting to a stereo amplifier (receiver) and 2 speakers/Connecting to an MD deck or DAT deck

This connection will use your 2 front speakers connected to your stereo amplifier (receiver) for sound. If the stereo amplifier (receiver) has audio input jacks L and R only, use **B-1**. If the amplifier (receiver) has a digital input jack, use **B-2**. When connecting to an MD deck or a DAT deck, use **B-2**. In this case, you can also connect the player directly to the MD deck or DAT deck without using your stereo amplifier (receiver).

■ Recommended surround sound effects for the **B-1** connection only.

- TVS STANDARD (page 53)


💡 In connection **B-1**, you can use the supplied audio/video cord instead of using a separate audio cord.

💡 To realize better surround sound effects, make sure that your listening position is in between your speakers.

### Note

If you select one of the TVS effects while playing a disc, no sound will come from your speakers with the **B-2** connection.



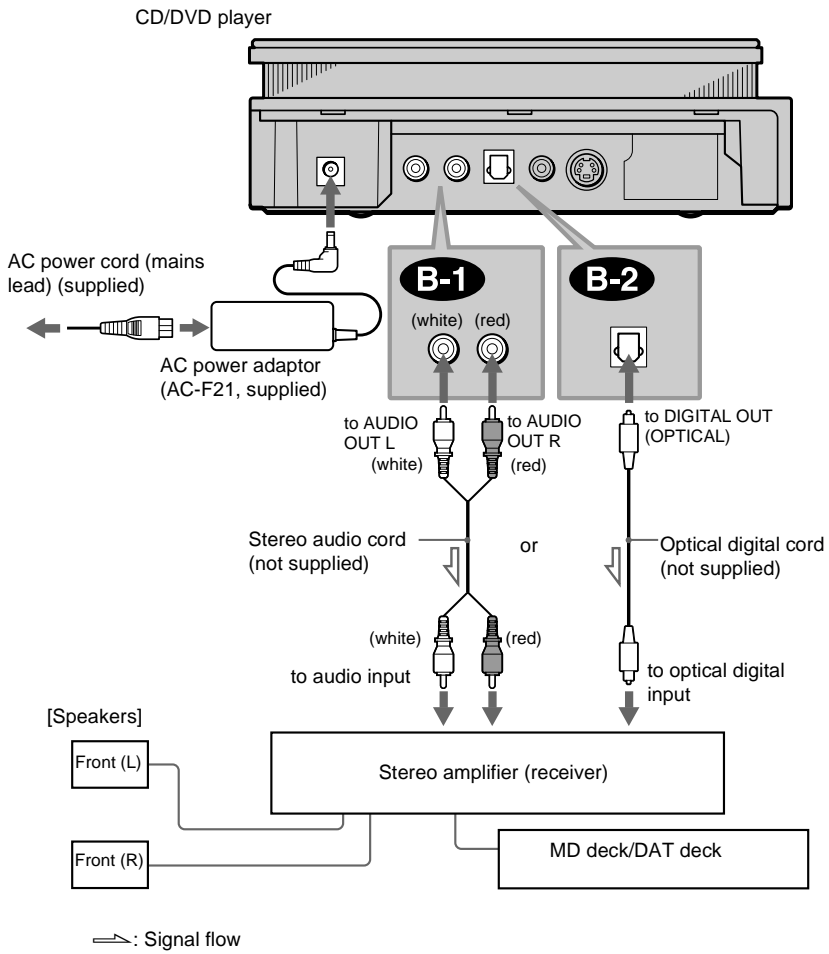

## **C** Connecting to a Dolby Surround (Pro Logic) decoder amplifier (receiver) and 3 to 6 speakers

This connection will allow you to enjoy the surround effects of the Dolby Surround (Pro Logic) decoder on your amplifier (receiver). If you have an AV amplifier (receiver) equipped with a Dolby Digital, MPEG audio, or DTS decoder, refer to page 28.


You can enjoy the Dolby Surround effects only when playing Dolby Surround audio or multichannel audio (Dolby Digital) discs.


Pro Logic uses a minimum of 3 speakers (front L and R, and rear (monaural)). The surround effects are enhanced if 6 speakers (front L and R, centre, rear L and R, and subwoofer) are used.

If your amplifier (receiver) has R and L audio input jacks only, use **C-1**. If your amplifier (receiver) has a digital input jack, use **C-2**.

■ Recommended surround sound effects using this connection with your amplifier (receiver).

- Dolby Surround (Pro Logic) (page 71)

 For correct speaker setting location, please refer to the operating instructions of the amplifier (receiver).

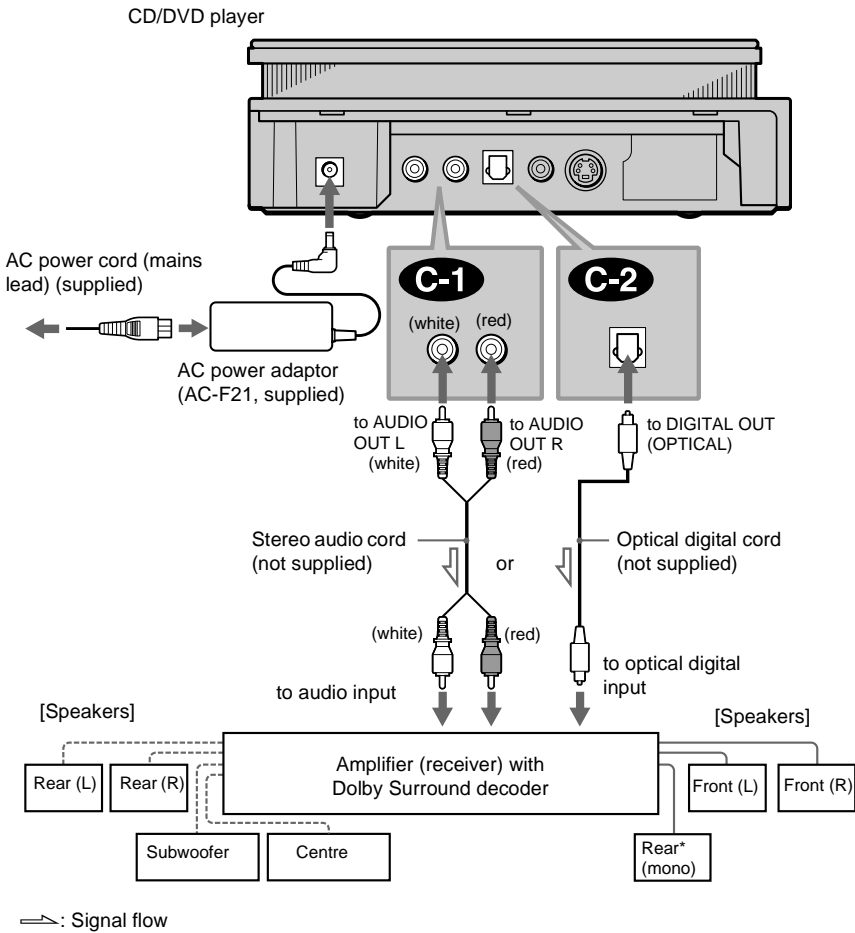


\* When connecting 6 speakers, replace the monaural rear speaker with a centre speaker, 2 rear speakers and a subwoofer.

## **D** Connecting to an AV amplifier (receiver) with a digital input jack having a Dolby Digital, MPEG audio, or DTS decoder, and 6 speakers

This connection will allow you to use the Dolby Digital, MPEG audio or DTS decoder function of your AV amplifier (receiver). You are not able to enjoy the TVS sound effects of the player.


■ Recommended surround sound effects using this connection with your amplifier (receiver).

- Dolby Digital (5.1ch) (page 71)
- DTS (5.1ch) (page 71)
- MPEG audio (5.1 ch) (page 71)

 To enhance the surround sound effects, refer to the operating instructions of the amplifier (receiver) for correct speaker setting location.

### **Note**

After you have completed the connection, be sure to set “DOLBY DIGITAL” to “DOLBY DIGITAL” (page 32). If your AV amplifier (receiver) has a DTS decoder, set “DTS” to “ON” (page 32). If your AV amplifier (receiver) has an MPEG audio decoder, set “MPEG” to “MPEG” (page 71). Otherwise, no sound or a loud noise will come from the speakers.

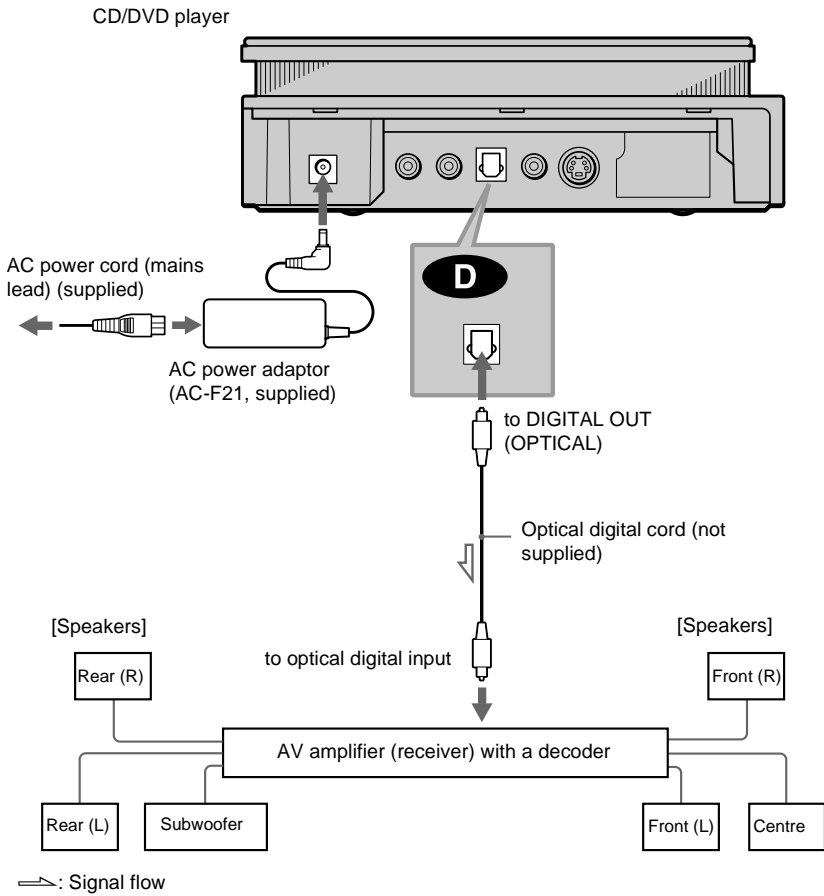

## Step 3: Attaching the Jack Cover


You can install the player horizontally, vertically or on the wall.

### Notes

- Make sure that the connecting cords are not trapped by the jack cover.
- If you use commercially available cords, make sure that those cords are similar to the supplied cords in size. If the cords are too thick or hard, or the plug is too large, you may not be able to attach the jack cover securely.


### When you install the player horizontally

First, gather all the connecting cords together and let them pass through the side of the player. Then attach the jack cover carefully not to trap the cords.

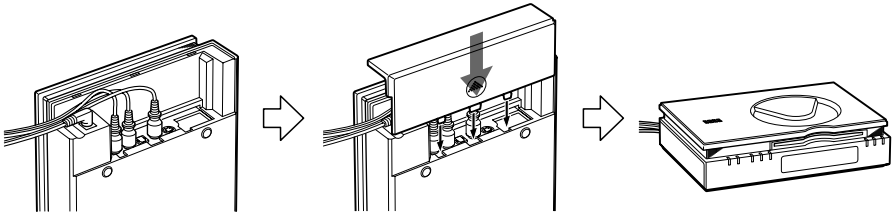

### When you install the player vertically

First, gather all the connecting cords together and let them pass through the side of the player. Then attach the jack cover for vertical installation (supplied) carefully not to trap the cords.

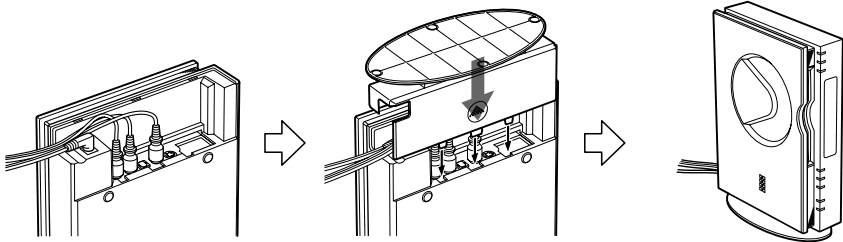

### Notes


- When you place the player in a horizontal position, remove the jack cover for vertical installation.
- To move the player, hold the player itself. If you hold the flat part of the jack cover for vertical installation, it may break.
- Do not place the player in a vertical position without attaching the jack cover for vertical installation. If you do not attach it, the player will be unstable and may fall over.

## When you install the player on the wall

Attach the jack cover as in the same way for the horizontal installation.

Fasten screws (not supplied) to the wall at the same height 80 mm apart. The screws should protrude by 4 to 5 mm.

Remove the seals covering the hanging holes. Hang the player on the screws. Push the player tightly against the wall.

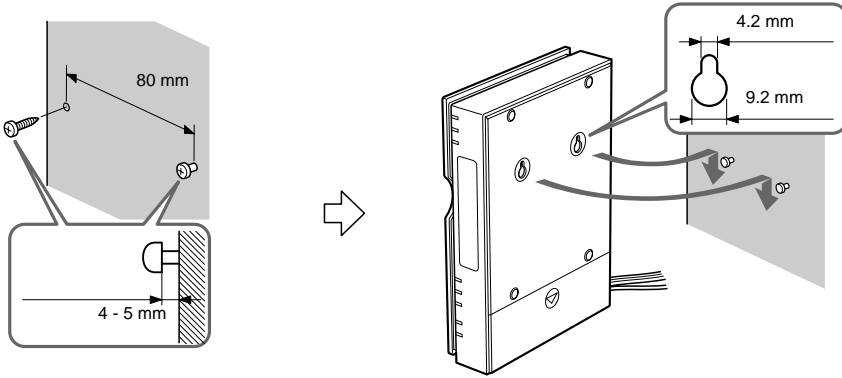

### Notes

- Use the screws that match the wall material and strength.
- Install the player on a vertical and flat wall where reinforcement is applied. Do not install the player if the wall is not vertical, flat or strong enough.
- Contact a screw shop or installer regarding the wall material or screws to be used.
- After the player has been used for long time on the wall, the wall behind or above the player may discolor or peel off by radiation of heat from the player depending on the wall material.
- Sony will refrain from any responsibility on the accident or damage caused by improper installation, lack of durability of the wall or screws, improper operation, natural calamity, etc.


## Step 4: Connecting the Power Cord

Plug the player and TV power cords (mains lead) into an AC outlet (mains).

Do not connect the power cord of your player to the “switched” power socket (mains) of an amplifier (receiver). Otherwise, when you turn off the power of your amplifier (receiver), the settings for the player may be lost.

## Step 5: Quick Setup

Follow the steps below to make the minimum number of basic adjustments to use the player. To skip an adjustment press **▶▶|**, to return to the previous adjustment, press **◀◀|**.

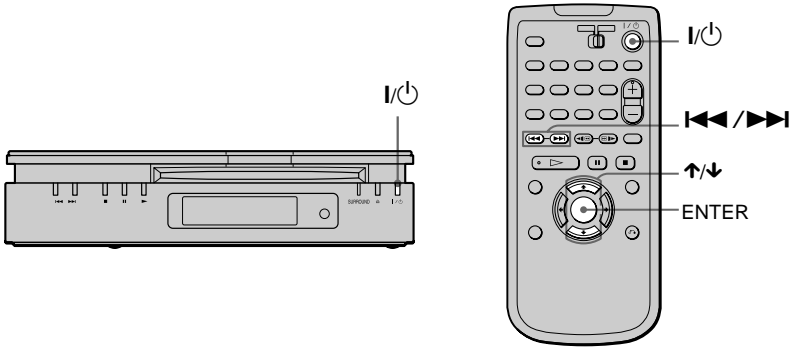

**1** Turn on the TV.


**2** Switch the input selector on the TV to the player.

**3** Press **I/⏻** on the player or the remote.

“Press [ENTER] to run QUICK SETUP.” appears at the bottom of the screen. If this message does not appear, select “QUICK” under “SETUP” in the Control Menu (page 65) to run Quick Setup.

**4** Press **ENTER** without inserting a disc.

The Setup Display for selecting the language used in the on-screen display appears. The available languages differ depending upon the player model.

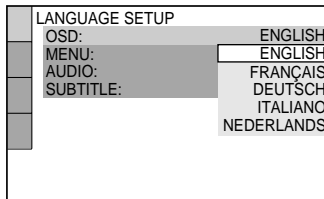


**5** Press **↑/↓** to select a language.

The player uses the language selected here to display the menu and subtitles as well.



**6** Press ENTER.

The Setup Display for selecting the aspect ratio of the TV to be connected appears.

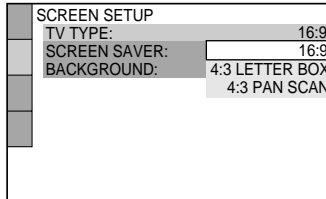


**7** Press ↑/↓ to select the item.

TV Type	You select	Page
A wide-screen TV or 4:3 standard TV with the wide-screen mode	16:9	67
4:3 standard TV	4:3 LETTER BOX or 4:3 PAN SCAN	67

**8** Press ENTER.

The Setup Display for selecting the type of jack used to connect your amplifier (receiver) appears.

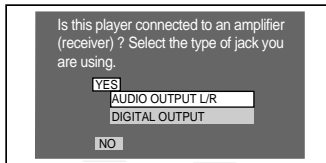


**9** Press ↑/↓ to select the item, then press ENTER.

- When "NO" or "AUDIO OUTPUT L/R" is selected, Quick Setup is finished and connections are complete.
- When "DIGITAL OUTPUT" is selected, the Setup Display for "DOLBY DIGITAL" appears. Proceed to Step **10**.

continued →

**10** Press **↑/↓** to select the item.


Choose the item that matches the audio connection you selected in pages 24 to 28 ( **B** through **D** ).

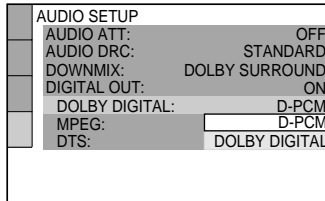

Audio Cord Connection Type	You select	Page
<b>B-2</b> <b>C-2</b>	D-PCM	70
<b>D</b>	DOLBY DIGITAL (only if the amplifier/receiver has a Dolby Digital decoder)	70

**11** Press **ENTER**.

“DTS” is selected.

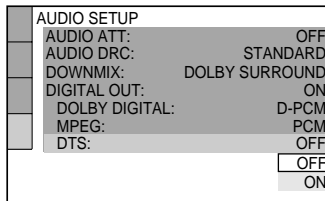

**12** Press **↑/↓** to select the item.

Choose the item that matches the audio connection you selected in pages 24 to 28 ( **B** through **D** ).

Audio Cord Connection Type	You select	Page
<b>B-2</b> <b>C-2</b>	OFF	70
<b>D</b>	ON (only if the amplifier/receiver has a DTS decoder)	70

**13** Press **ENTER**.

Quick Setup is finished. All connections and setup operations are complete. If your AV amplifier (receiver) has an MPEG audio decoder, set “MPEG” to “MPEG” (page 71).

**Note**

You can directly start Quick Setup only when you run it for the first time.  
To run Quick Setup a second time, select “QUICK” under “SETUP” in the Control Menu (page 65).

## Enjoying the surround sound effects

To enjoy the surround sound effects of this player or your amplifier (receiver), the following items must be set as described below for the audio connection you selected in pages 24 to 28 ( **B** through **D** ). Each of these are the default settings and do not need to be adjusted when you first connect the player. Refer to page 65 for using the Setup Display.

### Audio Connection (pages 23 to 28)

**A**

No additional settings are needed.

**B-1**

**C-1**

Item	You select	Page
DOWNMIX	DOLBY SURROUND	71

- If the sound distorts even when the volume is turned down, set “AUDIO ATT” to “ON” (page 70).

**B-2**

**C-2**

**D**



Item	You select	Page
DOWNMIX	DOLBY SURROUND	71
DIGITAL OUT	ON	71

## Playing Discs

### Playing Discs

Depending on the DVD or VIDEO CD, some operations may be different or restricted.

Refer to the operating instructions supplied with your disc.

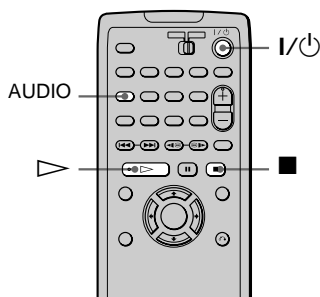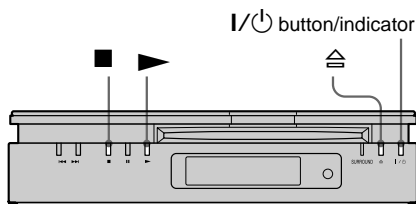

**1** Turn on your TV.


**2** Switch the input selector on the TV to the player.



**When using an amplifier (receiver)**  
Turn on the amplifier (receiver) and select the appropriate channel.

**3** Press I/⏻.

The I/⏻ indicator (red) changes to green and the front panel display lights up.

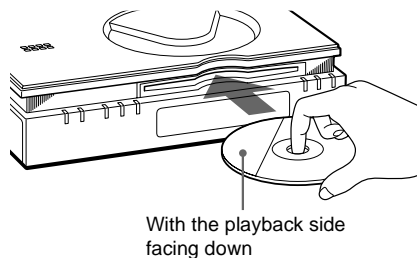**4** Insert a disc in the player.




**5** Press  on the player or  on the remote.

The player starts playback (continuous play). Adjust the volume on the TV or the amplifier (receiver).

### After following Step 5

 Depending on the disc, a menu may appear on the TV screen. You can play the disc interactively by following the instructions on the menu. DVD (page 39), VIDEO CD (page 40).

### To turn off the player

Press I/⏻. The player enters standby mode and the I/⏻ indicator lights up in red. To turn off the player completely, disconnect the mains lead. While playing a disc, do not disconnect the mains lead. Doing so may cancel the menu settings. When you turn off the player, first press  to stop playback and then press I/⏻.

### Notes on playing DTS sound tracks on a CD

- When playing DTS-encoded CDs, excessive noise will be heard from the analog stereo jacks. To avoid possible damage to the audio system, the consumer should take proper precautions when the analog stereo jacks of the player are connected to an amplification system. To

enjoy DTS Digital Surround™ playback, an external 5.1-channel decoder system must be connected to the digital jack of the player.

- Set the sound to “STEREO” using the AUDIO button when you play DTS sound tracks on a CD (page 51).
- Do not play DTS sound tracks without first connecting the player to an audio component having a built-in DTS decoder. The player outputs the DTS signal via the DIGITAL OUT (OPTICAL) jack even if “DTS” in “AUDIO SETUP” is set to “OFF” in the Setup Display (page 72), and may affect your ears or cause your speakers to be damaged.



**Notes on playing DVDs with a DTS sound track**

- DTS audio signals are output only through the DIGITAL OUT (OPTICAL) jack.
- If you connect the player to audio equipment without a DTS decoder, do not set “DTS” to “ON” in “AUDIO SETUP” (page 72). A loud noise may come out from the speakers, affecting your ears or causing the speakers to be damaged.
- When you play a DVD with DTS sound tracks, set “DTS” to “ON” in “AUDIO SETUP” (page 72).

**Notes**

- If you don't operate the player or the remote for more than 30 minutes when a disc is not playing, the player automatically enters standby mode (Auto Power Off function).
- When you insert an 8-cm (3-inch) disc, insert the disc slowly at the centre of the disc slot. If you cannot eject the disc, consult your nearest Sony dealer.
- No adaptor is required in order to play 8-cm (3-inch) CDs on this player. If a single adaptor is used, damage to the player may result; therefore, never use an adaptor when playing 8-cm (3-inch) CDs.

**Additional operations**

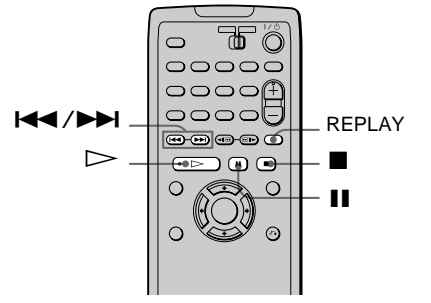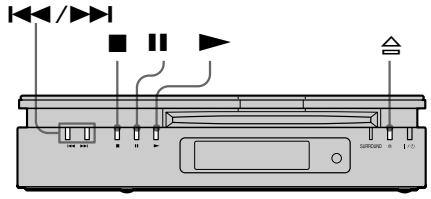

To	Operation
Stop	Press ■
Pause	Press
Resume play after pause	Press    or ▷ or ▶
Go to the next chapter, track, or scene in continuous play mode	Press ▶▶
Go back to the preceding chapter, track, or scene in continuous play mode	Press ◀◀
Stop play and remove the disc	Press ≡
Replay a previous scene (DVD only)	Press REPLAY

The Replay function is useful when you want to review a scene or dialog that you missed.



**Note**


You may not be able to use the Replay function with some scenes.

---

# Resuming Playback from the Point Where You Stopped the Disc (Resume Play)

Play   

When you stop the disc, the player remembers the point where you pressed  and “RESUME” appears on the front panel display. As long as you do not remove the disc, Resume Play works even if the player enters standby mode by pressing .

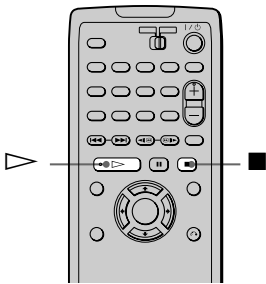

## Notes

- Depending on where you stopped the disc, the player may not resume playback from exactly the same point.
- The point where you stopped playing is cleared when:
  - you disconnect the mains lead.
  - you change the play mode.
  - you change the settings on the Setup Display.

---

### 1 While playing a disc, press to stop playback.




“RESUME” appears on the front panel display and you can restart the disc from the point where you stopped the disc. If “RESUME” does not appear, Resume Play is not available.

---

### 2 Press .

The player starts playback from the point where you stopped the disc in Step 1.

---


 To play from the beginning of the disc, press  twice, then press .

## Using the DVD's Menu

Some discs have a “top menu” or a “menu.”

### Using the top menu


A DVD is divided into long sections of a picture or a music feature called “titles.” When you play a DVD which contains several titles, you can select the title you want using the top menu.

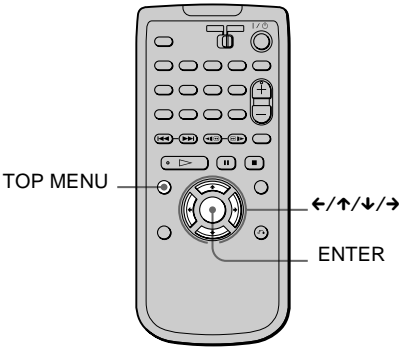

- 1** Press TOP MENU.  
The top menu appears on the TV screen. The contents of the menu vary from disc to disc.
- 2** Press ←/↑/↓/→ to select the title you want to play.
- 3** Press ENTER.  
The player starts playing the selected title.

### Using the menu

Some DVDs allow you to select the disc contents using a menu. When you play these DVDs, you can select items such as the language for the subtitles and the language for the sound using the menu.

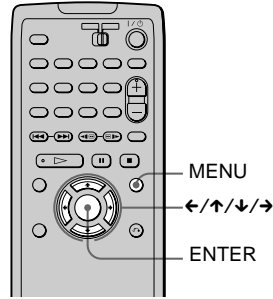


- 1** Press MENU.  
The menu appears on the TV screen. The contents of the menu vary from disc to disc.
- 2** Press ←/↑/↓/→ to select the item you want to change.
- 3** To change other items, repeat Step 2.
- 4** Press ENTER.

---

## Playing VIDEO CDs with PBC Functions (PBC Playback)



With PBC (Playback Control) functions, you can enjoy simple interactive operations, search functions, and other operations. PBC playback allows you to play VIDEO CDs interactively by following the menu on the TV screen.

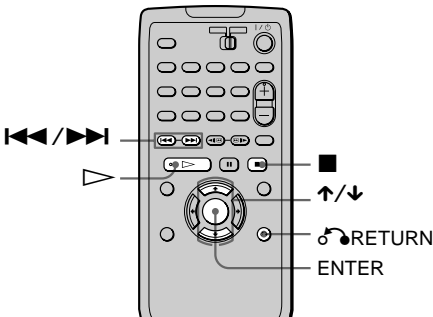

To play without using PBC, press **◀▶** while the player is stopped to select a track, then press **▶** or ENTER.

“Play without PBC.” appears on the TV screen and the player starts continuous play. You cannot play still pictures such as a menu.

To return to PBC playback, press **■** twice then press **▶**.

### Notes

- Depending on the VIDEO CD, “Press ENTER” in Step 3 may appear as “Press SELECT” in the instructions supplied with the disc. In this case, press **▶**.
- The PBC functions of Super VCDs do not work with this player. Super VCDs are played in continuous play mode only.

---

### 1 Start playing a VIDEO CD with PBC functions.

The menu for your selection appears.

---

### 2 Select the item number you want by pressing **↑/↓**.

---

### 3 Press ENTER.

---

### 4 Follow the instructions in the menu for interactive operations.

Refer to the instructions supplied with the disc, as the operating procedure may differ according to the VIDEO CD.

---

#### To go back to the menu

Press **↶**RETURN.



# Various Play Mode Functions

(Programme Play, Shuffle Play, Repeat Play, A-B Repeat Play)



You can set the following play modes:


- Programme Play (page 41)
- Shuffle Play (page 43)
- Repeat Play (page 44)
- A-B Repeat Play (page 44)

**Note**

- The play mode is canceled when:
  - you eject the disc.
  - the player enters standby mode by pressing I/⏻.


## Creating your own programme (Programme Play)

You can play the contents of the discs in the order you want by arranging the order of the titles, chapters, or tracks to create your own programme. You can programme up to 99 titles, chapters, and tracks.

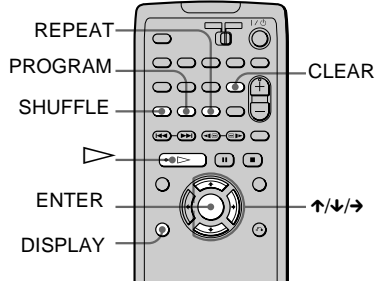

**1** Press **DISPLAY** while the player is in stop mode.  
The Control Menu is displayed.

**2** Press **↑/↓** to select **PROGRAM** and press **ENTER**.  
The options for “PROGRAM” appear.

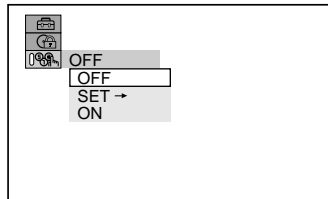


continued →

**3** Press  $\uparrow/\downarrow$  to select "SET→" and press ENTER.

The display for programming appears.


Tracks or titles recorded on a disc

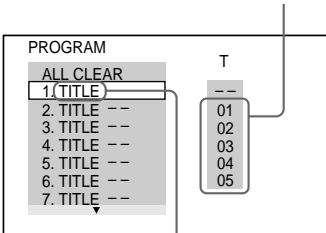

"TRACK" is displayed when you play a VIDEO CD or a CD

**4** Press  $\rightarrow$ .

The cursor moves to the title or track (in this case, "01").

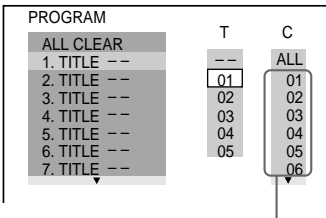


Chapters recorded on a disc

**5** Select the title, chapter, or track you want to programme.


■ When playing a DVD

For example, select chapter "03" of title "02."

Press  $\uparrow/\downarrow$  to select "02" under "T," then press ENTER.

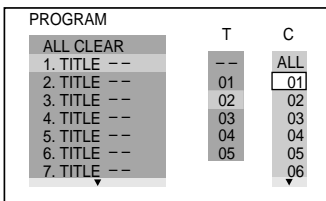

Next, press  $\uparrow/\downarrow$  to select "03" under "C," then press ENTER.

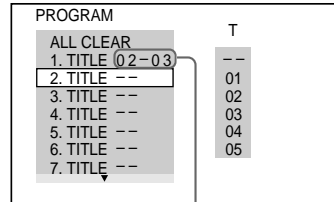


Selected title and chapter

■ When playing a VIDEO CD or CD

For example, select track "02."

Press  $\uparrow/\downarrow$  to select "02" under "T," then press ENTER.

Selected track

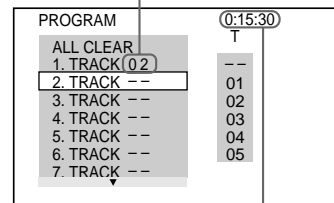

Total time of the programmed tracks

**6** To programme other titles, chapters, or tracks, repeat Steps 4 to 5.

The programmed titles, chapters, and tracks are displayed in the selected order.

**7** Press  $\triangleright$  to start Programme Play. Programme Play begins. When the programme ends, you can restart the same programme again by pressing  $\triangleright$ .

**To return to normal play**

Press CLEAR, or select “OFF” in Step 3. To play the same programme again, select “ON” in Step 3 and press  $\triangleright$ .

**To turn off the Control Menu**


Press DISPLAY repeatedly until the Control Menu is turned off.

**To change or cancel a programme**

- 1** Follow Steps 1 through 3 of “Creating your own programme (Programme Play).”
- 2** Select the programme number of the title, chapter, or track you want to change or cancel using  $\uparrow/\downarrow$ , and press  $\rightarrow$ .
- 3** Follow Step 5 for new programming. To cancel a programme, select “--” under “T,” then press ENTER.

**To cancel all the titles, chapters, or tracks in the programmed order**

- 1** Follow Steps 1 through 3 of “Creating your own programme (Programme Play).”
- 2** Press  $\uparrow$  and select “ALL CLEAR.”
- 3** Then press ENTER.

 You can do Repeat Play or Shuffle Play of the programmed titles, chapters, or tracks by pressing REPEAT or SHUFFLE during Programme Play.


 You can select “PROGRAM” directly by pressing PROGRAM.

**Notes**


- When playing SuperVCDs, the total time of the programmed tracks does not appear on the screen.
- The number of titles, chapters, or tracks displayed are the same number of titles, chapters, or tracks recorded on a disc.

**Playing in random order (Shuffle Play)**

You can have the player “shuffle” titles, chapters, or tracks and play them in a random order. Subsequent “shuffling” may produce a different playing order.

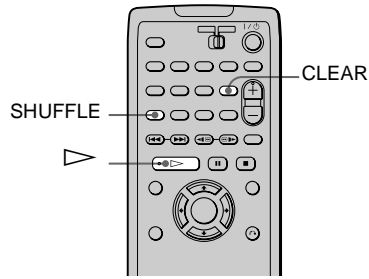

- 1** Press SHUFFLE during playback. The Control Bar is displayed.

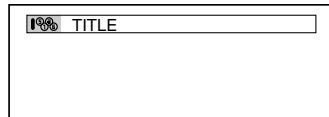

- 2** Press SHUFFLE repeatedly to select the item you want to set.

**■ When playing a DVD (Programme Play is set to “OFF”)**

- TITLE: Shuffles titles and plays them in random order.
- CHAPTER: Shuffles chapters and plays them in random order.

**■ When playing a VIDEO CD or CD (Programme Play is set to “OFF”)**

- TRACK: Shuffles tracks and plays them in random order.

*continued*  $\rightarrow$

- When playing a VIDEO CD, CD, or DVD (Programme Play is set to "ON")
  - ON: Shuffles titles or tracks selected in Programme Play and plays them in random order.

### To return to normal play

Press CLEAR or select "OFF" in Step 2.

💡 You can set the player to "shuffle" in stop mode as well. After pressing SHUFFLE to select the item you want to set, press ▷. Shuffle Play starts.


### Note

Up to 200 chapters in a disc can be played in random order when "CHAPTER" is selected.


### Playing repeatedly (Repeat Play)

You can play all of the titles or tracks on a disc or a single title, chapter, or track repeatedly.

You can use a combination of Shuffle or Programme Play modes.

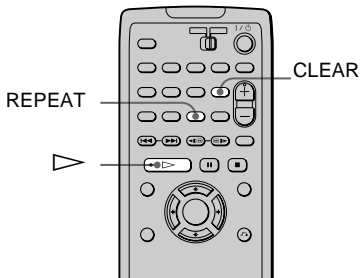

- 1 Press REPEAT during playback.  
The Control Bar appears.

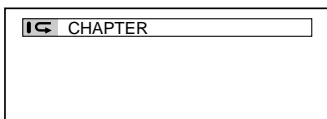

- 2 Press REPEAT repeatedly to select the item you want to set.

- When playing a DVD (Programme Play and Shuffle Play are set to "OFF")
  - DISC: Repeats all of the titles.
  - TITLE: Repeats the current title on a disc.
  - CHAPTER: Repeats the current chapter.

- When playing a VIDEO CD or CD (Programme Play and Shuffle Play are set to "OFF")

- DISC: Repeats all of the tracks on a disc.
- TRACK: Repeats the current track.

- When Programme Play is set to "ON" or Shuffle Play is activated

- ON: Repeats Programme Play or Shuffle Play.


### To return to normal play

Press CLEAR or select "OFF" in Step 2.

💡 You can set the player to "repeat" in stop mode as well. After pressing REPEAT to select the item you want to set, press ▷. Repeat Play starts.


### Repeating a specific portion (A-B Repeat Play)

You can play a specific portion of a title, chapter, or track repeatedly. (This function is useful when you want to memorize lyrics, etc.)

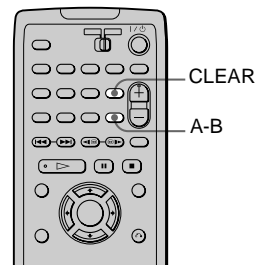

- 1 During playback, when you find the starting point (point A) of the portion to be played repeatedly, press A-B.  
The Control Bar appears.

The starting point (point A) is set.

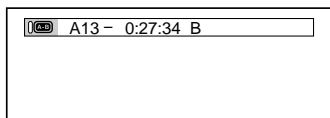

---

## 2 When you reach the ending point (point B), press A-B again.

The set points are displayed and the player starts repeating this specific portion.

“A-B” appears on the front panel display during A-B Repeat Play.

---

### To return to normal play

Press CLEAR.

#### Notes


- You can set A-B Repeat Play for only one specific section.
- When you set A-B Repeat Play, the settings for Shuffle Play, Repeat Play, and Programme Play are canceled.

## Searching for a Scene

# Searching for a Particular Point on a Disc (Scan, Slow-motion Play)



You can locate a particular point on a disc quickly by monitoring the picture or playing back slowly.

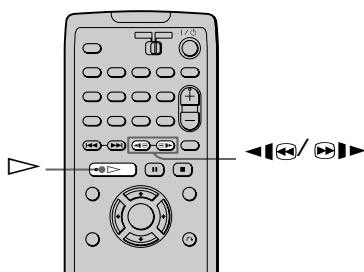

### Note


Depending on the DVD/VIDEO CD, you may not be able to do some of the operations described.

## Locating a point quickly by playing a disc in fast forward or fast reverse (Scan)


Press **x2▶** or **x2◀** while playing a disc. When you find the point you want, press **▶** to return to normal speed.

Each time you press **x2▶** or **x2◀** during scan, the playback speed changes. Three speeds are available. With each press the indication changes as follows:

Playback direction

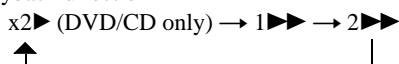

Opposite direction

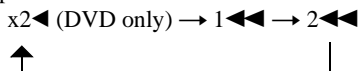

The “x2▶”/“x2◀” playback speed is about twice the normal speed. The “2▶▶”/“2◀◀” playback speed is faster than “1▶▶”/“1◀◀.”


## Watching frame by frame (Slow-motion Play)




Press **◀◀◀** or **▶▶▶** when the player is in pause mode. To return to the normal speed, press **▶**.

Each time you press **◀◀◀** or **▶▶▶** during Slow-motion Play, the playback speed changes. Two speeds are available. With each press the indication changes as follows:

Playback direction

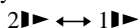

Opposite direction (DVD only)

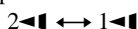


The “2▶▶”/“2◀◀” playback speed is slower than “1▶▶”/“1◀◀.”

# Searching for a Title/ Chapter/Track/Index/ Scene (Search mode)




You can search a DVD disc by title or chapter, and you can search a VIDEO CD or CD by track, index, or scene.

As title and tracks are assigned unique numbers on the disc, you can select the desired one by entering its number. Or, you can search for a scene using the time code.

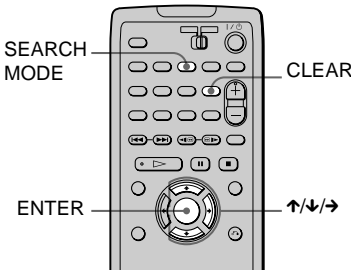

## 1 Press SEARCH MODE during playback.

The Control Bar appears. “--(\*\*)” appears next to the icon on the Control Bar (\*\* refers to a number). The number in parentheses indicates the total number of titles, tracks, scenes, etc. of the disc.

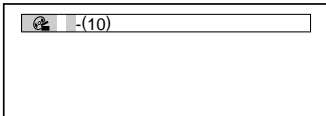

## 2 Press SEARCH MODE repeatedly to select the search method.

■ When playing a DVD

🔍 (TITLE), 📄 (CHAPTER),

🕒 (TIME/TEXT), or 📊 (NUMBER INPUT)

Select “TIME/TEXT” to search for a starting point by inputting the time code.

■ When playing a VIDEO CD

🎵 (TRACK) or 📄 (INDEX)

■ When playing a VIDEO CD with PBC Playback

🎭 (SCENE)

■ When playing a CD

🎵 (TRACK) or 📄 (INDEX)

## 3 Select the number of the title, track, scene, time code, etc., you want by pressing $\uparrow/\downarrow$ to select the digit, following by $\rightarrow$ to move the cursor.

For example, to find the scene at 2 hours, 10 minutes, and 20 seconds after the beginning, select “TIME/TEXT” in Step 2 and enter “2:10:20.”

**If you make a mistake**

Cancel the number by pressing CLEAR, then select another number.

## 4 Press ENTER.

The player starts playback from the selected number.


💡 If you are playing a disc and it is necessary to enter a number, select “NUMBER INPUT” in Step 2.

## Viewing Information About the Disc

# Viewing the Playing Time and Remaining Time on the Front Panel Display



You can check information about the disc, such as the remaining time, current number of title of a DVD, or track of a CD or VIDEO CD, using the front panel display (page 10).

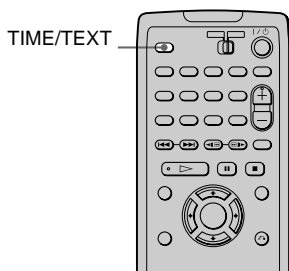

### Press TIME/TEXT.


Each time you press TIME/TEXT while playing the disc, the display changes as shown in the following charts.

## When playing a DVD


Playing time of the current title




Remaining time of the current title

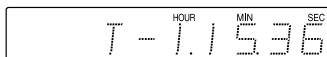

Playing time of the current chapter

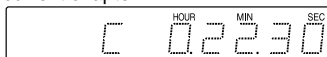


Remaining time of the current chapter

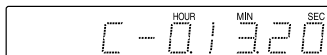

Text



Current title and chapter number

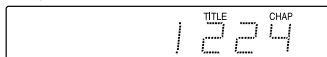


Automatically




## When playing a VIDEO CD (without PBC functions) or CD

Track playing time and the current track number

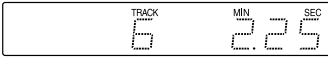


Remaining time of the current track

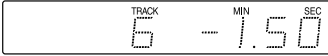


Playing time of the disc




Remaining time of the disc

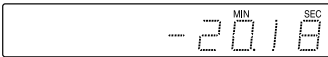

Text

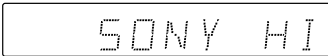

Current track and index number

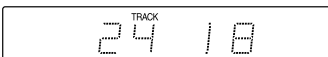

Automatically

When playing VIDEO CDs with PBC functions, the scene number or the playing time is displayed.

The playing time and remaining time of the current chapter, title, track, scene, or disc will also appear on your TV screen. See the following section “Checking the Playing Time and Remaining Time” for instructions on how to read this information.


### Note

Depending on the type of disc being played and the playing mode, the above mentioned disc information may not be displayed.

## Checking the Playing Time and Remaining Time




You can check the playing time and remaining time of the current title, chapter, or track, and the playing time or remaining time of the disc. Also, you can check the DVD/CD text recorded on the disc.

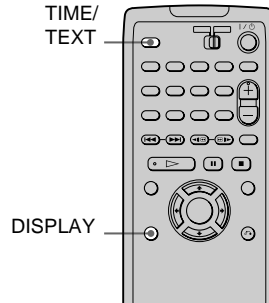

### 1 Press DISPLAY once during playback.

The Status Bar is displayed.

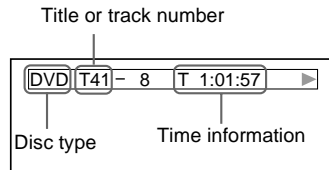

## 2 Press TIME/TEXT repeatedly to change the time information.

The display and the kinds of time that you can change depend on the disc you are playing.

### ■ When playing a DVD

- T \*\*:\*\*\*  
Playing time of the current title
- T-\*\*:\*\*\*  
Remaining time of the current title
- C \*\*:\*\*\*  
Playing time of the current chapter
- C-\*\*:\*\*\*  
Remaining time of the current chapter

### ■ When playing a VIDEO CD (with PBC functions)

- \*\*:\*\*\*  
Playing time of the current scene

### ■ When playing a VIDEO CD (without PBC functions) or CD


- T \*\*:\*\*\*  
Playing time of the current track
- T-\*\*:\*\*\*  
Remaining time of the current track
- D \*\*:\*\*\*  
Playing time of the current disc
- D-\*\*:\*\*\*  
Remaining time of the current disc

### ■ When playing a Super VCD (Asian models only)

The remaining time cannot be displayed.

- T \*\*:\*\*\*  
Playing time of the current track

The DVD/  
CD text

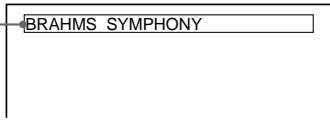

BRAHMS SYMPHONY

💡 If the DVD/CD text does not fit on a single line, you can see the entire text by watching it scroll across the front panel display.

💡 You can select the time and text directly by pressing TIME/TEXT.

### Notes

- Only letters of the alphabet can be displayed.
- This player can only display the first level of DVD/CD text, such as the disc's name or title.

## To turn off the Status Bar

Press DISPLAY repeatedly until the Status Bar is turned off.

## Checking the DVD/CD text

Press TIME/TEXT repeatedly in Step 2 to display the text recorded on the DVD/CD.


## Changing the Sound



If the DVD is recorded with multilingual tracks, you can select the language you want while playing the DVD.


If the DVD is recorded in multiple audio formats (PCM, Dolby Digital, MPEG audio or DTS), you can select the audio format you want while playing the DVD.

With stereo CDs or VIDEO CDs, you can select the sound from the right or left channel and listen to the sound of the selected channel through both the right and left speakers. (In this case, the sound loses its stereo effect.) For example, when playing a disc containing a song with the vocals on the right channel and the instruments on the left channel, you can select the left channel and hear the instruments from both speakers.

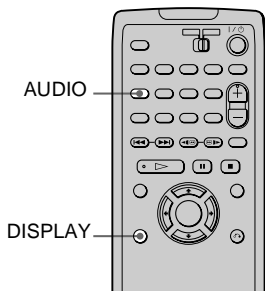

### 1 Press AUDIO during playback.

The Control Bar is displayed. The number in parentheses indicates the total number of available audio signals.

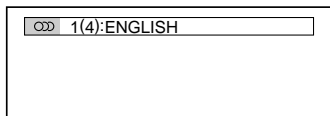

### 2 Press AUDIO repeatedly to select the desired audio signal.

#### ■ When playing a DVD

Depending on the DVD, the choice of language varies.

When 4 digits are displayed, they represent the language code. Refer to the language code list on page 80 to see which language the code represents. When the same language is displayed two or more times, the DVD is recorded in multiple audio formats.

#### ■ When playing a VIDEO CD or CD

The default setting is underlined.

- STEREO: The standard stereo sound
- 1/L: The sound of the left channel (monaural)
- 2/R: The sound of the right channel (monaural)

#### ■ When playing a Super VCD (Asian models only)

The default setting is underlined.

- 1:STEREO: The stereo sound of the audio track 1
- 1:1/L: The sound of the left channel of the audio track 1 (monaural)
- 1:2/R: The sound of the right channel of the audio track 1 (monaural)
- 2:STEREO: The stereo sound of the audio track 2
- 2:1/L: The sound of the left channel of the audio track 2 (monaural)
- 2:2/R: The sound of the right channel of the audio track 2 (monaural)

### Notes

- While playing a Super VCD on which the audio track 2 is not recorded, no sound will come out when you select "2:STEREO," "2:1/L" or "2:2/R."
- For discs not in multiple audio format, you cannot change the sound.

continued →

- While playing a DVD, the sound may change automatically.


## Checking the audio signal format

**DVD**


If you press DISPLAY twice during playback, the format of the current audio signal (Dolby Digital, MPEG audio, DTS, PCM, etc.) appears as shown below.

Example


- Dolby Digital 5.1 ch

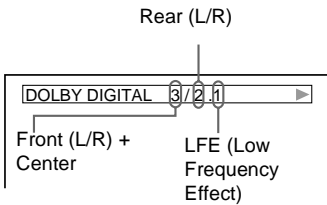

- Dolby Digital 3 ch

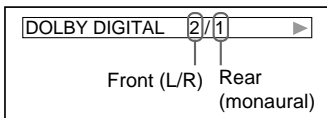

- PCM (Stereo)

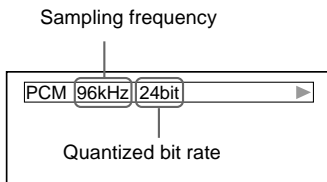

## About audio signals

Audio signals recorded in a disc contain the sound elements (channels) shown below. Each channel is output from a separate speaker.

- Front (L)
- Front (R)
- Center
- Rear (L)

- Rear (R)
- Rear (Monaural): This signal can be either the Dolby Surround Sound processed signals or the Dolby Digital sound's monaural rear audio signals.
- LFE (Low Frequency Effect) signal


### Note

If "DTS" is set to "OFF" in "AUDIO SETUP," the DTS track selection option will not appear on the screen even if the disc contains DTS tracks (page 72).


# TV Virtual Surround Sound Settings (TVS)

When you connect a stereo TV or 2 front speakers, TV Virtual Surround lets you enjoy surround sound effects by using sound imaging to create virtual rear speakers from the sound of the front speakers (L: left, R: right) without using actual rear speakers. This function is designed to work with the AUDIO OUT L/R jacks. Note that if you select one of the TVS settings while playing a DVD, the player does not output the following signals from the DIGITAL OUT (OPTICAL) jack.

- Dolby Digital signals (when you set “DOLBY DIGITAL” in “AUDIO SETUP” to “D-PCM”) (page 72)
- MPEG audio signals

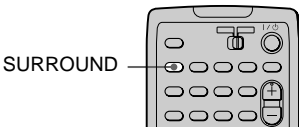

**1** Press SURROUND during playback. The Control Bar is displayed.

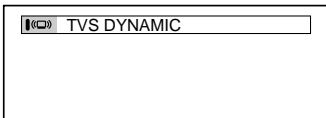

**2** Press SURROUND repeatedly to select one of the TVS (TV Virtual Surround) sounds.

Refer to the explanations given for each item.

- TVS DYNAMIC
- TVS WIDE
- TVS NIGHT
- TVS STANDARD


## To reset the TVS setting

In Step 2, select “OFF.”

### TVS DYNAMIC

Uses sound imaging to create virtual rear speakers from the sound of the front speakers (L, R) without using actual rear speakers. The virtual speakers are reproduced as shown in the illustration below. The sound imaging effect is distinct and clearly reproduces each aural element of the audio track.


This mode is effective when the distance between the front L and R speakers is short, such as with built-in speakers on a stereo TV.

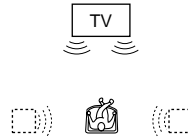

### TVS WIDE

Uses sound imaging to create virtual rear speakers from the sound of the front speakers (L, R) without using actual rear speakers. The virtual speakers are reproduced as shown in the illustration below. This gives the sound an expanded effect that fills the area surrounding the listener.

This mode is effective when the distance between the front L and R speakers is short, such as with built-in speakers on a stereo TV.

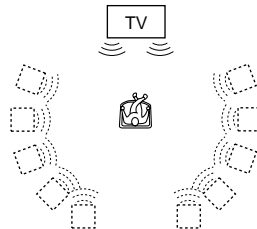


## TVS NIGHT

The large sounds, such as explosions, are suppressed, but the quieter sounds are unaffected. This feature is useful when you don't want to disturb other people but still want to hear the dialog and enjoy the surround sound effects of "TVS WIDE."

## TVS STANDARD

Uses sound imaging to create virtual rear speakers from the sound of the front speakers (L, R) without using actual rear speakers. The virtual speakers are reproduced as shown in the illustration below. Use this setting when you want to use TVS with 2 separate speakers and retain the sound quality.

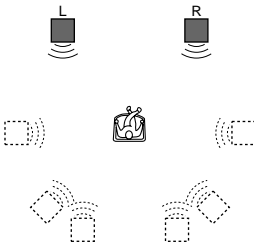

L: Left front speaker

R: Right front speaker

□ : Virtual speakers

💡 If you select any TVS setting other than "OFF," the SURROUND indicator on the player lights up.

### Notes

- When you select an effect, the sound cuts off for a moment.
- When the playing signal does not contain a signal for the rear speakers (page 52), the surround effects may be difficult to hear.
- When you select one of the TVS modes, turn off the surround setting of the connected TV or amplifier (receiver).
- Make sure that your listening position is between and at an equal distance from your speakers, and that the speakers are located in similar surroundings. Otherwise, the TVS effect may be hard to discern.
- "TVS NIGHT" only works with Dolby Digital and MPEG audio discs. However, not all discs will


respond to the "TVS NIGHT" function in the same way.

- If you use the DIGITAL OUT (OPTICAL) jack, sound will come from your speakers but it will not have the TVS effect.


## Changing the Angles DVD

If various angles (multi-angles) for a scene are recorded on the DVD, “ANGLE” appears on the front panel display. This means that you can change the viewing angle.

For example, while playing a scene of a train in motion, you can display the view from either the front of the train, the left window of the train, or from the right window without having the train’s movement interrupted.

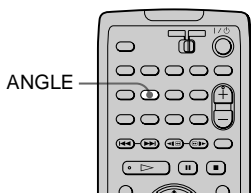

- 1** Press ANGLE during playback.  
The Control Bar is displayed.  
The number in parentheses indicates the total number of available angles.

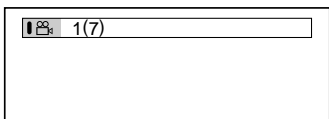

- 2** Press ANGLE repeatedly to select the angle number.  
The scene changes to the selected angle.


### Note

Depending on the DVD, you may not be able to change the angles even if multi-angles are recorded on the DVD.


## Displaying the Subtitles

DVD

If subtitles are recorded on the disc, you can turn the subtitles on and off whenever you want while playing. If multilingual subtitles are recorded on the disc, you can change the subtitle language while playing, and turn it on or off whenever you want. For example, you can select the language you want to practice and turn the subtitles on for better understanding.

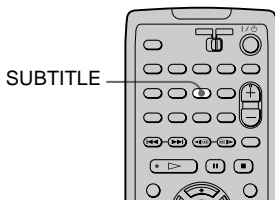

- 1** Press SUBTITLE during playback.  
The Control Bar is displayed.  
The number in parentheses indicates the total number of available subtitles.

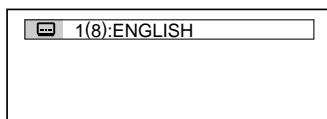

- 2** Press SUBTITLE repeatedly to select the language.  
Depending on the DVD, the choice of language varies.  
When 4 digits are displayed, they indicate the language code. Refer to the language code list on page 80 to see which language the code represents.

### To turn off the subtitles

Select “OFF” in Step 2.


## Note

Depending on the DVD, you may not be able to change the subtitles even if multilingual subtitles are recorded on it.


---

## Adjusting the Picture Quality (BNR)

The Block Noise Reduction (BNR) function adjusts the picture quality by reducing the “block noise” or mosaic like patterns that appear on your TV screen.

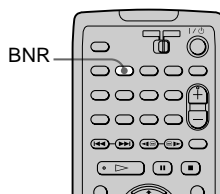

- 
- 1** Press BNR during playback.  
The Control Bar is displayed.

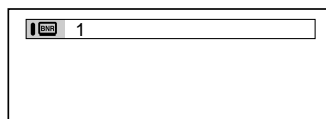

- 
- 2** Press BNR repeatedly to select a level.

As the value increases, the mosaic like patterns on your TV screen will decrease.

- 1: reduces the “block noise.”
- 2: reduces the “block noise” more than 1.
- 3: reduces the “block noise” more than 2.

---

### To reset the BNR setting

Select “OFF” in Step 2.



## Notes

- If the outlines of the images on your screen should become blurred, set “BNR” to “OFF.”
- Depending on the disc or the scene being played, the “BNR” effect may be hard to discern.

## Using Various Additional Functions

### Locking Discs (Custom Parental Control, Parental Control)

You can set two kinds of playback restrictions for the desired disc.

- Custom Parental Control  
You can set the playback restrictions so that the player will not play inappropriate discs.


- Parental Control  
Playback of some DVDs can be limited according to a predetermined level such as the age of the users.

The same password is used for both Parental Control and Custom Parental Control.

#### Custom Parental Control




You can set the same Custom Parental Control password for up to 50 discs. When you set the fifty-first disc, the first disc is canceled.

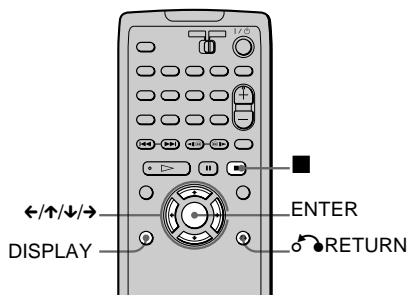

- 1** Insert the disc you want to lock.  
If the disc is playing, press ■ to stop playback.
- 2** Press DISPLAY while the player is in stop mode.  
The Control Menu is displayed.


- 3** Press ↑/↓ to select (CUSTOM PARENTAL CONTROL), then press ENTER.

The options for “CUSTOM PARENTAL CONTROL” appear.

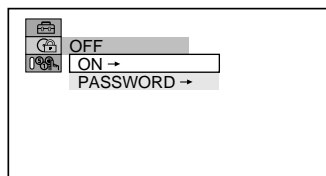

- 4** Press ↑/↓ to select “ON →,” then press ENTER.

■ If you have not entered a password  
The display for registering a new password appears.

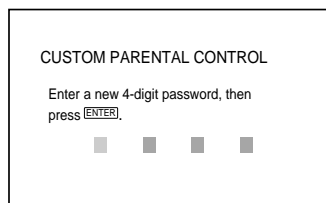

Enter a 4-digit password by pressing ↑/↓ to select the digit, followed by → to move the cursor. Then press ENTER.  
The display for confirming the password appears.

■ When you have already registered a password  
The display for entering the password appears.



- 
- 5** Enter or re-enter your 4-digit password by pressing  $\uparrow/\downarrow$  to select the digit, followed by  $\rightarrow$  to move the cursor. Then press ENTER.  
“Custom parental control is set.” appears and then the screen returns to the Control Menu display.

**If you make a mistake entering your password**

Press  $\leftarrow$  before you press ENTER and input the correct number.

---

**If you make a mistake**

Press  $\rightarrow$  RETURN, then start from Step 3 again.

**To turn off the Control Menu**

Press  $\rightarrow$  RETURN, then press DISPLAY repeatedly until the Control Menu is turned off.

**To turn off the Custom Parental Control function**

- 1** Follow Steps 1 through 3 of “Custom Parental Control.”
- 2** Press  $\uparrow/\downarrow$  to select “OFF  $\rightarrow$ ,” then press ENTER.
- 3** Enter your 4-digit password using  $\uparrow/\downarrow$  to select the digit, followed by  $\rightarrow$  to move the cursor. Then press ENTER.

**To change the password**


- 1** Follow Steps 1 through 3 of “Custom Parental Control.”
- 2** Press  $\uparrow/\downarrow$  to select “PASSWORD  $\rightarrow$ ,” then press ENTER.  
The display for entering the password appears.
- 3** Enter your 4-digit password using  $\uparrow/\downarrow$  to select the digit, followed by  $\rightarrow$  to move the cursor. Then press ENTER.

- 4** Enter a new 4-digit password using  $\uparrow/\downarrow$  to select the digit, followed by  $\rightarrow$  to move the cursor. Then press ENTER.
- 5** To confirm your password, re-enter it using  $\uparrow/\downarrow$  to select the digit, followed by  $\rightarrow$  to move the cursor. Then press ENTER.

**Playing the disc for which Custom Parental Control is set**

---

- 1** Insert the disc for which Custom Parental Control is set.  
The “CUSTOM PARENTAL CONTROL” display appears.

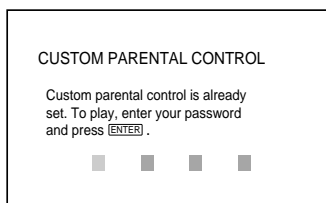


- 
- 2** Enter your 4-digit password using  $\uparrow/\downarrow$  to select the digit, followed by  $\rightarrow$  to move the cursor. Then press ENTER.  
The player is ready for playback.
- 

If you forget your password, enter the 6-digit number “199703” when the “CUSTOM PARENTAL CONTROL” display asks you for your password, then press ENTER. (Press  $\rightarrow$  after the 4th digit to allow the entire 6-digit number to be entered.) The display will ask you to enter a new 4-digit password.

## Limiting playback by children (Parental Control)

Playback of some DVDs can be limited according to a predetermined level such as the age of the users. The “PARENTAL CONTROL” function allows you to set a playback limitation level.

A scene that is limited is not played, or it is replaced by a different scene.

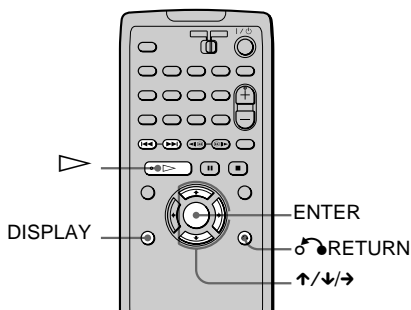

**1** Press DISPLAY while the player is in stop mode.

The Control Menu is displayed.

**2** Press ↑/↓ to select  (SETUP), then press ENTER.


**3** Press ↑/↓ to select “CUSTOM,” then press ENTER.

The Setup Display appears.

**4** Press ↑/↓ to select “CUSTOM SETUP,” then press ENTER.


“CUSTOM SETUP” is displayed.

The on-screen displays differ depending on the player model.

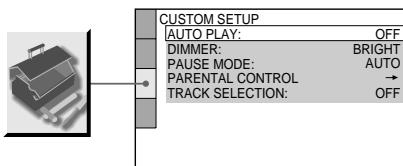

**5** Press ↑/↓ to select “PARENTAL CONTROL →,” then press ENTER.

■ **If you have not entered a password**  
The display for registering a new password appears.

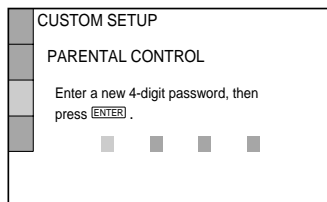


Enter a 4-digit password using ↑/↓ to select the digit, followed by → to move the cursor. Then press ENTER.

The display for confirming the password appears.


■ **When you have already registered a password**

The display for entering the password appears.

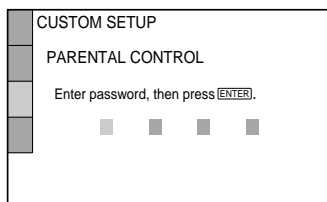


- 6** Enter or re-enter your password using  $\uparrow/\downarrow$  to select the digit, followed by  $\rightarrow$  to move the cursor. Then press ENTER.

The display for setting the playback limitation level and changing the password appears.

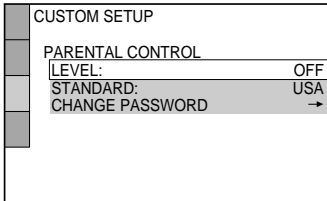

- 7** Press  $\uparrow/\downarrow$  to select "STANDARD," then press ENTER.

The selection items for "STANDARD" are displayed.

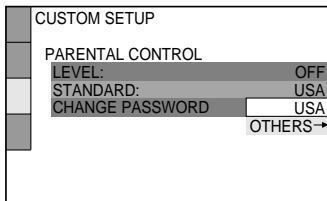


- 8** Press  $\uparrow/\downarrow$  to select a geographic area as the playback limitation level, then press ENTER.

The area is selected.

When you select "OTHERS  $\rightarrow$ ," select and enter the standard code in the table on page 62 using  $\uparrow/\downarrow$ .


- 9** Press ENTER.

The selection items for "LEVEL" are displayed.

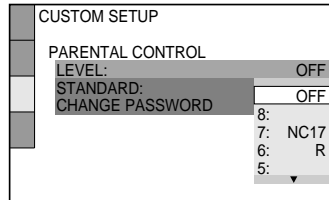

- 10** Select the level you want using  $\uparrow/\downarrow$ , then press ENTER.

Parental Control setting is complete.

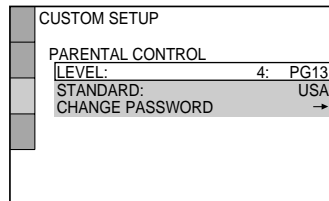

The lower the value, the more strict the limitation.

### If you make a mistake

Press  $\leftarrow$  RETURN to go back to the previous screen.

### To turn off the Control Menu

Press DISPLAY repeatedly until the Control Menu is turned off.

### To turn off the Parental Control function


Set "LEVEL" to "OFF" in Step 10.

## To change the password

- 1 Follow Steps 1 through 6 of “Limiting playback by children (Parental Control).”
- 2 Select “CHANGE PASSWORD →” using ↓, then press ENTER.  
The display for entering the password appears.
- 3 Follow Step 6 to enter a new password.

### Playing the disc for which Parental Control is set

- 1 Insert the disc and press ▷.  
The Control Bar appears.

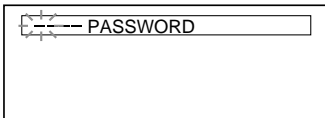

- 2 Enter your 4-digit password using ↑/↓ to select the digit, followed by → to move the cursor. Then press ENTER.  
The player starts playback.

💡 If you forget your password, remove the disc and repeat Step 1 to 5 of “Limiting playback by children.” When you are asked to enter your password, enter “199703,” then press ENTER. (Press → after the 4th digit to allow the entire 6 digit number to be entered.) The display will ask you to enter a new 4-digit password. After you enter a new 4-digit password in Step 6, insert the disc in the player and press ▷. When the Control Bar appears, enter your new password.

### Note

When you play DVDs which do not have the Parental Control function, playback cannot be limited on this player.

## Area Code

Standard	Code number	Standard	Code number
Argentina	2044	Korea	2304
Australia	2047	Malaysia	2363
Austria	2046	Mexico	2362
Belgium	2057	Netherlands	2376
Brazil	2070	New Zealand	2390
Canada	2079	Norway	2379
Chile	2090	Pakistan	2427
China	2092	Philippines	2424
Denmark	2115	Portugal	2436
Finland	2165	Russia	2489
France	2174	Singapore	2501
Germany	2109	Spain	2149
Hong Kong	2219	Sweden	2499
India	2248	Switzerland	2086
Indonesia	2238	Taiwan	2543
Italy	2254	Thailand	2528
Japan	2276	United Kingdom	2184

# Operation Sound Effects



## (Sound Feedback)

The player beeps when the following operations are performed.

The default setting of the Sound Feedback function is set to off.

Operation	Operation sound
Power is turned on	One beep
Power is turned off	Two beeps
▶ is pressed	One beep
⏏ is pressed	Two beeps
Playback is stopped	One long beep
Operation is not possible	Three beeps

## To set Sound Feedback

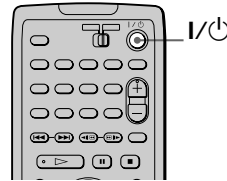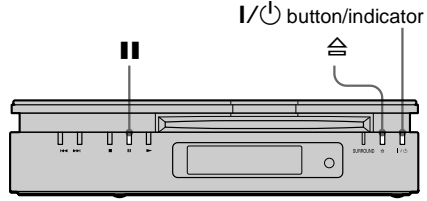


- 1** Press **I/⏏** on the player or the remote. The **I/⏏** indicator lights up in green. When there is a disc in the player, press **⏏** and remove the disc.
- 2** Press and hold **⏏** on the player for more than two seconds. You will hear one beep and the Sound Feedback function is turned on.

## To turn off the Sound Feedback function

When there is no disc in the player, press and hold **⏏** on the player for more than two seconds. You will hear two beeps and the Sound Feedback function is turned off.

# Controlling Your TV, etc. with the Supplied Remote


Note that SA-F21 is sold separately, and may not be available in some areas.

 There are some Sony audio products you can adjust the volume with the supplied remote.

You can control your Sony TV or Active Speaker System SA-F21 (not supplied) with the supplied remote.

## Note

Depending on the units being connected, you may not be able to control your TV or AV amplifier (receiver) using some of the buttons below.

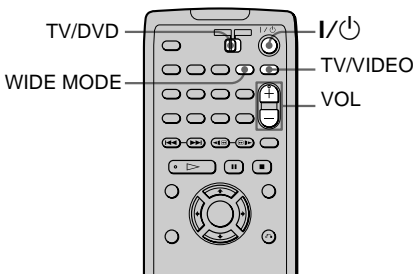

## Controlling TVs

When you set the TV/DVD switch to “TV,” you can control your Sony TV using the buttons below.

By pressing	You can
I/⏻	Turn the TV on or off
VOL (volume) +/-	Adjust the volume of the TV
TV/VIDEO	Switch the TV’s input source between the TV and other input sources
WIDE MODE	Switch to or from the wide mode of a wide TV

## Controlling Active Speaker System SA-F21

When you set the TV/DVD switch to “DVD,” you can adjust the volume using VOL +/-.




## Using the Setup Display




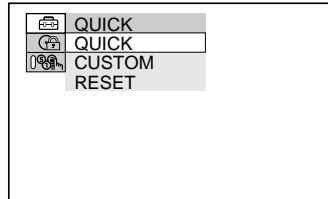
By using the Setup Display, you can make various adjustments to items such as picture and sound. You can also set a language for the subtitles and the Setup Display, among other things. For details on each Setup Display item see page 66 through 72. For an overall list of Setup Display items, see page 81.

### How to use the Setup Display

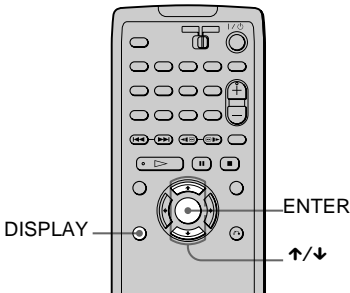


- 1 Press **DISPLAY** on the remote when the player is in stop mode. The Control Menu appears.


- 2 Press **↑/↓** to select  (**SETUP**) and press **ENTER**. The options for “**SETUP**” appear.




- 3 Press **↑/↓** to select “**CUSTOM**” and press **ENTER**. The Setup Display appears.

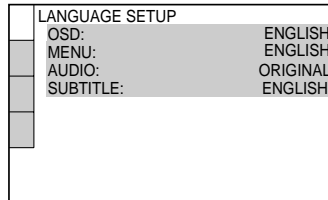


- 4 Press **↑/↓** to select the setup item from the displayed list: “**LANGUAGE SETUP**,” “**SCREEN SETUP**,” “**CUSTOM SETUP**,” or “**AUDIO SETUP**.” Then press **ENTER**. The selected setup item appears. Example: “**SCREEN SETUP**”

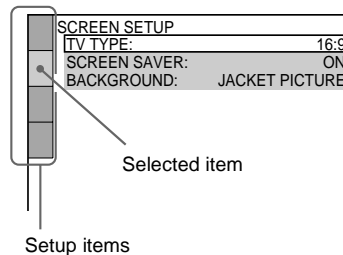

- 5** Select an item using  $\uparrow/\downarrow$ , then press ENTER.  
The options for the selected item appear.  
Example: “TV TYPE”

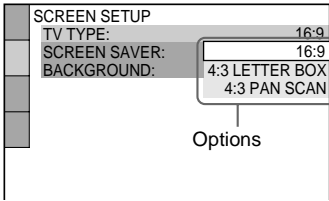

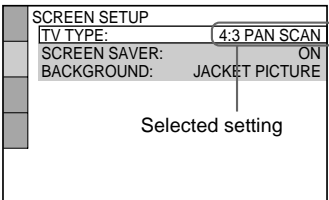

- 6** Select a setting using  $\uparrow/\downarrow$ , then press ENTER.  
The setting is selected and setup is complete.  
Example: “4:3 PAN SCAN”



## To turn off the Setup Display

Press DISPLAY repeatedly until the Setup Display is turned off.

 If you select “QUICK” in Step 3, you will enter the Quick Setup mode (page 32). Follow from Step 5 of the Quick Setup explanation to make basic adjustments.


 If you select “RESET” in Step 3, you can reset all of the “SETUP” settings on pages 81 to 82 (except for “PARENTAL CONTROL”) to the default settings. After you select “RESET” and press ENTER, select “YES” and press ENTER to reset the settings (it takes a few seconds to complete), or select “NO” and press ENTER to return to the Control Menu. Do not press  $\uparrow/\downarrow$  when resetting the player.

## Setting the Display or Sound Track Language (LANGUAGE SETUP)



“LANGUAGE SETUP” allows you to set various languages for the on-screen display or sound track.

Select “LANGUAGE SETUP” in the Setup Display. For details on using the display, see “Using the Setup Display” (page 65).

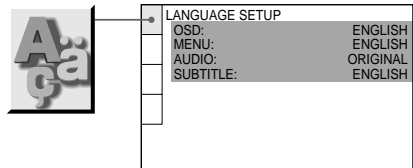

### ■ OSD (On-Screen Display)

Switches the display language on the screen.  
Selects the language from the displayed list.

### ■ MENU (DVD only)


You can select the desired language for the menu.

### ■ AUDIO (DVD only)

Switches the language of the sound track.  
Selects the language from the displayed list.  
When you select “ORIGINAL,” the language given priority in the disc is selected.

### ■ SUBTITLE (DVD only)

Switches the language of the subtitles recorded on the DVD.  
Select the language from the displayed list.  
When you select “AUDIO FOLLOW,” the language for the subtitles changes according to the language you selected for the sound track.

 If you select “OTHERS →” in “MENU,” “SUBTITLE,” and “AUDIO,” select and enter the language code from the list using **↑/↓** to select the digit, followed by **→** to move the cursor (page 80). After you have made a selection, the language code (4 digits) is displayed the next time you select “OTHERS →.”

**Note**


When you select a language that is not recorded on the DVD, one of the recorded languages will be automatically selected (except for the “OSD”).

# Settings for the Display

(SCREEN SETUP)   

Choose settings according to the TV to be connected.

Select “SCREEN SETUP” in the Setup Display. For details on using the display, see “Using the Setup Display” (page 65). The default settings are underlined.

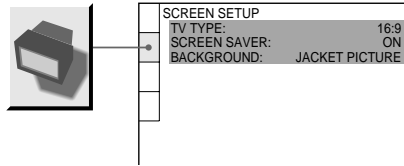

**TV TYPE**


Selects the aspect ratio of the connected TV (4:3 standard or wide).

<u>16:9</u>	Select this when you connect a wide-screen TV or a TV with a wide mode function.
4:3 LETTER BOX	Select this when you connect a 4:3 screen TV. Displays a wide picture with bands on the upper and lower portions of the screen.
4:3 PAN SCAN	Select this when you connect a 4:3 screen TV. Automatically displays the wide picture on the entire screen and cuts off the portions that do not fit.

16:9



4:3 LETTER BOX

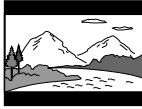

4:3 PAN SCAN



**Note**

Depending on the DVD, “4:3 LETTER BOX” may be selected automatically instead of “4:3 PAN SCAN” or vice versa.

**SCREEN SAVER**

Turns on and off the screen saver so that the screen saver image appears when you leave the player in pause or stop mode for 15 minutes, or when you play back a CD for more than 15 minutes. The screen saver will help prevent your display device from becoming damaged (ghosting). Press  $\blacktriangleright$  to turn off the screen saver.

<u>ON</u>	Turns on the screen saver.
<u>OFF</u>	Turns off the screen saver.

**BACKGROUND**

Selects the background colour or picture on the TV screen in stop mode or while playing a CD.


<u>JACKET PICTURE</u>	The jacket picture (still picture) appears in the background, but only when the jacket picture is already recorded on the disc (CD-EXTRA, etc.). If the disc does not contain a jacket picture, the “GRAPHICS” picture appears.
<u>GRAPHICS</u>	A preset picture stored in the player appears in the background.
<u>BLUE</u>	The background colour is blue.
<u>BLACK</u>	The background colour is black.

## Custom Settings (CUSTOM SETUP)



Allows setting up Parental Control and other settings.

Select “CUSTOM SETUP” in the Setup Display. For details on using the display, see “Using the Setup Display” (page 65). The default settings are underlined. The on-screen displays differ depending upon the player model.

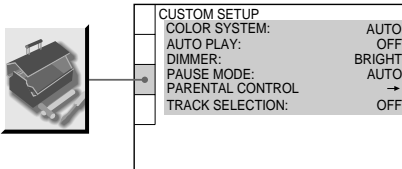

### ■COLOR SYSTEM (VIDEO CD only)

Selects the colour system when you play a VIDEO CD.

<u>AUTO</u>	Outputs the video signal in the system of the VIDEO CD, either PAL or NTSC. If your TV is the DUAL system, select AUTO.
PAL	Changes the video signal of an NTSC VIDEO CD and outputs it in the PAL system.
NTSC	Changes the video signal of a PAL VIDEO CD and outputs it in the NTSC system.

#### Notes

- You cannot change the colour system for DVDs.
- You can change the colour system of this player according to the connected TV. See page 17.
- You may be not able to find “COLOR SYSTEM” depending upon the player model.

### ■AUTO PLAY

Selects the Auto Play setting when you turn on the player.

<u>OFF</u>	Does not use “TIMER,” “DEMO1,” or “DEMO2” to start playback.
TIMER	Starts playing when the player is turned on. The player can be played at any time when connected to a timer (not supplied). Set the timer when the player is in standby mode (the  indicator lights up in red).
DEMO1	Starts playing the first demonstration automatically.
DEMO2	Starts playing the second demonstration automatically.

### ■DIMMER

Adjusts the lighting of the front panel display.

<u>BRIGHT</u>	Makes the front panel display bright.
DARK	Makes the front panel display dark.
OFF	Turns off the lighting of the front panel display.
AUTO	Turn on the front panel display for a few seconds when a button on the player or remote is pressed.

### ■PAUSE MODE (DVD only)

Selects the picture in pause mode.

<u>AUTO</u>	The picture, including subjects that move dynamically, is output with no jitter. Normally, select this position.
FRAME	The picture, including subjects that do not move dynamically, is output in high resolution.

## ■PARENTAL CONTROL →

### (DVD only)

Sets a password and playback limitation level for DVDs with playback limitation for children. For details, see “Limiting playback by children (Parental Control)” (page 60).

## ■TRACK SELECTION (DVD only)

Gives the sound track which contains the highest number of channels priority when you play a DVD on which multiple audio formats (PCM, MPEG audio, DTS or Dolby Digital format) are recorded.

<u>OFF</u>	No priority given.
AUTO	Priority given.

### Notes


- When you set the item to “AUTO,” the language may change. The “TRACK SELECTION” setting has higher priority than the “AUDIO” settings in “LANGUAGE SETUP” (page 66).
- If you set “DTS” to “OFF” (page 72), the DTS sound track is not played even if you set “TRACK SELECTION” to “AUTO.”
- If PCM, DTS, MPEG audio, and Dolby Digital sound tracks have the same number of channels, the player selects PCM, DTS, Dolby Digital and MPEG audio sound tracks in this order.
- Depending on the DVD, the audio channel with priority may be predetermined. In this case, you cannot give priority to the DTS, Dolby Digital, or MPEG audio format by selecting “AUTO.”

## Settings for the Sound

### (AUDIO SETUP)

“AUDIO SETUP” allows you to set the sound according to the playback and connection conditions.

Select “AUDIO SETUP” in the Setup Display. For details on using the display, see “Using the Setup Display” (page 65). The default settings are underlined.

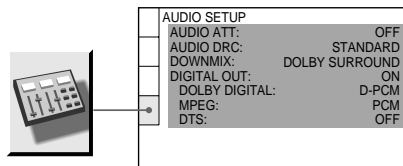

## ■AUDIO ATT (attenuation)

If the playback sound is distorted, set this item to “ON.” The player reduces the audio output level.

This function affects the output of the following jacks:

– AUDIO OUT L/R jacks

<u>OFF</u>	Turns off the audio attenuation. Normally, select this position.
ON	Reduces the audio output level so that no sound distortion occurs. Select this when the playback sound from the speakers is distorted.

**■AUDIO DRC (Dynamic Range Control) (DVD only)**

Makes the sound clear when the volume is turned down when playing a DVD that has the “AUDIO DRC” function. This affects the output from the following jacks:

- AUDIO OUT L/R jacks
- DIGITAL OUT (OPTICAL) jack only when “DOLBY DIGITAL” is set to “D-PCM” and “MPEG” is set to “PCM” in “DIGITAL OUT” (page 72).

<b>STANDARD</b>	Normally, select this position.
<b>TV MODE</b>	Makes the low sounds clear even if you turn the volume down. It is especially recommended when you listen to the sound using the speakers of the TV.
<b>WIDE RANGE</b>	Gives you the feeling of being at a live performance. When you use high quality speakers, it is even more effective.

**■DOWNMIX (DVD only)**

Switches the mixing down methods when you play a DVD on which rear signal components such as “Rear (L),” “Rear (R),” or “Rear (Monaural)” are recorded in Dolby Digital format. For details on the rear signal components, see “Changing the Sound” (page 51). This function affects the output of the following jacks:

- AUDIO OUT L/R jacks
- DIGITAL OUT (OPTICAL) jack when “DOLBY DIGITAL” is set to “D-PCM” in “DIGITAL OUT” (page 72).

<b>DOLBY SURROUND</b>	Select this when the player is connected to an audio component that conforms to Dolby Surround (Pro Logic). The output signals which reproduce the Dolby Surround effect are downmixed to 2 channels.
-----------------------	---

<b>NORMAL</b>	Select this when the player is connected to an audio component that does not conform to Dolby Surround (Pro Logic). All of the output signals are downmixed to 2 channels without the Dolby Surround (Pro Logic) effect.
---------------	--

**■DIGITAL OUT**

Selects if audio signals are output via the DIGITAL OUT (OPTICAL) jack.

<b>ON</b>	Normally, select this position. When you select “ON,” set “DOLBY DIGITAL,” “MPEG,” and “DTS.” For details on setting these items, see “Setting the digital output signal.”
<b>OFF</b>	The player does not output the audio signals via the DIGITAL OUT (OPTICAL) jack. The influence of the digital circuit upon the analog circuit is minimal.

**Setting the digital output signal**

Switches the method of outputting audio signals when you connect the following component using an optical digital cord via the DIGITAL OUT (OPTICAL) jack.

- Amplifier (receiver) with digital input jack
- Amplifier (receiver) with a built-in DTS, MPEG audio, or DOLBY DIGITAL decoder
- MD or DAT deck

For connection details, see page 24.

Select “DOLBY DIGITAL,” “MPEG” and “DTS” after setting “DIGITAL OUT” to “ON.”

<b>AUDIO SETUP</b>	
AUDIO ATT:	OFF
AUDIO DRC:	STANDARD
DOWNMIX:	DOLBY SURROUND
DIGITAL OUT:	ON
DOLBY DIGITAL:	D-PCM
MPEG:	PCM
DTS:	OFF

## ■ DOLBY DIGITAL

Selects the Dolby Digital signals output via the DIGITAL OUT (OPTICAL) jack.

<u>D-PCM</u>	Select this when the player is connected to an audio component lacking a built-in Dolby Digital decoder. You can select whether the signals conform to Dolby Surround (Pro Logic) or not by making adjustments to the "DOWNMIX" item in "AUDIO SETUP" (page 71).
<b>DOLBY DIGITAL</b>	Select this when the player is connected to an audio component with a built-in Dolby Digital decoder. If the player is connected to an audio component lacking a built-in Dolby Digital decoder, do not set this. Otherwise, when you play the Dolby Digital sound track, a loud noise (or no sound) will come out from the speakers, affecting your ears or causing the speakers to be damaged.

## ■ MPEG

Selects the MPEG audio signals output via the DIGITAL OUT (OPTICAL) jack.

<u>PCM</u>	Select this when the player is connected to an audio component lacking a built-in MPEG decoder. If you play MPEG audio sound tracks, the player outputs stereo signals via the DIGITAL OUT (OPTICAL) jack.
<b>MPEG</b>	Select this when the player is connected to an audio component having a built-in MPEG decoder. If the player is connected to an audio component lacking a built-in MPEG decoder, do not set this. Otherwise, when you play the MPEG audio sound track, a loud noise (or no sound) will come out from the speakers, affecting your ears or causing the speakers to be damaged.

## ■ DTS

Selects if DTS signals are output via the DIGITAL OUT (OPTICAL) jack.

<u>OFF</u>	Select this when the player is connected to an audio component lacking a built-in DTS decoder. Note, however, that the DTS signals contained in a CD are output even if "OFF" is selected.
<b>ON</b>	Select this when the player is connected to an audio component having a built-in DTS decoder. If the player is connected to an audio component lacking a built-in DTS decoder, do not set this. Otherwise, when you play the DTS sound track, a loud noise (or no sound) will come out from the speakers, affecting your ears or causing the speakers to be damaged.

### Note

If you select one of the TVS settings while playing a DVD, the player does not output the following signals from the DIGITAL OUT (OPTICAL) jack

- Dolby Digital signals (when you set "DOLBY DIGITAL" in "AUDIO SETUP" to "D-PCM").
- MPEG audio signals



## Troubleshooting

If you experience any of the following difficulties while using the player, use this troubleshooting guide to help remedy the problem before requesting repairs. Should any problem persist, consult your nearest Sony dealer.

### Power

#### The power is not turned on.

- ➔ Check that the AC power adaptor and the mains lead are connected securely.

### Picture

#### There is no picture.

- ➔ The connecting cords are not connected securely.
- ➔ The connecting cords are damaged.
- ➔ The player is not connected to the correct TV input jack (page 20).
- ➔ The video input on the TV is not set so that you can view pictures on the player.

#### Picture noise appears.

- ➔ The disc is dirty or flawed.
- ➔ If the picture output from your player goes through your VCR to get to your TV, the copy-protection signal applied to some DVD programmes could affect picture quality. If you still experience problems even when you connect your player directly to your TV, please try connecting your player to your TV's S video input (page 20).
- ➔ If the colour system of your player does not match with that of your TV, change the colour system of the player. For details, see page 69. (You cannot change the colour system of the DVD disc itself.)

#### The picture is black and white.

- ➔ Depending on the TV, the picture on the screen becomes black and white when you play a disc recorded in the NTSC colour system.

#### Even though you set the aspect ratio in "TV TYPE" or "SCREEN SETUP," the picture does not fill the screen.

- ➔ The aspect ratio of the disc is fixed on your DVD.

### Sound

#### There is no sound.

- ➔ The connecting cord is not connected securely.
- ➔ The connecting cord is damaged.
- ➔ The player is connected to the wrong input jack on the amplifier (receiver) (page 24, 26, 28).
- ➔ The amplifier (receiver) input is not changed so that you can listen to the player.
- ➔ The player is in pause mode or in Slow-motion Play mode.
- ➔ The player is in fast forward or fast reverse mode.
- ➔ If the audio signal does not come through the DIGITAL OUT (OPTICAL) jack, check the audio settings (page 70).
- ➔ While playing a Super VCD on which the audio track 2 is not recorded, no sound will come out when you select "2:STEREO," "2:1/L" or "2:2/R."

#### Sound is noisy.

- ➔ The disc is dirty or flawed.
- ➔ When playing a CD with DTS sound tracks, noise will come from the AUDIO OUT L/R jacks (page 36).

#### Sound distortion occurs.

- ➔ Set "AUDIO ATT" in "AUDIO SETUP" to "ON" (page 70).

## Operation

### The remote does not function.

- ➔ There are obstacles between the remote and the player.
- ➔ The distance between the remote and the player is too far.
- ➔ The remote is not pointed at the remote sensor on the player.
- ➔ The remote sensor of the player is exposed to strong light. Select another remote sensor (page 15).
- ➔ The batteries in the remote are weak.

### The disc does not play.

- ➔ There is no disc inside.
- ➔ The disc is turned over. Insert the disc with the playback side facing down in the disc slot.
- ➔ The disc is skewed.
- ➔ The player cannot play CD-ROMs, etc. (page 7).
- ➔ The region code on the DVD does not match the player.
- ➔ Moisture has condensed inside the player. Remove the disc and leave the player turned on for about half an hour. Turn on the power again before playing the disc (page 3).

### The disc does not start playing from the beginning.

- ➔ Programme Play, Shuffle Play, Repeat Play or A-B Repeat Play has been selected (page 41). Press CLEAR to cancel these functions before playing a disc.
- ➔ Resume Play has been selected. During stop, press ■ on the player or the remote and then start playback (page 38).
- ➔ The disc automatically displays the menu.

### The player starts playing the disc automatically.

- ➔ The DVD features an auto playback function.
- ➔ "AUTO PLAY" in "CUSTOM SETUP" is set to "TIMER" (page 69).

### Playback stops automatically.

- ➔ Some discs may contain an auto pause signal. While playing such a disc, the player stops playback at the auto pause signal.

### You cannot perform some functions such as stop, Scan, Slow-motion Play, Repeat Play, Shuffle Play, or Programme Play.

- ➔ Depending on the disc, you may not be able to do some of the operations above. See the operating manual that comes with the disc.

### Messages do not appear on the screen in the language you want.

- ➔ In the Setup Display, select the desired language for the on-screen display in "OSD" under "LANGUAGE SETUP" (page 66).

### The language for the sound track cannot be changed.

- ➔ Multilingual tracks are not recorded on the DVD being played.
- ➔ The DVD prohibits the changing of the language for the sound track.

### The subtitle language cannot be changed.

- ➔ Multilingual subtitles are not recorded on the DVD being played.
- ➔ The DVD prohibits the changing of the subtitles.

### The subtitle cannot be turned off.

- ➔ The DVD prohibits the subtitles being turned off.

### The angles cannot be changed.

- ➔ Multi-angles are not recorded on the DVD being played. The angle can be changed when the "ANGLE" indicator lights up on the front panel display (page 10).
- ➔ The DVD prohibits changing of the angles.

---

### The player does not operate properly.

- ➔ When static electricity, etc., causes the player to operate abnormally, disconnect the mains lead once, then connect it again.

---

### Nothing is displayed on the front panel display.

- ➔ “DIMMER” in “CUSTOM SETUP” is set to “OFF.” Set “DIMMER” to “BRIGHT” or “DARK” (page 69). If you set to “AUTO,” the display turns on only when you operate the player.

---

### 5 numbers or letters are displayed on the screen and on the front panel display.

- ➔ The self-diagnosis function was activated. (See the table on page 75.)

---

### The disc cannot be removed and “LOCKED” appears on the front panel display.


- ➔ Contact your Sony dealer or local authorized Sony service facility.

---

## Self-diagnosis Function

### (When letters/numbers appear in the display)

When the self-diagnosis function is activated to prevent the player from malfunctioning, a five-character service number (e.g., C 13 00) with a combination of a letter and digits appears on the screen and the front panel display. In this case, check the following table.

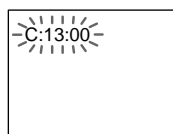

---

First three characters of the service number	Cause and/or corrective action
C 13	The disc is dirty. ➔ Clean the disc with a soft cloth (page 8).
C 31	The disc is not inserted correctly. ➔ Re-insert the disc correctly.
E XX (xx is a number)	To prevent a malfunction, the player has performed the self-diagnosis function. ➔ Contact your nearest Sony dealer or local authorized Sony service facility and give the 5-character service number. Example: E 61 10

---

---

# Glossary

## **Chapter (page 10)**

Sections of a picture or a music feature that are smaller than titles. A title is composed of several chapters. Depending on the disc, no chapters may be recorded.

---

## **Dolby Digital (page 22, 72)**

Digital audio compression technology developed by Dolby Laboratories. This technology conforms to 5.1-channel surround sound. The rear channel is stereo and there is a discrete subwoofer channel in this format. Dolby Digital provides the same 5.1 discrete channels of high quality digital audio found in Dolby Digital cinema audio systems. Good channel separation is realized because all of the channel data are recorded discretely and little deterioration is realized because all channel data processing is digital.

---

## **Dolby Surround (Pro Logic) (page 70)**

Audio signal processing technology that Dolby Laboratories developed for surround sound. When the input signal contains a surround component, the Pro Logic process outputs the front, centre, and rear signals. The rear channel is monaural.

---

## **DTS (page 22, 72)**

Digital audio compression technology that Digital Theater Systems, Inc. developed. This technology conforms to 5.1-channel surround sound. The rear channel is stereo and there is a discrete subwoofer channel in this format. DTS provides the same 5.1 discrete channels of high quality digital audio.

Good channel separation is realized because all of the channel data is recorded discretely and little deterioration is realized because all channel data processing is digital.

---

## **DVD (page 7)**

A disc that contains up to 8 hours of moving pictures even though its diameter is the same as a CD.

The data capacity of a single-layer and single-sided DVD is 4.7 GB (Giga Byte), which is 7 times that of a CD. The data capacity of a double-layer and single-sided DVD is 8.5 GB, a single-layer and double-sided DVD is 9.4 GB, and double-layer and double-sided DVD is 17 GB.

The picture data uses the MPEG 2 format, one of the worldwide standards of digital compression technology. The picture data is compressed to about 1/40 (average) of its original size. The DVD also uses a variable rate coding technology that changes the data to be allocated according to the status of the picture. Audio information is recorded in Dolby Digital as well as in PCM, allowing you to enjoy a more real audio presence. Furthermore, various advanced functions such as the multi-angle, multilingual, and Parental Control functions are provided with the DVD.

---

## **Index (CD)/Video Index (VIDEO CD) (page 47)**

A number that divides a track into sections to easily locate the point you want on a VIDEO CD or CD. Depending on the disc, no index may be recorded.

---

## **MPEG audio (page 26, 72)**

International standard coding system used to compress audio digital signals authorized by ISO/IEC. MPEG 1 conforms to up to 2-channel stereo. MPEG 2, used on DVDs, conforms to up to 7.1-channel surround.

---


## **Parental Control (page 58)**

A function of the DVD used to limit playback of the disc according to the age of the user and the limitation level in each country. The limitation varies from disc to disc; when it is activated, or playback is completely

prohibited, violent scenes are skipped or replaced with other scenes, etc.

---

### **Region Code (page 7)**

This system is used to protect copyrights. A region number is allocated on each DVD player or DVD disc according to the sales region. Each region code is shown on the player as well as on the disc packaging. The player can play the discs that match its region code. The player can also play discs with the  mark. Even when the region code is not shown on the DVD, the region limit may still be activated.

---

### **Scene (page 10)**

On a VIDEO CD with PBC (playback control) functions, the menu screens, moving pictures and still pictures are divided into sections called “scenes.”

---

### **Title (page 10)**

The longest section of a picture or music feature on a DVD, movie, etc., in video software, or the entire album in audio software.

---

### **Track (page 10)**

Sections of a picture or a music feature on a VIDEO CD or CD (the length of a song).

---

### **TV Virtual Surround (TVS) (page 53)**

Technology from Sony developed to produce surround sound for home use using just a stereo TV. Designed to work with the sound characteristics of your TV, this technology brings the excitement of surround sound to your home using nothing more than your stereo TV’s internal speakers. Furthermore, various TVS modes are available. For example, “TVS WIDE” uses just two speakers to create a virtual sound environment that makes you feel like you are surrounded by multiple speakers.

# Specifications

## System

Laser	Semiconductor laser
Signal format system	PAL/NTSC

## Audio characteristics

Frequency response	DVD (PCM 96 kHz): 2 Hz to 44 kHz ( $\pm 1.0$ dB) DVD (PCM 48 kHz): 2 Hz to 22 kHz ( $\pm 0.5$ dB) CD: 2 Hz to 20 kHz ( $\pm 0.5$ dB)
Signal-to-noise ratio (S/N ratio)	115 dB (AUDIO OUT L/R jacks only)
Harmonic distortion	0.003%
Dynamic range	DVD: 103 dB CD: 99 dB
Wow and flutter	Less than detected value ( $\pm 0.001\%$ W PEAK)

The signals from AUDIO OUT L/R jacks are measured. When you play PCM sound tracks with a 96 kHz sampling frequency, the output signal from the DIGITAL OUT (OPTICAL) jack is converted to 48 kHz sampling frequency.

## Outputs

Jack name	Jack type	Maximum output level	Load impedance
DIGITAL OUT (OPTICAL)	Optical output jack	-18 dBm	Wave length 660 nm
AUDIO OUT L/R	Phono jack	2 Vrms (50 kilohms)	Over 10 kilohms
VIDEO OUT	Phono jack	1.0 Vp-p	75 ohms, sync negative
S-VIDEO OUT	4-pin mini DIN	Luminance signal: 1.0 Vp-p Color signal: 0.3 Vp-p (PAL) 0.286 Vp-p (NTSC)	75 ohms, sync negative 75 ohms terminated

## General

Power requirements	DC 10.5 V See page 3 for further information.
Power consumption	12 W
Dimensions (approx.)	252 × 60 × 183 mm (width/height/depth) including projecting parts
Mass (approx.)	1.5 kg
Operating temperature	5°C to 35°C
Operating humidity	25% to 80%

## AC power adaptor

Model name	AC-F21
Power requirements	100 to 240 V AC, 50/60 Hz
Output voltage	DC 10.5 V, 1.3 A in operating mode
Operating temperature	5°C to 35°C
Storage temperature	-20°C to 60°C

## Supplied accessories

See page 15.

## Optional accessory

Active Speaker System SA-F21 (not available in some areas)

Specifications and design are subject to change without notice.

# Language Code List

For details, see page 51, 55, 66.

The language spellings conform to the ISO 639: 1988 (E/F) standard.

Code	Language	Code	Language	Code	Language	Code	Language
1027	Afar	1183	Irish	1347	Maori	1507	Samoan
1028	Abkhazian	1186	Scots Gaelic	1349	Macedonian	1508	Shona
1032	Afrikaans	1194	Galician	1350	Malayalam	1509	Somali
1039	Amharic	1196	Guarani	1352	Mongolian	1511	Albanian
1044	Arabic	1203	Gujarati	1353	Moldavian	1512	Serbian
1045	Assamese	1209	Hausa	1356	Marathi	1513	Siswati
1051	Aymara	1217	Hindi	1357	Malay	1514	Sesotho
1052	Azerbaijani	1226	Croatian	1358	Maltese	1515	Sundanese
1053	Bashkir	1229	Hungarian	1363	Burmese	1516	Swedish
1057	Byelorussian	1233	Armenian	1365	Nauru	1517	Swahili
1059	Bulgarian	1235	Interlingua	1369	Nepali	1521	Tamil
1060	Bihari	1239	Interlingue	1376	Dutch	1525	Telugu
1061	Bislama	1245	Inupiak	1379	Norwegian	1527	Tajik
1066	Bengali; Bangla	1248	Indonesian	1393	Occitan	1528	Thai
1067	Tibetan	1253	Icelandic	1403	(Afan) Oromo	1529	Tigrinya
1070	Breton	1254	Italian			1531	Turkmen
1079	Catalan	1257	Hebrew	1408	Oriya	1532	Tagalog
1093	Corsican	1261	Japanese	1417	Punjabi	1534	Setswana
1097	Czech	1269	Yiddish	1428	Polish	1535	Tonga
1103	Welsh	1283	Javanese	1435	Pashto; Pushto	1538	Turkish
1105	Danish	1287	Georgian	1436	Portuguese	1539	Tsonga
1109	German	1297	Kazakh	1463	Quechua	1540	Tatar
1130	Bhutani	1298	Greenlandic	1463	Quechua	1543	Twi
1142	Greek	1299	Cambodian	1481	Rhaeto- Romance	1557	Ukrainian
1144	English	1300	Kannada	1482	Kirundi	1564	Urdu
1145	Esperanto	1301	Korean	1483	Romanian	1572	Uzbek
1149	Spanish	1305	Kashmiri	1489	Russian	1581	Vietnamese
1150	Estonian	1307	Kurdish	1491	Kinyarwanda	1587	Volapük
1151	Basque	1311	Kirghiz	1495	Sanskrit	1613	Wolof
1157	Persian	1313	Latin	1498	Sindhi	1632	Xhosa
1165	Finnish	1326	Lingala	1501	Sangho	1665	Yoruba
1166	Fiji	1327	Laothian	1502	Serbo- Croatian	1684	Chinese
1171	Faroese	1332	Lithuanian			1697	Zulu
1174	French	1334	Latvian; Lettish	1503	Singhalese		
1181	Frisian	1345	Malagasy	1505	Slovak	1703	Not specified
				1506	Slovenian		



# List of Setup Display Items

The default settings are underlined.



## LANGUAGE SETUP (page 66)

OSD	<u>ENGLISH</u> FRANÇAIS DEUTSCH ITALIANO NEDERLANDS	<u>ENGLISH</u> ITALIANO ESPAÑOL DANSK SVENSKA SUOMI NORSK PORTUGUÊS	<u>ENGLISH</u> CHINESE1 CHINESE2
MENU	<u>ENGLISH</u> FRANÇAIS DEUTSCH ITALIANO ESPAÑOL NEDERLANDS DANSK SVENSKA SUOMI NORSK PORTUGUÊS РУССКИЙ CHINESE JAPANESE OTHERS →	<u>ENGLISH</u> FRANÇAIS DEUTSCH ITALIANO ESPAÑOL NEDERLANDS DANSK SVENSKA SUOMI NORSK PORTUGUÊS РУССКИЙ CHINESE JAPANESE OTHERS →	<u>ENGLISH</u> CHINESE JAPANESE FRENCH GERMAN ITALIAN SPANISH DUTCH DANISH SWEDISH FINNISH NORWEGIAN PORTUGUESE RUSSIAN OTHERS →
AUDIO	<u>ORIGINAL</u> (All other selections are same as the "MENU" language.)		
SUBTITLE	<u>AUDIO FOLLOW</u> (All other selections are same as the "MENU" language.)		



## SCREEN SETUP (page 67)

TV TYPE	<u>16:9</u> 4:3 LETTER BOX 4:3 PAN SCAN
SCREEN SAVER	<u>ON</u> OFF
BACKGROUND	<u>JACKET PICTURE</u> GRAPHICS BLUE BLACK

continued →



## CUSTOM SETUP (page 69)

COLOR SYSTEM <i>(Available depending upon the player model)</i>	<u>AUTO</u> PAL NTSC
AUTO PLAY	<u>OFF</u> TIMER DEMO1 DEMO2
DIMMER	<u>BRIGHT</u> DARK OFF AUTO
PAUSE MODE	<u>AUTO</u> FRAME
PARENTAL CONTROL →	
TRACK SELECTION	<u>OFF</u> AUTO



## AUDIO SETUP (page 70)

AUDIO ATT	<u>OFF</u> ON		
AUDIO DRC	<u>STANDARD</u> TV MODE WIDE RANGE		
DOWNMIX	<u>DOLBY SURROUND</u> NORMAL		
DIGITAL OUT	<u>ON</u>	DOLBY DIGITAL	<u>D-PCM</u> DOLBY DIGITAL
		MPEG	<u>PCM</u> MPEG
		DTS	<u>OFF</u> ON
	<u>OFF</u>		

# Index

## Numerics

- 16:9 67
- 4:3 LETTER BOX 67
- 4:3 PAN SCAN 67
- 5.1 Channel Surround 26

## A

- A-B Repeat Play 44
- ANGLE 55
- AUDIO 51, 66
- AUDIO ATT 70
- AUDIO DRC 71
- AUDIO SETUP 70
- AUTO PLAY 69

## B

- BACKGROUND 68
- Batteries 15
- BNR 56

## C

- CD 36
- CHAPTER 47
- Chapter 76
- COLOR SYSTEM 69
- Connecting 20
- Continuous Play
  - CD/VIDEO CD/DVD 36
- Control Bar 14
- Control Menu 14
- CUSTOM 65
- CUSTOM PARENTAL CONTROL 58
- CUSTOM SETUP 69

## D

- DIGITAL OUT 71
- Digital output 24, 71
- DIMMER 69
- Display
  - Control Menu Display 14
  - Front Panel Display 10
  - Setup Display 65
- DOLBY DIGITAL 51, 72
- DOWNMIX 71
- DTS 72, 76
- DVD 36, 76
- DVD's menu 39

## F

- Fast forward 37
- Fast reverse 37
- Front Panel Display 10

## H

- Handling discs 8
- Hooking up 20

## I

- INDEX 47
- Index 76

## L

- LANGUAGE SETUP 66
- Locating
  - a specific point by watching the TV screen 46

## M

- MENU 39, 66
- MPEG 51, 72, 76

## N

- Number input 47

## O

- On-screen display
  - Control Menu display 14
  - Setup Display 65
- OSD 66

## P

- PARENTAL CONTROL 60, 70
- PAUSE MODE 69
- PBC Playback 40
- Playing 36
- PROGRAM 41
- Programme Play 41

## Q

- QUICK 66
- Quick Setup 32

## R

- Remote 15
- REPEAT 44
- Repeat Play 44
- Replay 37

- RESET 66
- Resume Play 38

## S

- SCENE 47
- Scene 77
- SCREEN SAVER 68
- SCREEN SETUP 67
- SETUP 65
- Setup Display 65
- SHUFFLE 43
- Shuffle Play 43
- Slow-motion Play 46
- Speakers
  - hookups 24
- Stand 30
- Status Bar 13
- SUBTITLE 66
- Subtitles 55
- SURROUND 53
- S-VIDEO output 20

## T

- TIME/TEXT 47
- TITLE 47
- Title 77
- TOP MENU 39
- Top menu 39
- TRACK 47
- Track 77
- TRACK SELECTION 70
- Troubleshooting 73
- TV TYPE 67
- TVS (TV Virtual Surround) 53

## U

- Usable discs 7

## V

- VIDEO CD 36

## W

- Wall installation 31

