

SF-3990

User's Guide

CASIO®

RCA500238-1

**GUIDELINES LAID DOWN BY FCC RULES FOR USE OF THIS UNIT
IN THE U.S.A. (not applicable to other areas).**

NOTICE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Changes or modification to the product not expressly approved by CASIO could void the user's authority to operate the product.

English

Congratulations on your selection of this CASIO product! Be sure to keep this manual in a safe place for future reference when necessary.

Contents

 
Read this first!	E-3
Timekeeping Function	E-5
Alarm Function	E-8
Inputting Characters	E-9
Recalling Data	E-15
Editing Data	E-15
Secret Memory Area	E-16
Conversion Mode	E-17
Memory Capacity Screen	E-21
Calculator Mode	E-22
About the Power Supply	E-23
Messages	E-25
World Time City Table	E-26
Storage Capacity	E-27
Specifications	E-27

Read this first!


Before using the unit for the first time

Use the following procedure to load batteries and reset the unit before using it for the first time.

1. Slide the battery compartment cover in the direction indicated by the arrow.

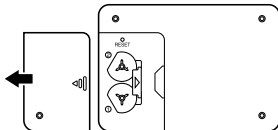

 2. Slide the battery switch to the "REPLACE ①" setting.

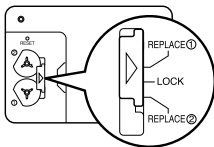

3. Load the new battery into the battery compartment, making sure that the positive (+) side of the new battery is facing up (so you can see it).
4. Slide the battery switch to the "REPLACE ②" setting and repeat step 3 for the other battery.
 - Be sure to load two new CR2032 batteries only. Never mix an old battery with a new one.
5. Slide the battery switch to the "LOCK" setting.

6. Press the RESET button. "RESET? Y/N" appears on the display. The reset message appears in one of the six languages shown below.

RESET Message		
ENGLISH	RESET? Y/N	START? Y/N
GERMAN	RÜCKST.? J/N	START? Y/N
FRENCH	REINIT? O/N	COMMENC? O/N
ITALIAN	AZZER? S/N	INIZI? S/N
SPANISH	¿REP.? S/N	¿INICIO? S/N
PORTUGUESE	REPOSIÇ? S/N	COMEÇA? S/N

7. Use ◀ or ▶ to select "Y" and then press **ENTER**. This causes "START? Y/N" to appear on the display.
8. Use ◀ or ▶ to select "Y" and then press **ENTER**.

• **Initial settings after RESET**

Home Time Zone: New York (NYC)
Home Time: 12:00 AM, January 1, 2002
World Time 1: London (LON)
World Time 2: Tokyo (TYO)
12/24-Hour Setting: 12-hour

9. Replace the battery compartment cover.

Keep written copies of important data.

CASIO COMPUTER CO., LTD. assumes no responsibility for any damage or loss caused by deletion of data as a result of malfunction, repairs, or removal of both batteries.

Important Precautions

- Keep away from direct flame.
- Keep away from heat: direct sunlight, near heaters, etc.
- Never try to disassemble the unit.
- Clean exterior only with a soft cloth moistened in a weak solution of a mild neutral detergent and water.
- Items described in this manual are subject to change without notice.
- CASIO COMPUTER CO., LTD. assumes no responsibility for any loss or claims by third parties which may arise from the use of this product.

About the Low Battery Message

Replace the batteries as soon as possible after the "LOW BAT!" message appears. Pressing **ON** after replacing batteries causes the Home Time screen to appear. Set the current time and date you want.

- When battery power is low, the "LOW BAT!" message will appear after you press **ON**, **OFF**, **TEL**, **SCHEDULE**, **ANNIVERSARY**, **MEMO**, **TO DO**, **CLOCK**, **CONVERSION**, or **CAL**. If you continue to operate the unit without battery replacement, power will switch off automatically.
- The Daily Alarm, Schedule Alarm will not operate while battery power is low.

To adjust display contrast

1. Press **FUNC** to select **CONTRAST**, and then press **ENTER**.
2. Press **▶** to increase contrast (making the figures on the display darker) or **◀** to decrease it (making the figures lighter).
3. Press **TEL**, **SCHEDULE**, **ANNIVERSARY**, **MEMO**, **TO DO**, **CLOCK**, **CONVERSION**, **CAL**, or **ESC**.

To select the system language (English, French, Spanish, German, Italian, Portuguese)

 
1. Press **TEL** to enter the Telephone Directory Mode.
2. Press **FUNC** to select **LANGUAGE**, and then press **ENTER**.
3. Use **▲** or **▼** to select a language. Press **ENTER** when the language you want to use is displayed.

Timekeeping Function

Each press of **CLOCK** changes between the Home Time, World Time 1, World Time 2, and Alarm.

To change the World Time city

Use **CLOCK** to display the World Time and press **FUNC** to select **TIMEZONE**. Then press **ENTER** and use **▲** and **▼** to scroll through the cities.

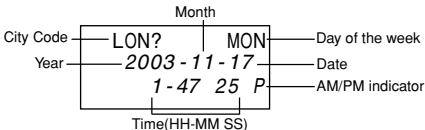

Press **ENTER** when the city you want to use is displayed.


To set the Home Time city

Example

City: HKG (Hong Kong)

Key Operation	Display
CLOCK	HOME WED 2003- 1- 1 12-05 20 A
FUNC ENTER • Select TIMEZONE.	NYC? WED 2003- 1- 1 12-05 22 A
▲ / ▼ • Scroll through city names until HKG appears.	HKG? WED 2003- 1- 1 1-05 23 P
ENTER	HOME WED 2003- 1- 1 1-05 24 P

 To set the Home Time

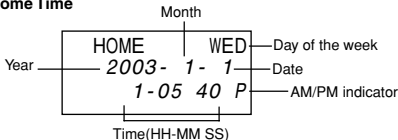

Example

Date: 2003-11-17 (November 17, 2003); Time: 9:45 AM

Key Operation	Display
CLOCK	HOME WED 2003- 1- 1 1-05 20 P

Key Operation	Display
EDIT	HKG _003-01-01 01-05 P
20031117 AM/PM 0945 • Each press of AM/PM toggles between AM (A) and PM (P). AM is indicated on the display by "A", while PM is indicated by "P".	HKG 2003-11-17 09-4_ A
ENTER • This resets the seconds to 00.	HOME MON 2003-11-17 9-45 00 A

- Be sure to input leading zeros when necessary.
- Use the following to specify noon and midnight.

	Noon	Midnight
12-hour format	12 PM	12 AM
24-hour format	12	00

To switch between Standard Time and Daylight Saving Time

Press **DST** while your Home Time or the World Time is displayed to toggle between Standard Time and Daylight Saving Time.

- You must make separate settings for Home Time and World Time.

HOME MON 2003-11-17 10-45 10 A <small>DST</small>	DST indicator
--	---------------

 
To switch between 12-hour and 24-hour format

1. Display the Home Time or the World Time.
2. Press **12/24** to change between 12-hour and 24-hour timekeeping.

Alarm Function

- The alarm sounds for 20 seconds when the alarm time is reached.
- To stop the alarm when it is sounding, press any key.

To set the alarm time

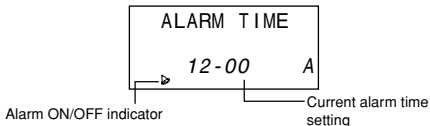


Example

8:05 PM

Key Operation	Display
CLOCK CLOCK CLOCK	ALARM TIME 12-00 A
EDIT	ALARM TIME _2-00 A
0805 AM/PM • Each press of AM/PM toggles between AM (A) and PM (P). AM is indicated on the display by "A", while PM is indicated by "P".	ALARM TIME 08-0_ P
ENTER This causes the alarm indicator to appear.	ALARM TIME ▶ 8-05 P

To turn alarms on and off

 1. Press **FUNC** to display the function menu.
2. Select "SOUND", and then press **ENTER**.
3. Press **▲** and **▼** to change between displays as shown below, and **◀** and **▶** to select "○" (on) or "×" (off).

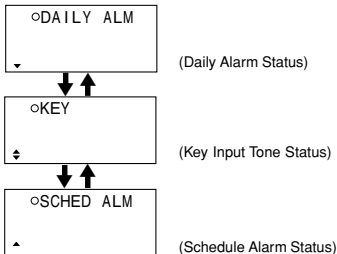

4. Press **ENTER** to return to the previous screen.

Inputting Characters

- You can input alpha-characters, numbers or symbols while the cursor is in the top line of the display (text area). Only numbers can be input while the cursor is in the second and third line (number area).
- Press **CAPS** to toggle the keyboard between upper-case and lower-case. The "CAPS" indicator is on the display during upper-case input.
- To input a symbol, press **SHIFT** (so the "SHIFT" indicator is on the display) and then press the key for the symbol you want to input. Press the **SYMBOL** button. Use **▲** and **▼** to display the symbol you want, and then press the applicable number key to select the symbol and input it.
- To input a return, press **↵**.
- To input a special character, press **CODE** so the "CODE" indicator is displayed. Next, press the key for the accent you want to input, and then press the key for the character. This inputs the accent and character combination.

- While in the number area, press – to input a hyphen.
- To input a space, press **SPACE**.
- To change a character, use ◀ and ▶ to move the cursor and then input the new character.

To input Telephone Directory data

- Name/Company: 72 characters; Home (Tel. No.):24 digits; Work (Tel No.) 24 digits; Fax number: 24 digits; Cell phone number: 24 digits; E-mail address:36 characters; URL: 36 characters; Address: 72 characters; Free: 64 characters

Example

NAME/COMPANY: CASIO

Home:045-012-3456; Work: 045-012-7890; Fax: 045-987-6543;

Cell Phone: 045-654-3210; e-mail address: abcd@xyz.com;

URL: www.casio.com

Key Operation	Display
TEL	NAME / COMPANY <small>(CAPS)</small>
CASIO ENTER	HOME? HOME — <small>(CAPS)</small>
045-012-3456 ENTER	WORK? WORK — <small>(CAPS)</small>
045-012-7890 ENTER	FAX? FAX — <small>(CAPS)</small>
045-987-6543 ENTER	CELL? — CELL <small>(CAPS)</small>

Key Operation	Display
045-654-3210 ENTER	^{E-MAIL} E-MAIL? <small>(CAPS)</small>
CAPS ABCD SHIFT @XYZ.COM ENTER	URL?
WWW.CASIO.COM ENTER	^{ADD} ADDRESS?
CAPS TOKYO SPACE JAPAN ENTER	FREE? <small>(CAPS)</small>
ENGINEER ENTER	CASIO <small>HOME WORK</small> 045-012-3456 045-012-7890 <small>▼ (CAPS)</small>

- Data is automatically sorted into alphabetical sequence according to the names.

To change the FILE NAME

1. Press **TEL** to display the initial Telephone Directory screen.
 2. Press **FUNC** to select FILE NAME, and then press **ENTER**.
- FILE NAME can be up to 12 characters long.
3. After making the changes you want, press **ENTER** to store them.

To input Schedule data

- Up to 119 characters per data item.

Example

Meeting on December 5, 2003 from 2 PM

Key Operation	Display
SCHEDULE	DESCRIPTION? <small>(CAPS)</small>

Key Operation	Display
MEETING ENTER	DATE / TIME? _003-11-17 12-05 A <small>(CAPS)</small>
20031205	DATE / TIME? 2003-12-05 2-05 A <small>(CAPS)</small>
0200 AM/PM ENTER • Each press of AM/PM toggles between AM (A) and PM (P). AM is indicated on the display by "A", while PM is indicated by "P".	SCHED ALM? -- - - A <small>(CAPS)</small>
0130 ENTER • If you do not want to set an alarm for the appointment, press ENTER without inputting a time.	MEETING 2003-12- 5 2-00 P <small>(CAPS)</small>

- Schedule data is sorted by date and time.
- This unit also has a Schedule Alarm, which you can turn on and off (see "To turn alarms on and off" on page E-9). If the Schedule Alarm is turned on, an alarm sounds when the current time reaches the start time of Schedule Keeper data that comes first chronologically. Note that the details of the Schedule Keeper data are displayed when the Schedule Alarm sounds.

To input Anniversary data

- Up to 120 Character per data item.

Example

X MAS DAY 12-25

Key Operation	Display
ANNIVERSARY	DESCRIPTION? <small>(CAPS)</small>

Key Operation	Display
X MAS SPACE DAY ENTER	MM/DD? 01-01 <small>(CAPS)</small>
1225 ENTER	XMAS DAY 12-25 <small>(CAPS)</small>

- Anniversary data is sorted by date.

To input Memo data

- Up to 120 characters per data item.

Example

JODY BDAY (Jody's birthday), 10-5 (October 5)

Key Operation	Display
MEMO	MEMO? <small>(CAPS)</small>
JODY SPACE BDAY	JODY BDAY_ <small>(CAPS)</small>
↵ 10-5 ENTER	JODY BDAY ▼ <small>(CAPS)</small>

- Memo data is not sorted.

To input To Do data

- Up to 119 characters per data item.

Example

CALL BILL, 11-6 (November 6)

Key Operation	Display
TO DO	DO WHAT? <small>(CAPS)</small>
CALL SPACE BILL (The check box appears automatically.)	<input type="checkbox"/> CALL BILL_ <small>(CAPS)</small>
ENTER • The current date appears automatically.	WHEN? <u>2003-01-01</u> <small>(CAPS)</small>
20031106 ENTER • Pressing ENTER again toggles the status of the check box between checked and unchecked.	<input type="checkbox"/> CALL BILL 2003-11- 6 <small>(CAPS)</small>

- To Do data is sorted from uncheck data to checked data by date.

DATE STAMP

To input the date, press **SHIFT** and then press **CODE**. The date stamp can be used during text data input.

Recalling Data

The indicators ▲ and ▼ on the screen indicate that data exists above or below the displayed data. Use ▲ and ▼ to scroll the screen and view the other data.

- Indicators on the left side of the Telephone Directory screen show what kind of data is currently displayed. The display indicators are: "HOME" (home telephone), "WORK" (work telephone), "FAX" (fax number), "CELL" (cell phone number), "E-mail" (e-mail number), and "ADD" (address).
- When scrolling Telephone Directory data, pressing ▼ first shows the name entry along with the home and work telephone numbers. Each press of ▲ or ▼ scrolls through the fax number, cell phone number, e-mail address and other entries.

• Scroll Search

1. Use **TEL**, **SCHEDULE**, **ANNIVERSARY**, **MEMO**, or **TO DO** to enter the mode (Telephone Directory, Schedule Keeper, Memo, To Do) that contains the data you want.
2. Use ▼ to scroll down, ▲ to scroll up. Hold down to scroll at high speed.

• Initial Character Search

1. Use **TEL**, **SCHEDULE**, **ANNIVERSARY**, **MEMO**, or **TO DO** to enter the mode (Telephone Directory, Schedule Keeper, Memo, To Do) that contains the data you want.
2. Input the initial characters of the data you want.
3. Press ▲ or ▼ to start the search.
4. If you get more than one, you can scroll.

Editing Data

To edit data

1. Recall data and press **EDIT**.
2. Input data as you normally would.
3. After inputting the data you want, press **ENTER** to store it.

Deleting Data

To delete a single item

1. Press **▲** or **▼** to recall an item.
2. Press **FUNC** to select ITEM DEL, and then press **ENTER**.
3. Press **ENTER** to delete the recalled item, or press **ESC** to abort.

To delete all data in a particular mode

1. Press **TEL**, **SCHEDULE**, **ANNIVERSARY**, **MEMO**, or **TODD** to enter the mode that contains the data you want to delete.
2. Press **FUNC** to select ALL DEL, then press **ENTER**.
3. Press **ENTER** to delete all the data in the mode, or press **ESC** to abort.

Secret Memory Area


Important!


If you forget your password, you will have to RESET and delete everything in memory!

To register a password

Example

Password: 0123

Key Operation	Display
TEL	NAME / COMPANY
SECRET	NEW PASS? ----
0123 ENTER • Your password can be up to 4 numbers long.	RE - TYPE ----
0123 ENTER	NAME / COMPANY 

- Once you are in the secret memory area (indicated by ) , you can input, recall, edit, and delete data, and change between the Telephone Directory, Schedule Keeper, Memo and To Do just as you do in the normal (non-secret) memory area.

To enter the secret memory area

1. While in the Telephone Directory, Schedule, Anniversary, Memo, or To Do mode, press **SECRET**.
2. Input the current password and press **ENTER**. If the password is not correct, the error message will appear on the display and then return to password input step.

To exit the secret memory area

Press **SECRET** to exit the secret memory area.

To change the password

1. While in the Secret Memory area, press **FUNC** a number of times until "PASS EDIT" is displayed.
2. Press **ENTER**.
3. Change to the new password and press **ENTER** to store.

Conversion Mode

Your Digital Diary has two conversion modes, one for currency conversion and one for metric conversion.

To enter the Currency Conversion Mode

Key Operation	Display
CONVERSION	CURRENCY CON
ENTER	USD ↔ € ▼ 0.

To enter the Metric Conversion Mode

Key Operation	Display
CONVERSION CONVERSION	METRIC CON
ENTER	yd ↔ m 0.

Using the Currency Conversion Mode

You can use the Currency Conversion Mode to convert between various currencies. The calculator comes preset with the default currency names listed below. You can use the default currency names as they are, or you can change to other currency names. You can also change the exchange rate whenever you want.

1. USD ↔ €
2. USD ↔ JPY
3. C1 ↔ C2
4. C1 ↔ C3
5. C2 ↔ C3

Note

- Conversion No. 5 will be automatically set when No.3 & 4 have been registered. The currency name and exchange rate of No.5 are changed automatically.

To perform a currency conversion

Example 1

To convert \$100 to euros.

Key Operation	Display
CONVERSION ENTER 100	USD ↔ € 100. ▼
▶ • Press ▶ or ◀ to convert back.	USD → € 110. ▼

Example 2

To convert €100 to US dollars.

Key Operation	Display
CONVERSION ENTER 100	USD ↔ € 100. ▼
◀ • Each press of ◀ or ▶ converts the displayed value.	USD ← € 909090909. ▼

To change the currency name and rate

To setup a conversion from euros to pounds at a rate of 1.7125.

Key Operation	Display
CONVERSION ENTER	USD ↔ € 0. ▼

Key Operation	Display
EDIT SPACE SPACE SPACE £ * ENTER * To select the £ (pound) symbol, press the SYMBOL button. Use ▲ and ▼ to display the £ (pound) symbol, and then press the applicable number key to select it.	£ ↔ € 1.1
1.7125 ENTER • This stores the input value in memory.	£ ↔ € ▼ 0.

Note

- You can input up to five characters for the currency name and 10 digits for the exchange rate.

Using the Metric Conversion Mode

All conversion values in the Metric Conversion Mode are preset as shown below. You cannot change them.

Conversion	Displayed Units	Conversion Formula
yards ↔ meters	yd : m	1 : 0.9144
feet ↔ meters	ft : m	1 : 0.3048
inches ↔ centimeters	in : cm	1 : 2.54
Kilometers ↔ miles	km : mi	1.6093 : 1
kilograms ↔ pounds	kg : lb	0.4536 : 1
grams ↔ ounces	g : oz	28.35 : 1
Celsius ↔ Fahrenheit	°C : °F	1 : 1.8 * °C+32
liters ↔ UK gallons	l : galUK	4.546 : 1
liters ↔ US gallons	l : galUS	3.785 : 1

To perform metric conversion

To convert 28 degrees Celsius to Fahrenheit

Key Operation	Display
CONVERSION CONVERSION ENTER	yd ↔ m 0.
Press ▼ 6 times, then input 28 • Use ▲ and ▼ to search the desired conversion.	°C ↔ °F 28.
▶	°C → °F 82.
◀	°C ↔ °F 28.
Press ◀ again to convert °F to °C	°C ← °F -22.

Memory Capacity Screen

1. While in the Telephone Directory, Schedule, Anniversary, Memo, or To Do mode, press **FUNC** to select MEMORY.
2. Press **ENTER** to display the memory capacity screen.

USED	%	
	8	Percentage of memory used

- Press **ESC** to exit the memory capacity screen.

Calculator Mode

Press **CAL** to enter the Calculator Mode.

■ Calculation Examples

Examples	Operation	Display
	AC	0.
53 + 123 - 63 =	53 $\boxed{+}$ 125 (Error)	+ 125.
	C 123	+ 123.
	$\boxed{-}$ 63 $\boxed{=}$	113.
963 \times (23 - 56) =	23 $\boxed{-}$ 56 $\boxed{\times}$ 963 $\boxed{=}$	- 31779.
(56 \times 3 - 89) \div 5.2 + 63 =	56 $\boxed{\times}$ 3 $\boxed{-}$ 89 $\boxed{\div}$ 5.2 $\boxed{+}$ 63 $\boxed{=}$	78.19230769
123456 \times 741852 =	123456 $\boxed{\times}$ 741852 $\boxed{=}$	E 9.158608051
	C	9.158608051
	AC	0.
2 \times (-3) =	2 $\boxed{\times}$ 3 $\boxed{\pm}$ $\boxed{=}$	-6.
12 + 23 =	23 $\boxed{+}$ $\boxed{+}$ 12 $\boxed{=}$	K+ 35.
45 + 23 =	45 $\boxed{=}$	K+ 68.
7 - 5.6 =	5.6 $\boxed{-}$ $\boxed{-}$ 7 $\boxed{=}$	K- 1.4
2 - 5.6 =	2 $\boxed{=}$	K- -3.6
2.3 \times 12 =	12 $\boxed{\times}$ $\boxed{\times}$ 2.3 $\boxed{=}$	K \times 27.6
4.5 \times 12 =	4.5 $\boxed{=}$	K \times 54.
45 \div 9.6 =	9.6 $\boxed{\div}$ $\boxed{\div}$ 45 $\boxed{=}$	K \div 4.6875
78 \div 9.6 =	78 $\boxed{=}$	K \div 8.125
12% of 1500	1500 $\boxed{\times}$ 12 $\boxed{\%}$	180.
Percentage of 660 against 880	660 $\boxed{\div}$ 880 $\boxed{\%}$	75.
15% add-on of 2500	2500 $\boxed{\times}$ 15 $\boxed{\%}$ $\boxed{+}$	2875.
25% discount of 3500	3500 $\boxed{\times}$ 25 $\boxed{\%}$ $\boxed{-}$	2625.

<p>What will the selling price and profit be when the purchasing price of an item is \$480 and the profit rate to the selling price is 25%?</p>	$480 \text{ [+] } 25 \text{ [%] } \text{ [-]}$	<p>640. 160. (Profit)</p>
<p>If you made \$80 last week and \$100 this week, what is the percent increase?</p>	$100 \text{ [-] } 80 \text{ [%]}$	<p>25.</p>
$\begin{array}{r} 80 \times 9 = 720 \\ -) 50 \times 6 = 300 \\ \hline 20 \times 3 = 60 \\ \hline 480 \end{array}$	$\begin{array}{l} \text{AC} \text{ [MC] } 80 \text{ [x] } 9 \text{ [M+] } \text{ M } 720. \\ \quad \quad \quad 50 \text{ [x] } 6 \text{ [M-] } \text{ M } 300. \\ \quad \quad \quad 20 \text{ [x] } 3 \text{ [M+] } \text{ M } 60. \\ \quad \quad \quad \quad \quad \text{[MR] } \text{ M } 480. \end{array}$	

 
About the Power Supply

Caution


- All data stored in memory is lost if you remove both batteries at the same time.
- Replace the batteries at least once every 2 years, no matter how much you use the unit.
- Be sure that you keep a separate copy of all important data that you store in the unit.

To replace the batteries

1. Press **OFF** to switch power OFF.
2. Slide the battery compartment cover in the direction indicated by the arrow.

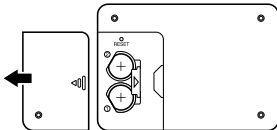

 - Slide the battery switch to the "REPLACE ①" setting.
Insert a thin, pointed object into (A) and remove the old battery.

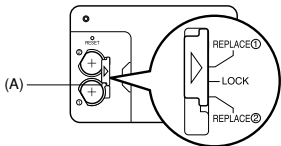

Caution

Be sure to remove only one battery at a time. Otherwise, you will lose all data stored in memory.

- Replace the old battery with a new one, making sure that the positive (+) side of the new battery is facing up (so you can see it).
- Slide the battery switch to the "REPLACE ②" setting and repeat step 4 for the other battery.
 - Be sure to load two new CR2032 batteries at the same time. Never mix an old battery with a new one.
- Slide the battery switch to the "LOCK" setting.
- Replace the battery compartment cover.

Battery Precautions

- Keep + side of each battery facing up (so you can see it).
- Keep batteries out of the reach of small children. If swallowed, consult with a physician immediately.

The batteries that come with this unit discharge slightly during shipment and storage. Because of this, they may require replacement sooner than the normal expected battery life.

Messages

Message	Remarks
BUSY...	<ul style="list-style-type: none">• Data processing is being performed.
NOT FOUND!	<ul style="list-style-type: none">• No data in memory matches your specification.
PASS?	<ul style="list-style-type: none">• Your operation requires entry into the secret memory area. Input the password.
LOW BAT!	<ul style="list-style-type: none">• Battery power is low. Replace the batteries.

World Time City Table

Time Difference	Code	City Name	Other Cities in Zone
- 11			
- 10	HNL	HONOLULU	
- 09	ANC	ANCHORAGE	
- 08	LAX	LOS ANGELES	Seattle, Las Vegas
	SFO	SAN FRANCISCO	
- 07	DEN	DENVER	El Paso
- 06	MEX	MEXICO CITY	Dallas, Houston, Chicago
- 05	NYC	NEW YORK	Washington D.C., Boston,
	LIM	LIMA	Montreal
- 04	CCS	CARACAS	Santiago
- 03	RIO	RIO DE JANEIRO	Buenos Aires
- 02			
- 01			
+ 00	LON	LONDON	Greenwich Mean Time
+ 01	PAR	PARIS	Madrid, Amsterdam
	ROM	ROME	
+ 02	CAI	CAIRO	Helsinki, Beirut, Jerusalem
	ATH	ATHENS	
	IST	ISTANBUL	
+ 03	MOW	MOSCOW	Kuwait, Nairobi
+ 3:30	THR	TEHRAN	
+ 04	DXB	DUBAI	Abu Dhabi
+ 4:30	KBL	KABUL	
+ 05	MLE	MALE	
+ 5:30	DEL	DELHI	Mumbai, Calcutta, Colombo
+ 06	DAC	DHAKA	
+ 07	BKK	BANGKOK	Jakarta, Hanoi
+ 08	HKG	HONG KONG	Taipei, Singapore, Manila
	BJS	BEIJING	
	DPS	DENPASAR	
+ 09	TYO	TOKYO	Seoul, Pyongyang
+ 9:30	ADL	ADELAIDE	Darwin
+ 10	SYD	SYDNEY	
	GUM	GUAM	
+ 11:00	NOU	NOUMEA	
+ 12:00	AKL	AUCKLAND	Wellington

Storage Capacity

Telephone: 3,900 records under the following conditions

NAME/COMPANY: 10 characters

HOME: 10 digits

WORK: 10 digits

Schedule: 3,100 records under the following conditions

DESCRIPTION: 20 characters

Alarm: On

One appointment per day

Memo: 5,200 records under the following conditions

MEMO: 20 characters

To Do: 4,300 characters under the following conditions

DO WHAT: 20 characters

Anniversary: 4,600 records under the following conditions

DESCRIPTION: 20 characters

Specifications

Model: SF-3990

Memory capacity: 128 KB

Power supply: 2 lithium batteries (CR2032)

Power consumption: 0.02 W

Battery life:

Approximately 2 years under the following test conditions:

Unit turned on one hour each day.

Auto Power Off: Approximately 6 minutes after last key operation

Ambient temperature range: 0°C~40°C (32°F~104°F)

 
Dimensions: Folded: 13.9 (H) × 145 (W) × 91 (D) mm

($9/16$ " (H) × $5^{11}/16$ " (W) × $3^{9}/16$ " (D))

Unfolded: 10.3 (H) × 145 (W) × 178 (D) mm

($3/8$ " (H) × $5^{11}/16$ " (W) × 7" (D))

Weight: Approximately 120g (4.2 oz) including batteries

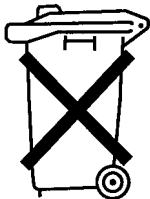

**Batterij niet weggooien,
maar inleveren als
KCA**



CASIO ELECTRONICS CO., LTD.
Unit 6, 1000 North Circular Road
London NW2 7JD, U.K.

CASIO®

CASIO COMPUTER CO., LTD.

6-2, Hon-machi 1-chome
Shibuya-ku, Tokyo 151-8543, Japan