

**OWNER'S INSTRUCTIONS
 MANUAL DE INSTRUCCIONES
 ISTRUZIONI PER L'USO
 MANUAL DE INSTRUÇÕES
 MANUEL D'UTILISATION
 GEBRAUCHSANWEISUNG
 ΟΔΗΓΙΕΣ**

 
Indoor Unit

AQ24A1(A2)RE/B/C/D
 AQT24A1(A2)(A5)(A6)(A8)RE/B/C/D
 SH24TA1(A2)(A5)(A6)(A8)
 AQ18A1(A2)(A5)(A6)(A9)(A0)RE/B/C/D
 AQT18A1(A2)(A5)(A6)(A9)(A0)RE/B/C/D
 SH18TA1(A2)(A5)(A6)(A9)(A0)
 SH18ZA1(A2)(A5)(A6)(A9)(A0)
 AQ12A1(A2)(A3)(A4)(A5)(A6)(A7)(A8)(A9)(A0)MB/C/D/E/EA
 AQV12A1(A2)(A5)(A6)MD/E
 SH12VA1(A2)(A5)(A6)
 SH12ZA1(A2)(A3)(A4)(A5)(A6)(A7)(A8)(A9)(A0)
 SH12ZA1(A2)(A3)(A4)(A5)(A6)(A7)(A8)A
 SH12ZA1(A2)(A3)(A4)(A5)(A6)(A7)(A8)B
 SH12AA5
 AQ09A1(A2)(A3)(A4)(A5)(A6)(A7)(A8)MB/C/D/E
 AQV09A1(A2)(A5)(A6)MD/E
 SH09VA1(A2)(A5)(A6)
 SH09ZA1(A2)(A3)(A4)(A5)(A6)(A7)(A8)
 SH09ZA1(A2)(A3)(A4)(A5)(A6)(A7)(A8)A
 SH09AA5
 AQ07A1(A2)(A3)(A4)(A5)(A6)(A7)(A8)MB/C/D/E
 SH07ZA1(A2)(A3)(A4)(A5)(A6)(A7)(A8)
 SH07ZA1(A2)(A3)(A4)(A5)(A6)(A7)(A8)A
 SH07AA5

Indoor Unit

AQ24B1(B2)RE/B/C/D
 AQT24B1(B2)(B5)(B6)(B8)RE/B/C/D
 SH24TB1(B2)(B5)(B6)(B8)
 AQ18B1(B2)(B5)(B6)(B9)(B0)RE/B/C/D
 AQT18B1(B2)(B5)(B6)(B9)(B0)RE/B/C/D
 SH18TB1(B2)(B5)(B6)(B9)(B0)
 SH18ZB1(B2)(B5)(B6)(B9)(B0)
 AQ12B1(B2)(B3)(B4)(B5)(B6)(B7)(B8)(B9)(B0)MB/C/D/E/EA
 AQV12B1(B2)(B5)(B6)MD/E
 SH12VB1(B2)(B5)(B6)
 SH12ZB1(B2)(B3)(B4)(B5)(B6)(B7)(B8)(B9)(B0)
 SH12ZB1(B2)(B3)(B4)(B5)(B6)(B7)(B8)A
 SH12ZB1(B2)(B3)(B4)(B5)(B6)(B7)(B8)B
 SH12AB5
 AQ09B1(B2)(B3)(B4)(B5)(B6)(B7)(B8)MB/C/D/E
 AQV09B1(B2)(B5)(B6)MD/E
 SH09VB1(B2)(B5)(B6)
 SH09ZB1(B2)(B3)(B4)(B5)(B6)(B7)(B8)
 SH09ZB1(B2)(B3)(B4)(B5)(B6)(B7)(B8)A
 SH09AB5
 AQ07B1(B2)(B3)(B4)(B5)(B6)(B7)(B8)MB/C/D/E
 SH07ZB1(B2)(B3)(B4)(B5)(B6)(B7)(B8)
 SH07ZB1(B2)(B3)(B4)(B5)(B6)(B7)(B8)A
 SH07AB5

Split-type Room Air Conditioner (Cool and Heat)
Aire acondicionado doméstico sistema Split (Refrigeración y Calefacción)
Condizionatore d'aria per ambienti ad unità Separate (Raffreddamento e Riscaldamento)
Aparelho de ar condicionado tipo Split (Refrigeração e Aquecimento)
Climatiseur de type Séparé (Refroidissement et Chauffage)
Geteilte raumklimaanlage (Kühlen und Wärmen)
ΔΙΑΙΡΟΥΜΕΝΟ ΚΛΙΜΑΤΙΣΤΙΚΟ ΔΩΜΑΤΙΟΥ(Ψύξης και Θέρμανσης)

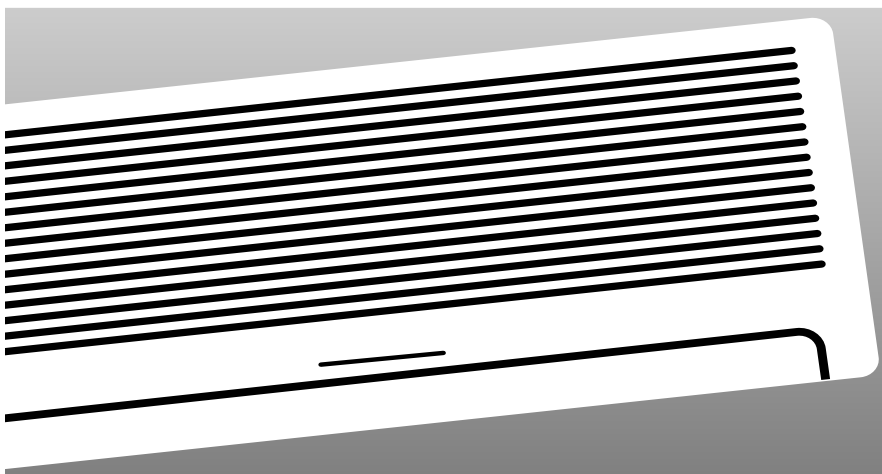

Safety Precautions

The following safety precautions must be taken when using your air conditioner.

- 1 *Make sure that the indoor unit is correctly ventilated at all times; do NOT place clothing or other materials over it.*
- 2 *NEVER spill liquid of any kind into the indoor unit. Should this happen, switch off the breaker used for your air conditioner and contact your installation specialist.*
- 3 *Do NOT insert anything between the air flow blades, as the inner fan may become damaged and you may be hurt. Keep children away from the indoor unit.*
- 4 *Do NOT place any obstacles in front of the outdoor unit.*
- 5 *If the remote control will not be used for a long time, remove the batteries.*
- 6 *Users of this product are cautioned not to attempt repair of this product at their own discretion. Instead, they are requested to directly contact a designated service center or the outlet at which the product was purchased.*
- 7 *If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or its service centre.*
- 8 *This device must be installed according to the national electrical rules.*
- 9 *Before disposing of the remote control it is necessary to remove batteries.*
- 10 *The appliance is not intended for use by young children or infirm person without supervision; young children should be supervised to ensure that they do not play with the appliance.*
- 11 *Max current is measured according to IEC standard for safety and current is measured according to ISO standard for energy efficiency.*

CAUTION


The manufacturer does not take any responsibility for any accidents that occur because the air conditioner is not fixed firmly or installed securely, during installing or using the product. In case you experience difficulty in installation, you must use an installation specialist. An accident will occur if the installation is not done as recommends in the installation guide.

Contents

◆	PREPARING YOUR AIR CONDITIONER	
■	Safety Precautions	2
■	View of the Unit	4
■	Remote Control-Buttons and Display	6
■	Getting Started	7
■	Inserting the Remote Control Batteries	8
◆	OPERATING YOUR AIR CONDITIONER	
■	5 Way Function	9
■	Selecting the Automatic Operating Mode	10
■	Cooling Your Room	11
■	Heating Your Room	12
■	Changing the Room Temperature Quickly	13
■	Removing Excess Humidity	14
■	Airing Your Room	15
■	Adjusting the Air Flow Direction Vertically	16
■	Adjusting the Air Flow Direction Horizontally	17
◆	PROGRAMMING YOUR AIR CONDITIONER	
■	Setting the On Timer	18
■	Setting the Off Timer	19
■	Setting the Sleep Timer	20
◆	RECOMMENDATIONS FOR USE	
■	Operating Recommendations	21
■	Temperature and Humidity Ranges	22
■	Cleaning Your Air Conditioner	22
■	Solving Common Problems	23
■	Installing a Filter (Option)	24
◆	TECHNICAL SPECIFICATIONS	

View of the Unit

 Indoor Unit The design and shape are subject to change according to the model.

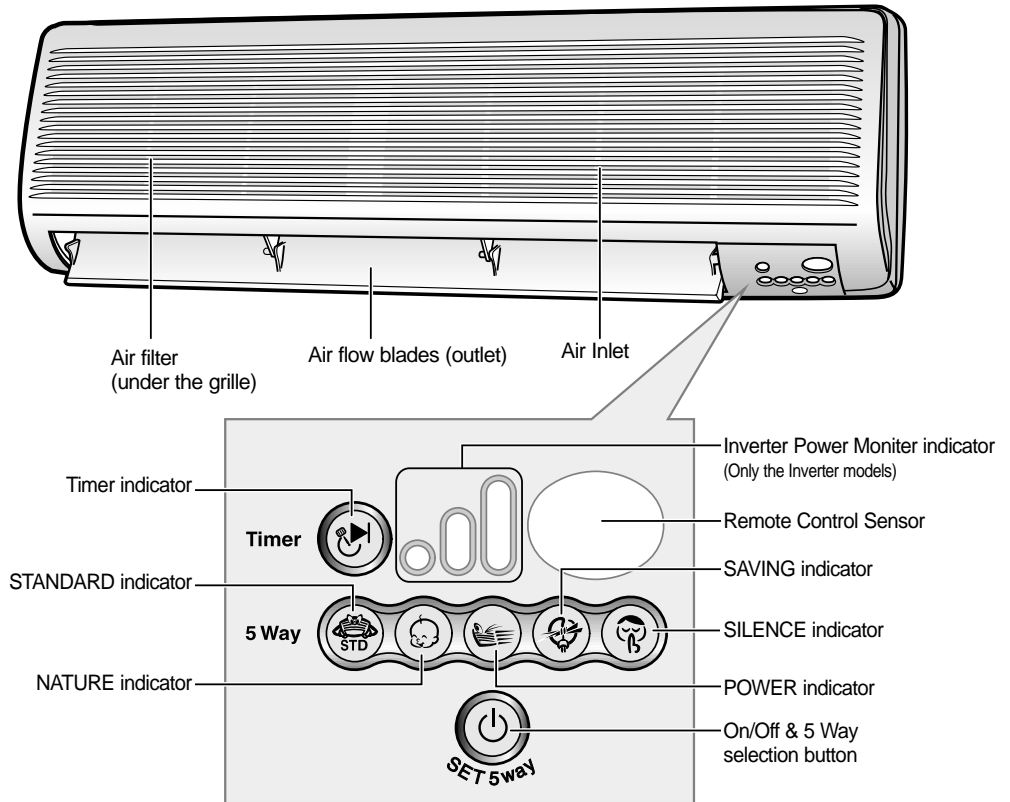

- Note**
- ◆ For details on the 5 Way, refer to page 9.
 - ◆ Inverter Power Monitor indicator(Only the inverter models)
Following the condition of it's operation, Power Monitor indicator would be allowed to increase or decrease.



- The first state of it's operation, the maximum permissible dose of it's operation.

 


- The state of appropriate room temperature.

Outdoor Unit

SH12ZA3(A4)(A7)(A8)X
 SH12ZA3(A4)(A7)(A8)XA
 UQ12A3(A4)(A7)(A8)MB/C/D/E/EA
 SH09ZA3(A4)(A7)(A8)X
 UQ09A3(A4)(A7)(A8)MB/C/D/E
 SH07ZA3(A4)(A7)(A8)X
 UQ07A3(A4)(A7)(A8)MB/C/D/E


SH12ZB3(B4)(B7)(B8)X
 SH12ZB3(B4)(B7)(B8)XA
 UQ12B3(B4)(B7)(B8)MB/C/D/E/EA
 SH09ZB3(B4)(B7)(B8)X
 UQ09B3(B4)(B7)(B8)MB/C/D/E
 SH07ZB3(B4)(B7)(B8)X
 UQ07B3(B4)(B7)(B8)MB/C/D/E

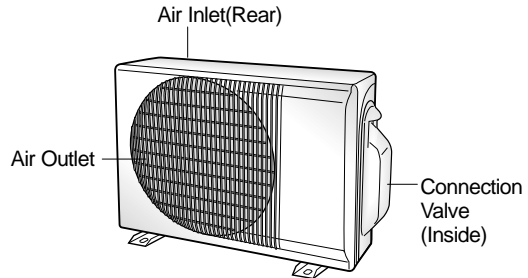

Outdoor Unit

SH12VA1(A2)(A9)(A0)X
 SH12ZA1(A2)X
 SH12ZA1(A2)XA
 UQ12A1(A2)(A9)(A0)MB/C/D/E/EA
 UQV12A1(A2)MD/E
 SH09VA1(A2)X
 SH09ZA1(A2)X
 UQ09A1(A2)MB/C/D/E
 UQV09A1(A2)MD/E

 
SH12VB1(B2)(B9)(B0)X
 SH12ZB1(B2)X
 SH12ZB1(B2)XA
 UQ12B1(B2)(B9)(B0)MB/C/D/E/EA
 UQV12B1(B2)MD/E
 SH09VB1(B2)X
 SH09ZB1(B2)X
 UQ09B1(B2)MB/C/D/E
 UQV09B1(B2)MD/E

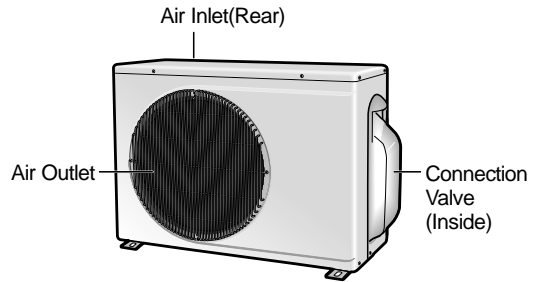

Outdoor Unit

SH24TA1(A2)(A5)(A6)(A8)X
 UQ24A1(A2)RE/B/C/D
 UQT24A1(A2)(A5)(A6)(A8)RE/B/C/D
 SH18TA1(A2)(A5)(A6)(A9)(A0)X
 SH18ZA1(A2)(A5)(A6)(A9)(A0)X
 UQ18A1(A2)(A5)(A6)(A9)(A0)RE/B/C/D
 UQT18A1(A2)(A5)(A6)(A9)(A0)RE/B/C/D

 
SH24TB1(B2)(B5)(B6)(B8)X
 UQ24B1(B2)RE/B/C/D
 UQT24B1(B2)(B5)(B6)(B8)RE/B/C/D
 SH18TB1(B2)(B5)(B6)(B9)(B0)X
 SH18ZB1(B2)(B5)(B6)(B9)(B0)X
 UQ18B1(B2)(B5)(B6)(B9)(B0)RE/B/C/D
 UQT18B1(B2)(B5)(B6)(B9)(B0)RE/B/C/D

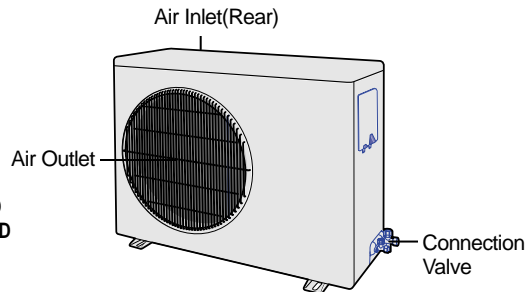

Outdoor Unit

SH09ZA5(A6)X
 UQ09A5(A6)MB/C/D/E
 SH07ZA1(A2)(A5)(A6)X
 SH07AA5X
 UQ07A1(A2)(A5)(A6)MB/C/D/E

 
SH09ZB5(B6)X
 UQ09B5(B6)MB/C/D/E
 SH07ZB1(B2)(B5)(B6)X
 SH07AB5X
 UQ07B1(B2)(B5)(B6)MB/C/D/E

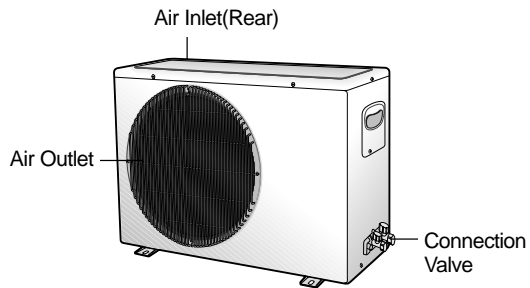


Outdoor Unit

SH12VA5(A6)X
 SH12ZA5(A6)X
 SH12ZA5(A6)XA
 SH12AA5X
 UQ12A5(A6)MB/C/D/E/EA
 UQV12A5(A6)MD/E
 SH09VA5(A6)X
 SH09AA5X
 UQV09A5(A6)MD/E

 SH12VB5(B6)X
 SH12ZB5(B6)X
 SH12ZB5(B6)XA
 SH12AB5X
 UQ12B5(B6)MB/C/D/E/EA
 UQV12B5(B6)MD/E
 SH09VB5(B6)X
 SH09AB5X
 UQV09B5(B6)MD/E

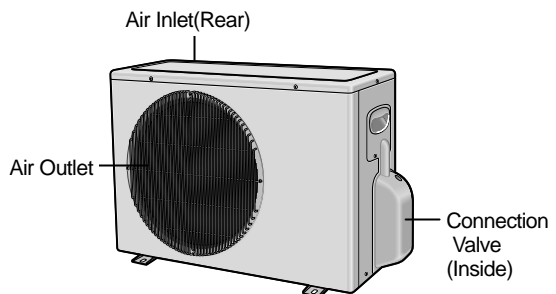

Remote Control - Buttons and Display

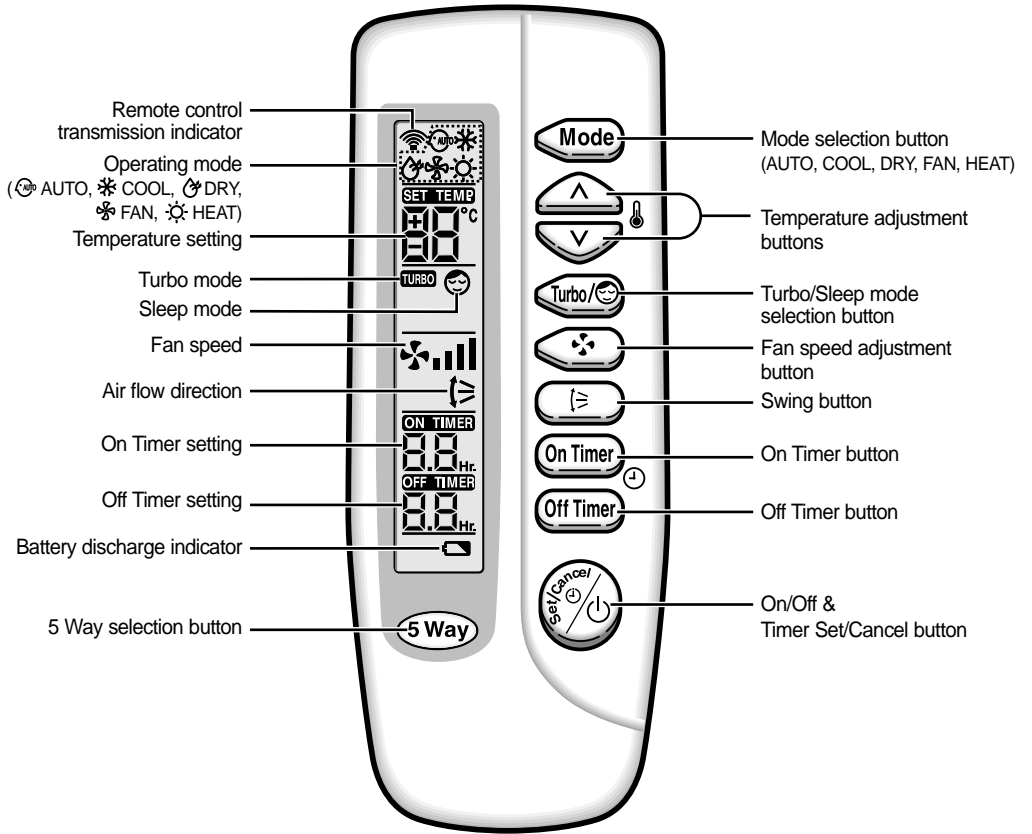 

Getting Started

You have just purchased a split type air conditioner and it has been installed by your installation specialist.

 
Your Owner's Instructions contains valuable information on using your air conditioner. Please take the time to read it as it will help you take full advantage of the unit's features.

The booklet is organized as follows.



- ◆ *The following figures are shown on pages from 4 to 6 :*
 - *Indoor and outdoor units*
 - *Remote control(buttons and display)**They will help you find the buttons and understand the symbols displayed.*

- ◆ *In the main part of the installation book, you will find a series of step-by-step procedures for each function available.*

The illustrations in the step-by-step procedures use three different symbols:

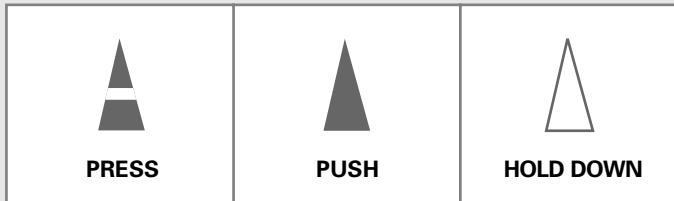

Inserting the Remote Control Batteries

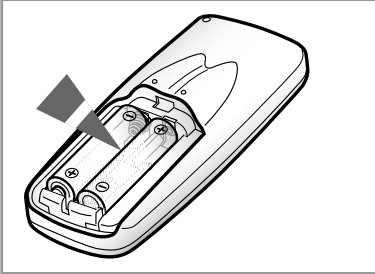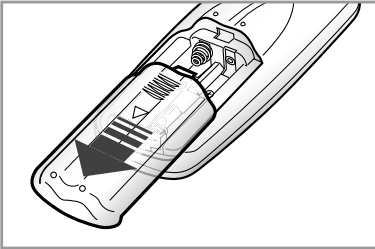  

You must insert or replace the remote control batteries when :

- ◆ **You purchase the air conditioner**
- ◆ **The remote control does not work correctly**

Note


- ◆ Use two AAA, LR03 1.5V batteries.
- ◆ Do not use old batteries or different kinds of batteries together.
- ◆ Batteries may be completely discharged after 12 months, even if they have not actually been used.






- 1 Push the battery cover on the rear of the remote control with your thumb in the direction of the arrow and remove it.
- 2 Insert the two batteries, taking care to respect the polarities :
 - ◆ + on the battery with + on the remote control.
 - ◆ - on the battery with - on the remote control.
- 3 Close the cover by sliding it back until it clicks into place.


5 Way Function

You can select the 5 Way function with operating mode of the air conditioner for more comfortable circumstances. You can use the 5 Way function with the indoor unit as well as the remote control. Thus, you can use this function even though you have lost your remote control.

Using with the indoor unit

- 1 Press the  (ON/OFF) button one time and then select the desired mode.

To obtain a(n)...	Then select...
Normal operating	 (STANDARD) mode
Reducing the uncomfortable temperature gradually	 (NATURE) mode
High fan speed	 (POWER) mode
Compressor run time reduced	 (SAVING) mode
Fan speed reduces as the temperature decreases	 (SILENCE) mode

- 2 To stop the operating, press the  (ON/OFF) button until all indicators turn off.

Note Even if the air conditioner has been turned on via the ON/OFF button on the unit, operations can still be controlled using the remote control as usual.

 
 
Selecting with the Remote Control

To select the 5 Way function with the remote control, press the 5 Way button one or more times until the desired mode is selected.

- ◆ Each time you press the 5 Way button:





Each 5 Way indicator on the indoor unit lights up in order.

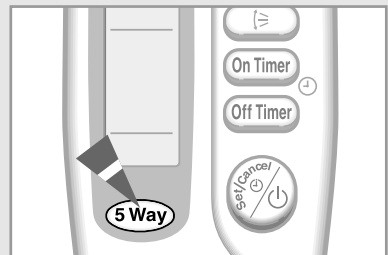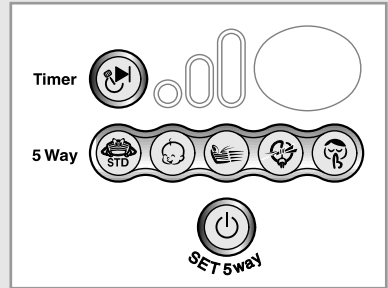

Selecting the Automatic Operating Mode

 You can start the air conditioner in Automatic mode from your remote control. In the Automatic mode, the standard temperature and the optimum fan speed is selected automatically. You can adjust the standard temperature but not the fan speed.

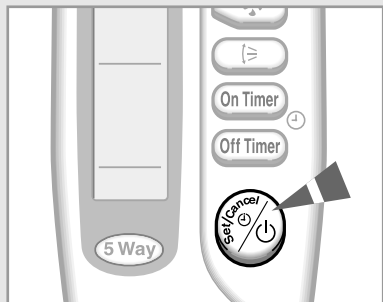

- 1 If necessary, press the  (On/Off) button.

 
Result:


- ◆ The 5 Way indicator on the indoor unit lights up.
- ◆ The air conditioner starts up in the mode selected when the unit was last used.
- ◆ The indoor unit beeps.

IMPORTANT The air conditioner is fitted with a protection mechanism to prevent the unit from being damaged when it is started immediately after being:

- ◆ Plugged in
- ◆ Stopped

It will start up normally after three minutes.

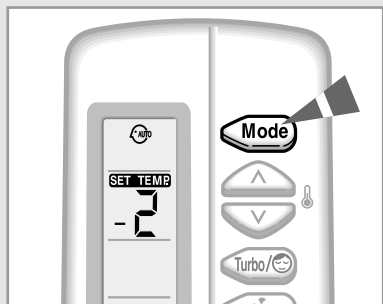


- 2 If the  is not displayed at the top of the remote control, press the MODE button on the remote control one or more times until it appears.

Result:

- ◆ The indoor unit beeps each time you press the MODE button.
- ◆ The air conditioner runs in AUTO mode.

 Note You can change modes at any time.

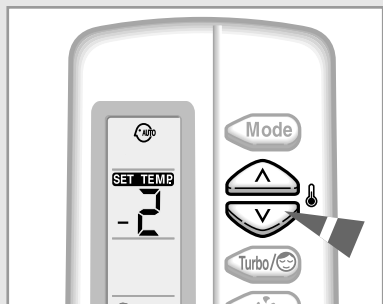

- 3 To adjust the standard temperature (The air conditioner automatically set the standard temperature by the current room temperature.), press the TEMPERATURE buttons one or more times.

SET TEMP.	SET TEMP.	-	SET TEMP.	SET TEMP.
-2°C	-1°C	Standard temperature	+1°C	+2°C
< When you feel hot >			< When you feel chilly >	


Note Auto Change Over Function (Only the Inverter Models)

- ◆ In the Automatic mode, the air conditioner selects one of COOL, HEAT, DRY depending on the indoor and outdoor temperatures. If the air conditioner has not been operated for an hour, the air conditioner will take the current temperatures again and it will restart operating in the optimum mode.

Cooling Your Room

You must select the Cool mode if you wish to adjust the:

- ◆ Cooling temperature
- ◆ Fan speed when cooling


1 If necessary, press the  (On/Off) button.

- Result:
- ◆ The 5 Way indicator on the indoor unit lights up.
 - ◆ The air conditioner starts up in the mode selected when the unit was last used.
 - ◆ The indoor unit beeps.

IMPORTANT The air conditioner is fitted with a protection mechanism to prevent the unit from being damaged when it is started immediately after being:

- ◆ Plugged in
- ◆ Stopped

It will start up normally after three minutes.

2 If the  is not displayed at the top of the remote control, press the MODE button on the remote control one or more times until it appears.

- Result:
- ◆ The indoor unit beeps each time you press the MODE button.
 - ◆ The air conditioner runs in COOL mode.






Note You can change modes at any time.

3 To adjust the temperature, press the TEMPERATURE buttons one or more times until the required temperature is displayed.

Possible temperatures are between 18°C and 30°C inclusive.

 
 
 
 
- Result:
- ◆ Each time you press the TEMPERATURE buttons:
 - The temperature is adjusted by 1°C
 - The indoor unit beeps
 - ◆ The air conditioner starts cooling, provided that the room temperature is higher than the selected temperature; the fan will, however, operate.

4 Select the fan speed by pressing the FAN button one or more times until the required setting is displayed:





-  Automatic (rotated : )
-  Low
-  Medium
-  High

Result: Each time you press the FAN button, the indoor unit beeps.

5 To control the direction of the air flow, refer to page 16 and 17.

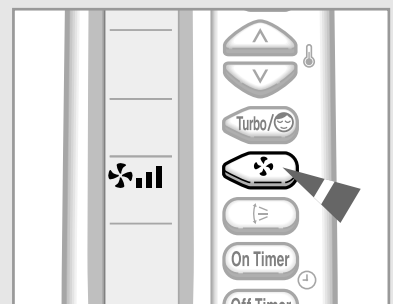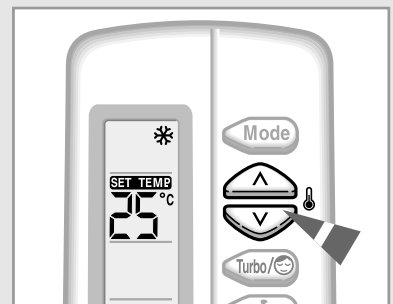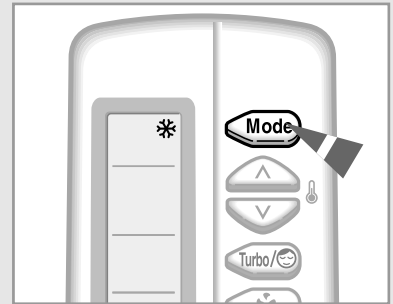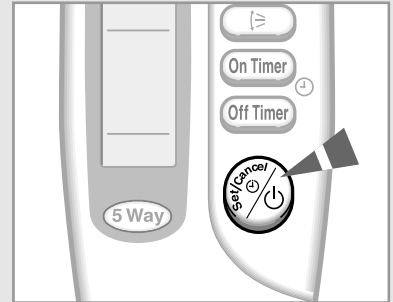


Heating Your Room

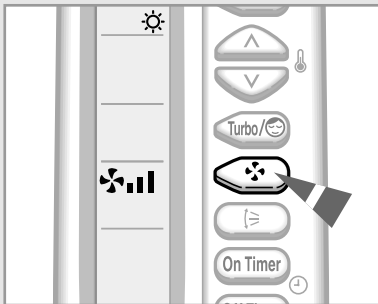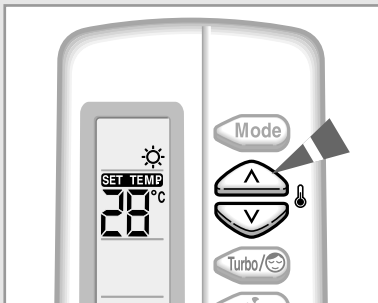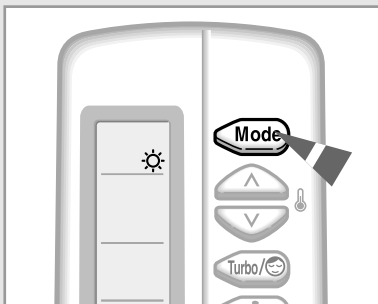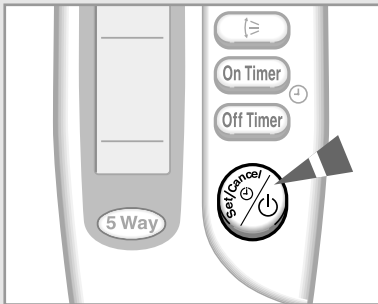    

You must select the Heat mode if you wish to adjust the:

- ◆ Heating temperature
- ◆ Fan speed when heating


1 If necessary, press the  (On/Off) button.

- Result:**
- ◆ The 5 Way indicator on the indoor unit lights up.
 - ◆ The air conditioner starts up in the mode selected when the unit was last used.
 - ◆ The indoor unit beeps.

IMPORTANT The air conditioner is fitted with a protection mechanism to prevent the unit from being damaged when it is started immediately after being:

- ◆ Plugged in
- ◆ Stopped

It will start up normally after three minutes.

2 If the  is not displayed at the top of the remote control, press the MODE button on the remote control one or more times until it appears.


 



- Result:**
- ◆ The indoor unit beeps each time you press the MODE button.
 - ◆ The air conditioner runs in HEAT mode.

Note You can change modes at any time.

3 To adjust the temperature, press the TEMPERATURE buttons one or more times until the required temperature is displayed. Possible temperatures are between 16°C and 30°C inclusive.

- Result:**
- ◆ Each time you press the TEMPERATURE buttons:
 - The temperature is adjusted by 1°C
 - The indoor unit beeps
 - ◆ The air conditioner starts heating, provided that the room temperature is lower than the desired temperature (selected temperature+3°C); the fan will, however, operate.

4 Select the fan speed by pressing the FAN button one or more times until the required setting is displayed:

-  Automatic (rotated : )
-  Low
-  Medium
-  High

- Result:**
- ◆ Each time you press the FAN button, the indoor unit beeps.
 - ◆ For the first three to five minutes, the fan operates very slowly until the air has been sufficiently warmed. Once the correct temperature has been reached, the fan is automatically set to the required speed.


5 To control the direction of the air flow, refer to page 16 and 17.

Changing the Room Temperature Quickly

The Turbo cooling/heating function is used to cool or heat your room as quickly as possible.

Example : You have just come home and find that the room is very hot. You wish to cool it down as quickly as possible.

The Turbo function operates for 30 minutes with the maximum settings before returning automatically to the mode and temperature previously selected.


1 If necessary, press the  (On/Off) button.



Result:

- ◆ The 5 Way indicator on the indoor unit lights up.
- ◆ The air conditioner starts up in the mode selected when the unit was last used.
- ◆ The indoor unit beeps.

2 Press the  button.

 
Result:

- ◆ The temperature and fan settings are adjusted automatically.
- ◆ The air conditioner cools or heats the room as quickly as possible.
- ◆ After 30 minutes, the air conditioner is reset automatically to the previous mode, temperature and fan settings.
But, if you press the  button in DRY or FAN mode, it will change to AUTO mode automatically.




3 If you wish to stop the Turbo function before the end of the 30-minute period, press the  button one or more times until **TURBO** or  disappears.

Result: The air conditioner is reset automatically to the previous mode, temperature and fan settings.


4 To control the direction of the air flow, refer to page 16 and 17.

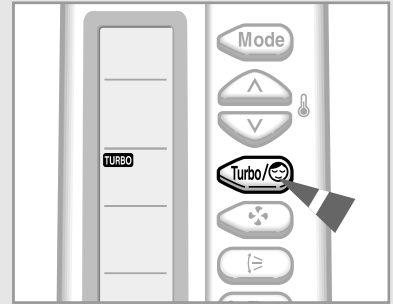

Removing Excess Humidity

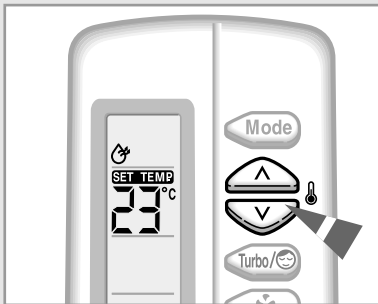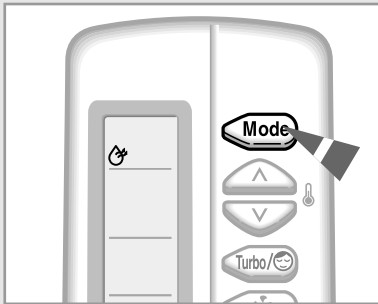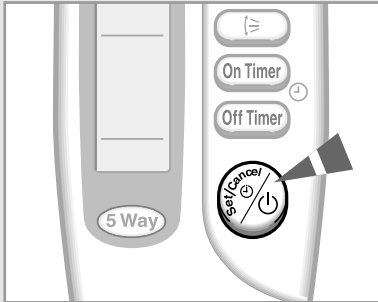   

If the atmosphere in your room is very humid or damp, you can remove excess humidity without lowering the room temperature too much.

- 1 If necessary, press the  (On/Off) button.


Result:

- ◆ The 5 Way indicator on the indoor unit lights up.
- ◆ The air conditioner starts up in the mode selected when the unit was last used.
- ◆ The indoor unit beeps.

IMPORTANT The air conditioner is fitted with a protection mechanism to prevent the unit from being damaged when it is started immediately after being:

- ◆ Plugged in
- ◆ Stopped

It will start up normally after three minutes.

- 2 If the  is not displayed at the top of the remote control, press the MODE button on the remote control one or more times until it appears.

Result:

- ◆ The indoor unit beeps each time you press the MODE button.
- ◆ The air conditioner runs in DRY mode.

Note You can change modes at any time.

- 3 To adjust the temperature, press the TEMPERATURE buttons one or more times until the required temperature is displayed. Possible temperatures are between 18°C and 30°C inclusive.


Result:

- ◆ Each time you press the TEMPERATURE buttons:
 - The temperature is adjusted by 1°C
 - The indoor unit beeps
- ◆ The air conditioner starts removing the excess humidity; the quantity of air is adjusted automatically.

 
- 4 To control the direction of the air flow, refer to page 16 and 17.


Airing Your Room

If the atmosphere in your room is stale, you can air the room using the Fan feature.

1 If necessary, press the  (On/Off) button.


- Result:**
- ◆ The 5 Way indicator on the indoor unit lights up.
 - ◆ The air conditioner starts up in the mode selected when the unit was last used.
 - ◆ The indoor unit beeps.

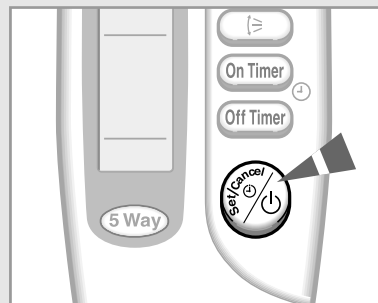




2 If the  is not displayed at the top of the remote control, press the MODE button on the remote control one or more times until it appears.

 - Result:**
- ◆ The indoor unit beeps each time you press the MODE button.
 - ◆ The air conditioner runs in FAN mode.
 - ◆ The temperature is set automatically.

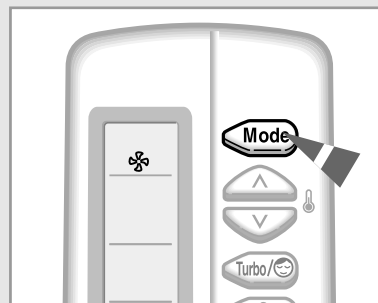
Note You can change modes at any time.



3 Select the fan speed by pressing the FAN button one or more times until the required setting is displayed:


-  Low
-  Medium
-  High

 Result: Each time you press the FAN button, the indoor unit beeps.

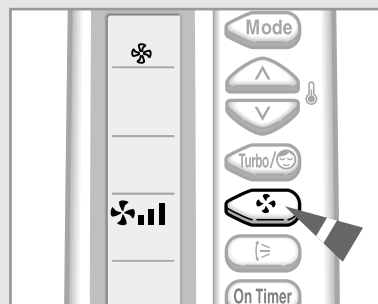

4 To control the direction of the air flow, refer to page 16 and 17.

 Adjusting the Air Flow Direction Vertically

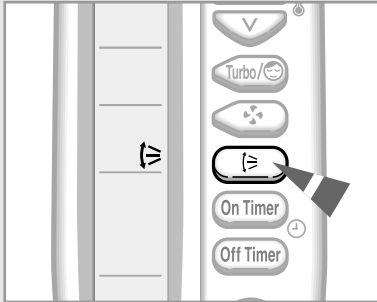

Depending on the position of the indoor unit on the wall of your room, you can adjust the position of the outer air flow blade on the bottom of the unit, thus increasing the efficiency of the air conditioner.

- 1 Press the SWING button one or more times as required.
Result: The outer blade is adjusted vertically.

RECOMMENDATION	When...	Adjust the blade to face...
	Cooling	Upwards.
	Heating	Downwards.

- 2 If you want the blade to move up and down automatically when the air conditioner is operating, press the SWING button.
Result: The blade move up and down, around the base position set.

- 3 To stop the blade moving up and down, press the SWING button again.


Note *If you switch the air conditioner... Then the blade is...*

Off	Closed completely.
On again	Set to the initial position powered.





Adjusting the Air Flow Direction Horizontally

 There are two sets of inner air flow blades. Just as the outer air flow blade can be adjusted vertically, the inner blades can be adjusted horizontally.

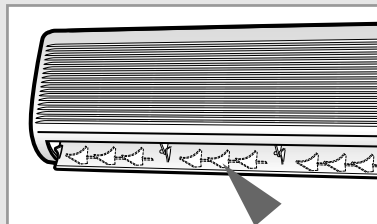

    - 1 Adjust each set of inner blades to the required position, by pushing or pulling them sideways.

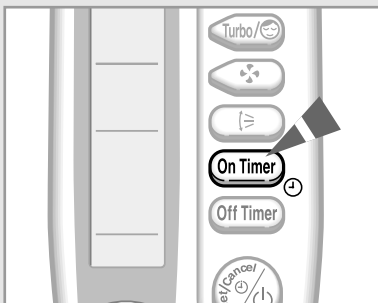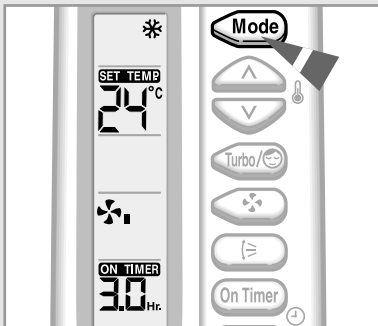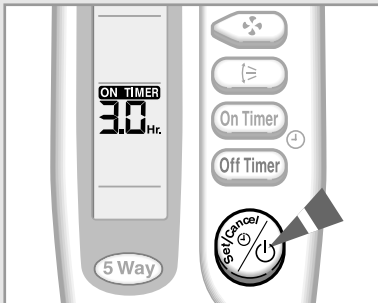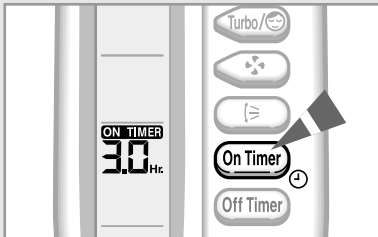


Setting the On Timer

 


The On Timer enables you to switch on the air conditioner automatically after a given period of time. You can set the period of time from 30 minutes to 24 hours.

- 1 To set the operating time, press the ON TIMER button one or more times until the required time is displayed. Possible time is between 0.5 hour and 24 hour inclusive.
- 2 Press the  (Set/Cancel) button to complete the setting.
Result:
 - ◆ The remaining time is displayed.
 - ◆ Blinking of the timer indicator stops.
 - ◆ The selected mode and the temperature on the display disappear after 10 seconds.
 - ◆ The air conditioner will switch on automatically when the counter displayed on the remote control reaches the set time and disappears the On timer setting.
- 3 To select an operating mode in advance, press the  button until the desired mode is displayed at the top of the remote control.
Result:
 - ◆ The air conditioner will run in the selected mode when it is turned on.

To Cancel the On Timer


- 1 To cancel the On Timer, press the ON TIMER button one or more times until the timer setting disappears.
- 2 Press the  (Set/Cancel) button.

Note If you want to turn on the air conditioner before the timer reaches the setting time, press the  (ON/OFF) button.

Setting the Off Timer

The Off Timer enables you to switch off the air conditioner automatically after a given period of time. You can set the period of time from 30 minutes to 24 hours.



- 1 To set the operating time, press the OFF TIMER button one or more times until the required time is displayed. Possible time is between 0.5 hour and 24 hour inclusive.

- 2 Press the  (Set/Cancel) button to complete the setting.

 
Result:

- ◆ The remaining time is displayed.
- ◆ Blinking of the timer indicator stops.
- ◆ The air conditioner will switch off automatically when the counter displayed on the remote control reaches the set time and disappears the Off timer setting.

Example If you would like to turn the air conditioner on after 2 hours and to operate it for 2 hours:


1. Press the ON TIMER button until '2.0 Hr' is displayed.
2. Press the  (Set/Cancel) button.
3. Press the OFF TIMER button until '4.0 Hr' is displayed.
4. Press the  (Set/Cancel) button.


Note You can see or change the setting mode and/or the temperature by pressing the MODE button or the TEMPERATURE buttons after setting the Off timer.

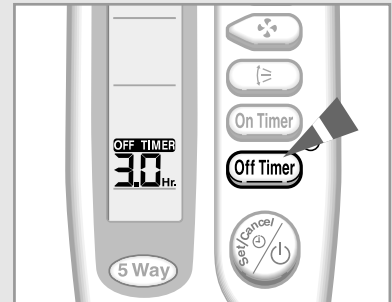


To Cancel the Off Timer


- 1 To cancel the Off Timer, press the OFF TIMER button one or more times until the timer setting disappears.

- 2 Press the  (Set/Cancel) button.

  Note If you want to turn off the air conditioner before the timer reaches the setting time, press the  (ON/OFF) button.

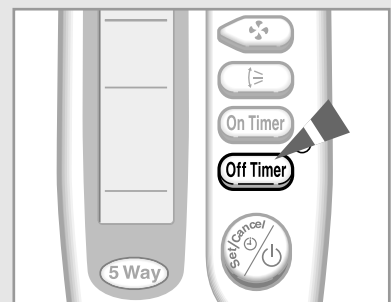

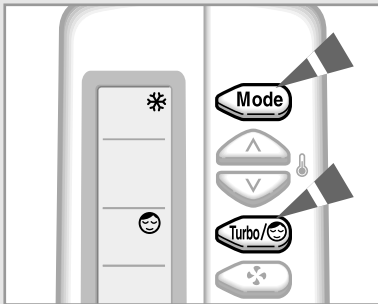

Setting the Sleep Timer



The Sleep Timer can be used when you are cooling or heating your room to switch the air conditioner off automatically after a period of six hours.

 
Note If you wish to switch the unit off at a specific time, refer to page 19.

- 1 Make sure that you have selected either COOL or HEAT mode.
- 2 Press the  button one or more times until  appears on the remote control.


Result:

- ◆ The indoor unit beeps.
- ◆ The air conditioner will be controlled as indicated in the illustrations below.

Cooling The desired temperature is increased by 1°C every hour. When it has been increased by 2°C (after two hours), the temperature is maintained for four hours.

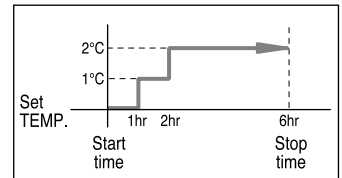

 Heating The desired temperature is decreased by 1°C every hour. When it has been decreased by 2°C (after two hours), the temperature is maintained for four hours.

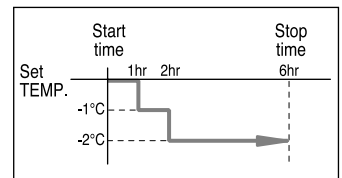


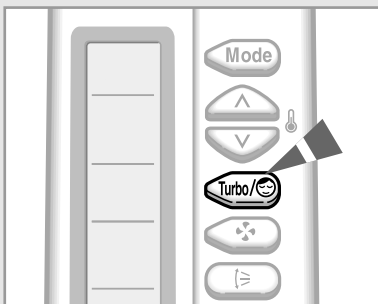 
To Cancel the Sleep Timer

If you no longer wish to use the Sleep Timer that you have set, you can cancel it at any time.

Press the  button.




Result:

- ◆ The indoor unit beeps.
- ◆ The  is no longer displayed.
- ◆ The air conditioner operates normally.



Operating Recommendations

Here are a few recommendations that you should follow when using your air conditioner.

Topic	Recommendation																						
Heating performances	The heat pump inside the air conditioner absorbs heat from outside air and brings it indoors. If the temperature of the outside air drops, the air conditioner will heat less. If you find that the room is not warm enough, use an additional heating appliance.																						
Warm air circulation	The air conditioner circulates warm air to heat your room; as a result, some time will be required after starting the air conditioner to warm the entire room. If necessary, set the air conditioner on before you wish to use the room.																						
Frost	<p>When outside temperatures are low and humidity is high, frost may form in the outdoor unit when heating is selected.</p> <p>If this happens:</p> <ul style="list-style-type: none"> ◆ The heating operation is stopped. ◆ The Deice mode is triggered automatically for about seven minutes. <p>No intervention is required from you; after about seven minutes, the air conditioner starts operating again normally.</p>																						
High indoor and outdoor temperatures	If both the indoor and outdoor temperatures are high and you select the Heat mode, the outdoor unit's fan and compressor may stop at times. This is normal; simply wait until the air conditioner switches on again.																						
Power failure	<p>If a power failure occurs when the air conditioner is operating, the unit is switched off. When the power returns,</p> <table border="0" style="width: 100%;"> <tr> <td style="width: 30%;">**A1**</td> <td style="width: 30%;">**B1**</td> <td rowspan="5" style="vertical-align: middle;">you must press the  (ON/OFF) button to restart it.</td> </tr> <tr> <td>**A3**</td> <td>**B3**</td> </tr> <tr> <td>**A5**</td> <td>**B5**</td> </tr> <tr> <td>**A7**</td> <td>**B7**</td> </tr> <tr> <td>**A9**</td> <td>**B9**</td> </tr> <tr> <td>**A0**</td> <td>**B0**</td> <td rowspan="5" style="vertical-align: middle;">the air conditioner starts up again automatically</td> </tr> <tr> <td>**A2**</td> <td>**B2**</td> </tr> <tr> <td>**A4**</td> <td>**B4**</td> </tr> <tr> <td>**A6**</td> <td>**B6**</td> </tr> <tr> <td>**A8**</td> <td>**B8**</td> </tr> </table>	**A1**	**B1**	you must press the  (ON/OFF) button to restart it.	**A3**	**B3**	**A5**	**B5**	**A7**	**B7**	**A9**	**B9**	**A0**	**B0**	the air conditioner starts up again automatically	**A2**	**B2**	**A4**	**B4**	**A6**	**B6**	**A8**	**B8**
A1	**B1**	you must press the  (ON/OFF) button to restart it.																					
A3	**B3**																						
A5	**B5**																						
A7	**B7**																						
A9	**B9**																						
A0	**B0**	the air conditioner starts up again automatically																					
A2	**B2**																						
A4	**B4**																						
A6	**B6**																						
A8	**B8**																						

Note Be sure which model you have purchased because some air conditioners do not restart automatically.

Temperature and Humidity Ranges




The following table indicates the temperature and humidity ranges within which the air conditioner can be used.

If the air conditioner is used at...	Then...
High temperatures	The automatic protection feature may be triggered and the air conditioner stopped.
Low temperatures	A water leak or some other malfunction may occur if the heat exchanger freezes.
High humidity levels	Water may condense on and drip from the surface of the indoor unit if it is used for long periods.

Mode	Outdoor Temperature	Indoor Temperature	Indoor Humidity
Heating	0°C to 24°C approx.	27°C or less	-
Cooling	21°C to 43°C approx.	18°C to 32°C approx.	80% or less
Drying	18°C to 43°C approx.	18°C to 32°C approx.	-

※ *If the heating operation is used at below 0°C(outdoor temperature) then, it does not heat as its full capacity. If the cooling operation is used at over 33°C(indoor temperature) then, it does not cool as its full capacity.*

   Cleaning Your Air Conditioner

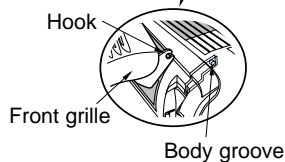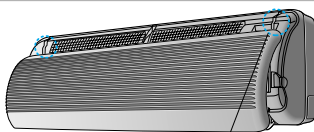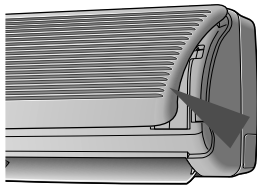

To get the best possible use out of your air conditioner, you must clean it regularly to remove the dust that accumulates on the air filter.

IMPORTANT *Before cleaning your air conditioner, ensure that you have switched off the breaker used for the unit.*

18/24

- 1 Open the front grille by pulling on the tabs on the lower right and left sides of the indoor unit.
- 2 The removal of the front grille facilitates your cleaning the air conditioner. After opening the front grille, lift up to the max, and pull to release them and vice versa.
- 3 Lift out the bottom edge of the air filters and pull down to release them.
- 4 Remove all dust on the air filters with a vacuum cleaner or brush.
- 5 When you have finished, insert the top part of the filters into their slot and push down on the bottom edge until they click into place.
- 6 Clean the front panel with a damp cloth and mild detergent (do NOT use benzene, solvents or other chemicals).




07/09/12

- 1 Open the front grille by lifting the tabs on the lower right and left sides of the indoor unit.
- 2 Disassemble the front grille by pulling it forwards.
- 3 Hold the edge of the air filter under the front grille and pull to release them.
- 4 Remove all dust on the air filters with a vacuum cleaner or brush.
- 5 Clean the front panel with a damp cloth and mild detergent (do NOT use benzene, solvents or other chemicals).
- 6 Reassemble the air filters and the front grille.

Note ◆ *If you have not used the air conditioner for a long period of time, set the fan going for three to four hours to dry the inside of the air conditioner thoroughly.*


Solving Common Problems

Before contacting the after-sales service, perform the following simple checks. They may save you the time and expense of an unnecessary call.

Problem	Explanation/Solution
The air conditioner does not operate at all	<ul style="list-style-type: none"> ◆ Check that the breaker used for the air conditioner is switched on. ◆ Check that the 5 Way indicator on the indoor unit is on; if necessary press the  (On/Off) button on the remote control. ◆ Check whether the TIMER indicator on the indoor unit is switched on. If so: <ul style="list-style-type: none"> - Wait until the switch-on time is reached and the air conditioner starts up automatically - Cancel the timer (see pages 18 and 19 for further details)
The air conditioner does not operate with the remote control	<ul style="list-style-type: none"> ◆ Check that there are no obstacles between you and the indoor unit. ◆ Check the remote control batteries. ◆ Check that you are close enough to the indoor unit (seven metres/ yards or less).
No beep is heard when you press the  (On/Off) on the remote control	<ul style="list-style-type: none"> ◆ Check that you are pointing the remote control at the remote control sensor in the right of the indoor unit. ◆ Replace the remote control batteries if necessary.
The air conditioner does not cool or heat	<ul style="list-style-type: none"> ◆ Check that the correct operating mode has been selected (AUTO, COOL, HEAT). ◆ The room temperature may be too low or too high. ◆ Dust may be blocking the air filter guard; refer to page 22 for cleaning instructions. ◆ Check that there is no obstacle in front of the outdoor unit.
When heating, the required room temperature is never reached and the air conditioner frequently stops	<ul style="list-style-type: none"> ◆ Check that the required temperature has been set correctly. ◆ Increase the fan speed. ◆ If the air flow is directed downwards, use the remote control to direct it upwards.
The fan speed does not change when you press the FAN button	<ul style="list-style-type: none"> ◆ Check that the operating mode is set to COOL, HEAT or FAN ; in the AUTO mode, the fan speed changes automatically and in the DRY mode, it is set to AUTO.
The air flow direction does not change when you press the SWING button	<ul style="list-style-type: none"> ◆ Check that the air conditioner has been switched on; if necessary, press the  (On/Off) button on the remote control.
The timer is not correctly triggered	<ul style="list-style-type: none"> ◆ Check that the timer has been programmed correctly; see pages 18 and 19.
Odours are permeated in the room during air conditioning	<ul style="list-style-type: none"> ◆ Air the room.

Installing a Filter (Option)

 The air conditioner can be fitted with a deodorizing and Bio-Pure filter to remove minute dust particles or odours. The service life of the filter is approximately three months depending on the time during which the air conditioner is used.

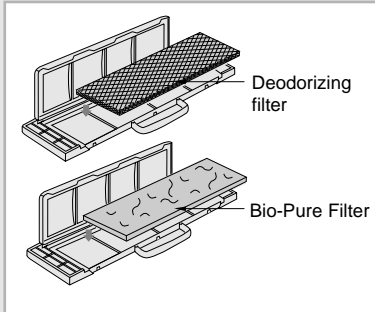

1 Remove the vinyl packing from the filter.

Note Do not remove the packing from a deodorizing filter until you wish to use the filter, as it will lose its properties.

2 Insert the filter in the filter holder and press the three insert tabs until you hear a click.

3 Open the front grille by pulling on the tabs on the lower right and left sides of the indoor unit.

4 Take out the existing filter and replace it with the new one.

Technical Specifications

Model Indoor unit	Power Supply
*****E/EA	220-240V~, 50Hz
SH*****	
AQ***B	220V~, 60Hz
*****C	208-230V~, 60Hz
*****D	200-220V~, 50Hz

※ The last letter of the Model Indoor unit means the power supply, "E" in the "AQ07A1ME", for instance.

Technical Specifications

◆ Package Weight

Model		Paper	Plastic	Wood
AQ12A3(A4)(A7)(A8)MB/C/D/E/EA	AQ12B3(B4)(B7)(B8)MB/C/D/E/EA	2.35kg	0.43kg	-
SH12ZA3(A4)(A7)(A8)	SH12ZB3(B4)(B7)(B8)			
SH12ZA3(A4)(A7)(A8)A	SH12ZB3(B4)(B7)(B8)A			
SH12ZA3(A4)(A7)(A8)B	SH12ZB3(B4)(B7)(B8)B			
AQ09A3(A4)(A7)(A8)MB/C/D/E	AQ09B3(B4)(B7)(B8)MB/C/D/E			
SH09ZA3(A4)(A7)(A8)	SH09ZB3(B4)(B7)(B8)			
SH09ZA3(A4)(A7)(A8)A	SH09ZB3(B4)(B7)(B8)A			
AQ07A3(A4)(A7)(A8)MB/C/D/E	AQ07B3(B4)(B7)(B8)MB/C/D/E			
SH07ZA3(A4)(A7)(A8)	SH07ZB3(B4)(B7)(B8)			
SH07ZA3(A4)(A7)(A8)A	SH07ZB3(B4)(B7)(B8)A			
AQ12A1(A2)(A9)(A0)MB/C/D/E/EA	AQ12B1(B2)(B9)(B0)MB/C/D/E/EA	2.51kg	0.48kg	-
AQV12A1(A2)MD/E	AQV12B1(B2)MD/E			
SH12VA1(A2)	SH12VB1(B2)			
SH12ZA1(A2)(A9)(A0)	SH12ZB1(B2)(B9)(B0)			
SH12ZA1(A2)A	SH12ZB1(B2)A			
SH12ZA1(A2)B	SH12ZB1(B2)B			
AQ09A1(A2)MB/C/D/E	AQ09B1(B2)MB/C/D/E			
AQV09A1(A2)MD/E	AQV09B1(B2)MD/E			
SH09VA1(A2)	SH09VB1(B2)			
SH09ZA1(A2)	SH09ZB1(B2)			
SH09ZA1(A2)A	SH09ZB1(B2)A			
AQ09A5(A6)MB/C/D/E	AQ09B5(B6)MB/C/D/E	2.42kg	0.50kg	-
SH09ZA5(A6)	SH09ZB5(B6)			
SH09ZA5(A6)A	SH09ZB5(B6)A			
AQ07A1(A2)(A5)(A6)MB/C/D/E	AQ07B1(B2)(B5)(B6)MB/C/D/E			
SH07ZA1(A2)(A5)(A6)	SH07ZB1(B2)(B5)(B6)			
SH07ZA1(A2)(A5)(A6)A	SH07ZB1(B2)(B5)(B6)A			
SH07AA5	SH07AB5			
AQ12A5(A6)MB/C/D/E/EA	AQ12B5(B6)MB/C/D/E/EA	3.24kg	0.58kg	-
AQV12A5(A6)MD/E	AQV12B5(B6)MD/E			
SH12VA5(A6)	SH12VB5(B6)			
SH12ZA5(A6)	SH12ZB5(B6)			
SH12ZA5(A6)A	SH12ZB5(B6)A			
SH12ZA5(A6)B	SH12ZB5(B6)B			
SH12AA5	SH12AB5			
AQV09A5(A6)MD/E	AQV09B5(B6)MD/E			
SH09VA5(A6)	SH09VB5(B6)			
SH09AA5	SH09AB5			
AQ18A1(A2)(A9)(A0)RE/B/C/D	AQ18B1(B2)(B9)(B0)RE/B/C/D	4.68kg	0.86kg	-
AQT18A1(A2)(A9)(A0)RE/B/C/D	AQT18B1(B2)(B9)(B0)RE/B/C/D			
SH18TA1(A2)(A9)(A0)	SH18TB1(B2)(B9)(B0)			
SH18ZA1(A2)(A9)(A0)	SH18ZB1(B2)(B9)(B0)			
AQ24A1(A2)RE/B/C/D	AQ24B1(B2)RE/B/C/D	5.18kg	0.96kg	-
AQT24A1(A2)(A5)(A6)(A8)RE/B/C/D	AQT24B1(B2)(B5)(B6)(B8)RE/B/C/D			
SH24TA1(A2)(A5)(A6)(A8)	SH24TB1(B2)(B5)(B6)(B8)			
AQ18A5(A6)RE/B/C/D	AQ18B5(B6)RE/B/C/D			
AQT18A5(A6)RE/B/C/D	AQT18B5(B6)RE/B/C/D			
SH18TA5(A6)	SH18TB5(B6)			
SH18ZA5(A6)	SH18ZB5(B6)			

**THIS AIR CONDITIONER IS MANUFACTURED BY:
ESTE AIRE ACONDICIONADO HA SIDO FABRICADO POR:
QUESTO CONDIZIONATORE D'ARIA È PRODOTTO DA:
ESTE APARELHO DE AR CONDICIONADO É FABRICADO POR:
CE CLIMATISEUR EST FABRIQUE PAR:
DIESE KLIMAANLAGE IST FABRIZIERT VON:
ΑΥΤΗ Η ΣΥΣΚΕΥΗ ΚΑΤΑΣΚΕΥΑΣΤΗΚΕ ΑΠΟ :**



ELECTRONICS