

# **INSTRUCTIONS FOR USE**

**BEFORE USING THE DISHWASHER/CONNECTIONS**

**ELECTRICAL CONNECTION**

**PRECAUTIONS AND GENERAL  
RECOMMENDATIONS**

**HOW TO FILL THE SALT CONTAINER**

**HOW TO FILL THE RINSE AID DISPENSER**

**HOW TO FILL THE DETERGENT DISPENSER**

**CARE AND MAINTENANCE**

# BEFORE USING THE DISHWASHER/CONNECTIONS

## 1. Removing the packaging and controls:

After unpacking, make sure that the dishwasher is undamaged and that the door closes correctly. If in doubt, contact a qualified technician or your local retailer.

- Keep the packaging materials (plastic bags, polystyrene parts, etc.) out of reach of children, as they are potentially dangerous.
- This dishwasher has been factory tested to ensure it functions correctly.  
Such testing may leave slight water marks that will disappear with the first wash.

## 2. Water and electrical connections:

All water and electrical connections must be carried out by a qualified technician in compliance with the manufacturer's instructions (refer to the enclosed installation booklet) and current local safety regulations.

The appliance must only be used in the household for the prescribed uses.

Do not use the dishwasher if it has been damaged in transit. Consult your local retailer or our After-Sales Service.

**(Refer to the separate installation instructions booklet)**

## 3. Water inlet and drain:

- Observe any special regulations issued by your local Water Board.  
Water supply pressure: 0,03 - 1,0 MPa.
- Make sure the inlet and drain hoses are kink-free and are not crushed.
- If the hose length is not sufficient, please contact your local dealer or our After-Sales Service.
- The inlet hose must be securely clamped to the water tap to prevent leaks.
- The inlet water temperature varies according to the model installed. Inlet hose marked "25°C Max": maximum temperature 25°C.  
All other models: maximum temperature 60°C.
- When installing the appliance, make sure the drain water discharges correctly (if necessary, remove the wire gauze from the sink siphon).
- Fix the drain hose to the spigot with a clamp to prevent it from coming off during operation.  
For appliances with water-stop system only: If the water connections are made correctly, the water-stop system safeguards your home against damage caused by flooding.

## 4. Electrical connection:

- Closely adhere to local Electricity Board regulations.
- Voltage information is shown on the rating plate mounted inside the door on the right hand side.
- The appliance must be earthed as prescribed by law.
- Do not use extension leads or multiple adapters.
- Before carrying out maintenance, disconnect the mains plug.
- If necessary, the power cable may be replaced with one the same obtained from our After-Sales Service. The power cable must only be replaced by a qualified technician.

### **Warning for models provided with LCD display:**

The mains plug must be positioned in an easily accessible place.

- **For Austria:** if the apparatus is series connected to a fault current switch, this must be sensitive to the pulsating current.

### **EC Declaration of conformity**

This appliance has been designed, constructed and distributed in compliance with the safety requirements of EC Directives:

- 73/23/EEC
- 89/336/EEC
- 93/68/EEC



### **Load capacity:**

12 place settings.

# ELECTRICAL CONNECTION

## 1) For Great Britain only

**Warning - this appliance must be earthed**

### Fuse replacement

If the mains lead of this appliance is fitted with a BS 1363A 13amp fused plug, to change a fuse in this type of plug use an A.S.T.A. approved fuse to BS 1362 type and proceed as follows:


1. Remove the fuse cover (A) and fuse (B).
2. Fit replacement 13A fuse into fuse cover.
3. Refit both into plug.

### Important:

The fuse cover must be refitted when changing a fuse and if the fuse cover is lost the plug must not be used until a correct replacement is fitted.

Correct replacement are identified by the colour insert or the colour embossed in words on the base of the plug.

Replacement fuse covers are available from your local electrical store.

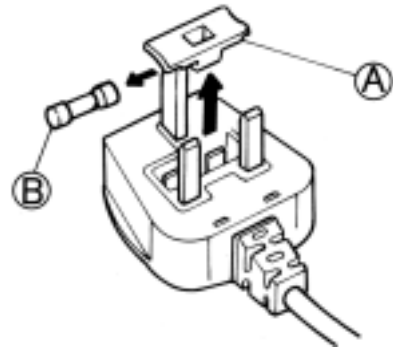

## 2) For the Republic of Ireland only


The information given in respect of Great Britain will frequently apply, but a third type of plug and socket is also used, the 2-pin, side earth type.

## 3) Socket outlet / plug (valid for both countries)

If the fitted plug is not suitable for your socket outlet, please contact Whirlpool Service for further instruction. Please do not attempt to change plug yourself. This procedure needs to be carried out by a qualified Whirlpool technician in compliance with the manufactures instructions and current standard safety regulations.

# PRECAUTIONS AND GENERAL RECOMMENDATIONS

## 1. Packing:

The packing box may be fully recycled as confirmed by the recycling symbol .

## 2. Energy and water saving tips:

- Do not rinse crockery under running water.
- Always fully load the dishwasher before switching on or set the wash programme to half load/ Multizone (if available) if **one** rack only is loaded.
- If ecological energy sources are available such as solar panel heating, heat pumps or centralised heating systems, the appliance may be connected to the hot water mains up to a maximum temperature of 60°C. Make sure the water inlet hose is of the correct type. Refer to the "Connections" chapter in these user instructions.

## 3. Disposal:

The appliance is built from reusable materials. If you decide to scrap the dishwasher, it must be disposed of in compliance with local waste disposal laws.

Before scrapping, cut off the power cable so that the appliance cannot be connected to the mains.

- To prevent situations of potential danger to children (e.g. danger of suffocation), break the lock of the door so that it can no longer be closed.

## 4. Child safety:

- Children must not be allowed to play with the dishwasher.
- Store the detergent, rinse aid and salt in a dry place out of the reach of children.

## 5. Safety warnings:

- The open dishwasher door can only support the weight of the loaded rack when pulled out. Do not rest objects on the open door or sit or stand on it: **the appliance may topple over!**
- Do not use solvents inside the dishwasher: **risk of explosion!**
- Sharp knives and forks that might cause injury must be placed in the cutlery basket with the sharp end facing downwards.  
Long-handled utensils must be arranged horizontally in the upper rack, with the sharp end facing away from the front of the appliance.
- Before cleaning or carrying out maintenance, switch off the appliance, disconnect the mains plug and turn off the water tap.

- If a fault occurs, switch off the appliance and turn off the water tap.
- On completion of the programme switch off the dishwasher and turn off the water tap.
- Repairs and technical modifications must be carried out exclusively by a qualified technician.
- The water in the dishwasher is not potable.
- Do not store inflammable liquids near the dishwasher.
- Do not operate the appliance in the open air.
- Attention: Danger when door is opened.


## 6. Resistance to frost

If the appliance is placed in surroundings exposed to the risk of frost, it must be drained completely. Turn off the water tap, remove the flexible inlet and outlet hoses, and let all the water run out.

## 7. For appliances with water stop system:

The water inlet hose and plastic casing contain electrical components. Do not therefore cut the hose or immerse the plastic casing in water. If the hose is damaged switch off the appliance immediately.

## 8. The appliance must be used at temperatures between 5°C and 45°C.

This appliance is marked according to the European directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE). By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The symbol  on the product, or on the documents accompanying the product, indicates that this appliance may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. Disposal must be carried out in accordance with local environmental regulations for waste disposal. For more detailed information about treatment, recovery and recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

# HOW TO FILL THE SALT CONTAINER

From a water hardness category of 1–2 (medium), before using the dishwasher, fill the salt container with regeneration salt (to find out the hardness level of water in your area, contact your local Water Board or check the last bill you received).

If the water hardness level does not correspond to position 3 (factory setting) or if the water hardness level changes:

## Set the water hardness level (for dishwashers without water hardness sensor only):

Setting must be carried out according to the following table.

- Switch on the appliance (consult the quick reference guide).
- Select programme 2 (consult the programme chart in the quick reference guide).
- Press the Start button for at least 5 seconds until the Start indicator lamp blinks.
- The “Start indicator lamp” blinks or the digital display lights up according to the water hardness level selected (chart, setting - blinking frequency or digital display).
- With each successive touch of the Start button the setting increases and when it reaches 7 it returns to 1 again.
- Switch off the appliance (consult the quick reference guide).

The selected setting is now memorized.

Hardness level	German degrees	French degrees	mmol/l	Clarke scale or English degrees	Setting blinking frequency (1x-7x) or digital display (1-7)	
	°dH	°fH		°eH		
1 soft	0 - 5	0 - 9	0 - 0.9	0 - 6.3	1x	1
1 - 2 medium	6 - 10	10 - 18	1.0 - 1.8	7 - 12.6	2x	2
2 average	11 - 15	19 - 27	1.9 - 2.7	13.3 - 18.9	3x	3
3 medium-hard	16 - 21	28 - 37	2.8 - 3.7	19.6 - 25.9	4x	4
4 hard	22 - 28	38 - 50	3.8 - 5.0	26.6 - 35	5x	5
4 very hard	29 - 35	51 - 63	5.1 - 6.3	35.7 - 44.1	6x	6
4 extremely hard	36 - 60	64 - 107	6.4 - 10.7	44.8 - 74.9	7x	7

Settings for dishwashers without water hardness sensor only.

In appliances provided with a water hardness sensor, the setting is automatically executed.

## How to fill the salt container

**Warning: Only use regeneration salts for use in domestic dishwashers!** Do not fill the salt container with unsuitable substances, such as detergent, as this will cause irreparable damage to the water softener system.

1. Remove the lower rack.
2. Unscrew the cap by turning it counter-clockwise.
3. When first using the dishwasher: fill the salt container to the rim with water.
4. Fill the salt container to the rim with salt (using the filler provided) (when filling for the first time use min. 1.5 kg and max. 2 kg) and stir with a spoon handle.
5. Screw the cap back on by turning it clockwise.
6. Fit the lower rack.
7. If regeneration salt is to be added, **immediately** start a wash programme (rinsing alone is not sufficient) in order to eliminate any residual saline solution straight away and avoid corrosion.

## Salt level indicator

The dishwasher is equipped with an electric or visual salt level indicator (depending on the model installed).

### Electric indicator

The salt level indicator lamp on the control panel lights up when the salt container is empty.

### Visual indicator

The float is clearly visible in the cap window when the salt container is full. The float lowers and is no longer visible when the salt container is empty.



If the water hardness level falls within category 1 (soft), no salt is required.




# HOW TO FILL THE RINSE AID DISPENSER

## (Not necessary when using a combined action detergent)

The rinse aid facilitates drying and prevents the formation of unsightly spots and streaks on crockery. Before using the dishwasher for the first time, fill the dispenser. Only use rinse aids recommended for use in domestic dishwashers.

1. Press button **A** to open the cover (see drawing).
2. Fill the dispenser with rinse aid up to the dotted line (about 100 ml **maximum**).  
Immediately wipe away any rinse aid spilt accidentally! This prevents the formation of excess suds which may spoil washing results.
3. Close the cover.

Thereafter, regularly check the rinse aid level.

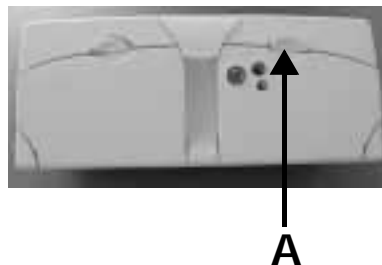


## How to adjust the rinse aid dosage regulator

Factory setting: Position 4.

If you are not satisfied with washing or drying results, change the rinse aid dosage setting.

1. Press button **A** to open the cover (see drawing).
2. If crockery is prone to whitish streaks: reduce the dosage by turning the dial to a lower setting (1-3) using a coin or the like. If crockery is not perfectly dry: increase the dosage by turning the dial to a higher setting (5-6).
3. Close the cover.

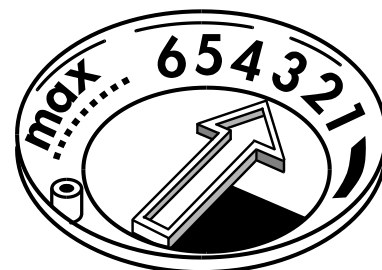

## Rinse aid level indicator:

### Visual indicator:

- light**    add rinse aid  
**dark**    sufficient rinse aid.



### Electric indicator (if provided):


The indicator lamp on the control panel lights up when more rinse aid needs to be added.

# HOW TO FILL THE DETERGENT DISPENSER

Only use detergents recommended for use in domestic dishwashers.

**Only fill the detergent dispenser prior to starting a wash programme** (see the Quick Reference Guide).

1. Press button **C** to open the cover.
2. **How to fill the detergent dispenser.**
  - Programmes with pre-rinse:
    - Powder and/or liquid detergent: pour two thirds of the recommended dosage into the **compartment (A)**; pour one third into the **compartment (B)**.
    - Tablets: place a tablet in the **compartment (A)** and/or follow the directions on the detergent pack.
  - Programmes without pre-rinse:
    - Powder and/or liquid detergent, tablets: pour the entire recommended dosage into the **compartment (A)**.
  - For programmes with additional "Half load/Multizone" function selected (if provided):
    - When using powder or liquid detergent the dosage can be reduced by 1/3.
3. Close the cover.

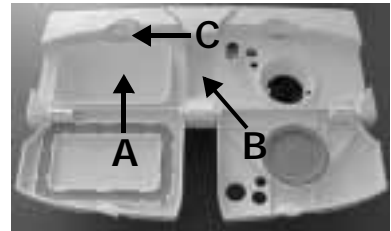

## Detergent

Use good quality liquid or powder dishwasher detergents and/or tablets (**do not use hand dishwashing detergents**).

On some models the type of detergent used can be selected (**D**).

- **Position E** - for one component detergents: gel, tablets, powder;
- **Position F** - for two component detergents (with rinse aid - 2 in 1);
- **Position G** - for three or four component detergents (with rinse aid and salt - 3 in 1; 4 in 1).

Selector on the inside of the door (on the left).

If, on the other hand, you are using a *normal* powder detergent, check the levels of regeneration salt and rinse aid, topping up as required.

In order to safeguard the environment, follow the manufacturer's directions for use. Do not use more than the amount of detergent that is recommended. Observe the manufacturer's safety warnings.

Keep these products out of reach of children.

If you use detergents in tablet form, follow the manufacturer's directions for use.

If you use multi-action dishwasher detergents that incorporate rinse aid and regeneration salt, follow the directions below:

- products that incorporate the rinse aid enhance the detergent action only with some programmes.
- products that make the use of regeneration salt unnecessary (3 in 1 / 4 in 1) are only suitable for use with water up to hardness level 3.  
For water with a higher hardness level, regeneration salt must be added too.

To activate the salt level indicator, select position 2 in 1.

Read the product user instructions carefully. If in doubt, contact the detergent manufacturer.

The guarantee is not applicable if faults are caused by the use of these products.



# CARE AND MAINTENANCE

Before cleaning or carrying out maintenance, switch off the appliance, disconnect the mains plug and turn off the water tap.

## Cleaning the outside of the appliance:

To clean the outside of the appliance, use a neutral detergent and a damp cloth.

Clean the control panel with a damp cloth only.

Do not use abrasive detergents.


## Cleaning the inside of the dishwasher:

Regularly wipe the door seal and inside of the door with a damp cloth to remove any food residue.

### Upper spray arm:

1. Slacken the fixing nut (A) (by turning it counter-clockwise) and detach the spray arm (B) by pulling it down.
2. Rinse the nozzles.
3. To remount the spray arm, align it and then tighten the fixing nut (by turning it clockwise), paying attention not to bend it. The fixing nut must be tightened until it clicks!


**Make sure the spray arm rotates freely.**

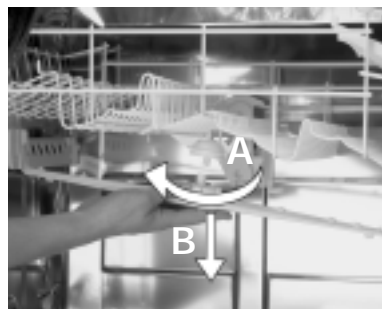

### Lower spray arm:

1. Slacken the fixing nut (C) (by turning it counter-clockwise) and detach the spray arm (D) by pulling it upwards.
2. Rinse the nozzles.
3. To remount the spray arm, align it and then tighten the fixing nut (by turning it clockwise), paying attention not to bend it. The fixing nut must be tightened until it clicks.

**Make sure the spray arm rotates freely.**

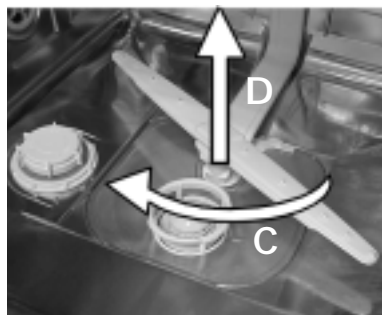



# CARE AND MAINTENANCE

## Cleaning the filters


1. Rotate the microfilter counter-clockwise (in the direction of the arrow "0") and extract it (E).
2. Remove the wide-mesh filter (F).
3. Remove the fine-mesh filter (G).
4. Clean all filters under running water, paying attention not to bend the fine-mesh filter.  
Check that no impurities are left inside the dishwasher!
5. To reassemble:

insert the wide-mesh filter into the microfilter so it clicks into place. Insert the fine-mesh filter.


**The filter must be fitted under both tabs (H).**

Insert the wide-mesh filter / microfilter unit and turn clockwise (in the direction of the arrow "1"), until the dashed lines on the microfilter and fine-mesh filter are aligned.

**The filter unit must be correctly assembled to ensure good wash results!**

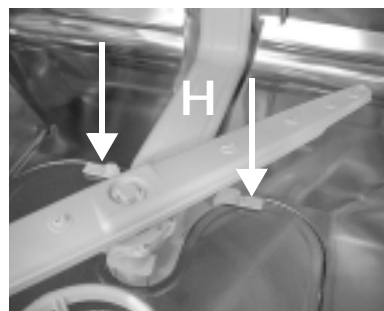

5019 396 94170

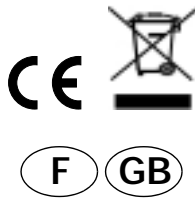

Ecological Paper

Printed in Germany

1/1205