

Programmable Load Controller

USER'S GUIDE



Honeywell



Weekday/Weekend
(5-day/Saturday/
Sunday)
Programmable
Heat and/or Cool
Conventional
and Heat Pump
Time-of-Use Pricing
T7512A,B,C

SuperStat™



69-1003-1

Welcome to the world of comfort and energy savings with your new Scientific Atlanta/Honeywell SuperStat thermostat.

This thermostat allows full weekday/weekend programming so that you can set the thermostat to control the temperature in your home according to your personal schedule and preferences. When programmed according to the instructions in this guide, the features available with this thermostat will not only keep you comfortable, but will also save you energy.

In addition to being programmable, this thermostat also contains a communications module. This module allows your utility company to communicate with your thermostat

to take advantage of Time of Use Pricing, a service that can increase your energy savings further.

Time-of-Use Pricing. If you subscribe to Time-of-Use Pricing, this thermostat will communicate with the utility to inform you of the pricing rate in effect at any given time. The rate that is in effect is indicated on the thermostat display as shown in Fig. 1. A special feature of this thermostat allows you to set an offset temperature that automatically adjusts your energy use for each rate. This typically involves controlling your home at a higher temperature during the cooling season and a lower temperature during the heating season. You must subscribe to this program before your utility company can

communicate with your thermostat. If you have any questions concerning the application of this thermostat or this special program and its features, please contact your local utility.

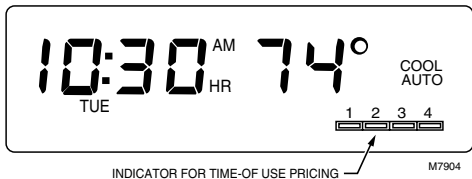


Fig. 1. Time-of-Use Pricing indicator.

Table of Contents

Recovery From Setback	5
Programming Your Thermostat	6
Personal Programming Charts	8
Step 1—Set the Current Time/Day	10
Step 2—Enter the Program Schedules	10
Step 3—Set the System and Fan Controls	13
Step 4—Start the Thermostat Program	14
Operating Your Thermostat	15
Thermostat Operation When Time-of-Use Pricing is in Effect	19
Replacing the Thermostat Batteries	20
Troubleshooting Guide	22
Typical Energy Savings	26
Warranty Conditions	29

RECOVERY FROM SETBACK

The term *recovery* refers to the process the thermostat uses to operate the heating or cooling equipment to return the house from the energy savings setting you select when you are away or asleep to the temperature you prefer when you are home and awake.

This thermostat uses a recovery process that turns your heating/cooling equipment on or off **at** the time you program the temperature to change. For example, if you program the thermostat's heating program to 72°F at 6:00 AM, the heating equipment will come on at 6:00

AM and begin warming the house to 72°F. If you want the temperature in the house to be 72°F at 6:00 AM, you should program the thermostat to an earlier time; for example, 5:30. (The exact amount of time it takes your home to warm or cool to the temperature you want depends on many factors such as the size of your heating/cooling equipment and the outdoor temperature.)

If this thermostat is for a heat pump system, the thermostat uses an algorithm when recovering from setback that helps reduce the use of auxiliary heat.

PROGRAMMING YOUR THERMOSTAT

IMPORTANT

Batteries must be installed to maintain time and date in the event of power loss.

You will find it helpful to complete the Personal Programming Charts on the following pages before you begin programming the thermostat.

Plan your program schedule of time and temperature settings for various times of the day by filling in the boxes in the Personal

Programming Charts. There are four time periods available for weekdays, Saturday, and Sunday—WAKE, LEAVE, RETURN, and SLEEP. These periods can be displayed individually on the thermostat as you press the **WEEKDAY schedule** or **WEEKEND SCHEDULE** keys. You may want to enter a different schedule for both the cooling and heating seasons.

WAKE is the time you get up. Generally you want the house at a comfortable temperature when you wake up and get ready to go to work or school. Set the WAKE time earlier than your alarm clock so the house has time to warm up or cool down before you get up.

LEAVE is the time you leave for work or school. Generally, once you leave the house, you want the temperature higher or lower (depending on the season) so that you can save energy while you are away.

RETURN is the time you return from work or school. Once again, you want the house at a comfortable temperature when you return and go about the normal activities of your day before bedtime. Set the RETURN time earlier than the time you actually get home so the house has time to warm up or cool down before you get there.

SLEEP is the time you usually go to sleep. While you are sleeping, you can save

energy by setting the thermostat to control the temperature higher or lower (depending on the season). For more comfortable sleeping, some people choose not to raise the cooling temperature at night.

If you decide not to program the thermostat, it automatically controls heating and cooling temperatures as follows. Starting at 6:00 AM every day, the thermostat sets the heating temperature to 68° and the cooling temperature to 76°F. At 10:00 PM every night, the thermostat sets the heating temperature back to 60°F; the cooling temperature remains at 76°F.

You do not need to enter a time and temperature program for every period if your schedule does not require it. For example, if your house is occupied during the day on weekdays, you can program only the WAKE and SLEEP times.

NOTE: Temperatures cannot be set any higher than 88°F or any lower than 45°F.

Personal Programming Charts

Cooling Schedule (for Summer Use):

		Time	Cooling Temperature
Weekday	WAKE		
	LEAVE		
	RETURN		
	SLEEP		
Saturday	WAKE		
	LEAVE		
	RETURN		
	SLEEP		
Sunday	WAKE		
	LEAVE		
	RETURN		
	SLEEP		

Heating Schedule (for Winter Use):

		Time	Heating Temperature
Weekday	WAKE		
	LEAVE		
	RETURN		
	SLEEP		
Saturday	WAKE		
	LEAVE		
	RETURN		
	SLEEP		
Sunday	WAKE		
	LEAVE		
	RETURN		
	SLEEP		

If you subscribe to Time-of-Use Pricing, use the following table to plan the offsets you will enter for each Time-of-Use Pricing rate. You should enter different offsets for the heating and cooling seasons. You do not need to enter an offset for rate 1.

Offsets for Cooling Season (+)			Offsets for Heating Season (-)		
Rate 2	Rate 3	Rate 4	Rate 2	Rate 3	Rate 4

Before programming the thermostat, remove the clear plastic overlay that covers the display. When pressing the keys, use the ball of your finger or a soft pencil eraser; using sharp fingernails or pencil points can damage the keypad. If you make a mistake during programming, press the RUN PROGRAM key and reprogram the time, temperature, or offset with the error.

Step 1—Set the Current Time/Day

To set the time, press and release the **SET CLOCK/DAY** key once. Press **AHEAD** or **BACK** keys until the current time is displayed. To set the day, press and release the **SET CLOCK/DAY** key again. Press **AHEAD** or

BACK keys until the current day is displayed. After you have set the time and day, press the **RUN PROGRAM** key.

Step 2—Enter the Program Schedules

Entering a Heating Schedule

Refer to your Personal Programming Charts and proceed as follows:

Press the **SYSTEM** key until the thermostat displays the word HEAT to indicate you are in heating mode. Press and release the **WEEKDAY SCHEDULE** key once. The words WAKE, MON...FRI and SET appear on the display.

Press the **AHEAD** or **BACK** keys to set the weekday WAKE time from your Personal Programming Charts. Press the **WARMER** or **COOLER** keys to set the weekday WAKE temperature from your Personal Programming Charts.

Repeat the above sequence for the other weekday schedules: LEAVE, RETURN, and SLEEP.

Press the **WEEKEND SCHEDULE** key until SAT, WAKE and SET appear on the display. Set the WAKE, LEAVE, RETURN and SLEEP schedules for Saturday just as you did for the weekdays.

Press the **WEEKEND SCHEDULE** key again so that SUN, WAKE and SET appear on the display. Set the WAKE, LEAVE, RETURN and SLEEP schedules for Sunday just as you did for the weekdays and Saturday.

Enter Offset Values

Enter the offset for each Time-of-Use Pricing rate using the **OFFSET** key. You can enter offset numbers only if you are a subscriber to Time-of-Use Pricing.

The offset you enter is the number of degrees you are willing to allow the heating or cooling temperature you have already programmed for

normal operation to change so you can save money at each rate. For example, if you normally want your home heated to 72° when rate 1 is in effect, but are willing to let your home cool to 70° when rate 2 is in effect, your heating offset for rate 2 is -2 (72° -2° = 70°). If you do not enter an offset, the offset is 0°.

The first time you press the **OFFSET** key, the offset for rate 1 is displayed (note the indicator on the thermostat display as shown in Fig. 1). Use the **WARMER** and **COOLER** keys to set the offset value. Repeat the procedure for each rate. After you have entered the last offset value, press the **RUN PROGRAM** key.

Entering a Cooling Schedule

Press the **SYSTEM** key until the thermostat displays the word COOL to indicate you are in the cooling mode.

Enter cooling temperatures for the WAKE LEAVE, RETURN and SLEEP times by following the same instructions as for Entering a Heating Schedule above. If you subscribe to Time-of-Use Pricing, enter offsets for the cooling season as you did for the heating season.

Step 3—Set the System and Fan Controls

After programming the thermostat, set the system and fan controls as follows:

System Control

If you have a conventional heating/cooling system, the system can be set to: HEAT, COOL or OFF. If you have a heat pump system, the system can be set to: HEAT, EM. HEAT, COOL or OFF.

You can change the system setting by pressing the **SYSTEM** key. Each time you press the key, the system status changes to the next setting.

The status of the system is as follows when the associated indicator is displayed:

- | | |
|----------------------|--|
| HEAT: | The thermostat will control your heating system according to the schedule you programmed (heat pump in heating mode). |
| EM. HEAT: | The emergency heater element of the heat pump is on. |
| COOL: | The thermostat will control your air conditioning system according to the schedule you programmed (heat pump in cooling mode). |
| No status displayed: | Both the heating and air conditioning systems are off (heat pump off). |

Fan Control

There are two fan settings: AUTO and ON.

Set the fan at the setting you want by pressing the **FAN** key. Each time you press the key, the fan status changes to the next setting.

When FAN is displayed, the fan is on continuously. Use this setting for improved air circulation during special occasions or for more efficient electronic air cleaning.

When nothing is displayed, the fan is set to come on with the heating or cooling equipment as needed. AUTO is the normal setting for most

homes and allows a single-speed fan to turn on automatically with the air conditioner or furnace. If you have a two-speed fan, it usually runs on high with the air conditioner and on low with the furnace.

Step 4—Start the Thermostat Program

To start the thermostat using the program you have just entered, press the **RUN PROGRAM** key.

NOTE: For information on energy savings, refer to the maps in the Energy Savings section.

OPERATING YOUR THERMOSTAT

Normally you want your thermostat to run according to the program you entered; however, you can also perform the following operations.

NOTE: The system control must be set to HEAT or COOL to perform the following operations.

Temporarily Change Temperature

Setting *for the current period only*

Press the **WARMER** or **COOLER** key until the temperature you want is displayed. The temporary setting stays in effect only until the next scheduled program change. (If you subscribe to Time-of-Use Pricing it stays in effect only until the next rate change takes effect.) To cancel the temperature change, press the **RUN PROGRAM** key. When a temporary temperature is in effect, the display alternates between the time/temperature and the temporary setting.

Hold a Temperature Indefinitely

You could find this operation useful when you go out of town on business or on vacation. Press the **HOLD TEMP** key and then set the temperature using the **WARMER** or **COOLER** keys. This temperature stays in effect until you press the **RUN PROGRAM** key or the **PRESENT SETTING** key.

Check the Current Temperature Setting

To check the current (programmed) temperature setting, press the **PRESENT SETTING** key.

Check the Programs You Entered

Press the **WEEKDAY SCHEDULE** or **WEEKEND SCHEDULE** key. Each time you

press the key, the next program schedule is displayed. You can use this feature to verify that you correctly entered the program as shown in your Personal Programming Charts.

Cancel a Program

You can cancel a program by pressing the **WEEKDAY** or **WEEKEND** key until the program you want to cancel is displayed; then press the **CLEAR** key.

NOTE: You cannot cancel the WEEKDAY WAKE program.

Check Usage

This thermostat keeps a record of the current

and accumulated on-time of your heating and cooling equipment. It tracks *current day* usage (since midnight) and *accumulated* usage (since the accumulator was last cleared). If you subscribe to Time-of-Use Pricing, the thermostat records usage for each rate.

To view heating or cooling equipment usage, press the **SYSTEM** key to display HEAT or COOL, then press the **USAGE** key. Each time you press the **USAGE** key; the thermostat displays the next usage value.

If you do not subscribe to Time-of-Use Pricing, the thermostat displays current usage the first time you press the **USAGE** key and accumulated usage the next time you press the **USAGE** key.

If you subscribe to Time-of-Use Pricing, there are eight usage values that can be displayed. The first time you press the **USAGE** key, the thermostat displays the current usage value for rate 1. Each time you press the **USAGE** key again, usage values for rates 2, 3 and 4 are then displayed. If you continue to press the **USAGE** key, accumulated usage values are displayed for rates 1 through 4.

Press the **RUN PROGRAM** key to stop viewing usage.

Current day usage is automatically cleared at midnight. To clear an accumulated value, press the **USAGE** key until the value you want to clear is displayed and then press the **CLEAR**

key. If you subscribe to Time-of-Use Pricing, your utility can also clear the accumulators by sending a message to the thermostat.

Permanently Change a Program

To permanently change a program, repeat the appropriate steps in Programming Your Thermostat.

Return to Normal Program or Start Program

Any time you want to return to the normal program or start the program, press the **RUN PROGRAM** key. If you temporarily changed the temperature or you used the **HOLD TEMP** key,

pressing the **RUN PROGRAM** key will cancel your change.

Change Fan or System Control Settings

Change the fan setting by pressing the **FAN** key. Each time you press the key, the fan status changes to the next setting. When FAN is displayed, the fan is on continuously. When nothing is displayed, the fan is in AUTO mode (it comes on with the heating or cooling equipment, as needed).

Change the system setting by pressing the **SYSTEM** key. Each time you press the key, the system status changes to the next setting.

THERMOSTAT OPERATION WHEN TIME-OF-USE PRICING IS IN EFFECT

Normally your thermostat operates as you programmed it. If you subscribe to Time-of-Use Pricing, however, there may be times when it does not operate as you expect. Before calling for service, read the following information.

Time-of-Use Pricing

If you subscribe to Time-of-Use Pricing, the thermostat displays the rate in effect, see Fig. 1. You cannot adjust which rate is in effect; you can only adjust the temperature offset for each

rate. Refer to Programming Your Thermostat section for information on setting the offset for Time-of-Use Pricing. To notify you a rate change will be occurring, the Time-of-Use indicator on the thermostat begins blinking one-half hour before the rate change takes effect.

When a rate change message is received by the thermostat, your heating/cooling system automatically operates at the temperature and offset you programmed. You cannot temporarily override the offset. If you need to change the offset, refer to Programming Your Thermostat.

For additional information about the program, contact your utility company.

REPLACING THE THERMOSTAT BATTERIES

IMPORTANT


Batteries must be installed to maintain the time and date in the event of a power loss. Although the thermostat has a low battery indicator, replace the batteries once every two years to prevent the thermostat from losing its time/date information in the event of a momentary power loss.

As the batteries run low, the display shows **Lo**. This low battery indication flashes for one to two months before the batteries run out completely. Replace the batteries as soon as possible after the indicator starts flashing.

You will need two AA alkaline batteries; non-alkaline batteries will not last as long, and may leak, causing damage to the thermostat or the wall surface. We recommend Energizer® batteries.


- Use a coin to carefully remove the battery door.
- Press down on the left ends of the batteries to remove them.

- Install the fresh batteries as shown. Make sure positive and negative terminals are oriented correctly.

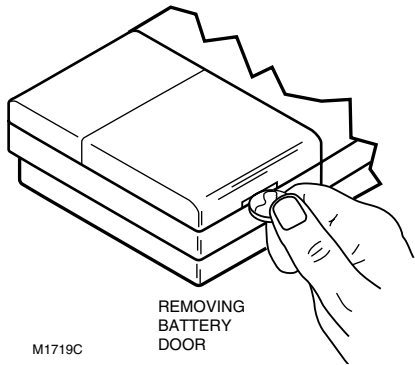

M1719C

- Replace the battery door.

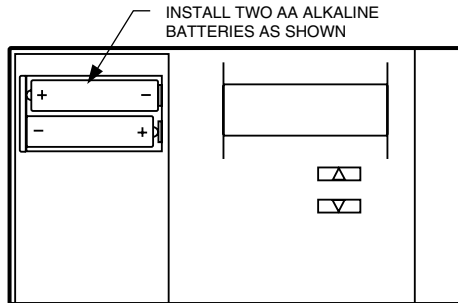

M7905

TROUBLESHOOTING GUIDE

IF...

Display will not come on.

Temperature display will not go lower than 45°F or higher than 88°F during programming.

Temperature change occurs at the wrong times.

THEN...

- There is no power applied to the thermostat. Check fuse or circuit breaker.
- You have reached the temperature setting limit. The setting range is 45°F to 88°F.
- Check the program times for the period in question. Be sure that AM and PM indications are correct. Make sure the current day and time are correct. Reprogram if necessary.
- Keep in mind that it takes time for the system to recover. Read Recovery From Setback section.

Heating will not come on.

- Check that the system control on the thermostat is set to HEAT.
- If the temperature setting is higher than current temperature, and HEAT is displayed, contact your utility company.

Cooling will not come on.

- Check that the system control on the thermostat is set to COOL.
- Check the system fuse or circuit breaker and replace or reset, if necessary.
- The thermostat has a built-in time delay on cooling. Allow five to ten minutes after changing the setting before the air conditioner starts to prevent equipment damage.
- If temperature setting is lower than current temperature, and COOL is displayed, set the system control to the OFF setting for ten minutes. After ten minutes, return the system control to the COOL setting. If the air conditioner comes on, the compressor may have reached its high limit temperature

protection and shut down. If the air conditioner does not come on after ten minutes and COOL is displayed, contact your utility.

The house is too warm or too cool.

- Press PRESENT SETTING key to check the current temperature setting.
- If desired, change the temperature setting. See Operating Your Thermostat section.
- If you subscribe to Time-of-Use Pricing, you may need to adjust your offset temperatures to provide a more comfortable temperature.

System ON indicator is lit, but no heat is coming from the registers.

- Allow time for the furnace or heat pump to heat up and the fan to come on before checking for heat at the register.

The thermostat's current setting does not match the display temperature.

- Be aware that it is normal for the current setting and display temperature to differ on occasion.
- During recovery from setback or setup, setting and display temperatures may differ to within $\pm 1^{\circ}$ for up to 30 minutes after the recovery period.

Incorrect room temperature showing on thermostat display.

- The thermostat is factory-calibrated, and cannot be adjusted.




 
**Thermostat is flashing
CALL <xxx-xxxx>.**

- Your thermostat has lost communication with the utility company. Call the number displayed on the thermostat or the number on the thermostat label for information.




 
TYPICAL ENERGY SAVINGS

PERCENTAGE OF HEATING ENERGY YOU CAN SAVE


ONE 10°F ENERGY SAVINGS PERIOD*
70° TO 60°F; 8 HRS/DAY

-  9% TO 11%
-  12% TO 13%
-  14% TO 15%
-  16% TO 18%

TWO 10°F ENERGY SAVINGS PERIODS*
70° TO 60°F; 8 HRS/DAY, 8 HRS/NIGHT

-  18% TO 24%
-  23% TO 25%
-  25% TO 29%
-  UP TO 30%


* Savings for a 5°F heating setback are at least 1/2 of savings for a 10°F setback.
Actual savings depend on your home, geographic location, number of energy saving periods and energy savings temperature.
If you have a heat pump, your heating savings may be greater than those shown.

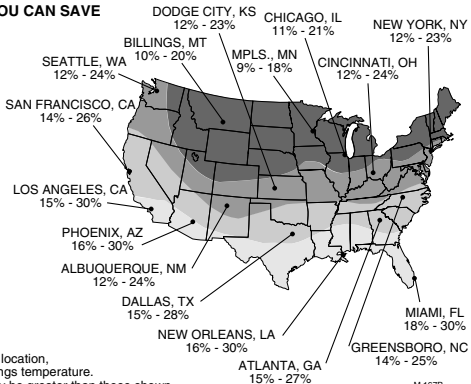


M 167B

PERCENTAGE OF COOLING ENERGY YOU CAN SAVE

 
ONE 5°F ENERGY SAVINGS PERIOD*
75° TO 80°F; 8 HRS/DAY



 TWO 5°F ENERGY SAVINGS PERIODS*
75° TO 80°F; 9 HRS/DAY, 7 HRS/NIGHT



* Actual savings depend on your home, geographic location, number of energy saving periods and energy savings temperature.

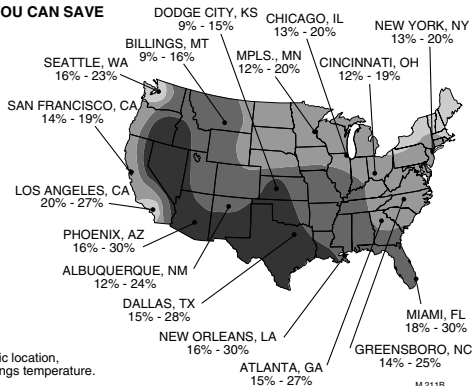

M 211B

Toll-free Customer Assistance

For all questions concerning this thermostat, please read and follow the instructions. If additional assistance is needed, call your utility's Customer Assistance number.

Before you call, please have the following information available—thermostat model number and date code, type of heating/cooling system (hot water, warm air, oil, gas, heat pump, etc).

WARRANTY CONDITIONS



Honeywell