

KAWAI
DIGITAL PIANO

CL30

OWNER'S MANUAL

Thank you for choosing this Kawai CL30 Digital Piano.

Your new CL30 is a high-quality instrument offering the very latest in leading-edge music technology.

This manual contains valuable information that will help you make full use of your CL30 piano's many capabilities. Please read it carefully and keep it handy for further reference.

TABLE OF CONTENTS

	Page
Important Safety Instructions	3
Assembling The Stand	7
Part Names	12
Getting Started	14
1. Basic Operations	14
2. Dual	15
3. Metronome	15
4. Concert Magic	16
5. Demonstration Song	20
6. Using the Recorder	21
Function Mode	22
1. Selecting A Touch Type	23
2. Transpose	24
3. Tuning	24
4. Reverb	25
5. Concert Magic Mode	25
6. MIDI Channel Select	26
7. MIDI Local Control	26
8. Turning Multi-Timbral Mode On/Off	26
9. Transmit MIDI Program Change	27
MIDI	28
Concert Magic Song List	29
Program Change Number Mapping	30
Specifications	30
MIDI Implementation Chart	31

Important Safety Instructions

SAVE THESE INSTRUCTIONS

INSTRUCTIONS PERTAINING TO A RISK OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS

	CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN		WARNING TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.
---	---	---	---

AVIS : RISQUE DE CHOC ELECTRIQUE - NE PAS OUVRIR.

TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK).
NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.






The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.




The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

Examples of Picture Symbols

 
 
 
	denotes that care should be taken. The example instructs the user to take care not to allow fingers to be trapped.
	denotes a prohibited operation. The example instructs that disassembly of the product is prohibited.
	denotes an operation that should be carried out. The example instructs the user to remove the power cord plug from the AC outlet.

Read all the instructions before using the product.

WARNING - When using electric products, basic precautions should always be followed, including the following.

 **WARNING** Indicates a potential hazard that could result in death or serious injury if the product is handled incorrectly.

The product should be connected to an AC outlet of the specified voltage.

120V 	230V 	240V 
---	---	---

- If you are going to use an AC power cord, make sure that its has the correct plug shape and conforms to the specified power voltage.
- Failure to do so may result in fire.

Do not insert or disconnect the power cord plug with wet hands.



 
Doing so may cause electric shock.

The chair must be used properly (it must be used only when playing the product).

- Do not play with it or stand on it.
- Only one person is allowed to sit on it.
- Do not sit on it when opening the lid.
- Re-tighten the bolts occasionally.

Doing so may cause the chair to fall over or your fingers to be trapped, resulting in injury.

When using the headphones, do not listen for long periods of time at high volume levels.



Doing so may result in hearing problems.

Do not lean against the keyboard.



Doing so may cause the product to fall over, resulting in injury.

Do not disassemble, repair or modify the product.



Doing so may result in product breakdown, electric shock or short-circuit.

When disconnecting the AC power cord's plug, always hold the plug and pull it to remove it.




● Pulling the AC power cord itself may damage the cord, causing a fire, electric shock or short-circuit.

The product is not completely disconnected from the power supply even when the power switch is turned off. If the product will not be used for a long time, unplug the AC power cord from the AC outlet.



● Failure to do so may cause fire in case of lightning.
● Failure to do so may over-heat the product, resulting in fire.

This product may be equipped with a polarized line plug (one blade wider than the other). This is a safety feature. If you are unable to insert the plug into the outlet, contact an electrician to replace your obsolete outlet. Do not defeat the safety purpose of the plug.

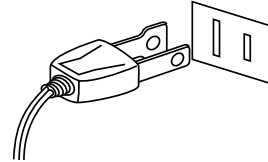

It is a good practice to have the instrument near the AC outlet and the power cord plug in a position so that it can readily be disconnected in an emergency because electricity is always charging while the plug is in the AC outlet even in a power switch off condition.



CAUTION

Indicates a potential hazard that could result in injury or damage to the product or other

Do not use the product in the following areas.

- Areas, such as those near windows, where the product is exposed to direct sunlight
- Extremely hot areas, such as near a heater
- Extremely cold areas, such as outside
- Extremely humid areas
- Areas where a large amount of sand or dust is present
- Areas where the product is exposed to excessive vibrations

Using the product in such areas may result in product breakdown. Use the product only in moderate climates (not in tropical climates).

Before connecting cords, make sure that the power to this product and other devices is turned OFF.




Failure to do so may cause breakdown of this product and other devices.

Take care not to allow any foreign matter to enter the product.



Entry of water, needles or hair pins may result in breakdown or short-circuit. The product shall not be exposed to dripping or splashing. No objects filled with liquids, such as vases, shall be placed on the product.

Do not drag the product on the floor. Take care not to drop the product.

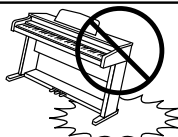

Please lift up the product when moving it. Please note that the product is heavy and must be carried by more than two persons. Dropping the product may result in breakdown.

Do not place the product near electrical appliances such as TVs and radios.



- Doing so may cause the product to generate noise.
- If the product generates noise, move the product sufficiently away from the electrical appliance or connect it to another AC outlet.

When connecting the AC power cord and other cords, take care not to get them tangled.



Failure to do so may damage them, resulting in fire, electric shock or short-circuit.

Do not wipe the product with benzene or thinner.



- Doing so may result in discoloration or deformation of the product.
- When cleaning the product, put a soft cloth in lukewarm water, squeeze it well, then wipe the product.

Do not stand on the product or exert excessive force.



- Doing so may cause the product to become deformed or fall over, resulting in breakdown or injury.

The product should be located so that its location or position does not interfere with its proper ventilation. Ensure a minimum distance of 5cm around the product for sufficient ventilation. Ensure that the ventilation is not impeded by covering the ventilation openings with items, such as newspaper, table-cloths, curtains, etc.

Do not place naked flame sources, such as lighted candles on the product.

The product should be serviced by qualified service personnel when:

- The power supply cord or the plug has been damaged.
- Objects have fallen, or liquid has been spilled into the product.
- The product has been exposed to rain.
- The product does not appear to operate normally or exhibits a marked change in performance.
- The product has been dropped, or the enclosure damaged.

Notes on Repair

Should an abnormality occur in the product, immediately turn the power OFF, disconnect the power cord plug, and then contact the shop from which the product was purchased.

CAUTION:

To prevent electric shock, match wide blade of plug to wide slot, fully insert.

ATTENTION:

Pour éviter les chocs électriques, introduire la lame la plus large de la fiche dans la borne correspondante de la prise et pousser jusqu'au fond.

Instruction for AC power cord (U.K.)

Do not plug either terminal of the power cord to the ground of the AC outlet on the wall.



An information on Disposal for users

If your product is marked with this recycling symbol it means that, at the end of its life, you must dispose of it separately by taking it to an appropriate collection point. You should not mix it with general household waste. Disposing of this product correctly will prevent potential negative effects on the environment and human health which could otherwise arise due to inappropriate waste handling. For further details, please contact your local authority. (European Union only)

THANK YOU FOR PURCHASING A KAWAI DIGITAL PIANO!

The Kawai digital piano is a revolutionary new keyboard instrument that combines the latest in electronic advances with traditional craftsmanship inherited from Kawai's many years of experience in building fine pianos. Its keyboard provides the touch response and full dynamic range required for a superb performance on the piano, harpsichord, organ, and other instruments. In addition, the CL piano is equipped with reverb and a digital effect processor for an even fuller sound. Industry-Standard MIDI (Musical Instrument Digital Interface) jacks are included which allow you to play other electronic instruments at the same time—opening a whole new world of musical possibilities.

This Owner's Manual contains valuable information that will help you make full use of this instrument's many capabilities. Please read all sections carefully and keep this manual handy for further reference.

ASSEMBLING THE STAND


READ ME FIRST

Before beginning the assembly of your CL30 read and become familiar with the assembly instructions that follow. Then, carefully unpack the piano and check your unit against the parts list.

PARTS PROVIDED

Main Unit (A)	1pc.	Side Panel (B)	2 pcs.
Back Panel (C)	1 pc.	Pedal Board (D)	1pc.
Arm (E)	2 pcs.	Music Rack (F)	1pc.
Screw (c) (M6 x 65)	4 pcs.	Screw (d) (M6 x 35)	4 pcs.
Screw (e) (M6 x 25)	4pcs.	Screw (f) (ø4 x 16)	2 pcs.
Adjuster (G)	1 pc.	AC Adapter (H)	1 pc.
Power Cord (I)	1pc.	Caps(J)	8pcs.


Headphone Hook	1 pc.
Screw (ø4 x 14)	2pcs.

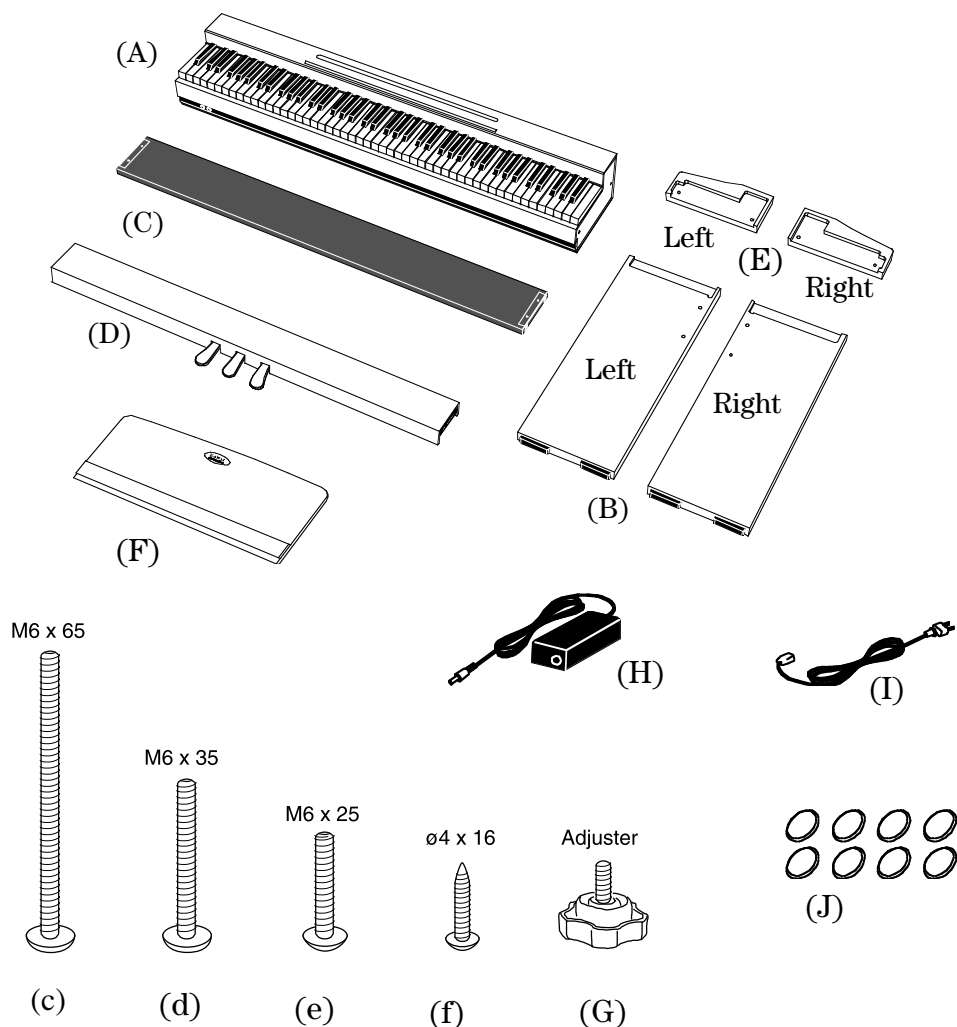

Be sure that all parts are included before starting to assemble your unit.

CAUTION!

Be sure to assemble CL30 by two persons and being care for carrying the Main Unit at level.


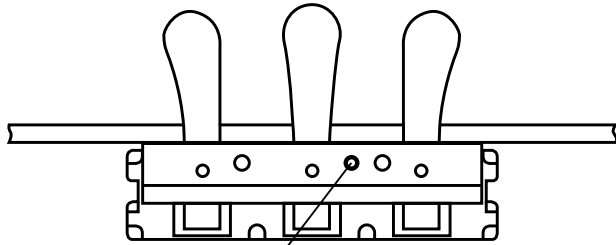


Adjuster Hole
(Back of the Pedal board)

1. Insert the adjuster into about 1 cm on the bottom of the Pedal Board.
2. Undo and pull out the Pedal cord on the back of the Pedal Board.

Front

3. Place the Side Boards beside the Pedal Board on the floor with its back sides facing down. Fix the screws (a) (b) sliding into the metal fittings on the both sides of the Pedal Board.

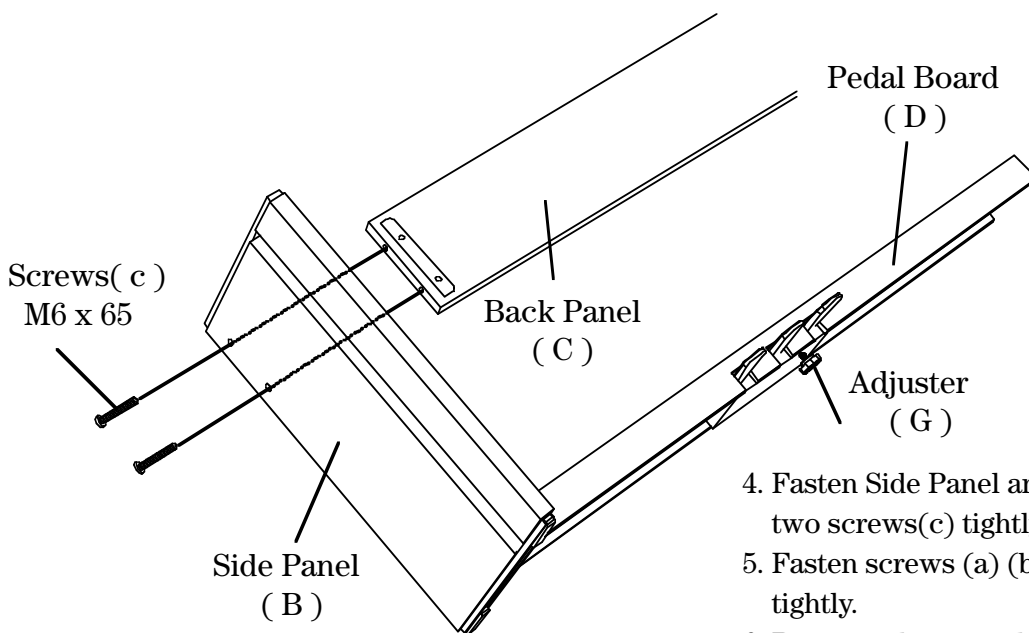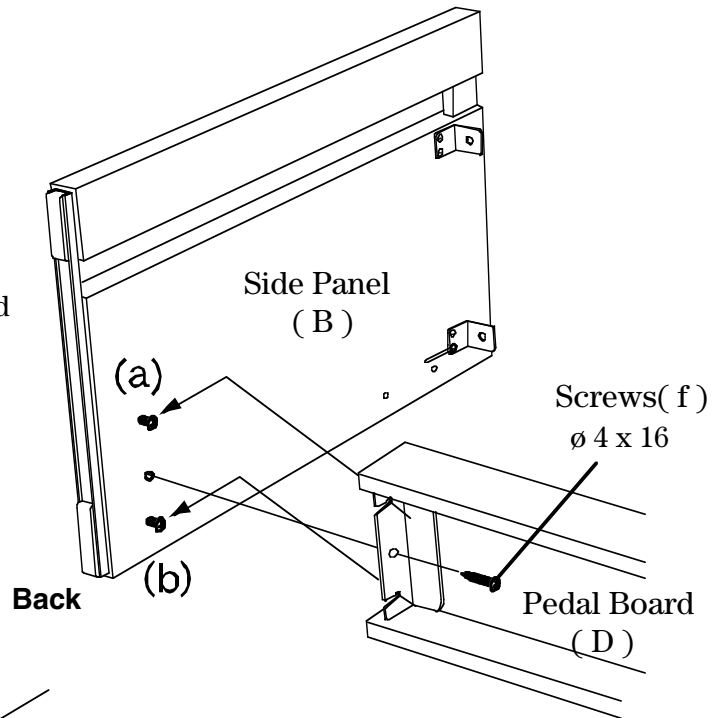


4. Fasten Side Panel and Back Panel with two screws(c) tightly.
5. Fasten screws (a) (b) and then screw (f) tightly.
6. Raise up the assembled Stand.



CAUTION!

Pay attention so that your hands or fingers are not caught between the stand and piano. Be sure to secure the piano to the stand with the screws. If you fail to do so, the unit could fall from the stand causing damage or personal injury.

Driving or putting screws too tightly or with too much force may cause damaging the Main Unit.

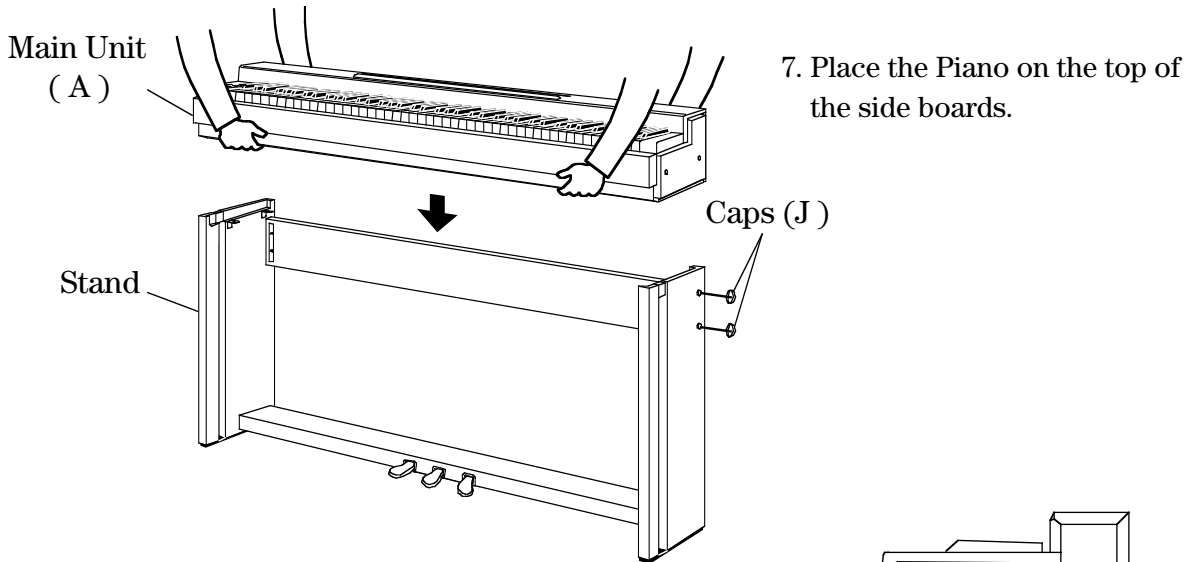


- 8. Set the holes on the bottom of the Piano fitting to holes of the metal fittings on the Side Panels.
- 9. Fasten half with screws (e).
- 10. And then fasten screws (e) securely after making sure of the holes in place so that all screws (e) are lined up and driven straight.

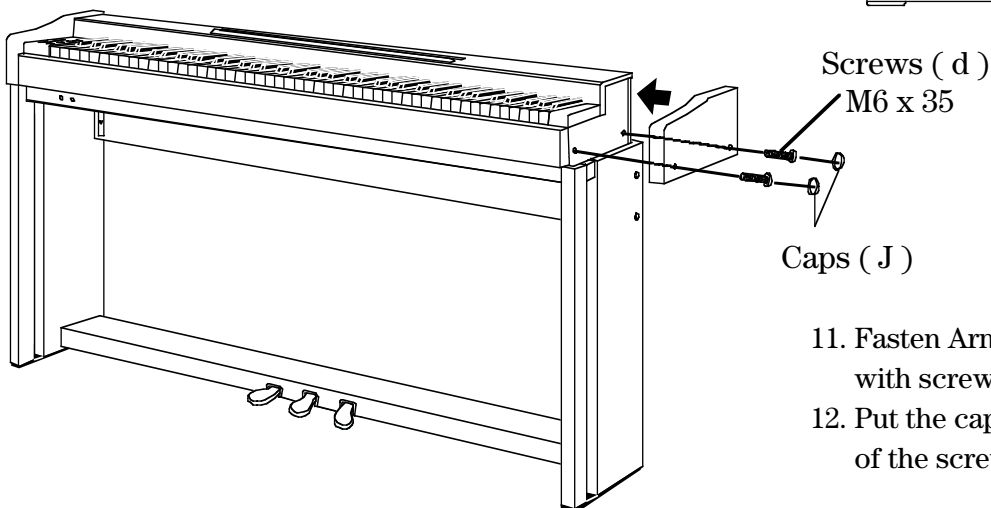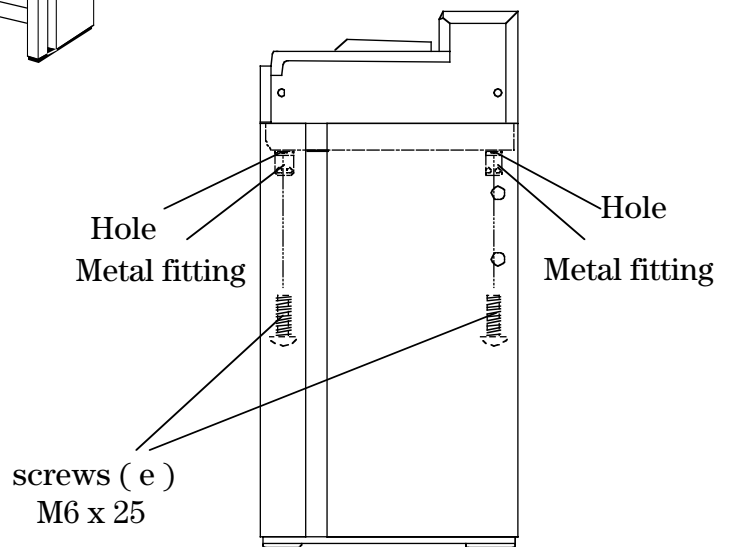


- 11. Fasten Arms and the Piano with screws (d).
- 12. Put the caps onto the heads of the screws (c) (d) (8pcs).

CAUTION!

Pay attention for fear that little children swallow the caps.

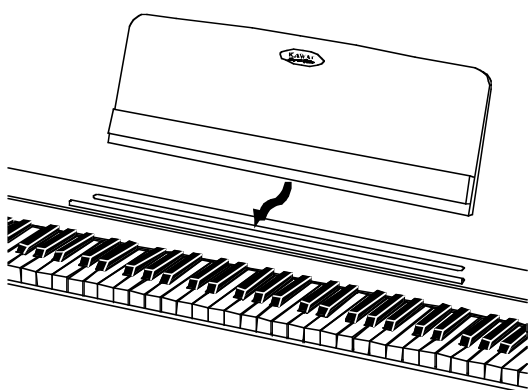

13. Insert the Music Rack in the slit on the top of the Piano.

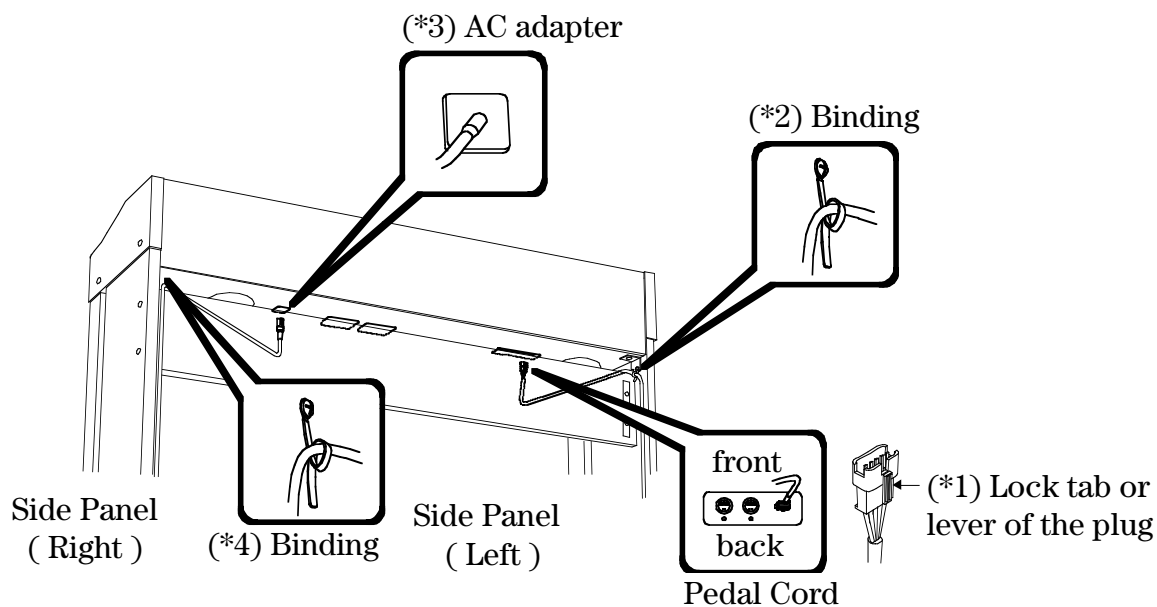


14. Insert the pedal connection cord that comes from Pedal Board into the Piano's Pedal jack. When viewed from the back, insert the plug with the Lock tab or lever (*1) of the plug on front.

15. Fix the pedal cord with binding on the left Side Board. (*2)

16. Connect the AC adapter and the power cord tightly.

17. Insert the plug of AC adapter into the Piano's socket. (*3)

18. Fix the cord of AC adapter with binding on the right Side Board. (*4)

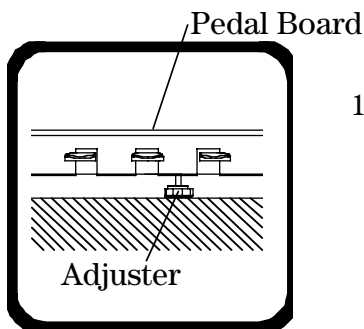


19. Turn the adjuster (installed on the bottom of the Pedal Board) down until it makes firm contact with the floor. If the floor is carpeted, place a spiked furniture cup under the adjuster so that it makes firm contact with the carpet backing. Press any pedal with your foot. If the pedal rail flexes, lower the adjuster until flexing is minimized.

CAUTION!

Before moving your piano, turn the adjuster up so that it clears the floor.

ATTACHING THE HEADPHONE HOOK

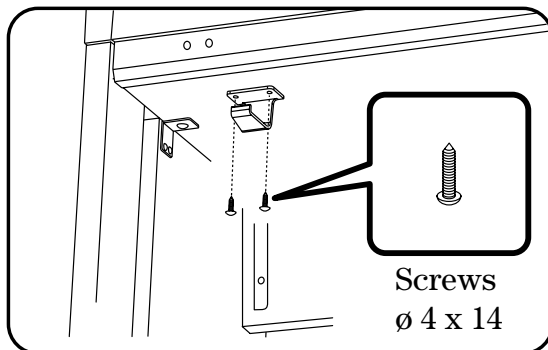

Fix the headphone hook to the bottom of the piano with two screws packed in the same plastic bag.

PART NAMES

CONCERT MAGIC BUTTON (A)

Absolutely anyone can play a real music with Concert Magic... even if you've never taken a piano lesson in your life. All you have to do is to select a favorite song and tap any of the 88 keys. For more details, see page 16.

DEMO BUTTON (B)

To listen to all the demos, simply press this button. The CL30 piano will start the demo. Fifteen musical pieces will be played back until the DEMO button is pressed again to stop. To select a specific demo, see page 20. To stop the demo, press this button again.

PLAY/STOP BUTTON (C)

Used to play back and stop a recorded song.

RECORD BUTTON (D)

Used to start recording a song.

METRONOME BUTTON (E)

Use this button to turn on/off the metronome.

SOUND SELECT BUTTON (F)

Select the desired instrument by pressing this button repeatedly. You can also select a specific instrument directly by pressing one of the lowest fifteen white keys while holding down this button. For more details, see page 14.


 

POWER BUTTON (G)

This button turns the instrument on and off. Be sure to turn off the instrument when you are finished playing.

VOLUME SLIDER (H)

Move the volume slider upward to increase the instrument's volume. Move the slider downward to decrease the volume.

CONTROL PANEL

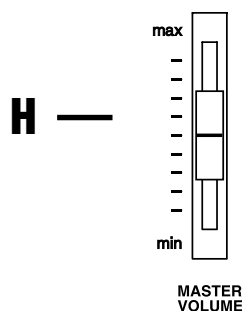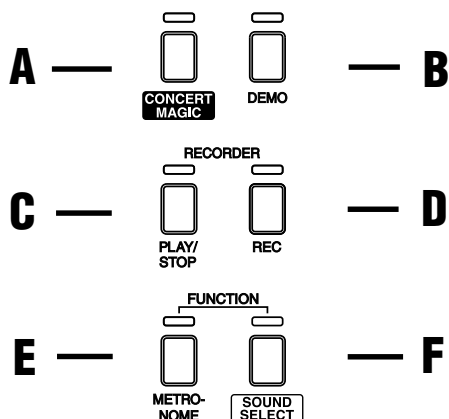

MIDI JACKS (I)

Use these jacks to connect the CL30 piano with external MIDI devices.


PEDAL JACK (J)

Connect the pedal cord from the pedal board to this jack.

HEADPHONES JACKS (K)

Used to connect up to two headphones to this digital piano.

JACKS

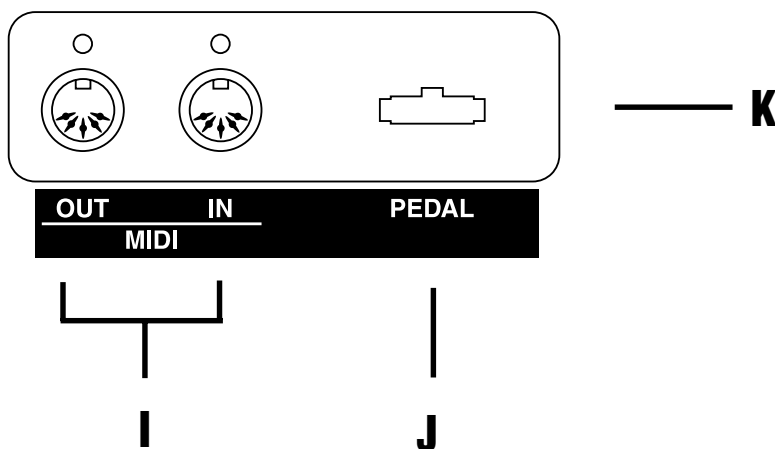

SOFT PEDAL (L)

Depressing this pedal softens the sound and also reduces its volume.


SOSTENUTO PEDAL (M)

Depressing this pedal after pressing the keyboard and before releasing the keys, sustains the sound of only the keys just played.

SUSTAIN PEDAL (N)

Depressing this pedal sustains the sound even after removing your hands from the keyboard.

PEDALS

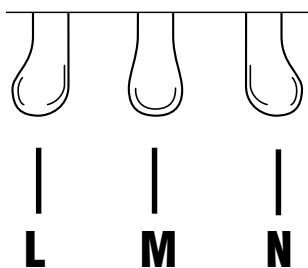


GETTING STARTED

1. BASIC OPERATIONS



 POWER



MASTER VOLUME

ACTION



SOUND SELECT

(1) Press the POWER button to turn the power on.

(2) Adjust the volume.

Play a note on the keyboard and adjust the volume. (Moving the slider upward raises the volume while moving downward lowers it.)


(3) Choose a sound.

Method 1

Pressing the SOUND SELECT button once will change the sound to the next. Press it repeatedly until the desired sound is selected.

Method 2

While holding down the SOUND SELECT button, press one of the lowest 15 white keys to select a specific sound directly.

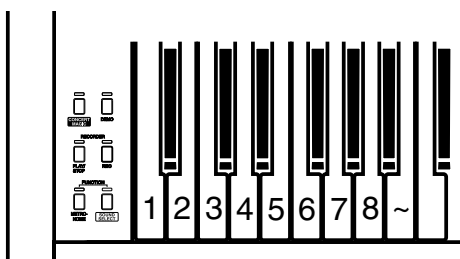

Method 3

Press and hold the SOUND SELECT button more than one second to go back to Concert Grand.

Note:

When a sound other than Concert Grand is selected, the LED indicator of the SOUND SELECT button will start flashing.

(4) Play.

Experiment by playing the different sounds.


Sound List:

- | | | |
|------------------|-----------------|---------------------|
| 1. Concert Grand | 6. Modren E.P | 11. String Ensemble |
| 2. Studio Grand | 7. Jazz Organ | 12. Slow Strings |
| 3. Modern Piano | 8. Church Organ | 13. Choir |
| 4. Rock Piano | 9. Harpsichord | 14. New Age Pad |
| 5. Classic Piano | 10. Vibraphone | 15. Atmosphere |

2. DUAL

With DUAL mode, you can layer two sounds together. To layer two sounds, while holding down the SOUND SELECT button, press the desired two keys together at the lowest 15 white keys and the assigned two sounds will be layered.

 3. METRONOME



The CL30 piano's metronome function can help you practice the piano or recording a song by providing a steady beat for you to play along with.

(1) To start the metronome, press the METRONOME button.


(2) To turn off the metronome, press the METRONOME button again.

Changing the Beat (Time Signature)

You can change the beat (time signature) of the metronome. The CL30 piano has seven beats (time signatures) to choose from, 1/4, 2/4, 3/4, 4/4, 5/4, 3/8 and 6/8. While holding down the METRONOME button, select the desired beat (time signature) of the metronome by pressing the black keys assigned to that beat (time signature).

Adjusting the Tempo

To adjust the tempo, use the lower white keys while holding down the METRONOME button. You can directly enter the desired tempo in "Beats Per Minute" (BPM) or use the - or + keys to make it slower or faster. The tempo range is 30-300 beats per minute. Use the enclosed function label for your convenience.

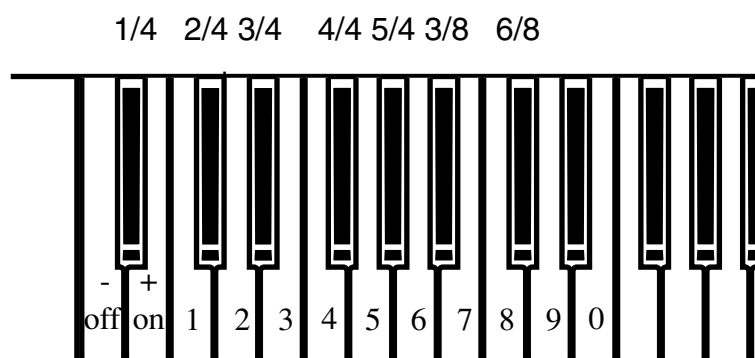

4. CONCERT MAGIC

The great German composer Johann Sebastian Bach once said, “Playing the keyboard is simple. Just strike right keys at the right time.” Many people wish it were that simple. The reality is very different of course. However, there is a way to make playing the keyboard very simple. You don’t even have to strike right keys thanks to Concert Magic.

With Concert Magic, absolutely anyone can sit at the CL30 piano and make real music... even if you’ve never taken a piano lesson in your life.

To enjoy performing by yourself, you have only to select your favorite piece from 40 preprogrammed songs and tap any of the 88 keys with a steady rhythm and tempo. Concert Magic will provide the correct melody and accompaniment notes, regardless of which keys you press. Anybody, young or old, can enjoy Concert Magic from the moment they sit down at the CL30 piano.

Now let’s see how Concert Magic works.


Selecting a Song

The 40 Concert Magic songs are assigned to each of the 40 white keys, classified in six groups by song category such as Children’s Songs, American Classics, Christmas Songs.

All of the song titles are listed on page 29.



To select a song, press the key to which your desired song is assigned while holding down the CONCERT MAGIC button.

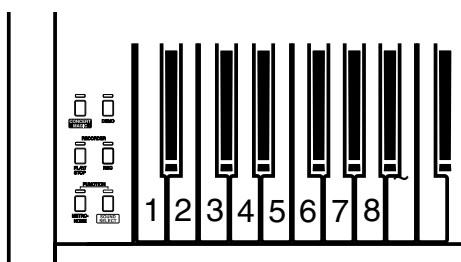

Listening to the Song

If you have selected a song you are familiar with, you may want to play by yourself right away. However you may want to listen to the song first before playing it.



To listen, press the PLAY/STOP button. The CL30 piano will start playing back the selected song.

If you want to listen to a different song, repeat the same procedure to select a song and press the PLAY/STOP button.

When you are finished listening to the song, press either CONCERT MAGIC button or PLAY/STOP button to stop.

Performing a song

Now you're ready to play yourself.

Tap out the rhythm of the selected song on any one of the 88 black or white keys on your piano keyboard. As you tap harder, the notes will get louder; as you tap softer, the notes will get quieter. As you tap faster, the notes speed up; as you tap slower, they will slow down correspondingly, just like regular piano playing.

Isn't it fun? You can sound like you've been playing for years just by pressing one key with one finger.

Concert Magic is a perfect method for small children to learn music, especially to develop a sense of rhythm. For older people who may think it is too late to learn the keyboard, Concert Magic is a good first step for them to begin with. With Concert Magic, your CL30 piano can be enjoyed by anyone in the family, even those who have never touched a musical instrument in their life.

Concert Magic Song Arrangement Types

After playing for a while with Concert Magic you may think that it's too easy and there is very little to learn.

While it is true that some of the songs are very easy to play, even for beginners, there are also some which will challenge you and require some practice to play beautifully. Each of the 40 Concert Magic songs falls into one of three different categories depending on the skill level required to perform them.

Easy Beat

These are the easiest songs to play. To perform them, simply tap out a constant steady beat on any key on your piano keyboard.

Look at the following example, “Für Elise”. Press the key with a steady sixteenth note rhythm.

Key on x x x x x x x x x x x x x x x x x x x x



The image shows a musical score for 'Für Elise' in 3/8 time. Above the staff, there are three groups of rhythmic notation: 'x x x x x x x x', 'x x x x x x', and 'x x x x x x'. The first group is aligned with the first two measures of the treble clef staff, the second with the next two measures, and the third with the final two measures. The treble clef staff contains a melody of sixteenth notes with some accidentals. The bass clef staff contains a bass line with some notes and rests.

Melody Play

These songs are also quite easy to play, especially if they are familiar to you. To perform them, tap out the rhythm of the melody on any one of the keys on your piano keyboard. Singing along as you tap the rhythm can be helpful.

Play “Twinkle, Twinkle, Little Star” for example. Follow the melody’s rhythm as shown.

Key on x x x x x x x x x x x x x x



The image shows a musical score for 'Twinkle, Twinkle, Little Star' in common time (C). Above the staff, there are three groups of rhythmic notation: 'x x x x', 'x x x', and 'x x x x'. The first group is aligned with the first four measures of the treble clef staff, the second with the next three measures, and the third with the final four measures. The treble clef staff contains a simple melody of quarter notes. The bass clef staff contains a bass line with chords and single notes.

When performing fast songs with Concert Magic, it is sometimes easier to tap two different keys with two fingers alternating. This allows you to play twice as fast as you can using only one finger on one key.

Skillful

These songs range in difficulty from moderately difficult to difficult. To perform them, tap out the rhythm of both the melody and the accompaniment notes on any of the keys on your piano keyboard, like “Waltz of The Flowers” shown below.

Key on x x x x x x x x x x x x x



It may take some practice to get them just right. A good way to learn these songs is to listen to them first, and then try to tap out the rhythms that you hear.

In the song list on page 29, the arrangement type is marked next to each song title as “EB” for Easy Beat, “MP” for Melody Play and “SK” for Skillful.

Concert Magic Song Demo

There are three ways to listen to the Concert Magic songs in the DEMO mode.

All Play

Press the CONCERT MAGIC button and then press the PLAY/STOP button without selecting a song.

The CL piano will play back all of the Concert Magic songs in order.

Random Play

Press the CONCERT MAGIC button and then press the DEMO button. The CL piano will play back all of the Concert Magic songs in random order.

Category Play

Press the piano key to which the desired song is assigned while holding down the DEMO button.

The CL piano will play back the selected song and, then play the rest of the songs in the same song category one after another.

To stop the DEMO, press the PLAY/STOP button.

5. DEMONSTRATION SONG

The CL30 piano has 15 built-in demonstration songs for your listening enjoyment.



(1) Press the DEMO button and the song for Concert Grand will start. When the Concert Grand demo song is finished, the CL30 piano will play all the other demo songs one at a time in random order.


(2) Press the SOUND SELECT button to skip to the next demo song.

(3) If you would like to listen to the demo for a particular sound, just press the desired key at the lowest 15 white keys while holding down the SOUND SELECT button.

(4) To stop the demo, press the DEMO button again.

DEMO SONG LIST

- | | |
|---------------------|---|
| 1. Concert Grand | Valse, op.64-1 / Chopin |
| 2. Studio Grand | KAWAI original |
| 3. Modern Piano | KAWAI original |
| 4. Rock Piano | KAWAI original |
| 5. Classic E.Piano | KAWAI original |
| 6. Modern E.P. | KAWAI original |
| 7. Jazz Organ | KAWAI original |
| 8. Church Organ | Toccata / Eugene Gigout |
| 9. Harpsichord | French Suite No.6 / Bach |
| 10. Vibraphone | KAWAI original |
| 11. String Ensemble | Le quattoro stagioni "La Primavera" / Vivaldi |
| 12. Slow Strings | KAWAI original |
| 13. Choir | KAWAI original |
| 14. New Age Pad | KAWAI original |
| 15. Atmosphere | KAWAI original |

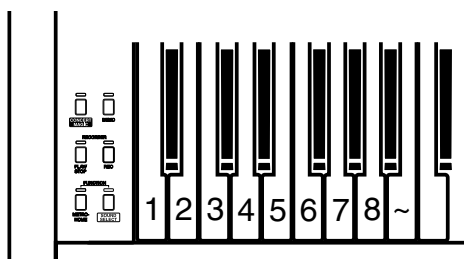

6. USING THE RECORDER

The CL piano's recorder records your playing much like a tape recorder, and it is just as easy to use. The CL piano records a song as digital data instead of audio data and stores the song inside the instrument. Because the song is stored as digital information you can modify the song when you play it back. You can, for example, adjust the tempo without changing the pitch or use a different effect setting from one you have recorded. Once you understand the recorder, you will find it to be a useful tool for both practicing and playing the piano.



RECORDING A SONG

(1) Press the REC button when you are ready to record. The LED indicator will start flashing telling you that the piano is ready to record.



(2) Now play some music on the piano. The recorder will automatically start recording with the first note you play. You can also start recording by pressing the PLAY/STOP button.

(3) Press the PLAY/STOP button when you're finished recording. The CL piano will stop recording and the LED display will flash momentarily while the song is saved to memory.

(4) If you make a mistake, you can record your piece again. Just repeat the same procedure. The second recording will completely erase the first one.


PLAYING BACK A SONG

(1) Press the PLAY/STOP button to play back the song you have just recorded.

Press the PLAY/STOP button again to stop.

ERASING A SONG

(1) Turn the power off.

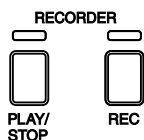

(2) Turn the power on again while holding down the PLAY/STOP and REC buttons.


FUNCTION MODE

The Function Mode gives you access to many other useful features on your CL30 piano.

The following functions can be selected in the Function Mode by pressing the appropriate key:

<u>Function</u>	<u>Default</u>
TOUCH	Normal
TRANSPOSE	0
TUNING	A4=440.0Hz
REVERB	On
CONCERT MAGIC MODE	Mode 1
MIDI CHANNEL SELECT	1 ch
MIDI LOCAL CONTROL ON/OFF	On
MULTI TIMBRAL MODE ON/OFF	Off
TRANSMIT MIDI PROGRAM CHANGE	On

When the power is turned on, these functions are always set to the default settings.

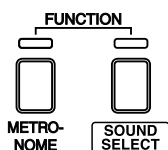

OPERATION

(1) Press the key assigned for the function you want to edit while holding down the METRONOME and SOUND SELECT buttons simultaneously.


(2) While still holding down the METRONOME and SOUND SELECT buttons, use the number keys or - (off) / + (on) keys to change the value for the selected function.

(3) You can also select other functions and change the values successively.

(4) Release both the METRONOME and SOUND SELECT buttons to exit.

Note:

Attach the enclosed Function Stickers as shown in the illustration on the next page for your convenience.

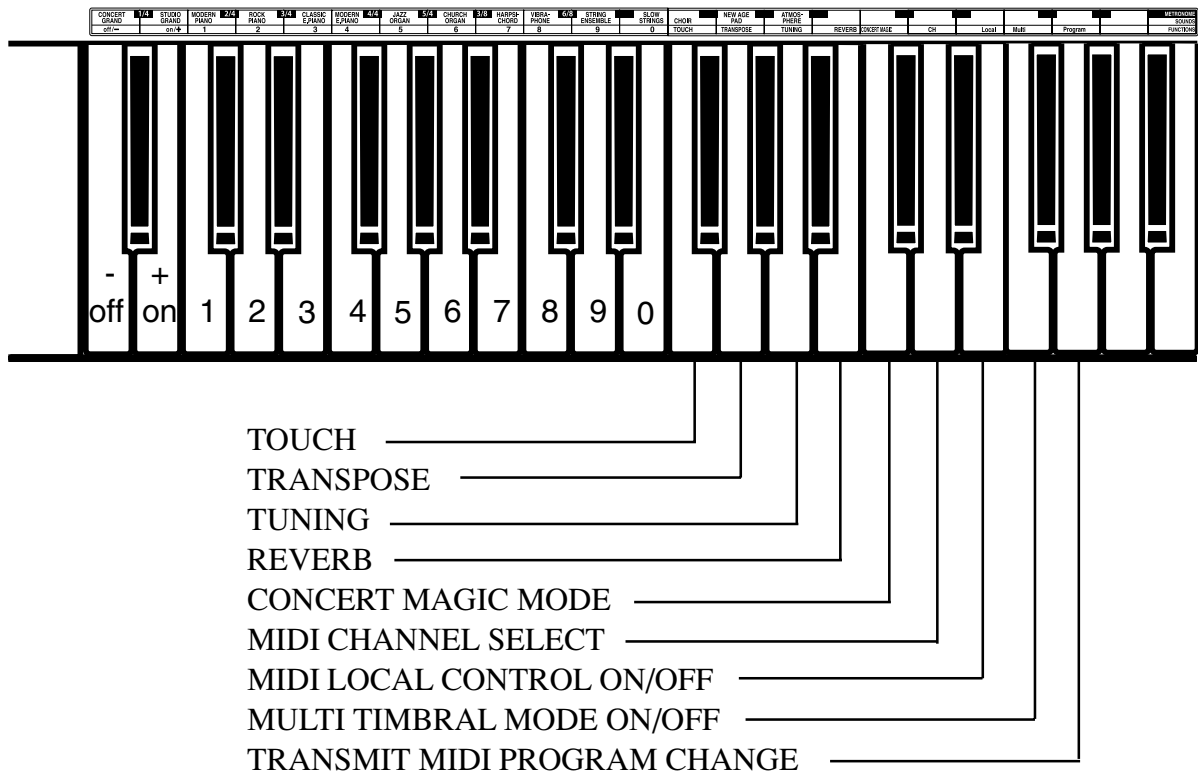

1. SELECTING A TOUCH TYPE

When playing a piano, the volume of the sound produced increases in direct relation to how hard a key is struck. Your CL30 piano lets you select from four different “Touch” types as follows:

NORMAL

The standard setting which produces volume in direct proportion to your force on the keys. This setting is the most similar to an acoustic piano. The CL30 piano automatically selects this Touch Type when the power is turned on.

LIGHT

For those still developing finger strength, such as a child, a louder sound is produced even when the piano is played with a soft touch.

HEAVY

Perfect for those with strong fingers or for practicing with a hard touch.

CONSTANT

For tone colors like organ or harpsichord, and for playing some contemporary music with the piano sound, a constant loud sound is produced regardless of your force on the keys.

(1) Press the “TOUCH” key while holding down the METRONOME and SOUND SELECT buttons.

(2) While still holding down the METRONOME and SOUND SELECT buttons, press one of the following keys on the keyboard.

Key 1: Selects the “LIGHT” Touch Type

Key 2: Selects the “NORMAL” Touch Type

Key 3: Selects the “HEAVY” Touch Type


Key 4: Selects the “CONSTANT” Touch Type

2. TRANSPOSE

The transpose function lets you raise or lower the piano’s key in half steps. This is especially useful when you have learned a song in one key and have to play it in another key. The transpose feature allows you to play the song in the original key, but hear it in another key.

(1) Press the “TRANSPOSE” key while holding down the METRONOME and SOUND SELECT buttons.

(2) While still holding down the METRONOME and SOUND SELECT buttons, press the desired key on the keyboard to select a new transposed key. (When power is first turned “on”, the key is set to C.) The piano can be transposed up to 5 half steps higher (F) or 6 half steps lower (F#).

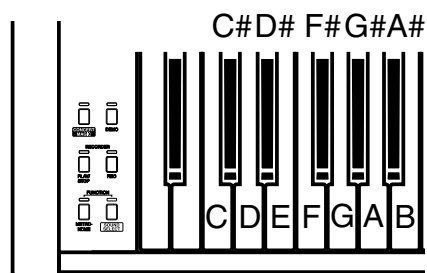

3. TUNING

This function allows you to adjust the piano’s pitch to match recordings or other instruments in an ensemble.

(1) Press the “TUNING” key while holding down the METRONOME and SOUND SELECT buttons. A tuning tone can be heard.

(2) While still holding down the METRONOME and SOUND SELECT buttons, use the +/- keys to lower/raise the pitch by 0.5Hz. Or you can directly enter the center A pitch as a three digit number by using the number keys. (EX: 440)

4. REVERB

Reverb adds reverberation to the sound simulating the acoustic environment of a recital room, stage, or concert hall.

There are three types of Reverb in the CL30. They are Room, Stage and Hall.

(1) Press the “REVERB” key while holding down the METRONOME and SOUND SELECT buttons.

(2) While still holding the METRONOME and SOUND SELECT buttons, press one of the following keys to select the Reverb type.

Key 1: ROOM

Key 2: STAGE

Key 3: HALL

When the power is turned on, the REVERB function is automatically activated.

To turn on/off the reverb, while holding down the METRONOME and SOUND SELECT buttons, press REVERB key and then press “on” or “off” key.

5. CONCERT MAGIC MODE

The CL30 piano offers two ways to enjoy Concert Magic.

Mode 1

Each of the 40 Concert Magic songs falls into one of three different categories depending on the skill level required to perform them. They are Easy Beat, Melody Play and Skillful. See page 16 for details.

Mode 2

Regardless of which arrangement type a Concert Magic song is, with Mode 2 you can play any Concert Magic song by simply tapping any key with a constant steady beat.

(1) Press the “CONCERT MAGIC” key while holding down the METRONOME and SOUND SELECT buttons.

(2) While still holding down the METRONOME and SOUND SELECT buttons, pressing the “+” key sets the Concert Magic mode to Mode 2. If you press the “-” key, the Concert Magic mode returns to Mode 1.

6. MIDI CHANNEL SELECT

In order to exchange MIDI information with another MIDI instrument, you must first set the two connected instruments to the same channel.

(1) Press the “MIDI CH” key while holding down the METRONOME and SOUND SELECT buttons.

(2) While still holding down the METRONOME and SOUND SELECT buttons, press the 10 keys to select the channel. When selecting a channel, the channel must be entered by two digit numbers.

EX: For CH 1 press the 0 key then the 1 key.
For CH 16 press the 1 key then the 6 key.

7. MIDI LOCAL CONTROL ON/OFF

This function is used to control whether or not the sound from the piano will be heard when you play the keyboard. When MIDI LOCAL CONTROL is set to “on” you will hear the CL30 piano when you play. When MIDI LOCAL CONTROL is set to “off” you will not hear any sound from the CL30 piano when you play but the CL30 piano’s keyboard data will be transmitted through the MIDI jacks to an external MIDI device.

(1) Press the “LOCAL” key while holding down the METRONOME and SOUND SELECT buttons.

(2) While still holding down the METRONOME and SOUND SELECT buttons, pressing the “off” key sets the Local Control to “off”. If you press the “on” key, this function returns to “on”.

8. TURNING MULTI-TIMBRAL MODE ON/OFF

Normally, the procedure described in the MIDI CHANNEL SELECT section is used to transmit or receive data on only one MIDI channel (any one of 1 through 16). But by turning the Multi-Timbral function “on”, you can receive data on more than one MIDI channel and simultaneously play a different sound on each channel. With this feature, you can connect the CL30 piano to an external MIDI recorder or personal computer to create performances with a variety of timbres. The term “Multi-Timbral” is derived from the ability to play multiple timbres simultaneously.

NOTE:

You can assign any sound of the CL30 piano to any channel in the way you like by sending the correct Program Change Number to the CL30 piano from an external MIDI device. See page 30 for assignment of sound and program number.

(1) Press the “MULTI” key while holding down the METRONOME and SOUND SELECT buttons.

(2) While still holding down the METRONOME and SOUND SELECT buttons, pressing the “off” key sets the Multi-Timbral mode to “off”. If you press the “on” key, this function returns to “on”.

9. TRANSMIT MIDI PROGRAM CHANGE

You can set the CL30 piano if it should transmit Program Change Numbers via MIDI when the sound is changed on the control panel.

(1) Press the “PROGRAM” key while holding down the METRONOME and SOUND SELECT buttons.

(2) While still holding down the METRONOME and SOUND SELECT buttons, pressing the “off” key sets the CL30 piano not to transmit the program change data corresponding to the sound selected on the panel. If you press the “on” key, this function returns to “on” and selecting a sound will transmit the data.

(3) You can also transmit the desired program change number directly by entering the number as a three digit number by using the number keys while holding down the METRONOME and SOUND SELECT buttons.

MIDI

The term MIDI is an acronym for Musical Instrument Digital Interface, an international standard for connecting synthesizers, sequencers (MIDI recorders) and other electronic instruments so that they can exchange performance data.

The CL30 is equipped with two MIDI jacks for exchanging data: MIDI IN and MIDI OUT. Each uses a special cable with a DIN connector.


MIDI IN : For receiving note, program change and other data.

MIDI OUT : For sending note, program change and other data.

MIDI EXAMPLES


(1) Connection to another MIDI compatible keyboard or sound generator module

When connected as shown in the illustration, data on how the digital piano is played (which keys are struck) can be sent to another MIDI instrument. Plus, the sound from the CL30 can be layered over the sound of the other instrument.

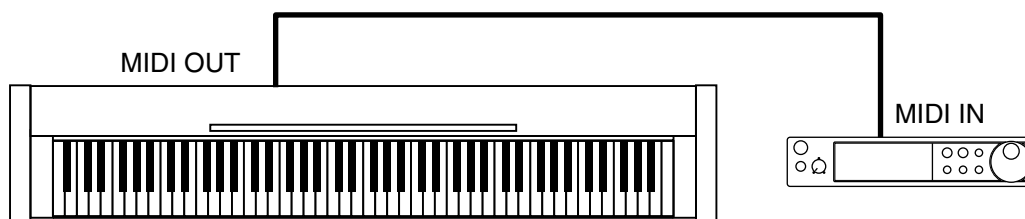

(2) Connection to an external sequencer

When connected as shown in the illustration, you can record songs played on the CL30 with a MIDI recorder, and use the CL30's tones (such as piano, harpsichord and vibraphone, etc.) controlled by the CL30's MULTI-TIMBRAL MODE function to create a multi-layer MIDI recording.

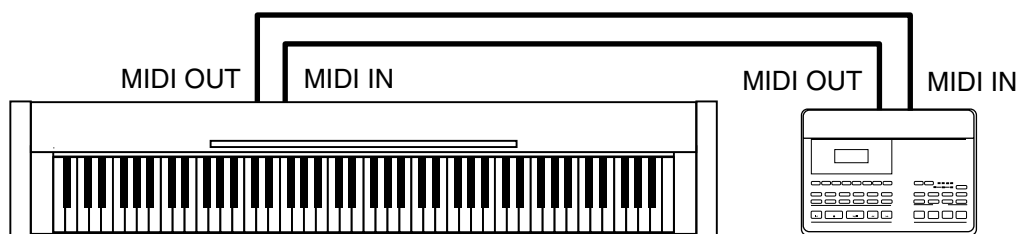

CONCERT MAGIC SONG LIST

Category	#	Song Title	Arrangement Type
Children's Songs	1	Twinkle, Twinkle, Little Star	MP
	2	I'm A Little Teapot	MP
	3	Mary Had A Little Lamb	MP
	4	London Bridge	MP
	5	Row, Row, Row Your Boat	MP
	6	Frère Jaques	MP
	7	Old MacDonald Had A Farm	MP
Christmas Songs	8	Hark The Herald Angels Sing	MP
	9	Jingle Bells	MP
	10	Deck The Halls	MP
	11	O Come All Ye Faithful	MP
	12	Joy To The World	MP
	13	Silent Night	MP
	14	We Wish You A Merry Christmas	MP
American Classics	15	Battle Hymn Of The Republic	MP
	16	Yankee Doodle	MP
	17	Danny Boy	EB
	18	Clementine	MP
	19	Auld Lang Syne	MP
	20	Oh Susanna	SK
	21	Camptown Races	MP
	22	When The Saints Go Marching In	EB
	23	The Entertainer	SK
Classical Selections	24	William Tell Overture	SK
	25	Andante (Haydn)	MP
	26	Für Elise	EB
	27	Clair De Lune	SK
	28	Skater's Waltz	SK
	29	Blue Danube Waltz	SK
	30	Gavotte (Gossec)	SK
	31	Waltz Of The Flowers	SK
Special Occasions	32	Bridal Chorus	MP
	33	Wedding March	SK
	34	Pomp And Circumstance	SK
International Songs	35	When Irish Eyes Are Smiling	EB
	36	Chiapenacas	SK
	37	Santa Lucia	SK
	38	Funicli Funicla	SK
	39	La Marseillaise	MP
	40	My Wild Irish Rose	EB

PROGRAM CHANGE NUMBER MAPPING

Sound Name	Multi-Timbral mode ON			Multi-Timbral mode OFF
	Program #	Bank MSB	Bank LSB	
CONCERT GRAND	1	121	0	1
STUDIO GRAND	1	121	1	2
MODERN PIANO	2	121	0	3
ROCK PIANO	2	121	1	4
CLASSIC E.PIANO	5	121	0	5
MODERN E.P.	6	121	0	6
JAZZ ORGAN	18	121	0	7
CHURCH ORGAN	20	121	0	8
HARPSICHORD	7	121	0	9
VIBRAPHONE	12	121	0	10
STRING ENSEMBLE	49	121	0	11
SLOW STRINGS	45	95	1	12
CHOIR	53	121	0	13
NEW AGE PAD	89	121	0	14
ATMOSPHERE	100	121	0	15

SPECIFICATIONS

Keyboard	88 Weighted Keys with Advanced Hammer Action IV	
Touch Type	4 Types (Normal, Light, Heavy, Constant)	
Max Polyphony	72 Notes	
Tones	15 Tones	
Reverb	Room, Stage, Hall	
Metronome	Beat: 1/4, 2/4, 3/4, 4/4, 5/4, 3/8, 6/8	Tempo: 30-300 BPM
Recorder	1 song, 1 track	
Other Functions	Dual, Transpose, Tuning, Concert Magic (40 Songs), MIDI Functions, 15 Demo Songs	
Pedals	Sustain, Soft, Sostenuto	
Jacks	Headphones x 2, MIDI IN/OUT, DC IN	
Speakers	8 x12 cm (oval) x 2	
Output Power	13 W x 2	
Power Consumption	30 W	
Dimensions	136 (W) x 27 (D) x 80 (H) cm,	
Weight	29 kg, 64 lbs	

Specifications are subject to change without notice.

MIDI IMPLEMENTATION CHART

KAWAI DIGITAL PIANO
MODEL: CL30

Date: March 2006
Version: 1.0

FUNCTION	TRANSMITTED	RECEIVED	REMARKS
Basic Channel (Default) (Changed)	1 1-16	1 1-16	
Mode (Default) (Message) (Altered)	3 X *****	1 1, 3*	*Omni Off by setting MIDI channel
Note Number (True Voice)	15-113* *****	0-127 15-113	*with Transpose
Velocity (Note ON) (Note OFF)	O: 9nH v=1-127 X: 8nH v=0	O X	
After Touch Key's Channel's	X X	X X	
Pitch Bend	X	X	
Control Change 7 64 66 67	X O O O	O O O O	Volume Sustain pedal Sostenuto pedal Soft pedal
Program Change True	O *****	O	
System Exclusive	O	O	
Common (Song Position) (Song Select) (Tune)	X X X	X X X	
System: Real Time (Clock) (Commands)	X X	X X	
Others (Local ON/OFF) (All Notes OFF) (Active Sense) (Reset)	X X O X	O O* O* X	*When Multi-Timbral mode is On

Mode 1: OMNI ON, POLY Mode 2: OMNI ON, MONO
Mode 3: OMNI OFF, POLY Mode 4: OMNI OFF, MONO

O: Yes
X: No

KAWAI