

# modu™ *T*

User Guide



# C €0700

## **Declaration of Conformity**

Hereby, modu Ltd. (or its subsidiaries) declares that this modu T product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. A copy of the Declaration of Conformity can be found at

[www.modumobile.com/DoC.htm](http://www.modumobile.com/DoC.htm).

Additionally, the product meets the requirements of the following standards: EN 50360 62209-1.

EN62311 IEC 62209-2, EN 60950-1, EN 50332-1, EN 301 489-1/-3/-7/-17/-24, EN 301 511, EN 301 908-1/-2, EN 300 328, EN 300 440-1/-2, EN 55022 Class B, and EN55024.

© Copyright 2010 modu Ltd. All rights reserved. modu and the modu symbol are trademarks or registered trademarks of modu Ltd. All other company or product names are trademarks or registered trademarks of their respective holders.

XT9 Mobile Interface is covered by patents pending worldwide.

XT9 is a trademark or registered trademark of Nuance Communications, Inc. or its subsidiaries in the United States of America and/or other countries

Java and all Java-based brand designations are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries.

MPEG Layer-3 audio coding technology licensed from Fraunhofer IIS and Thomson.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc., and any use of such marks by modu Ltd. is under license.

This document is published by modu Ltd., without any warranty\*. This document is intended only for its designated recipient and does not constitute a representation or warranty on behalf of modu Ltd. This document does not create any legal obligations on modu Ltd. Any unauthorized reproduction, transfer, use, distribution or storage of the information and/or material contained in this document, or any part thereof, is strictly prohibited. modu Ltd. reserves the right to modify and replace this document at its sole discretion, without prior notice.

**\*TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, UNDER NO CIRCUMSTANCES SHALL MODU OR ANY OF ITS LICENSORS BE RESPONSIBLE FOR ANY LOSS OF DATA OR INCOME OR ANY SPECIAL, INCIDENTAL, CONSEQUENTIAL OR INDIRECT DAMAGES ARISING OUT OF THE USE OF THE INFORMATION IN THIS DOCUMENT.**

**THE CONTENTS OF THIS DOCUMENT ARE PROVIDED "AS IS". EXCEPT AS REQUIRED BY APPLICABLE LAW, NO WARRANTIES OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE MADE IN RELATION TO THE ACCURACY, RELIABILITY OR CONTENTS OF THIS DOCUMENT. MODU RESERVES THE RIGHT TO REVISE THE DOCUMENT OR WITHDRAW IT AT ANY TIME WITHOUT PRIOR NOTICE.**

This device may contain commodities, technology or software subject to export laws or regulations from the U.S. and other countries. Diversion contrary to law is prohibited.



The crossed-out wheeled-bin symbol on your product, literature or packaging reminds you that the electronic products, batteries, and accumulators must be taken to separate collection at the end of their working life. This requirement applies to the European Union and other locations where separate collection systems are available.

Do not dispose of these products as unsorted municipal waste. By returning the products to collection you help prevent uncontrolled waste disposal and promote the reuse of material resources. For more information about returning your obsolete product, please contact your local waste authorities or local distributor.

## CONTENTS

<b>Getting started .....</b>	<b>14</b>
Your modu™ T phone .....	14
Insert or remove the SIM card .....	14
Charge the battery .....	17
Turn your modu T phone on or off .....	19
Use the touch screen.....	19
Options menu.....	22
Navigate between screens .....	24
The home screen.....	24
The what's new? screen .....	25
The status screen .....	25
The main menu .....	27
Indications and symbols .....	28
Lock or unlock the screen.....	31
<b>Calls.....</b>	<b>32</b>
Make a call .....	32
Answer, reject, or silence a call .....	33
Actions you can perform during a call .....	33
View your call log .....	37
Delete a call from the call log .....	37
Call your voicemail .....	37
Use speed dial numbers .....	38
Call waiting.....	38
Conference calls .....	41
View the duration of your calls .....	43
Service numbers.....	43
Fixed dialing .....	44

## Contents

<b>Contacts</b> .....	<b>47</b>
Add a contact .....	47
Search for a contact .....	49
View details of a contact .....	51
Delete a contact .....	51
Delete all of your contacts .....	51
Edit contact information .....	52
Assign a ringtone to a contact .....	52
Assign an image to a contact .....	53
Assign a speed dial number to a contact .....	53
Send a contact's business card via multimedia message or Bluetooth .....	54
Store contact information .....	55
<b>Text messages (SMS)</b> .....	<b>58</b>
Send a text message .....	58
Send a text message from the contact list .....	60
Send a text message from the call log .....	60
Send a text message using a predefined template .....	61
Predictive text .....	62
Write a text message using predictive text .....	62
View a new text message .....	63
View a text message .....	64
View information about a text message .....	64
Reply to a text message .....	65
Forward a text message .....	66
Delete a text message .....	67
Delete all the text messages in a folder .....	67
Extract a set of numbers from a text message .....	68
Delivery reports .....	70

<b>Multimedia messages (MMS)</b> .....	<b>71</b>
Send a multimedia message.....	71
Send a multimedia message from your contact list .....	76
Send a multimedia message to a number from your call log ..	77
Add a page to a multimedia message.....	77
Save or retrieve a draft version of a multimedia message .....	79
Delete a draft multimedia message .....	80
Delete all draft multimedia messages .....	80
Reply to a multimedia message .....	80
Forward a multimedia message from a message folder.....	81
View the details of a multimedia message.....	82
Change the amount of time for a multimedia message page to be displayed .....	82
Delete a page from a multimedia message .....	83
Navigate between pages in a multimedia message.....	83
Delete a multimedia message from a message folder.....	83
Delete all multimedia messages from a message folder .....	83
<b>Email messages</b> .....	<b>85</b>
Send an email message .....	85
Send an email message from your contact list .....	91
Save or retrieve a draft version of an email message.....	91
Receive an email message.....	92
View and save an email attachment .....	94
Save the contact information of recipients of an email message .....	94
Reply to the sender of an email message.....	95
Reply to the sender and all recipients of an email message....	96
Forward an email message.....	97
Delete an email message.....	98
Delete all email messages from an email folder .....	98

## Contents

<b>Music Player</b> .....	<b>100</b>
Add music to your modu™ T phone .....	100
Play a song .....	100
Adjust the volume .....	102
Adjust the equalizer .....	102
Use the headset .....	102
View information about a song .....	102
Set your play mode .....	104
Playlists .....	104
Start a song by clapping your hands.....	108
<b>Alarm clock</b> .....	<b>110</b>
Set an alarm .....	110
Turn an alarm off or on .....	111
Change the settings for an alarm .....	112
Delete an alarm.....	112
<b>Gallery</b> .....	<b>113</b>
Images.....	113
Videos .....	118
Copy images and videos to your modu T phone .....	120
Send an image or video via Bluetooth.....	121
Receive an image or video via Bluetooth .....	122
<b>Profiles</b> .....	<b>123</b>
Select a profile.....	123
Rename the normal profile .....	123
Personalize the settings of the normal profile .....	124
Reset the normal profile settings to the factory default settings .....	124
<b>Bluetooth®</b> .....	<b>125</b>

Turn Bluetooth on or off .....	125
Set your Bluetooth settings .....	125
Add a Bluetooth device to your modu T phone.....	125
Manage your Bluetooth devices.....	126
<b>Web browser .....</b>	<b>128</b>
Access the browser .....	128
Browse the web .....	128
Use Google™ to search the web.....	130
Search for text on a web page.....	131
Bookmark a web page in your browser.....	131
Store a web page for offline viewing.....	131
Exit the web .....	132
Navigate saved web pages .....	132
Manage bookmarks.....	132
Manage stored pages.....	134
Manage history .....	137
<b>FM radio.....</b>	<b>140</b>
Listen to the radio .....	140
Search for stations automatically .....	141
Select and listen to a radio station from the station list.....	141
Manually tune to a frequency .....	141
Manually save a station in the station list .....	142
Manage your radio stations .....	142
<b>Calculator .....</b>	<b>144</b>
Make a calculation .....	144
<b>Games .....</b>	<b>146</b>
Play a game .....	146

## Contents

<b>Applications.....</b>	<b>147</b>
Download an application.....	147
Start an application .....	148
View an application's properties .....	148
Delete an application .....	150
<b>Social networking .....</b>	<b>151</b>
Access a social networking application .....	151
<b>File manager.....</b>	<b>152</b>
View the contents of a folder .....	152
View information about a file or folder .....	152
Create a folder .....	153
Open a file.....	154
Rename a file .....	154
Send a file from your modu T phone via a multimedia message, Bluetooth, or email message.....	155
Copy a file or folder .....	156
Move a file or folder.....	156
Sort files and folders .....	157
Delete a file or folder .....	158
Check your memory card's status .....	158
<b>Cell broadcast.....</b>	<b>160</b>
View a cell broadcast message.....	160
Delete a cell broadcast message .....	160
<b>Push messages.....</b>	<b>162</b>
Receive a push message.....	162
View a WAP push message.....	163
<b>Settings .....</b>	<b>164</b>

Change the tone settings .....	164
Change the display settings.....	166
Change the language settings .....	168
Set the date and time.....	168
Change call settings.....	171
Speed dial numbers.....	175
View your voicemail phone number .....	177
Change your text message settings.....	177
Change the multimedia message settings.....	178
Change the multimedia profile settings .....	180
Change your email settings .....	185
Change your network settings.....	190
Change an application's settings .....	191
Change an application's profile settings.....	192
View your connection profiles' details .....	194
Change the phone and SIM card security settings .....	194
Check your software and hardware version or your IMEI code .....	197
Reset your modu T phone .....	197
Change all your settings back to the factory default settings	198
Update the software version on your modu T phone .....	198
Change cell broadcast topic settings .....	199
<b>sportify.....</b>	<b>202</b>
sportify your modu T phone.....	202
Set your personal settings.....	203
Use the armband.....	203
Start your workout.....	204
Use the control box.....	206
Change workout or music settings during your workout .....	207

## Contents

Send a text message, check a contact, or view your call log during your workout .....	207
End your workout.....	207
Keep track of your workout sessions online .....	208
<b>camerify .....</b>	<b>209</b>
camerify your modu™ T phone .....	209
Take a picture.....	209
Change your camera settings .....	210
Shoot a video .....	211
Change your video settings .....	212
<b>boostify .....</b>	<b>214</b>
boostify your modu™ T phone .....	214
Answer or make a call .....	215
Listen to FM radio .....	215
Listen to music .....	215
Use your boostify device as an alarm clock.....	215
Use external speakers .....	216
Unlock your modu T phone screen.....	216
<b>modu™ PC Suite.....</b>	<b>217</b>
<b>General information .....</b>	<b>218</b>
Care and maintenance of your modu™ T phone .....	218
About your modu T phone .....	218
Support and contact information .....	218
<b>Safety .....</b>	<b>219</b>
Symbols and information .....	219
AC adapter .....	221
Small children.....	222

Pacemakers .....	222
Magnetic fields.....	223
Temperature .....	223
Radio frequency signals.....	223
Protect your hearing .....	223
Certification information.....	224
<b>Limited warranty .....</b>	<b>225</b>
The warranty.....	225
Conditions .....	226
<b>Index .....</b>	<b>231</b>


## Getting started

### Getting started

#### Your modu™ T phone

Your modu T phone has the following components:

- A touch screen
- An SD memory card
- A micro USB port, where you connect your modu™ accessories (headset, AC adapter, and USB data cable)

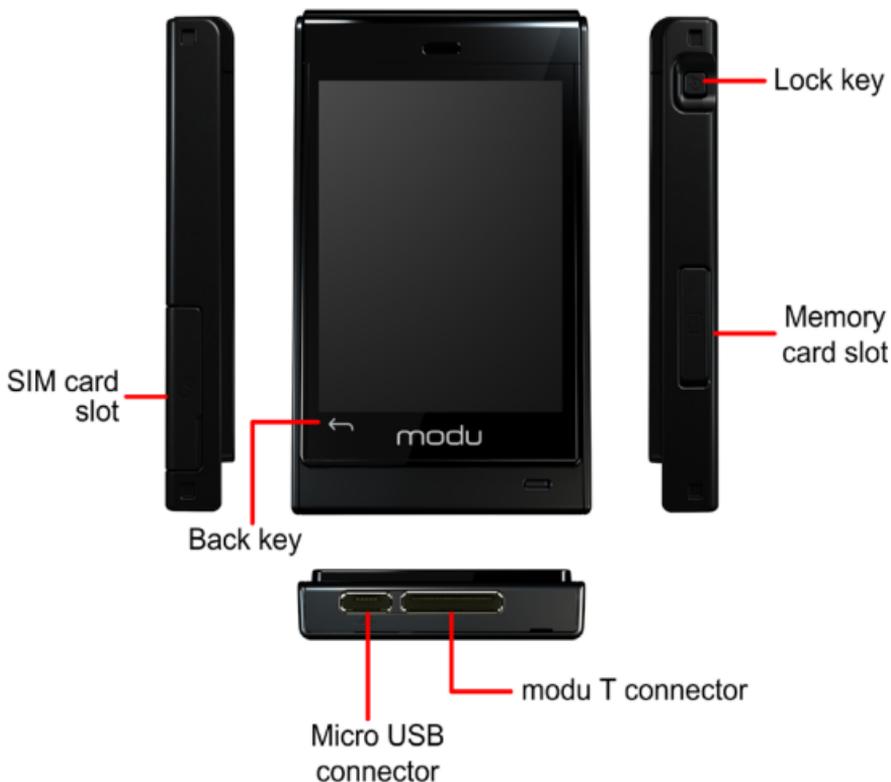

#### Insert or remove the SIM card


Before inserting or removing the SIM card, turn off your modu T phone and disconnect the charger.

**» To turn off your modu T phone:**

1. Press and hold the Lock key until the **exit** menu appears.
2. Tap **power off**.

**Insert the SIM card**


1. Turn your modu T phone so that the back is facing you, and open the SIM card slot cover.
2. While holding the cover back, pull the SIM card holder out.
3. Place your SIM card in the holder so that the cut corner of the SIM card is at the top right corner.
4. Push the SIM card holder back into your modu T phone.
5. Close the cover.

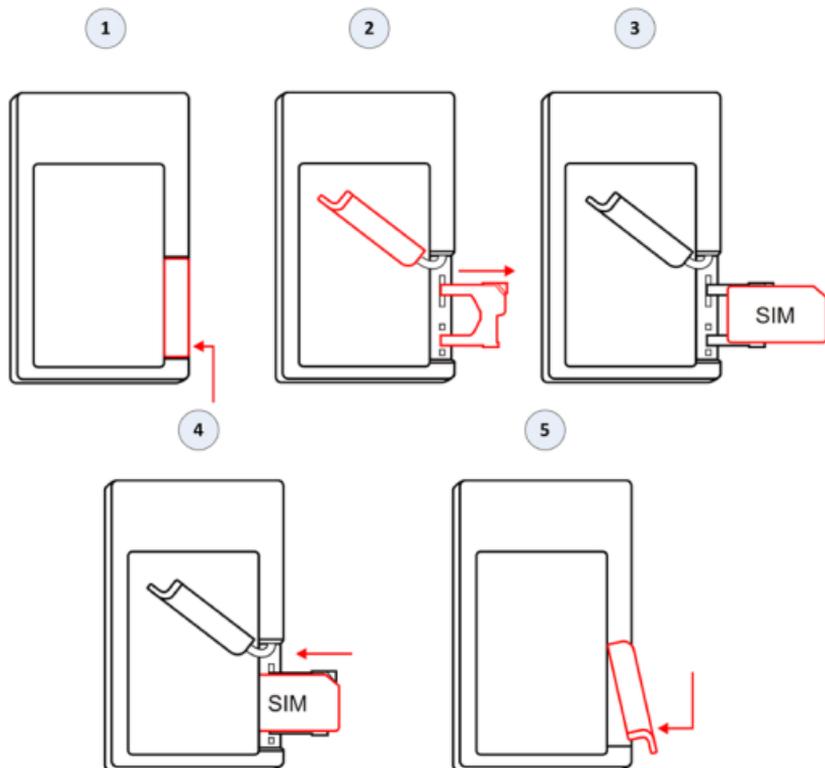

## Getting started

### Remove the SIM card

1. Turn your modu T phone so that the back is facing you, and open the SIM card slot cover.
2. While holding the cover back, pull the SIM card holder out.
3. Remove your SIM card by pushing down on the top right corner of the SIM card holder, and pulling the SIM card out.
4. Push the SIM card holder back into your modu T phone.
5. Close the cover.

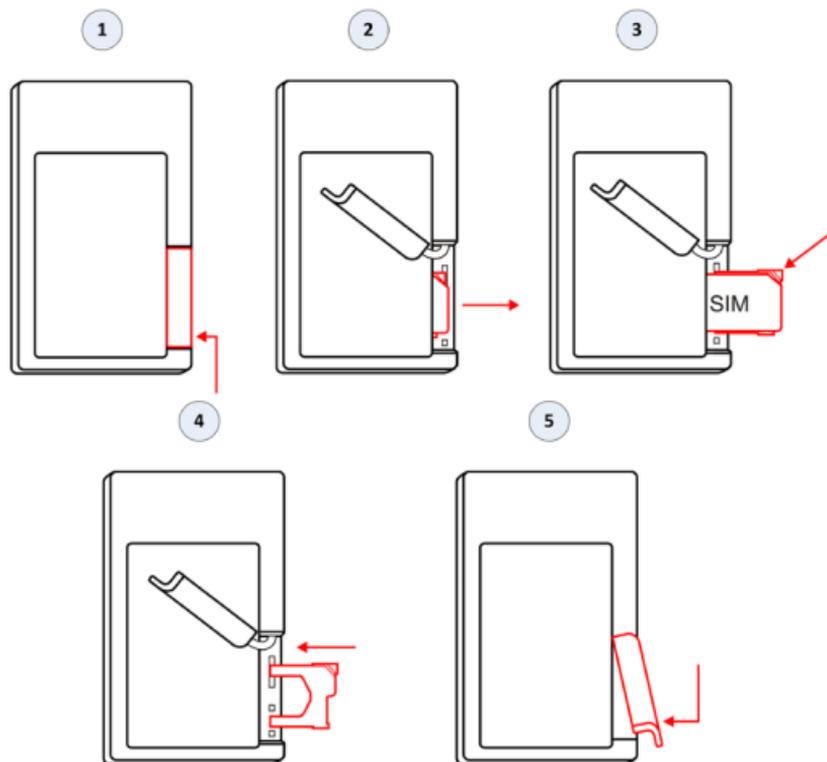

### Charge the battery


It takes two hours to fully charge your modu T phone's battery. A fully charged battery gives you enough power for any of the following uses:

- Up to 3 hours of talk time when the phone is connected to a 3G network
- Up to 7 hours of talk time when the phone is connected to a 2G network
- 210 hours of standby time
- Up to 10 hours of music playback time
- Up to 3.5 hours of video playback time
- Up to 2.5 hours of Internet use when the phone is connected to a 3G network
- Up to 4.5 hours of Internet use when the phone is connected to a 2G network

## Getting started

You can charge your modu T phone battery by connecting your modu T phone to the AC adapter or by connecting your modu T phone to the USB port on your computer.

### AC adapter cable

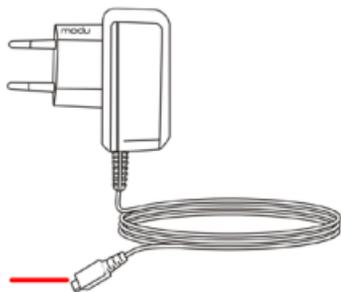

Micro USB  
connector (plug into  
modu T phone)

USB connector  
(plug into  
computer)

### USB data cable



Micro USB  
connector (plug into  
modu T phone)


#### » To charge your modu T phone battery using the AC adapter:

1. Insert the AC plug into an electrical outlet.
2. Connect the other end of the AC adapter cable to the micro USB port on the bottom of your modu T phone.

#### » To charge your modu T phone battery through your computer:

1. Insert the USB data cable into the computer's USB port.

2. Connect the other end of the USB data cable to the micro USB port on the bottom of your modu T phone.

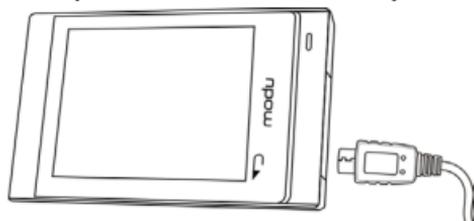

### Turn your modu T phone on or off

- To turn your modu T phone on, press and hold the Lock key for three seconds.
- To turn your modu T phone off, from any screen press and hold the Lock key until the **exit** menu appears, and then tap **power off**.

### Use the touch screen

There are five finger movements that you use to select or view information on your modu T phone:


- **Tap:** using your fingertip, touch the screen and quickly release it.
- **Multi-tap:** using your fingertip, repeatedly touch the screen, quickly releasing your finger each time.
- **Touch and hold:** using your fingertip, touch the screen and hold your finger there for a few seconds.
- **Swipe:** place the top part of your finger anywhere on the screen and quickly slide your finger as follows:
  - Swipe up: slide your fingertip in an upward movement.
  - Swipe down: slide your fingertip in a downward movement.
  - Swipe left: slide your fingertip quickly to the left.

## Getting started


- **Swipe right:** slide your fingertip quickly to the right.
- **Flick:** using the top part of your finger, quickly swipe your finger up or down the screen.

On the touch screen, do the following actions to select or view menu items or options:

- To select a menu item or option, tap it.
- To view all of the text of a menu item, touch and hold the menu item.

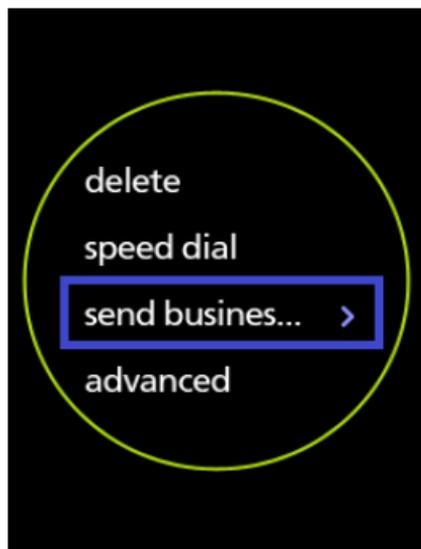

- To scroll through a list, swipe up or down.

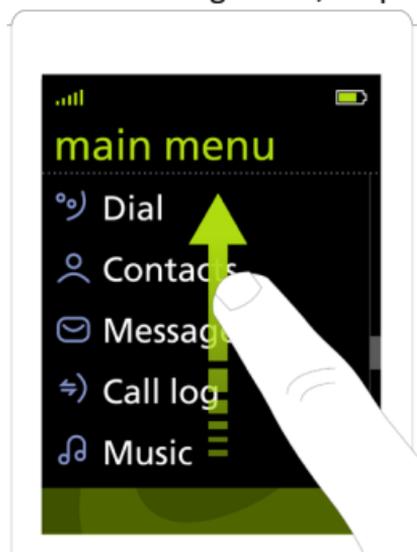

- To scroll slowly through a list, slowly move your finger up or down the screen.




**TIP:** A scroll bar on the right side of the screen indicates that you need to scroll to see the remaining items in the list.

## Getting started


### Options menu

You can view more options when the **options** icon  appears at the bottom of the screen.

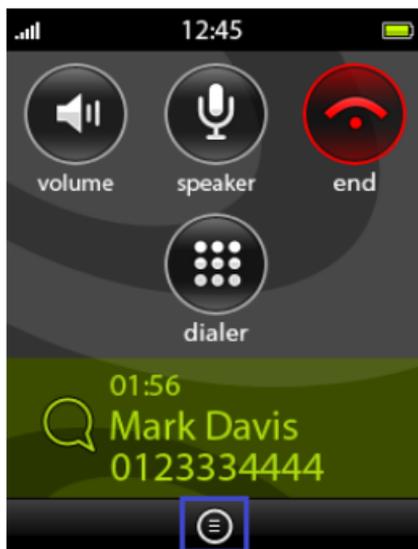

Tapping the **options** icon  opens the **options** menu.

When the lines at the top and bottom of the **options** menu are green, you can scroll through the list by swiping up or down.

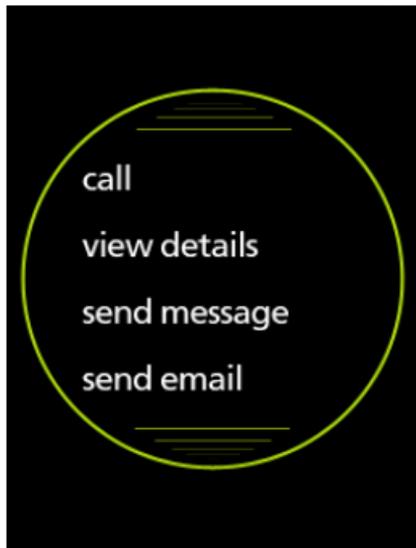

When there are no lines at the top and bottom of the **options** menu, all options in the list are visible.




## Getting started

### Navigate between screens

- To return to the previous screen, tap the Back key  or press the Lock key.
- To return to the **home** screen from anywhere, touch and hold the Back key  or press and hold the Lock key.

### The home screen

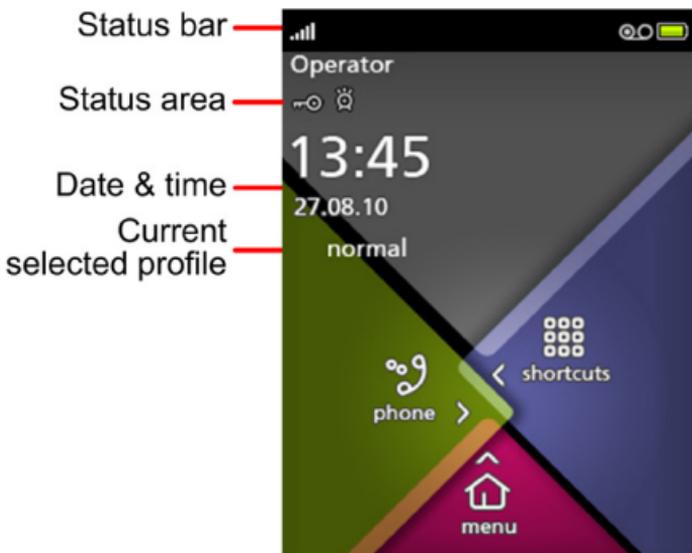

Swipe your finger across the **home** screen to access all of your modu T phone applications:


- Swipe right to make a call.
- Swipe left to access web applications.
- Swipe up to open the main menu.
- Swipe down to view notifications on the **what's new?** screen and phone information on the **status** screen.

## The what's new? screen

You can quickly view unread messages, view missed calls, view your next alarm, listen to voicemail, and view the latest modu news by checking the **what's new?** screen.

1. On the **home** screen, swipe down.

The **what's new?** screen appears.

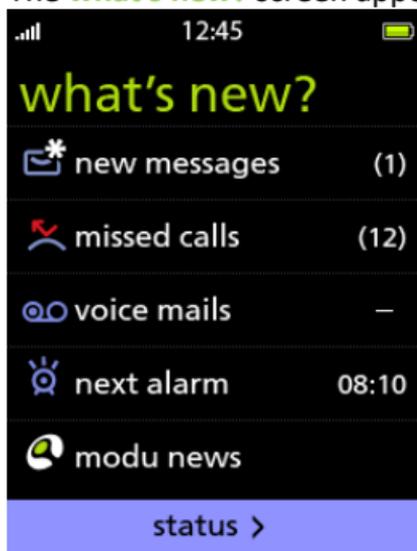

2. Tap the item that you want to access.


## The status screen

You can quickly view your ringtone volume level, selected profile, Bluetooth status, battery level, and signal strength by checking the **status** screen.

1. On the **home** screen, swipe down.

## Getting started

2. On the **what's new?** screen, tap **status**.

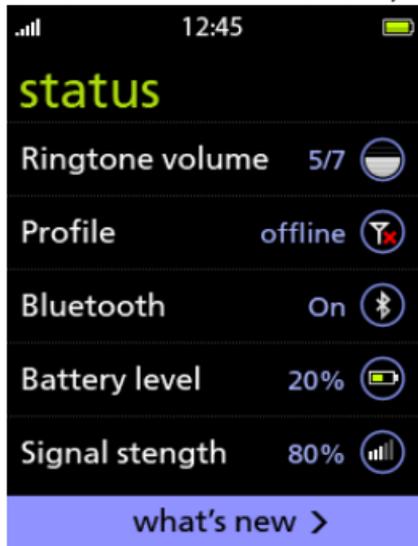

3. To change your ringtone volume, profile, or Bluetooth status, tap the desired item. For more information about making these changes, see **Set the ringtone volume** on page 165, **Select a profile** on page 123, or **Turn Bluetooth on or off** on page 125.

## The main menu

- To access the main menu, on the **home** screen, swipe up. From the main menu you can open the following applications:

Icon	Application	Description
	<b>dial</b>	Dial a new number.
	<b>contacts</b>	Add and manage your contacts.
	<b>messages</b>	Create and send text messages, multimedia messages, and email messages; view the inbox, sent messages, and draft messages.
	<b>call log</b>	View incoming, outgoing, and missed calls; view call duration information.
	<b>music</b>	Play songs and view your music folders; create and manage playlists.
	<b>gallery</b>	View and manage your images and videos.
	<b>browser</b>	Surf the Internet, set your home page, and create bookmarks.
	<b>apps &amp; games</b>	View games, applications, and shortcuts to web sites installed by your service provider.
	<b>downloads</b>	Download games, and view downloaded applications and games.

## Getting started

Icon	Application	Description
	<b>Bluetooth</b>	Set Bluetooth settings; add and manage Bluetooth devices.
	<b>alarm clock</b>	Set and manage alarms.
	<b>calculator</b>	Perform simple and complex calculations.
	<b>FM radio</b>	Listen to an FM radio station; add and manage radio station settings.
	<b>profiles</b>	Select a profile.
	<b>tools</b>	View and change phone, tone, display, network, and security settings; manage files and folders; upgrade your phone's software version.

### Indications and symbols

The following icons and symbols give you information about the status of your modu T phone.

Icon	Description
	The number of bars shows the strength of your cellular network signal. More bars means a stronger signal.
	There is no cellular network signal.
	The colored area of the battery icon shows how much charge is left in your battery.
	You are connected to a call.

Icon	Description
	You have one or more missed calls.
	All voice calls are being forwarded.
	You have one or more voicemail messages.
	You have one or more unread text messages.
	Your text message storage is full.
	You have one or more unread multimedia messages.
	Your multimedia message storage is full.
	A multimedia message is being downloaded.
	You have one or more unread email messages.
	Your email message storage is full.
	Your email account is checking for new messages.
	You have one or more unread WAP "push" messages.
	Your email WAP "push" message storage is full.
	The silent profile is activated.
	The vibrate profile is activated.
	The flight mode profile is activated.
	Your modu T phone is in roaming mode.
	Your headset is connected.

## Getting started

Icon	Description
	Your modu T phone is connected to a Bluetooth headset.
	Bluetooth service is active.
	Your modu T phone is hidden from other Bluetooth devices.
	Your modu T phone is searching for other Bluetooth devices.
	Bluetooth is transferring a file either from or to your modu T phone.
	An alarm is set.
	An alarm is going off.
	You are connected to the Internet.
	Your modu T phone is receiving an FTP update via your service provider's network.
	Your modu T phone is connected to a 3G network access point for connecting to the Internet.
	Your modu T phone is connected to a 2.5G network access point for connecting to the Internet.
	Your modu T phone is connected to an Edge network access point for connecting to the Internet.
	Your modu T phone is in emergency mode.
	Cell broadcast service is enabled.

### Lock or unlock the screen

Lock your modu T phone touch screen to make sure that you don't perform an unwanted action such as deleting information or dialing a call unintentionally.

#### » To lock the screen:

- From the **home** screen, press the Lock key.  
A message indicates that you have locked your modu T phone.

#### » To unlock the screen:

- Press the Lock key.

## Calls

### Calls

#### Make a call

##### Call a new number

1. On the **home** screen, swipe right.  
The keypad appears.
2. Enter the phone number that you want to call.
3. Tap **call** .
4. When your conversation has finished, tap **end** .



**TIP:** You can also end a call by pressing and holding the Lock key.

##### Call a number from the call log

1. On the **home** screen, swipe right.  
The keypad appears.
2. Tap **call log**.
3. Tap the desired log, and then select the number that you want to call.  
The **options** menu appears.
4. Tap **call**.

##### Call a number from the contacts list

1. On the **home** screen, swipe right.  
The keypad appears.
2. Tap **contacts**.
3. Select a contact or search for a contact (see Search for a contact).
4. Tap **call**.


### Call a number from a text message

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **messages > inbox**.
3. Select the number or contact that you want to call
4. Tap **options** .
5. Tap **call sender**.

### Answer, reject, or silence a call

- To answer a call, tap **accept**.
- To reject a call, tap **reject**.
- To silence the ringtone, select **silent**.

### Actions you can perform during a call

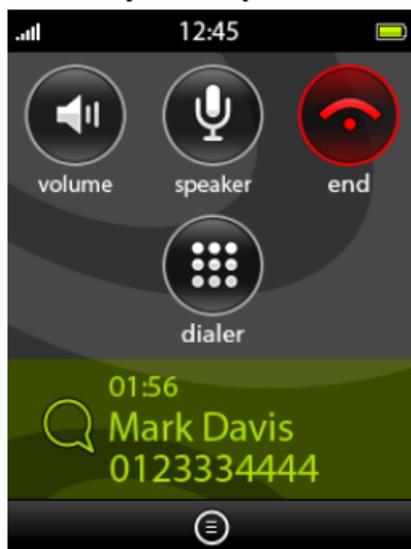

After a call is connected, the screen locks to make sure that you do not perform an unwanted action during a call.

## Calls

To perform an action during a call, first press the Lock key to unlock the screen.

### Adjust the volume

1. Tap **volume**.
2. Tap the  symbol to increase the volume, or tap the  symbol to decrease the volume.

### Use the loudspeaker

- To switch to the loudspeaker, tap **speaker**.
- To switch back to the handset, tap **handset**.

### Call another number

1. From the **call** screen, tap **options** .
2. Use one of the following methods to place the call:
  - Tap **make new call**, enter the number, and then tap **call** .
  - Tap **open contacts**, select a contact, and then tap **call**.
  - Tap **open messages**, select a message, tap **options** , and then tap **call sender**.

The first call is placed on hold.

### Mute or unmute your microphone

- To mute the microphone, tap **options > mute**.

The **mute** icon  appears, and the person on the line cannot hear what you say.


- To unmute the microphone, tap **options > unmute**.

## Place a call on hold or switch back to a held call

### » To place a call on hold:

- From the **call** screen, tap **options** .
- Tap **hold**.

The call is placed on hold, and the **on hold** icon  appears.

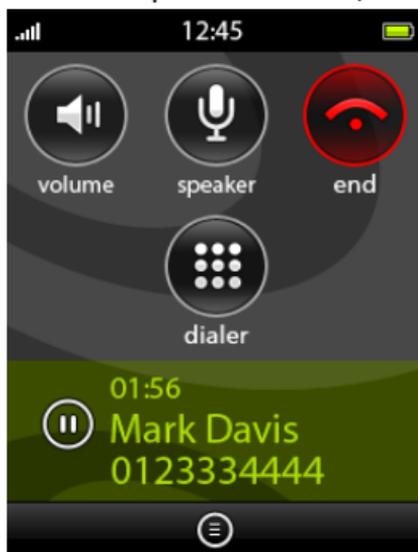

### » To switch back to a held call:

- On the **call** screen, tap **on hold** .
- Tap **unhold**.

The first call becomes active.


## View the contact list

1. From the **call** screen, tap **options** .
2. Tap **open contacts**.
3. Select a contact or search for a contact (see Search for a contact).


## Calls

4. Tap the Back key  to return to the call screen.

### Use the headset

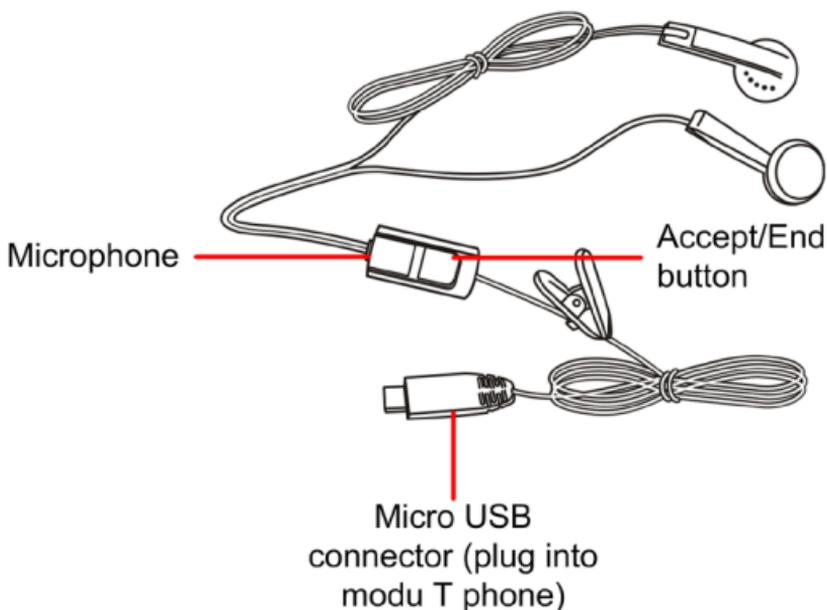

1. Connect the micro USB connector on your headset to the micro USB port on your modu™ T phone.

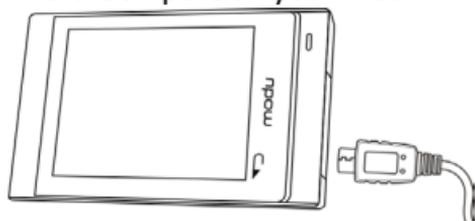

A message indicates that the headset is connected to your modu T phone.

2. Accept a call or end one by pressing the Accept/End key on the headset.

## View your call log

1. On the **home** screen, swipe up.  
The main menu appears.

2. Tap **call log**.

The call log displays the following logs:

- All calls (all missed, dialed, and received calls)
- Missed calls
- Outgoing calls
- Incoming calls

### » To view information about a call:

1. On the **call log** screen, tap the desired call log.
2. Tap the desired call, and then tap **view details**.

## Delete a call from the call log

1. On the **home** screen, swipe up.  
The main menu appears.

2. Tap **call log**.

3. Tap the call log that contains the call you want to delete.

4. Select the call.

The **options** menu appears.

5. Tap **delete**.

You are asked if you want to delete the call.

6. Tap **yes**.

## Call your voicemail

Your voicemail is predefined as speed dial number 1.

- On the keypad, touch and hold **1**.

For more information about speed-dialing, see **Speed dial numbers** on page 175.

## Calls

### Use speed dial numbers

Speed dial numbers let you call someone by touching and holding one key on the keypad.

Before you can use speed dial numbers, you need to assign a speed dial number to a contact. You can assign speed dial numbers from your contact list (see Assign a speed dial number to a contact). You can also assign speed dial numbers from the speed dial list (see **Speed dial numbers** on page 175).

Speed dial number 1 is used for your voicemail.

#### » To use speed dial numbers:

- On the keypad, touch and hold the desired number key.

### Call waiting

While you are on a call, you can receive a second call if the call waiting option has been activated. For more information about activating call waiting, see Turn call waiting on or off.

### Answer a waiting call

If you are on a call and you receive a second call, the incoming call information appears at the bottom of the screen.


#### » To answer an incoming call while you are on a call:

1. Tap **accept**.

2. Do one of the following actions:

- Tap **answer call**.

The first call is placed on hold automatically.

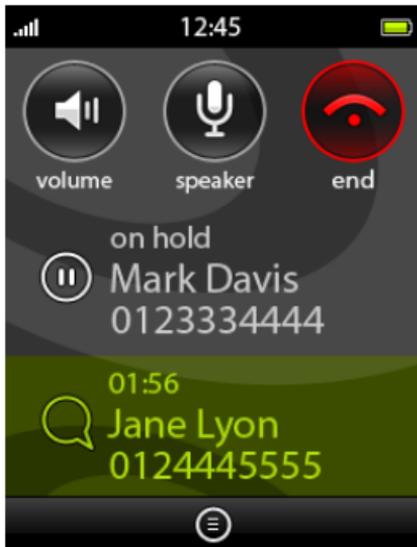


- Tap **replace call**.

The first call is ended.

## Calls

### Switch to a held call

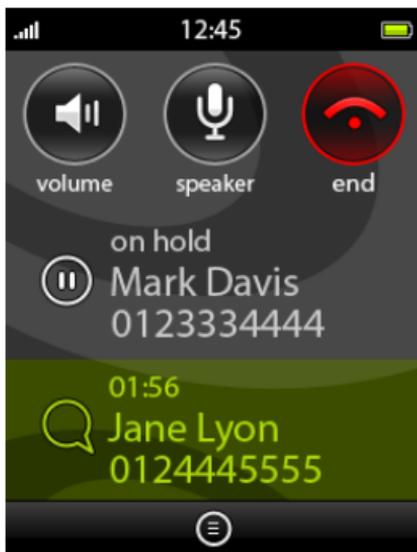

- Do one of the following actions:

- Tap **on hold** .
- Tap **options** , and then tap **swap**.

The **connected call** icon  shows you which call is active. The active call is also highlighted.

### End one of the calls


1. Check whether the **connected call** icon  is next to the call that you want to end.
2. If the icon is next to the other call, tap **swap**.
3. Tap **end**.

## Conference calls

### Set up a conference call

1. Connect to the first call either by answering an incoming call or by initiating a call.
2. Connect to the second call in either of the following ways:
  - Answer a second incoming call.
  - Initiate a call by doing one of the following actions:
    - Dial a number: tap **keypad**, enter the number, and then tap **call** .
    - Select a contact: tap **options** , tap **open contacts**, select a contact, and then tap **call**.
    - Select a message: tap **options** , tap **open inbox**, select a message, tap **call sender**.

You are now connected to two callers. The first call is on hold, and the second call is active.

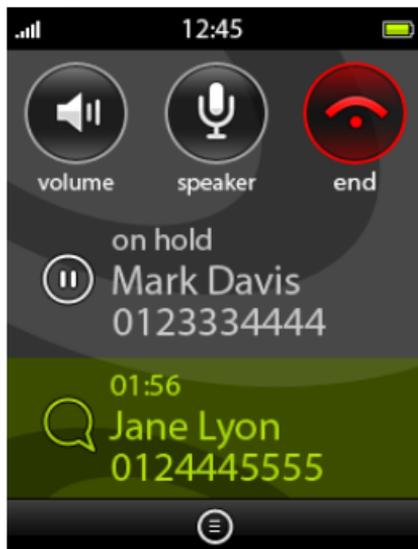


## Calls



**NOTE:** The number of callers that can participate in a conference call is determined by your service provider.

3. Tap **options** (☰), and then tap **conference**.

The callers are added to the conference, and the following screen appears:

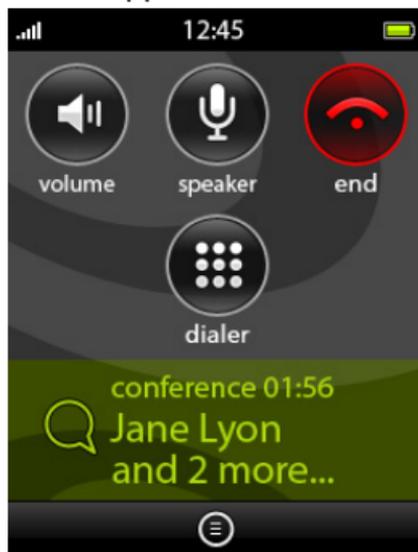

### Speak to a conference participant privately

1. On the **conference call** screen, tap **options** (☰), and then tap **conference > private with**.
2. Select the caller that you want to talk with privately.

### End one of the calls in a conference

1. On the **conference call** screen, tap **options** (☰), and then tap **conference > remove participant**.
2. Select the caller that you want to disconnect.

### Use the loudspeaker during a conference call

- To switch to the loudspeaker, tap **speaker**.
- To switch to the handset, tap **handset**.

### Mute or unmute the microphone of your modu T phone during a conference call

- To mute the microphone, tap **options** , and then tap **mute**.

The **mute** icon  appears, and the participants in the call cannot hear what you say.

- To unmute the microphone, tap **options** , and then tap **unmute**.

### End all calls in a conference

- On the **conference call** screen, tap **end**.

### View the duration of your calls

You can view the call duration of your last call, outgoing calls, incoming calls, and the total duration of all your calls.

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **call log > call duration**.

#### » To reset the time to 00:00 for a call duration log:

1. On the **call duration** screen, select a log.  
The **options** menu appears.
2. Tap **reset**.

### Service numbers

Service numbers (emergency, police, and directory assistance) are automatically programmed into your modu T phone.

## Calls

### Call a service number

You can dial a service number from the keypad or select the number from the list of service numbers.

#### » To select a service number from the service number list:

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **tools > service numbers**.
3. Select the desired number.  
The **options** menu appears.
4. Tap **call**.

### Fixed dialing

Fixed dialing enables you to limit the contacts that you can use for calling and for sending and receiving messages on your modu T phone. When you turn on fixed dialing, your phone can call only those numbers that you have specified as fixed dialing numbers.

### Turn fixed dialing on or off

To turn on fixed dialing, you need your PIN2 code. If you don't know your PIN2 code, contact your service provider.

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **tools > settings > security > PIN2 > fixed dialing**.
3. Tap **on** or **off**.  
The keypad appears.
4. Enter your PIN2 code, and tap **save** .

## Define your fixed dialing list

To define your fixed dialing list, you need your PIN2 code. If you don't know your PIN2 code, contact your service provider.

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **tools > settings > security > PIN2 > fixed dialing list**.
3. Tap **options** , and then tap **add contact**.
4. Enter your PIN2 code.
5. Tap **save** .
6. Tap **name**, and write the name of the contact.
7. Tap **save** .
8. Tap **number**, and enter the phone number of the contact.
9. Tap **save** .
10. Tap **save** again.  
The contact is added to the fixed dialing list.
11. To add more numbers to the fixed dialing list, do the following actions:
  - a. Select a contact from the fixed dialing list.
  - b. Tap **add contact**.
  - c. Repeat steps 3-10.



**NOTE:** When you add a new contact in the Fixed dialing list, you can only enter the contact's name and phone number.

## Edit the information for a contact in the fixed dialing list

1. On the **fixed dialing list** screen, select the contact whose information you want to edit.
2. Tap **edit**.
3. Enter your PIN2 code, and tap **save** .
4. To edit the contact's name, do the following actions:

## Calls

- a. Tap **name**.
  - b. Make the desired change to the contact's name.
  - c. Tap **save** ✓.
5. To edit the contact's number, do the following actions:
- a. Tap **number**.
  - b. Make the desired change to the contact's number.
  - c. Tap **save** ✓.
6. Tap **save**.

### Delete a contact from your fixed dialing list

1. On the **fixed dialing list** screen, select the contact that you want to delete.
2. Tap **delete**.
3. Enter your PIN2 code.
4. Tap **save** ✓.  
You are asked if you want to delete the contact
5. Tap **yes**.

## Contacts

### Add a contact

You can add a contact to your list of contacts in three ways:

- By creating a new contact and entering the information in your contact list
- By using a number from the call log
- By using a number from a message in your inbox

### Create a contact in the contact list

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **contacts > new contact**.  
The **new contact** screen appears.
3. Enter the contact's details.
4. Tap **save**.

### Create a contact from a number in the call log

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **call log**.
3. Select the log that contains the number that you want to enter, and then select the desired number.
4. Tap **save**.
5. Use one of the following methods to create the contact:
  - Tap **new contact**, and do the following actions:
    - a. Tap the desired number type (**mobile**, **home**, **work**, **other**, **pager**, or **fax**).
    - b. Enter the contact's details.
    - c. Tap **save**.
  - Tap **existing contact**, and do the following actions:

## Contacts

- a. Select a contact, or search for a contact (see Search for a contact).
- b. Tap the type of number (**mobile**, **home**, **work**, **other**, **pager**, or **fax**).
- c. If the selected number type exists for this contact, and you are asked if you want to replace the number, tap **yes** or select a different number type.
- d. Tap **save**.

### Create a contact by using a number from a text message

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **messages**.
3. Select the desired folder.  
Your list of messages appears.
4. Select the message that came from the desired number.
5. Tap **options** .
6. Tap **save contact**.
7. Use one of the following methods to create the contact:
  - Tap **new contact**, and do the following actions:
    - a. Enter the contact's details.
    - b. Tap **save**.
  - Tap **existing contact**, and do the following actions:
    - a. Select a contact, or search for a contact (see Search for a contact).
    - b. Select the desired number type (**mobile**, **home**, **work**, **other**, **pager**, or **fax**).
    - c. If the selected number type exists for this contact, and you are asked if you want to replace the number, tap **yes** or select a different number type.

- d. Tap **save**.

### Search for a contact

You can use the fast scroll feature or the **search** command to search for a contact.

#### » To use the fast scroll feature to search for a contact:


1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **contacts**.
3. On the **contacts** screen, flick your finger up (a quick swipe up).

## Contacts

Your list of contacts begins to scroll quickly. The first letter of the first contact name in the list appears in a box, and then the letter in the box advances alphabetically according to the first letter of each name in your contact list.



**NOTE:** Only the letters that represent names that you have entered appear. For example, if no names begin with the letter "p", that letter will not appear during fast scrolling.

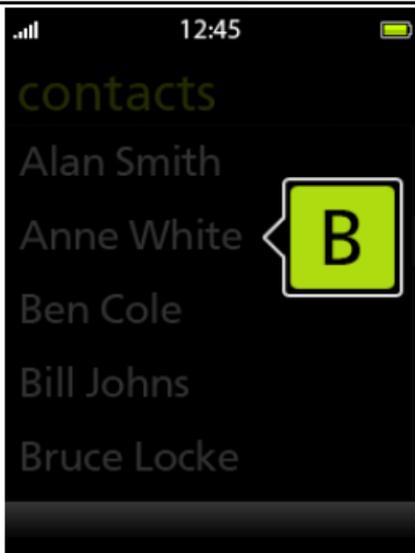

4. When the first letter of the name that you are looking for appears, tap the letter in the box.  
The list stops scrolling, and the first contact that starts with the selected letter is displayed.

» **To use the Search command to search for a contact:**

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **contacts > search**.

3. Write the first letter or first two letters of the contact's name.
4. Tap **search** .  
The first name that begins with the letters that you wrote is found. If no name begins with those letters, a message displays "no match".

### View details of a contact

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **contacts**.
3. Select the contact whose information you want to view.  
The **options** menu appears.
4. Tap **view details**.

### Delete a contact

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **contacts**.
3. Select the contact that you want to delete.  
The **options** menu appears.
4. Tap **delete**.  
You are asked if you want to delete the contact.
5. Tap **yes**.

### Delete all of your contacts

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **contacts**.
3. Select any contact.  
The **options** menu appears.

## Contacts

4. Tap **advanced > delete all**.

You are asked if you want to delete all of your contacts.

5. Tap **yes**.

### Edit contact information

1. On the **home** screen, swipe up.

The main menu appears.

2. Tap **contacts**.

3. Select the contact whose information you want to edit.

The **options** menu appears.

4. Tap **edit**.

The contact's details appear.

5. Edit the desired details.

6. Tap **save**.

### Assign a ringtone to a contact

1. On the **home** screen, swipe up.

The main menu appears.

2. Tap **contacts**.

3. Select a contact.

The **options** menu appears.

4. Tap **assign ringtone**.

5. Use one of the following methods to select a ringtone:

- Tap **standard tones**, and do the following actions:

- a. Select a ringtone.

The **options** menu appears.

- b. Tap **play** to listen to the ringtone, or tap **select** to assign the ringtone to your contact.

- c. If you tapped **play** and want to select the ringtone, tap the ringtone again, and then tap **select**.

- Tap **phone tones**, and do the following actions:
  - a. Locate the folder that contains the desired ringtone.
  - b. Select the desired ringtone.  
The **options** menu appears.
  - c. Tap **play** to listen to the ringtone, or tap **select** to assign the ringtone to your contact.
  - d. If you tapped **play** and want to select the ringtone, tap the ringtone again, and then tap **select**.

The ringtone is assigned to the contact.

### Assign an image to a contact

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **contacts**.
3. Select a contact.  
The **options** menu appears.
4. Tap **assign image**.
5. Locate the folder that contains the desired image.
6. Select the image.  
The image is assigned to the contact.

### Assign a speed dial number to a contact

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **contacts**.
3. Select any contact.
4. Tap **speed dial**.
5. Select a speed dial number.  
The **options** menu appears.
6. Tap **assign**.  
The **select contact** screen appears.

## Contacts

7. Select the contact that you want to assign the speed dial number to.
8. If you have multiple phone numbers for the contact, select the number that you want to use for speed dialing.

### Send a contact's business card via multimedia message or Bluetooth

#### » To send a contact's business card via a multimedia message:

1. On the **home** screen, swipe up.  
The main menu appears.
2. Select the contact whose information you want to send.  
The **options** menu appears.
3. Tap **send business card > via MMS**.  
The **MMS preview** screen appears.
4. Tap **options** , and then tap **send**.
5. Select a recipient using one of the following methods:
  - Tap **from contact**, and then select a contact.
  - Tap **enter new number**, enter the phone number, and then tap **save** .
  - Tap **email**, write the email address, and then tap **save** .The **recipient list** screen appears
6. Select the recipient.  
The **options** menu appears.
7. Tap **send**.  
You are asked to confirm the sending of the multimedia message.
8. Tap **yes**.

**» To send a contact's business card via Bluetooth:**

1. On the **home** screen, swipe up.  
The main menu appears.
2. Select the contact whose business card you want to send.  
The **options** menu appears.
3. Tap **send business card > via Bluetooth**.
4. If you are asked if you want to turn on Bluetooth, tap **yes**.  
Your modu™ T phone searches for a device, and then a message appears with a list of found devices.
5. Select the desired Bluetooth device, and then tap **select**.  
After the recipient accepts the file, a message notifies you that the file was sent.

**Store contact information**

You can copy all your contacts or a specific contact to your SIM card, and you can choose where you want contact information to be saved when you create a new contact.

**Copy a contact to your SIM card**

**NOTE:** When you copy a contact from your phone memory to the SIM card, some of the information may not be copied. Depending on the SIM card that you have, one of the following sets of information is copied with the contact:

- The contact's name and one number
- The contact's name, three phone numbers for the contact, and the contact's email address

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **contacts**.

## Contacts

3. Select the contact that you want to copy to your SIM card.  
The **options** menu appears.
4. Tap **advanced > copy to SIM**.  
You are asked if you want to begin the copying process.
5. Tap **yes**.

### Copy all contacts to your SIM card



**NOTE:** When you copy a contact from your phone memory to the SIM card, some of the information may not be copied. Depending on the SIM card that you have, one of the following sets of information is copied with the contact:

- The contact's name and one number
- The contact's name, three phone numbers for the contact, and the contact's email address

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **contacts**.
3. Select any contact.  
The **options** menu appears.
4. Tap **advanced > copy all to SIM**.  
You are asked if you want to begin the copying process.
5. Tap **yes**.

### Select the memory to use for saving new contacts

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **contacts**.
3. Select any contact.  
The **options** menu appears.

4. Tap **advanced > change source**.
5. Tap one of the following options:
  - **phone**: saves new contacts to your phone's memory.
  - **SIM card**: saves new contacts to your SIM card.

### Check how much space is left for contacts on your phone and SIM card

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **contacts**.
3. Select any contact.  
The **options** menu appears.
4. Tap **advanced > memory status**.  
The **memory status** screen indicates the number of contacts saved in your phone memory and SIM card, and the remaining amount of space left for contacts in your phone memory and SIM card.

## Text messages (SMS)

### Text messages (SMS)

#### Send a text message

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **messages > new message**.  
The keypad appears.
3. Write your text message.
4. Tap **send** .
5. Do one of the following actions:
  - Tap **select contact**, select the contact(s) that you want to send the message to, and then tap **OK**.
  - Tap **enter number**, enter the phone number of the recipient, and then tap **save** .

When writing a text message, you can use any of the following options by tapping **options** :

<b>Send</b>	Sends your text message.
<b>message preview</b>	Displays your message in a full-screen view. To close the <b>message preview</b> screen, tap <b>close</b>  .
<b>add symbol</b>	Displays the symbol keys. Tap <b>close</b> to return to the letter keys.
<b>change language</b>	Displays a list of languages. Tap the language that you want to select.

---

### writing options

Displays the following options:

**Abc**: changes the capitalization mode to uppercase for the first letter of a word in a sentence.

**abc**: changes the capitalization mode to all lowercase letters.

**ABC**: changes the capitalization mode to all uppercase letters.

**123**: changes the keypad to number mode.

**NOTE**: The language that you select determines the capitalization modes that are available.

---

### predictive text

Turns the predictive text mode on or off. Predictive text mode is off by default. For more information, see **Predictive text** on page 62.

---

### insert template

Displays a list of templates and then inserts the text from the template into your text message.

---

### save as draft

Saves your text in the **drafts** folder.

---

## Keypad shortcuts for writing messages

When writing a text message, you can use the following keypad shortcuts:

- Tap  key to erase a letter.
- Touch and hold  key to erase all text.
- Tap the **A/a/123** key to switch between the capitalization modes.

## Text messages (SMS)



**NOTE:** The capitalization modes that are available depend on the selected language.

- Tap **Symbol** to display the symbol keypad.
- On the symbol keypad, tap  to switch between the smiley face keypad and the symbol keypad.
- On the symbol keypad or smiley face keypad, tap **Close** to return to the main keypad.
- Touch and hold the text display area to see a full-screen preview of your message.

### Send a text message from the contact list

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **contacts**.
3. Select the name of the recipient or search for a contact (see **Search for a contact** on page 49).  
The **options** menu appears.
4. Tap **send message**.
5. If you have multiple phone numbers for the contact, select the desired number.
6. Write your text message.
7. Tap **send** .

### Send a text message from the call log

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **call log**.
3. Select the call log that contains the number where you want to send the message.

4. Select the call from the number where you want to send the message.  
The **options** menu appears.
5. Tap **send message**.
6. Write your text message.
7. Tap **send** .

### Send a text message using a predefined template

Your modu™ T phone comes with predefined text message templates to help you write messages quickly—for example, "I will be home late."

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **messages > templates > text messages**.  
The **SMS templates** screen displays a list of predefined templates.
3. Select the desired template.  
The **options** menu appears.
4. Tap **use in message**.  
The keypad appears.
5. (Optional) Add text to the message.
6. Tap **send** .
7. Do one of the following actions:
  - Tap **select contact**, select the contact(s) that you want to send the message to, and then tap **OK**.
  - Tap **enter number**, enter the phone number of the recipient, and then tap **save** .

## Text messages (SMS)

### Predictive text

Predictive text enables you to write text quickly. As you write letters, the predictive text mode "predicts" the word that you want to write and enters the correct letter for you. When you write i predictive text mode, the groups of letters are underlined.

#### » To turn on predictive text:

- Do one of the following actions:
  - On the keypad, touch and hold the **symbol** key .
  - On the keypad, tap **options** , and then tap **predictive text > on**.

When you write, an underline appears under the letter groups.

#### » To turn off predictive text:

- Touch and hold the **XT9** key .

### Write a text message using predictive text

1. Find the key that includes the first letter of the word that you want to write, and tap the key once. For example, if you want to write "call", tap the **abc** key once.



**NOTE:** The letter that you want may not appear in the text display area until you finish entering all of the letters in the word.

2. Find the keys for the remaining letters of the word, and tap each key once.



**NOTE:** A different word might appear in the text display area while you are writing but when you finish, the correct word replaces that one.

3. If the word that you want to write does not appear in the text display area, tap the **XT9** key  repeatedly until the desired word appears.  
If the phone does not suggest the word that you want to write and a question mark symbol **?** appears at the end of the set of letters, do these actions:
  - a. Tap the **spell** key.
  - b. Write the word, and tap the **space** key . Predictive text resumes.

### View a new text message

When you receive a text message, your modu T phone tells you that you have a new message.

1. Tap **view**.

The inbox appears. The **unread messages** icon  indicates messages that you haven't read.

2. Select the desired unread message.

### » To check how many unread messages you have:

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **messages**.
3. Look at the number next to inbox (for example, "2/10"). The first number indicates how many unread messages you have. The second number indicates the total number of messages that you have.

## Text messages (SMS)

### View a text message

#### » To view a text message in your inbox:

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **messages > inbox**.  
Your list of messages appears.
3. Select the message that you want to view.

#### » To view a text message in one of your folders (**sent items, drafts, or outbox**):

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **messages**.
3. Select the desired folder.  
Your list of messages appears.
4. Select the message that you want to view.  
The **options** menu appears.
5. Tap **open**.

### View information about a text message

#### » To view information about a text message in your inbox:

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **messages > inbox**.  
Your list of messages appears.
3. Select the message whose information you want to view.
4. Tap **options** .
5. Tap **view details**.

### » To view information about a text message in one of your folders (sent items, drafts, or outbox):

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **messages**.
3. Select the folder that contains the message whose information you want to view.  
Your list of messages appears.
4. Select the message.  
The **options** menu appears.
5. Tap **view details**.

### Reply to a text message

#### » To reply to a message that you are viewing:

1. On the **message** screen, tap **options** .
2. Tap **reply**.  
The keypad appears.
3. Write your text message.
4. Tap **send** .

#### » To reply to a message that is in your inbox:

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **messages > inbox**.
3. Select the desired text message.
4. Tap **options** .
5. Tap **reply**.  
The keypad appears.
6. Write your text message.
7. Tap **send** .

## Text messages (SMS)

### Forward a text message

#### » To forward a message that you are viewing:

1. On the **message** screen, tap **options** .
2. Tap **forward**.  
The keypad appears.
3. (Optional) Write additional text.
4. Tap **send** .
5. Do one of the following actions:
  - Tap **select contact**, select the contact(s) that you want to forward the message to, and then tap **OK**.
  - Tap **enter number**, enter the phone number of the recipient, and then tap **save** .

#### » To forward a message that is in your inbox or another message folder:

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **messages**.
3. Select the folder of the message that you want to forward (**inbox**, **sent items**, **drafts**, or **outbox**).
4. Select the desired text message.
5. Tap **options** .
6. Tap **forward**.  
The keypad appears.
7. (Optional) Write additional text.
8. Tap **send** .
9. Do one of the following actions:

- Tap **select contact**, select the contact(s) that you want to forward the message to, and then tap **OK**.
- Tap **enter number**, enter the phone number of the recipient, and then tap **save** .

### Delete a text message

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **messages**.
3. Select the folder that contains the message that you want to delete.
4. Select the desired text message.
5. Tap **options** .
6. Tap **delete**.  
You are asked if you want to delete the message.
7. Tap **yes**.

### Delete all the text messages in a folder

#### » To delete all text messages in your inbox:

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **messages > settings > clear inbox**.  
You are asked if you want to delete all the messages in the inbox.
3. Tap **yes**.

#### » To delete all text messages in one of your folders (**sent items, drafts, or outbox**):

1. On the **home** screen, swipe up.  
The main menu appears.

## Text messages (SMS)

2. Tap **messages**.
3. Select the folder that contains the messages that you want to delete.
4. Select any message.
5. Tap **options** .
6. Tap **delete all**.  
You are asked if you want to delete all the messages in the folder.
7. Tap **yes**.

### Extract a set of numbers from a text message

You can extract a set of numbers—for example, a phone number—from a text message. After you extract the phone number, you can call the number, and then save the phone number as a contact.

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **messages > inbox**.
3. Select the desired text message.
4. Tap **options** .
5. Tap **extract numbers from message**.  
If the message contains one set of numbers, the extracted set of numbers appear.  
If the message contains more than one set of numbers, the sets of numbers appear in a list.
6. If more than one set of numbers appears, select the desired set.  
The **options** menu appears.

### » To use an extracted set of numbers for a call:

1. Extract a set of numbers from a text message.
2. On the **options** menu, tap **dial**.  
The call is connected.

### » To use an extracted set of numbers for sending a message:

1. Extract a set of numbers from a text message.
2. Tap **send message**.
3. Write your text message.
4. Tap **send** .

### » To save an extracted set of numbers as a contact:

1. Extract a set of numbers from a text message.
2. Tap **save as contact**.
3. Do one of the following actions:
  - Save the number as a new contact:
    - a. Tap **new contact**.
    - b. Tap the desired number type.  
The **add contact** screen appears.
    - c. Enter any other information for the contact.
    - d. Tap **OK**.
  - Add the number to an existing contact:
    - a. Tap **existing contact**.  
The **contacts** screen appears.
    - b. Select a contact or search for a contact (see **Search for a contact** on page 49).
    - c. Tap the desired number type.
    - d. Enter any other information for the contact.
    - e. Tap **OK**.

## Text messages (SMS)

### Delivery reports

Delivery reports tell you whether a text message has reached the recipient's mobile phone successfully.

You can view your delivery reports and delete them.

To activate the **delivery report** option in your modu T phone, see **Change your text message settings** on page 177.

### View a delivery report for a text message

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **messages > delivery reports**.  
The **delivery reports** screen appears and indicates whether the text message was delivered or was undeliverable.

### Delete a delivery report

1. On the **delivery reports** screen, select the delivery report that you want to remove.  
The **options** menu appears.
2. Tap **delete**.  
You are asked if you want to delete the delivery report.
3. Tap **yes**.

### Delete all delivery reports

1. On the **delivery reports** screen, select any one of the delivery reports.  
The **options** menu appears.
2. Tap **delete all**.  
You are asked if you want to delete all delivery reports.
3. Tap **yes**.

### Multimedia messages (MMS)

A multimedia message is a message that includes a subject line and one or more images, audio files, and video files.

You can create a multimedia message in several ways:

- By selecting new message
- By selecting a contact in your contact list
- By selecting a number in your call log
- By forwarding a message from the inbox, the sent items folder, or the outbox
- By selecting a message stored in your drafts message folder
- By using a multimedia message template

A basic multimedia message consists of one page, but a multimedia message can have up to 20 pages.



**NOTE:** The maximum size of a multimedia message is 300 KB, including the text and all files, unless your service provider has a different limit.

Each page can have text and/or the following files:

- One image, audio, or video file
- Two files: one image file and one audio file

A page cannot have two files of the same type.

The subject line is the same for all the pages.

### Send a multimedia message

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **messages > new message**.  
The keypad appears.
3. Write your message. For more information, see **Send a text message** on page 58.

## Multimedia messages (MMS)



**NOTE:** In a multimedia message, you can leave the text area blank.

4. Tap **options** , and then tap **add multimedia**.
5. Tap the type of media that you want to send (**image**, **video**, or **audio**).

The message "This message will be changed to an MMS message" appears briefly, and then a screen appears for selecting the media.

6. Locate and select the folder that contains the file that you want to send.



**NOTE:** The maximum file size that can be added to a message is 300 KB, unless your service provider has a different limit. You can add the following media file types to your message:

- Images — .jpg, .jpeg, .gif, and .bmp files
- Video — .mp4 and .3gp files
- Audio — .amr, .mp3, .aac, and .midi files

1. Select the file that you want to send.
2. If you selected an audio file, do the following actions:
  - a. (Optional) From the **options** menu, tap **play** to listen to the file; if you want to choose this file, select the file again.  
The **options** menu appears.
  - b. Tap **select**.

## Multimedia messages (MMS)

The file is added to the message, and the **MMS preview** screen appears.



3. (Optional) Add a subject by doing the following actions:
  - a. Tap **options** (☰), and then tap **edit subject**.  
The keypad appears.
  - b. Write the subject, and tap **save** (✓).  
The subject appears at the top of the **MMS preview** screen.
4. Tap **options** (☰), and then tap **send**.
5. Use one of the following methods to select the message's recipient:
  - Tap **select contact**, and select a contact. For information on how to search for a contact, see **Search for a contact** on page 49.
  - Tap **enter number**, enter a phone number, and then tap **save** (✓).
  - Tap **email**, write an email address, and then tap **save** (✓).

## Multimedia messages (MMS)

The contact, phone number, or email address appears in the message's recipient list.

6. To send the message, select a message recipient. The **options** menu appears.
7. Tap **send**.  
You are asked if you want to send the message.
8. Tap **yes**.

### » To add another recipient to a multimedia message:

1. From the **recipient list** screen, select a recipient.
2. Tap **add recipient**.
3. Do one of the following actions:
  - Tap **select contact**, and select a contact. For information on how to search for a contact, see **Search for a contact** on page 49.
  - Tap **enter number**, enter a phone number, and then tap **save** ✓.
  - Tap **email**, write an email address, and then tap **save** ✓.
  - The contact, phone number, or email address is added to the message's recipient list.

### » To delete a recipient from a multimedia message:

1. From the **recipient list**, select the recipient that you want to delete.
2. Tap **delete**.  
You are asked if you want to delete the message.
3. Tap **yes**.

### » To edit the subject line of a multimedia message:



**NOTE:** In a multimedia message, you can write a subject line only after you have added a file to the message. You can also leave the subject line blank.

1. On the **MMS preview** screen, tap **options** .
2. Tap **edit subject**.  
The keypad appears.
3. Edit the subject text
4. Tap **save** .

» **To add text to a message or change your message text:**

1. On the **MMS preview** screen, tap **options** .
2. Tap **edit text**.  
The keypad appears.
3. Write your message.
4. Tap **save** .

» **To switch the position of your message text:**

A new multimedia message displays your text below the image or video. You can move the text to above the image or video.



**NOTE:** All pages in a message have the same text position. If you move the text on one page, the text position changes on all the pages.

1. On the **MMS preview** screen, tap **options** .
2. Tap **page options > switch text position**.

» **To change a message's background color:**



**NOTE:** All pages in a message have the same background color. If you change the color on one page, the color changes on all the pages.

## Multimedia messages (MMS)

1. On the **MMS preview** screen, tap **options** .
2. Tap **page options > background color**.
3. Tap the desired color.

### » To preview and send a message:

You can preview a message at any time before it is sent. Previewing enables you to listen to the attached audio files and view the attached image or video files.

1. On the **MMS preview** screen, tap **options** .
2. Tap **message preview**.

The multimedia message appears, and the attached audio and video files play. If the message has more than one page, the pages are shown in sequence.

3. Do one of the following actions:
  - Tap **play** to preview the message again.
  - Tap the Back key  to return to the **MMS preview** screen.
4. To send the message, do the following actions:
  - a. Tap **options** .
  - b. Tap **send**.
  - c. Select a message recipient.  
The **options** menu appears.
  - d. Tap **send**.  
You are asked if you want to send the message.
  - e. Tap **yes**.

### Send a multimedia message from your contact list

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **contacts**.

3. Select a contact. For information on how to search for a contact, see **Search for a contact** on page 49.  
The **options** menu appears.
4. Tap **send message**.  
The keypad appears.
5. Write and send your message. For more information about sending a multimedia message, see **Send a multimedia message** on page 71.

### Send a multimedia message to a number from your call log

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **call log**.
3. Tap the desired call log (**all calls**, **missed calls**, **outgoing calls**, or **incoming calls**).
4. Select a call.
5. Tap **send message**.  
The keypad appears.
6. Write and send your message. For more information about sending a multimedia message, see **Send a multimedia message** on page 71.

### Add a page to a multimedia message

1. On the **MMS preview** screen, tap **options** .
2. Tap **page options > insert new page**.  
A new multimedia message page appears.
3. Add message text to the new page by doing the following actions:
  - a. On the **MMS preview** screen, tap **options** .
  - b. Tap **edit text**.
  - c. Write your message.

## Multimedia messages (MMS)

- d. Tap **save** .
4. Add an image, video, or audio file to the new page by doing the following actions:



**NOTE:** Each page can have text and/or the following files:

- One image, audio, or video file
- Two files: one image file and one audio file

A page cannot have two files of the same type.

The maximum file size that can be added to a message is 300 KB, unless your service provider has a different limit.

- a. On the **MMS preview** screen, tap **options** .
- b. Tap **image options**, **video options** or **audio options**.
- c. Tap **insert saved image/video/audio**.
- d. Locate the desired folder.
- e. Locate and select the folder that contains the file that you want to send.
- f. Select the file that you want to add to the message.  
The file is added to the new page.

### » To replace an image, video, or audio file attached to a message page:



**NOTE:** The **replace** option is available only if there is a file of the same type added to that page of the message.

1. On the **MMS preview** screen, tap **options** .
2. Tap **image/video/audio options**.
3. Tap **replace with saved image/video/audio**.
4. Locate the desired folder.

5. Select the file that you want to add to the message.  
The old file is deleted from the message page, and the new file is added.

» **To delete an image, video, or audio file from a message page:**



**NOTE:** The **delete** option is available only if the message page contains a file of the type that you select.

1. On the **MMS preview** screen, tap **options** .
2. Tap **image/video/audio options**.
3. Tap **remove inserted image/video/audio**.  
The file is deleted from the message page.

### Save or retrieve a draft version of a multimedia message

» **To save a multimedia message to the drafts folder:**

1. On the **MMS preview** screen, tap **options** .
2. Tap **save to drafts**.
3. When asked if you want to save the message to the drafts folder, tap **yes**.  
The message is saved in the drafts folder.

» **To retrieve and use a draft multimedia message:**

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **messages > drafts**.
3. Select the draft message that you want to retrieve.  
The **options** menu appears.
4. Do any of the following actions with the draft message:

## Multimedia messages (MMS)

- Tap **open**, and edit and send the message.



**NOTE:** If you save this message again in the **drafts** folder, the edited version will replace the original draft message. Tap **forward**, and then edit and send the message.

- The message opens for editing and sending to new recipients.



**NOTE:** If you save this message again in the **drafts** folder, it will be saved as a new draft message.

### Delete a draft multimedia message

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **messages > drafts**.  
The **options** menu appears.
3. Tap **delete**.  
You are asked if you want to delete the message.
4. Tap **yes**.

### Delete all draft multimedia messages

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **messages > drafts**.  
The **options** menu appears.
3. Tap **delete all**.  
You are asked if you want to delete all the messages.
4. Tap **yes**.

### Reply to a multimedia message

1. On the **home** screen, swipe up.

The main menu appears.

2. Tap **messages > inbox**.
3. Select a message.  
The **options** menu appears.
4. Tap **reply**.  
The **message editor** screen appears.
5. Write your reply and send the message. For more information about sending a multimedia message, see **Send a multimedia message** on page 71.



**NOTE:** The phone number is already in the message's recipient list.

### Forward a multimedia message from a message folder

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **messages**.
3. Tap the folder that holds the message that you want to forward (**inbox**, **sent items**, **drafts**, or **outbox**).
4. Select a message.  
The **options** menu appears.
5. Tap **forward**.  
The **message editor** appears with the subject, message text, and files from the original message.
6. (Optional) Add a subject, message text, or files; or replace or delete the existing ones.
7. Tap **options** .
8. Tap **send**.
9. Use one of the following methods to specify the message's recipient:

## Multimedia messages (MMS)

- Tap **select contact**, and select a contact. For information on how to search for a contact, see *Search for a contact* on page 49.
  - Tap **enter number**, enter a phone number, and then tap **save** .
  - Tap **email**, write an email address, and then tap **save** .
- The contact, phone number, or email address appears in the message's recipient list.
10. To send the message, select a message recipient. The **options** menu appears.
  11. Tap **send**.  
You are asked if you want to send the message.
  12. Tap **yes**.

### View the details of a multimedia message

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **messages**.
3. Tap a message folder (**inbox**, **sent items**, **drafts**, or **outbox**).
4. Select a message.
5. Tap **options** .
6. Tap **view details**.

### Change the amount of time for a multimedia message page to be displayed

1. On the **MMS preview** screen, tap **options** .
2. Tap **page options > page duration**.  
The keypad appears.
3. Enter the amount of time that you want each message page to be displayed.



**NOTE:** This value is for all pages in the message.

4. Tap **save** .

### Delete a page from a multimedia message

1. On the **MMS preview** screen, tap **options** .
2. Tap **page options > delete page**.

### Navigate between pages in a multimedia message

- On the **MMS preview** screen, tap **options** , and do one of the following actions:
  - Tap **next page**.
  - Tap **previous page**.

### Delete a multimedia message from a message folder

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **messages**.
3. Tap a message folder (**inbox**, **sent items**, **drafts**, or **outbox**).
4. Select a message.  
The **options** menu appears.
5. Tap **delete**.  
You are asked if you want to delete the message.
6. Tap **yes**.

### Delete all multimedia messages from a message folder

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **messages**.
3. Tap a message folder (**inbox**, **sent items**, **drafts**, or **outbox**).
4. Select a message.

## Multimedia messages (MMS)

The **options** menu appears.

**5.** Tap **delete all**.

You are asked if you want to delete all messages in the selected folder.

**6.** Tap **yes**.

The messages are deleted, and the selected message folder is empty.

## Email messages

You can create an email message in several ways:

- By tapping **new email**
- By selecting a contact from your contact list
- By forwarding an email message from the email inbox, sent items folder, or outbox
- By selecting an email message stored in your drafts email folder



**NOTE:** The maximum size of an email message, including attachments, is 1 MB, unless your service provider has a different limit.

## Send an email message

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **messages > email > new email**.
3. Add recipients to the email message by doing the following actions:
  - a. Tap **recipients**.  
The **options** menu appears.
  - b. Tap **edit**, tap **options** , and then tap **add**.
  - c. Do one of the following actions:
    - Tap **select contact**, select one or more contacts from your contact list, and then tap **OK**.



**NOTE:** Only those contacts that have an email address are displayed.

- Tap **enter email**, write the recipient's email address, and then tap **save** .

## Email messages

4. Add a subject for your message by doing the following actions:
  - a. Tap **subject**.  
The **options** menu appears.
  - b. Tap **edit**, write the subject of the email message, and then tap **save** .
5. (Optional) Select a different email account for sending the message, by doing the following actions:



**NOTE:** To set up an email account for your phone, see *Add a new email account* on page 186

- a. Tap **from**.  
The **options** menu appears.
  - b. Tap **edit**.  
The list of email accounts that are set up in your phone appears.
  - c. Select the email account that you want to use.  
A message confirms that the email message will be sent from the selected account, and the email account name (the name that you assigned to this email profile) appears in the **from** box on the new **email** screen.
6. Write the email text by doing the following actions:
    - a. Tap **text**.  
The **options** menu appears.
    - b. Tap **edit**, and write the email text.  
If the **add signature** option is set to **on** and you already created a signature in your phone, the signature will be added to the end of your email text.



**NOTE:** To save a signature and set the **add signature** option to **on**, see *Change your email settings* on page 185.

- c. Tap **save** .
7. (Optional) Add an attachment to the email message by doing the following actions:



**NOTE:** The number of attached files and their total size is displayed in the **attachments** box.

- a. Tap **attachment**.  
The **options** menu appears.
  - b. Tap **edit**, tap **options** , and tap **add**.
  - c. Locate the folder with the file that you want to attach to the message.
  - d. Select the file that you want to attach.  
The file is attached to the message, and the **attachments** screen appears.
8. (Optional) Add a priority indicator to your email message by doing the following actions:
- a. On the **new email** screen, tap any item.  
The **options** menu appears.
  - b. Tap **priority**, and then tap **high**, **normal** (the default setting), or **low**.  
The priority is changed, and the **new email** screen appears.
9. Send the email message by doing the following actions:
- a. On the **new email** screen, tap any item.  
The **options** menu appears.



**NOTE:** If your email message has no recipients, the **send** option is not shown.

- b. Tap **send**.

## Email messages

The email message is sent, and a copy is saved in the **sent items** folder if the **save sent email** option is set to **on**.



**NOTE:** To set the **save sent email** option to **on**, see *Change your email settings* on page 185.

### » To add recipients to an email message:

1. On the **new email** screen, tap **recipients**.  
The **options** menu appears.
2. Tap **edit**.  
The **recipient list** screen appears.
3. Select any recipient.  
The **options** menu appears.
4. Tap **add**, and do one of the following actions:
  - Tap **select contact**, select one or more contacts from your contact list, and then tap **OK**.
  - Tap **enter email**, write the email address, and then tap **save** ✓.

### » To change an email recipient's email address:

1. On the **new email** screen, tap **recipients**.  
The **options** menu appears.
2. Tap **edit**.  
The **recipient list** screen appears.
3. Select a recipient.  
The **options** menu appears.
4. Tap **edit**.
5. Write the new email address, and tap **save** ✓.

**» To delete a recipient from an email message:**

1. On the **new email** screen, tap **recipients**.  
The **options** menu appears.
2. Tap **edit**.  
The **recipient list** screen appears.
3. Select a recipient.  
The **options** menu appears.
4. Tap **delete**.  
You are asked if you want to delete the recipient.
5. Tap **yes**.

**» To move a recipient from the to line to the cc or bcc line of an email message:**

1. On the **new email** screen, tap **recipients**.  
The **options** menu appears.
2. Tap **edit**.  
The **recipient list** screen appears.
3. Select a recipient.  
The **options** menu appears.
4. Tap **change to/cc/bcc**.
5. Do one of the following actions:
  - Tap **cc** if you want this recipient's name to be visible to other recipients of the message.
  - Tap **bcc** if you do not want other recipients of the message to see this recipient's name.

**» To view an attachment of an email message:**

1. On the **new email** screen, tap **attachment**.  
The **options** menu appears.
2. Tap **edit**.

## Email messages

The **attachments** screen appears.

3. Select the file that you want to view.

The **options** menu appears.

4. Tap **view**.

The attachment appears or plays.

5. Tap the Back key  to return to the **attachments list** screen.

### » To add another attachment to an email message:

1. On the **new email** screen, tap **attachment**.

The **options** menu appears.

2. Tap **edit**.

The **attachments** screen appears.

3. Select a file from the **attachments** list.

The **options** menu appears.

4. Tap **add**.

5. Locate the folder with the file that you want to attach to the message.

6. Select the file that you want to attach.

### » To delete an attachment from an email message:

1. On the **new email** screen, tap **attachment**.

The **options** menu appears.

2. Tap **edit**.

3. Select a file from the **attachments** list.

The **options** menu appears.

4. Tap **delete**.

You are asked if you want to delete the attachment.

5. Tap **yes**.

## Send an email message from your contact list

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **contacts**.
3. Select the contact that you want to send an email to.  
The **options** menu appears.
4. Tap **send email**.  
The **new email** screen appears, with the selected contact as a recipient.
5. Write your email message, and send it. For more information, see **Send an email message** on page 85.

## Save or retrieve a draft version of an email message

### » To save a draft version of an email message:

1. On the **new email** screen, tap any item.  
The **options** menu appears.
2. Tap **save to drafts**.  
You are asked if you want to save the message to the drafts folder.
3. Tap **yes**.

### » To retrieve and send a draft email message:

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **messages > email > drafts**.
3. Select the draft message that you want to retrieve.  
The **options** menu appears.
4. Do any of the following actions with the draft message:
  - Tap **edit**, and edit and send the message.

## Email messages



**NOTE:** If you save this email message again in the drafts folder, the edited version replaces the original draft version.

- Tap **send**.  
The email message is sent, and a copy is saved in the **sent items** folder if the **save sent email** option is set to **on**.



**NOTE:** To set the **save sent email** option to **on**, see **Change your email settings** on page 185.

- Tap **forward**, edit the message and add recipients if you want, and then send the message.



**NOTE:** If you save this email message again in the **drafts** folder, it is saved as a new draft email message.

## Receive an email message

In the email folders, the following icons are used:

- The @ icon appears next to each email message.
- The icon appears next to each email message with one or more attachments.
- The icon indicates an unread email message.
- The icon indicates an unread email message with one or more attachments.

New incoming email messages are stored in the email inbox. You can receive up to 50 email messages. When you reach that limit, no new email messages can come in until you delete messages.

The number of messages in each email folder is displayed next to the folder name. In addition, the inbox has the number of new messages displayed.

Your phone can be set to periodically check for new email messages. This interval can be set by you from the values available in the email account settings. You can also set this feature to off, and the phone will only check for new email messages when you request it. For more information on setting **auto check**, see ***Make changes to an email account*** on page 188.

You can limit the size of your incoming email messages or receive just the email sender and subject line. For more information, see ***Change your general email settings*** on page 185.

### » To receive an email message:

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **messages > email**.
3. If the **auto check interval** option in the email account profile is set to **off**, or you want to retrieve email messages immediately, without waiting for the phone to check automatically, tap **retrieve emails from server**.
4. Tap **inbox**.
5. If the **download** option is set to **only headers**, do the following actions:
  - a. Select an email message.  
The **options** menu appears.
  - b. Tap **view**.

## Email messages

You are asked if you want to download this email message.

- c. Tap **yes**.

The email viewer opens, displaying the text and the sender's email address.

6. If the **download** option is set to receive the complete email including text and attachments, do the following actions:
  - a. Select an email message.  
The **options** menu appears.
  - b. Tap **view**.  
The **email viewer** screen opens, displaying the text and the sender's email address.

### View and save an email attachment

1. On the **email viewer** screen, tap **options** .
2. Tap **attachment**.
3. Select the attachment that you want to view or save.  
The **options** menu appears.
4. To view or listen to the attachment, tap **view**.
5. To save the attachment, tap **save**.  
If an attachment with this name already exists in the **media** folder, you are asked if you want to overwrite the existing file.
6. Tap **yes**.  
The attachment is saved to the **media** folder.

### Save the contact information of recipients of an email message

1. On the **email viewer** screen, tap **options** .
2. Tap **attachment**.

3. Select the recipient whose contact information you want to save.  
The **options** menu appears.
4. Do one of the following actions:
  - Add a recipient to your contacts by tapping **assign to contact**.
  - Update the contact information of a recipient by tapping **update contact**.

### Reply to the sender of an email message

#### » To reply to the sender of an email message from the email viewer screen:

1. On the **email viewer** screen, tap **options** .
2. Tap **reply**.  
The **new email** screen appears, with the sender of the original message in the **recipient** box. All other parts of the message have the same information as the original email message.
3. Create and send your reply. For more information, see **Send an email message** on page 85.

#### » To reply to the sender of an email message from the home screen:

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **messages > email**.
3. Select the folder that contains the email message that you want to reply to.
4. Select the desired email message.

## Email messages

The **options** menu appears.

5. Tap **reply**.

The **new email** screen appears, with the sender of the original message in the **recipient** box. All other parts of the message have the same information as the original email message.

6. Write and send your reply. For more information, see **Send an email message** on page 85.

### Reply to the sender and all recipients of an email message

» **To reply to the sender and all recipients of an email message from the email viewer screen:**

1. On the **email viewer** screen, tap **options** .

2. Tap **reply all**.

The **new email** screen appears. Your reply will be addressed to the sender of the email message and all other recipients of the message. All other parts of the message have the same information as the original email message.

3. Write and send your reply. For more information, see **Send an email message** on page 85.

» **To reply to the sender and all recipients of an email message from the home screen:**

1. On the **home** screen, swipe up.

The main menu appears.

2. Tap **messages > email**.

3. Select the folder that contains the email message that you want to reply to.

4. Select the desired email message.

The **options** menu appears.

**5. Tap *reply all*.**

The **new email** screen appears. Your reply will be addressed to the sender of the email message and all other recipients of the message. All other parts of the message have the same information as the original email message.

**6. Write and send your reply. For more information, see *Send an email message* on page 85.****Forward an email message****» To forward an email message from the email viewer screen:**

**1.** On the **email viewer** screen, tap **options** .

**2. Tap *forward*.**

The **new email** screen appears. The **recipient** box is empty. All other parts have the same information as the original email message.

**3.** Write and send the email message. For more information, see *Send an email message* on page 85.

**» To forward an email message from the home screen:**

**1.** On the **home** screen, swipe up.

The main menu appears.

**2.** Tap **messages > email**.

**3.** Select the folder that contains the email message that you want to forward.

**4.** Select the desired email message.

The **options** menu appears.

**5.** Tap **forward**.

## Email messages

The **new email** screen appears. The **recipient** box is empty. All other parts have the same information as the original email message.

6. Write and send the email message. For more information, see ***Send an email message*** on page 85.

### Delete an email message

» **To delete an email message from the email viewer screen:**

1. On the **email viewer** screen, tap **options** .
2. Tap **delete**.  
You are asked if you want to delete the email message.
3. Tap **yes**.

» **To delete an email message from the home screen:**

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **email**.
3. Tap the email folder that contains the message that you want to delete (**inbox**, **outbox**, **sent items**, or **drafts**).
4. Select the email message that you want to delete.  
The **options** menu appears.
5. Tap **delete**.  
You are asked if you want to delete the message.
6. Tap **yes**.

### Delete all email messages from an email folder

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **email**.
3. Tap an email folder (**inbox**, **outbox**, **sent items**, or **drafts**).

4. Select any email message.  
The **options** menu appears.
5. Tap **delete all**.  
You are asked if you want to delete all messages in the selected folder.
6. Tap **yes**.

## Music Player

### Music Player

#### Add music to your modu™ T phone

You can add music to your modu T phone by using it as a USB mass storage device, or by using modu™ PC Suite.

After you add music to your modu T phone, your list of music is updated or refreshed automatically when you tap **music** from the main menu.

#### » To add music to your modu T phone via the USB cable:

1. Connect the micro USB connector on your USB data cable to the micro USB port on your modu T phone, and then connect the other end of the cable to your computer.
2. Tap **pc connection**.  
A window appears displaying a few options for viewing your modu T phone on your computer.
3. Select the option to view your modu T phone files and folders.
4. On your computer, copy the music files to the **Music** folder on your modu T phone drive.

#### » To add music to your modu T phone using modu™ PC Suite:

- See the modu™ PC Suite help.


#### Play a song

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **music**.
3. Use one of the following methods to play a song or songs:
  - Tap **play all**.

The phone plays the first song in the **all songs** list, and then plays the rest of the songs in the list.

- Select a specific genre, artist, album, or song:
  - a. Tap **genres**, **artists**, **albums**, or **all songs**.
  - b. Select the desired genre, artist, album, or song.  
The **options** menu appears.
  - c. Tap **play**.

The selected song of the genre, artist, or album begins to play.

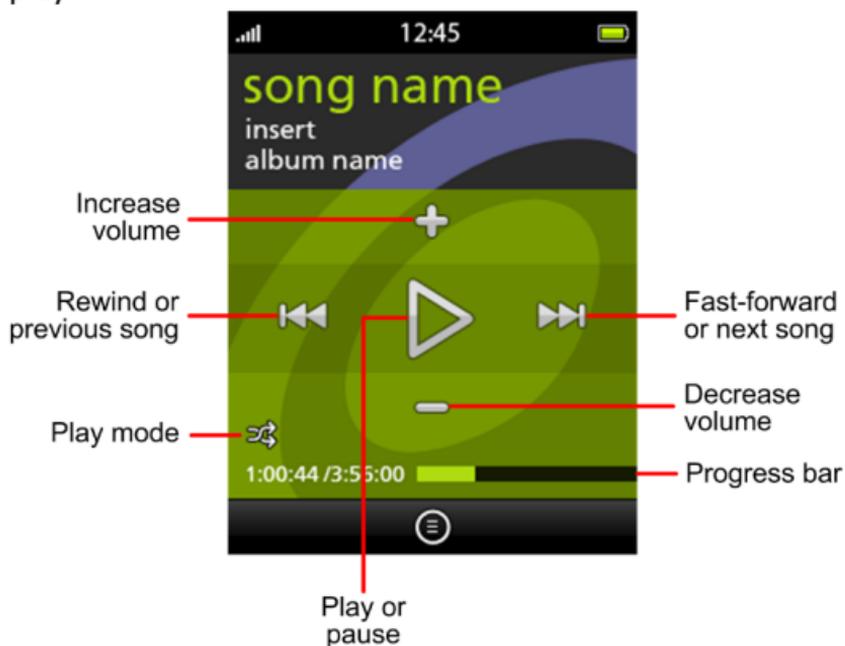

The **music player** screen displays information about the song that is playing.

4. Do any of the following actions:
  - To fast-forward a song, touch and hold **fast forward** .

## Music Player

The time and progress bar indicate how far you have fast-forwarded the song.

- To rewind a song, touch and hold **rewind** . The time and progress bar indicate how far you have rewound the song.
- To pause a song, tap **pause** .
- To skip to the previous song, tap **rewind** .
- To skip to the next song, tap **fast-forward** .

### Adjust the volume

- Tap  to increase the volume.
- Tap  to decrease the volume.

### Adjust the equalizer

You can adjust the tone and audio frequency of the songs that you play.

1. On the **music player** screen, tap **options** , and then tap **equalizer**.
2. Tap an equalizer setting: **flat**, **band**, **dance**, or **full bass**.

### Use the headset

For information about using the headset, see Use the headset in the Calls chapter.

### View information about a song

» **To view information about a song in the all songs list:**

1. On the **home** screen, swipe up. The main menu appears.
2. Tap **music > all songs**.

3. Select the desired song.  
The **options** menu appears.
4. Tap **view details**.

» **To view information about a song in your list of genres, artists, or albums:**

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **music**.
3. Locate the song by doing one of the following actions:
  - Tap **genres**, and then do the following actions:
    - a. Select the genre.  
The **options** menu appears.
    - b. Tap **open**.
    - c. Select the artist.  
The **options** menu appears.
    - d. Tap **open**.
    - e. Select the album.  
The **options** menu appears.
    - f. Tap **open**.
    - g. Select the song whose details you want to view.
  - Tap **artists**, and then do the following actions:
    - a. Select the artist.  
The **options** menu appears.
    - b. Tap **open**.
    - c. Select the album.  
The **options** menu appears.
    - d. Tap **open**.
    - e. Select the song whose details you want to view.
  - Tap **albums**, and then do the following actions:

## Music Player

- a. Select the album.  
The **options** menu appears.
  - b. Tap **open**.
  - c. Select the song whose details you want to view.
4. Tap **view details**.

### Set your play mode

You can control the order in which your songs play by selecting one of the four play modes:

Icon	Play mode	Description
	<b>shuffle</b>	Plays all songs in random order and stops after the last song is finished.
	<b>repeat one</b>	Repeats the song that is currently playing.
	<b>repeat all</b>	Plays all songs in alphabetical order by song title and stops after the last song is finished.

#### » To select a play mode:

1. On the **music player** screen, tap **options** .
2. Tap **play mode**.
3. Select a play mode: **shuffle**, **repeat one**, or **repeat all**.

### Playlists

Two playlists are automatically created as you play music: **recent songs** and **most played**. You cannot edit or delete these playlists. Each of these playlists can contain up to 25 songs. You can create up to 10 of your own playlists. Each of your playlists can contain up to 100 songs.

### View a playlist

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **music > playlists**.  
The **options** menu appears.
3. Tap **open**.
4. Select the desired playlist.  
The **options** menu appears.
5. Tap **open**.

### Start playing songs in a playlist

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **music > playlists**.  
The **options** menu appears.
3. Tap **open**.
4. Select the desired playlist.  
The **options** menu appears.
5. Tap **play**.

### Create a new playlist

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **music > playlists**.  
The **options** menu appears.
3. Tap **open**.
4. Select any playlist.  
The **options** menu appears.
5. Tap **new playlist**.  
The keypad appears.
6. Write the name of the new playlist, and tap **save** .

## Music Player

The **add music** screen appears.

7. Tap one of the following options: **add songs**, **add album**, **add artist**, or **add genre**.
8. Select the items that you want to add to the playlist.  
A check mark appears in the box next to each item that you select.
9. Tap **OK**.

### Add songs to a playlist

You can add up to 100 songs to a playlist.

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **music > playlists**.  
The **options** menu appears.
3. Tap **open**.
4. Do one of the following actions:
  - If your playlist is empty, tap **options** .
  - If your playlist contains songs, do the following actions:
    - a. Select a playlist.  
The **options** menu appears.
    - b. Tap **open**.
    - c. Select any song.  
The **options** menu appears.
5. Tap **add to list**.  
The **add music** screen appears.
6. Tap one of the following options: **add songs**, **add album**, **add artist**, or **add genre**.
7. Tap the items that you want to add to the playlist.  
A check mark appears in the box next to each item that you select.

8. Tap **OK**.

### Remove songs from a playlist

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **music > playlists**.  
The **options** menu appears.
3. Tap **open**.
4. Select the playlist from which you want to remove songs.  
The **options** menu appears.
5. Tap **open**.
6. Select any song.  
The **options** menu appears.
7. Tap **remove songs**.
8. Tap the items that you want to remove from the playlist.  
A check mark appears in the box next to each item that you select.
9. Tap **OK**.

### Rename a playlist

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **music > playlists**.  
The **options** menu appears.
3. Tap **open**.
4. Select the playlist that you want to rename.  
The **options** menu appears.
5. Tap **rename**.  
The keypad appears.
6. Write the new name, and tap **save** .

## Music Player

### Delete a playlist

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **music > playlists**.  
The **options** menu appears.
3. Tap **open**.
4. Select the playlist that you want to delete.  
The **options** menu appears.
5. Tap **delete**.  
You are asked if you want to delete the playlist.
6. Tap **yes**.

### Start a song by clapping your hands

If you and a friend (or more than one friend) both have modu T phones, with the same song on your modu T phones, you can create a stereo effect when playing the song. When the **clap to play** option is selected, you can clap your hands once to signal both modu T phones to start playing the same song at the same time.

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **music**.
3. Locate the song that you want to play by doing one of the following actions:
  - Tap **genres**, and then do the following actions:
    - a. Select the genre.  
The **options** menu appears.
    - b. Tap **open**.
    - c. Select the artist.  
The **options** menu appears.

- d. Tap **open**.
  - e. Select the album.  
The **options** menu appears.
  - f. Tap **open**.
  - g. Select the song.
  - Tap **artists**, and then do the following actions:
    - a. Select the artist.  
The **options** menu appears.
    - b. Tap **open**.
    - c. Select the album.  
The **options** menu appears.
    - d. Tap **open**.
    - e. Select the song.
  - Tap **albums**, and then do the following actions:
    - a. Select the album.  
The **options** menu appears.
    - b. Tap **open**.
    - c. Select the song.
4. Tap **clap to play**.

## Alarm clock

### Alarm clock

You can set three types of alarms: a one-time alarm, an alarm that is repeated daily, and an alarm that is repeated weekly. You can set up to five alarms.

The default snooze time is five minutes. You can tap **snooze** up to five times.

### Set an alarm

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **alarm clock > new alarm**.
3. Tap **time**.
4. Change the time by tapping the up arrow or the down arrow in the hour area and the minute area. To change the hour or minutes, do the following actions:
5. Change the **am/pm** setting by tapping the up arrow or the down arrow in the **am/pm** area.
6. Tap **OK**.
7. Select how often the alarm will sound, by tapping **repeat** and then tapping one of the following options:
  - **once** to have the alarm sound only one time
  - **daily** to have the alarm sound every day
  - **custom** to have the alarm sound weekly. Then do the following actions:
    - a. Tap the day on which you want the alarm to sound every week.
    - b. Tap **OK**.
8. (Optional) Select a ringtone for the alarm by tapping **ringtone** and then using one of the following methods:

- Tap **standard tones**:
    - a. Select a ringtone.  
The **options** menu appears.
    - b. Tap **play** to listen to the ringtone, or tap **select** to assign the ringtone to your contact.
    - c. If you tapped **play** and want to select the ringtone, tap the ringtone again, and then tap **select**.
  - Tap **phone tones**:
    - a. Locate the desired ringtone by selecting the appropriate folder(s).
    - b. Select a ringtone.  
The **options** menu appears.
    - c. Tap **play** to listen to the ringtone, or tap **select** to assign the ringtone to your contact.
    - d. If you tapped **play** and want to select the ringtone, tap the ringtone again, and then tap **select**.
9. To have your modu™ T phone vibrate when the alarm sounds, tap vibrate, and then tap **on**.
10. Tap **save**.

### Turn an alarm off or on

If you want to keep the settings for an alarm but do not want it to sound, you can turn it off instead of deleting it. When you want to use the alarm again, you can turn it back on.

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **alarm clock**, and then select the alarm that you want to turn off or on.  
The **options** menu appears.
3. Tap **off** or **on**.

## Alarm clock

When an alarm is turned off, the alarm icon changes to .

### Change the settings for an alarm

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **alarm clock**, and then select the alarm whose settings you want to change.  
The **options** menu appears.
3. Tap **edit**.
4. Change the desired options.
5. Tap **save**.

### Delete an alarm

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **alarm clock**, and then select the alarm that you want to delete.  
The **options** menu appears.
3. Tap **delete**.  
You are asked if you want to delete the alarm.
4. Tap **yes**.

### Gallery

Use the gallery to view, manage, and send images and videos. You can also set an image as your wallpaper background for the **home** screen.

For information about copying images or videos to your modu™ T phone, see ***Copy images and videos to your modu T phone*** on page 120.


### Images

#### View an image

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **gallery > images**.
3. Select the desired image.  
The **options** menu appears.

## Gallery

### 4. Tap **open**.

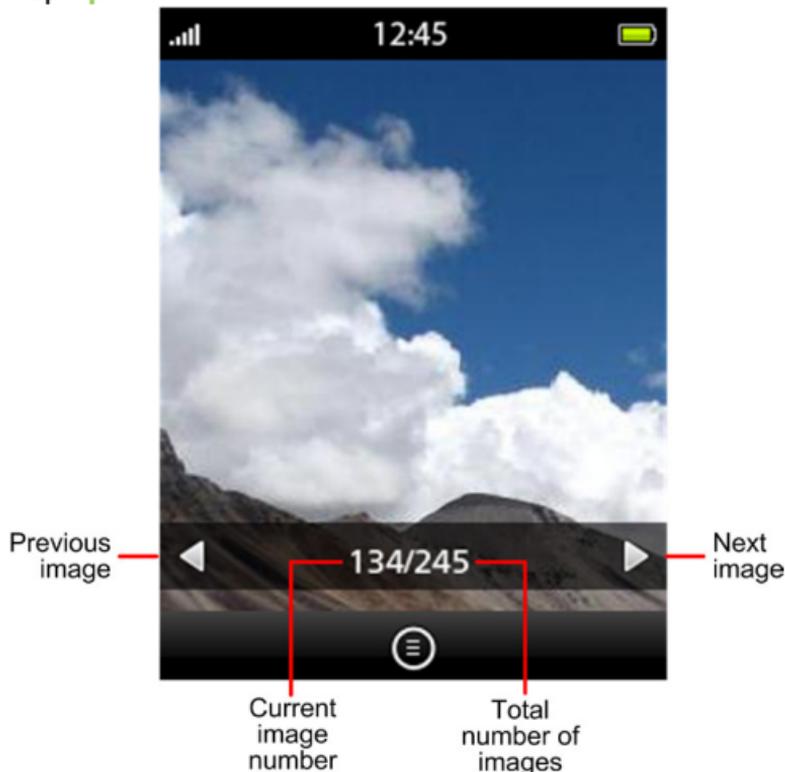

#### » To view the previous or next image in the gallery:

- Below the image, tap the arrow on the left (for the previous image) or the right (for the next image).

#### » To view your image in full-screen mode:

1. On the **view image** screen, tap **options** (☰).

2. Tap **full screen**.



3. Tap the arrow on the left to view the previous image or tap the arrow on the right to view the next image.
4. Tap the Back key  to return to the **view image** screen.

» **To rotate an image:**

1. On the **view image** screen, tap **options** .
2. Tap **rotate**, and then tap the number of degrees by which you want to rotate the image.  
The image is rotated clockwise, and a preview of the change that you made to the image appears.
3. To save the change that you made, tap **options** , and then tap **save**.  
You are asked to confirm the change.
4. Tap **yes**.  
The keypad appears.

## Gallery

5. Set the name of the image by doing one of the following actions:
  - Keep the original file name:
    - a. Tap **save** .
    - You are asked if you want to replace the file name.
    - b. Tap **yes**.
  - Change the file name:
    - a. Write the new name.
    - a. Tap **save** .

### » To resize an image:

1. On the **view image** screen, tap **options** .
2. Tap **resize**, and then tap the percentage by which you want to resize the image.

The image is resized, and a preview of the change that you made to the image appears.
3. To save the change that you made, tap **options** , and then tap **save**.

You are asked to confirm the change.
4. Tap **yes**.

The keypad appears.
5. Set the name of the image by doing one of the following actions:
  - Keep the original file name:
    - a. Tap **save** .
    - You are asked if you want to replace the file name.
    - b. Tap **yes**.
  - Change the file name:
    - a. Write the new name.

- a. Tap **save** .

### Set an image as your wallpaper

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **gallery > images**.
3. Select the desired image.  
The **options** menu appears.
4. Tap **set as wallpaper**.

### View a slide show

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **gallery > images**.
3. Select the image with which you want to start the slide show.  
The **options** menu appears.
4. Tap **slide show**.  
Your image files are displayed one by one in full-screen mode.
5. Tap the Back key  to stop the slide show.

### View information about an image

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **gallery**.
3. Select the desired image.  
The **options** menu appears.
4. Tap **view details**.

## Gallery

### Delete an image

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **gallery**.
3. Select the image that you want to delete.  
The **options** menu appears.
4. Tap **delete**.  
You are asked if you want to delete the image.
5. Tap **yes**.

## Videos

### Play a video

You can play videos in MP4, 3GP, 3G2, ASF, K3G, SKM, and AMC formats.

#### » To play a video:

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **gallery > videos**.
3. Select the video that you want to watch.  
The **options** menu appears.
4. Tap **play**, and then tap **play** .
5. Do any of the following actions:
  - To pause the video, tap **pause** .
  - To fast-forward a video, touch and hold **fast forward** .
  - To rewind, touch and hold **rewind** .
  - To view the next video, tap **fast forward** .
  - To view the previous video, tap **rewind** .

**» To play a video in full-screen mode:**

1. On the **video player screen**, before or during video playback, tap **options** .
2. Tap **play in full screen**.  
The video plays in full-screen mode until the end of the video or until you tap the Back key  to switch back to the standard mode.

**» To stop a video:**

1. On the **video player** screen, during video playback, tap **options** .
2. Tap **stop**.  
The video stops and returns to the beginning of the file.

**Adjust the volume**

1. On the **video player** screen, tap **options** .
2. Tap **volume**.
3. Tap  or  to increase or decrease the volume.
4. Tap **OK** to return to the video player screen.

**Set the fast-forward and rewind speed**

1. On the **video player** screen, tap **options** .
2. Tap **skip value**.  
The current skip value is indicated with an arrow.
3. Tap the desired skip value.

**Rename a video**

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **gallery > videos**.
3. Select the video that you want to rename.

## Gallery

The **options** menu appears.

4. Tap **rename**.

The keypad appears.

5. Write a new name.



**NOTE:** The modu T phone remembers the file name extension for you.

6. Tap **save** .

### Delete a video

1. On the **home** screen, swipe up.

The main menu appears.

2. Tap **gallery > videos**.

3. Select the video that you want to delete.

The **options** menu appears.

4. Tap **delete**.

You are asked if you want to delete the video.

5. Tap **yes**.

### Copy images and videos to your modu T phone

You can copy images and videos to your modu T phone by using it as a USB mass storage device or by using modu™ PC Suite.

#### » To copy images and videos to your modu T phone via the USB data cable:

1. Connect the micro USB connector on your data cable to the micro USB port on your modu T phone, and then connect the other end of the cable to your computer.

2. Tap **pc connection**.

On your computer, a window appears displaying a few options for viewing your modu T phone.

3. Select the option to view your modu T phone files and folders.
4. Do the following actions:
  - On your computer, copy the desired image files to the **Media > Image** folder on the modu T phone drive.
  - On your computer, copy the desired video files to the **Media > Video** folder on the modu T phone drive.

» **To copy images and videos using modu™ PC Suite:**

See the modu™ PC Suite help.

### Send an image or video via Bluetooth

» **To send an image via Bluetooth:**

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **gallery > images**.
3. Select the desired picture.  
The **options** menu appears.
4. Tap **send file via > Bluetooth**.
5. If you are asked to turn Bluetooth on, tap **yes**.  
The modu T phone searches for Bluetooth devices within the phone's range and lists the devices that are found.
6. Select the desired Bluetooth device.  
The **options** menu appears.
7. Tap **select**.  
A series of screens indicate that a connection was made and the image was sent.

» **To send a video via Bluetooth:**

1. On the **home** screen, swipe up.

## Gallery

The main menu appears.

2. Tap **gallery > videos**.

3. Select the desired video.

The **options** menu appears.

4. Tap **send file via > Bluetooth**.

5. If you are asked to turn Bluetooth on, tap **yes**.

The modu T phone searches for Bluetooth devices within the phone's range and lists the devices that are found.

6. Select the desired Bluetooth device.

The **options** menu appears.

7. Tap **select**.

A series of screens indicates that a connection was made and the video was sent.

### Receive an image or video via Bluetooth

1. When a message asks you to accept an incoming file from a Bluetooth device, tap **yes**.

Depending on the type of file, the phone saves it to the **images** folder or the **videos** folder.

If a file exists with the same name, a sequential number is added to the name of the new file.



**NOTE:** The following media formats are supported:

- Image: BMP, JPG, PNG, and GIF
- Video: MP4, 3GP, 3G2, ASF, K3G, SKM, and AMC
- Audio: MP3, AMR, AAC, and SMF

You are asked if you want to view the file.

1. Tap **yes**.

## Profiles

You can choose from four profiles: normal, silent, vibrate, or flight mode.

The normal profile contains settings for sound-related features such as ringtones, ring volume, message tones, and other notification tones.

The silent profile mutes all the sound-related features.

The vibrate profile makes your modu™ T phone vibrate for all sound-related features.

The flight mode profile turns off your connection to your service provider's network so that you no longer receive a cellular signal (as often required when you are in flight). You cannot make or receive calls or messages, or connect to the Internet, but you can use all of the other applications on your modu T phone.

To personalize the normal profile, see ***Change the tone settings*** on page 164.

### Select a profile

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **profiles**.  
A filled circle indicates the currently selected profile.
3. Tap the desired profile.  
The **options** menu appears.
4. Tap **on**.  
The selected profile is activated.

### Rename the normal profile

1. On the **home** screen, swipe up.  
The main menu appears.

## Profiles

2. Tap **profiles**.
3. Tap **normal**.  
The **options** menu appears.
4. Tap **rename**.
5. Delete the name "normal", and write a new name.
6. Tap **save** .

### Personalize the settings of the normal profile

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **profiles**.
3. Tap **normal**.  
The **options** menu appears.
4. Tap **settings**.  
The tone settings appear.
5. Change the desired settings. For more information, see ***Change the tone settings*** on page 164.

### Reset the normal profile settings to the factory default settings

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **profiles**.
3. Tap **normal**.  
The **options** menu appears.
4. Tap **reset to default**.  
You are asked whether you to reset the profile settings.
5. Tap **yes**.

## Bluetooth®

You can use Bluetooth wireless technology to connect your modu™ T phone to another device.

### Turn Bluetooth on or off

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **Bluetooth > turn on/off**.
3. Tap **on** or **off**.

### Set your Bluetooth settings

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **Bluetooth > settings**.
3. Tap **my visibility**, and do one of the following actions:
  - Tap **show** to make your modu T phone visible to other devices.
  - Tap **hide** to make your modu T phone invisible to other devices.
4. (Optional) Change the nickname for your modu T phone by doing the following actions:
  - a. Tap **my Bluetooth name**.
  - b. Write the new nickname.
  - c. Tap **save** .

### Add a Bluetooth device to your modu T phone

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **Bluetooth > add a device**.

## Bluetooth®

Your modu T phone searches for devices, and then a list displays the devices that were found.

3. Select the desired device.

The **options** menu appears.

4. Tap **add device**.

5. Enter your PIN2 code, and tap **save** .

A message appears on the device that you want to add and asks the owner to accept your device.

Once the owner of the device accepts your device and enters your code, the device is added to your list.



**NOTE:** You can be connected to only one Bluetooth device at a time.



**TIP:** You can add a Bluetooth device on the **my devices** screen: select any device, and then tap **add device**.

## Manage your Bluetooth devices

### View a list of devices that you added to your phone

1. On the **home** screen, swipe up.

The main menu appears.

2. Tap **Bluetooth > my devices**.

### Change the name of a device

1. On the **my devices** screen, select the desired device.

The **options** menu appears.

2. Tap **rename**.

3. Write the new name.

4. Tap **save** .

### Delete one or all devices

1. On the **my devices** screen, do one of the following actions:

- To delete one device, select that device.
- To delete all devices, select any device.

The **options** menu appears.

2. In the **options** menu, do one of the following actions:

- To delete the selected device, tap **delete**.  
You are asked if you want to delete the selected device.
- To delete all the devices in your list, tap **delete all**.  
You are asked if you want to delete all the devices.

3. Tap **yes**.

## Web browser

### Web browser

With the web browser, you can view web pages that were designed for viewing on a computer as well as web pages that were designed for mobile devices.

Browsing the web requires an Internet access point that was defined on your device by your service provider.



**NOTE:** Internet fees are charged only during data transfer, for example, opening a web page, downloading a file, sending and receiving email.

### Access the browser

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **browser > home page**.  
The **browser** screen appears, displaying the home page defined in your settings. If no home page has been defined, a blank web page appears.

### Browse the web

You can view your home page, bookmarks, stored pages, and pages in the history list.



**IMPORTANT:** Use only services that you trust and that offer adequate security and protection against harmful software.  
Install and use applications and other software only from trusted sources, such as applications that have passed Java Verified™ testing.

### » To open your home page:

1. On the **browser** screen, tap **options**

**2. Tap `open > home page`.**

Your home page appears. If no home page has been defined, a blank page appears.

**» To open a bookmarked page:****1. On the `browser` screen, tap `options` .****2. Tap `open > bookmarks`.**

The `bookmarks` screen appears, displaying the list of bookmarks that you have defined.

**3. Select the desired bookmark.**

The `options` menu appears.

**4. Tap `open`.**

The `browser` screen appears, displaying the selected bookmarked page.

**» To open a stored page:****1. On the `browser` screen, tap `options` .****2. Tap `open > stored pages`.**

The `stored pages` screen appears, displaying the list of web pages that you have saved.

**3. Select the desired stored page.**

The `options` menu appears.

**4. Tap `open`.**

The `browser` screen appears, displaying the selected stored page.

**» To open a page from the history list:****1. On the `browser` screen, tap `options` .****2. Tap `open > history`.**

## Web browser

The **history** screen appears, displaying categories that refer to when the web pages were last viewed: **today**, **yesterday**, and **before yesterday**.

3. Select the desired category.

A list of pages in the selected category appears.

4. Select the desired page.

The **options** menu appears.

5. Tap **open**.

A list of links appears.

6. Select the desired link.

The **options** menu appears.

7. Tap **open**.

The **browser** screen appears, displaying the page at the link that you selected.

### » To open a specific web page:

1. On the **browser** screen, tap **options** .

2. Tap **open new page > edit new address**.

The keypad appears.

3. Write the desired web address.

4. Tap **save** .

The **browser** screen appears, displaying the web page.

## Use Google™ to search the web

You can use Google™ to search the web.

1. On the **browser** screen, go to [m.google.com](http://m.google.com).



**TIP:** You can set Google™ as your home page or bookmark it for easier access.

2. Tap the **Google search** box.

The keypad appears.

3. Write the text that you want Google™ to search for.
4. Tap **save** .
5. Tap the **Google Search** button in the browser.  
Google™ searches the web for the text, and the results are displayed in the browser.

### Search for text on a web page

You can search for text on the current web page.

1. On the **browser** screen, tap **options** .
2. Tap **search text**.  
The keypad appears.
3. Write the text that you want to search for, and then tap **save** .
- The browser searches for the text within the current web page and displays a message if the text is not found.
4. If the text is found, tap **next** to go to the next occurrence of the text on the page, or **previous** to go back to the previous occurrence on the page.

### Bookmark a web page in your browser

1. On the **browser** screen, tap **options** .
2. Tap **add bookmark**.  
The **add bookmarks** screen appears, displaying the bookmark's name and web address.
3. Tap **save**.  
The **browser** screen appears.

### Store a web page for offline viewing

1. On the web page that you want to store, tap **options** .
2. Tap **this page > store offline**.  
A message indicates that the web page has been stored.

## Web browser

### Exit the web

1. On the **browser** screen, tap **options** .
2. Tap **exit browser**.

### Navigate saved web pages

1. On the **browser** screen, tap **options** .
2. Tap **navigate**.
3. Do any of the following actions:
  - Reload the current page by tapping **refresh**.
  - View the page at the next link stored in the browser's memory, by tapping **forward**.
  - View the page at the previous link stored in the browser's memory, by tapping **backward**.
  - Navigate to a specific stored page by doing these actions:
    - a. Tap **navigate > visual navigate**.
    - b. Swipe right or left (or tap the right arrow or left arrow) to move up or down through the list to the desired link.
    - c. Tap **options** .
    - d. Tap **select**.

The **browser** screen appears, displaying the page at the selected link.

### Manage bookmarks

On the **bookmarks screen**, you can do the following actions:

- Open and view a bookmarked page in the browser
- Change the name and Web address of a bookmark
- Manually add a bookmark

- Remove a bookmark

### Access the bookmarks screen

1. On the **browser** screen, tap **options** .
2. Tap **manage > bookmarks**.  
The **bookmarks** screen appears, displaying the list of bookmarks.

### Open a bookmarked page

1. On the **bookmarks** screen, select the desired bookmark.  
The **options** menu appears.
2. Tap **open**.

### Change a bookmark's name and web address

1. On the **bookmarks** screen, select the desired bookmark.  
The **options** menu appears.
2. Tap **edit**.  
The **edit bookmarks** screen appears, displaying the bookmark's name and web address.
3. To change the bookmark's name, do the following actions:
  - a. Tap the **name box**.  
The keypad appears.
  - b. Write a new name.
  - c. Tap **save** .
4. To change the bookmark's web address, do the following actions:
  - a. Tap the **URL box**.  
The keypad appears.
  - b. Write a new URL (web address).
  - c. Tap **save** .

## Web browser

### Manually add a bookmark

1. On the **bookmarks** screen, select any bookmark.  
The **options** menu appears.
2. Tap **add**.  
The **add bookmarks** screen appears, displaying the bookmark's name and web address.
3. To name the bookmark, do the following actions:
  - a. Tap the **name** box.  
The keypad appears.
  - b. Write a new name.
  - c. Tap **save** .
4. To add the web address, do the following actions:
  - a. Tap the **URL** box.  
The keypad appears.
  - b. Write a new URL (web address).
  - c. Tap **save** .

### Remove a bookmark from the list of bookmarks

1. On the **bookmarks** screen, select the bookmark that you want to remove.  
The **options** menu appears.
2. Tap **delete**.  
You are asked if you want to delete the selected bookmark
3. Tap **yes**.

### Manage stored pages

On the **stored pages screen**, you can do the following actions:

- Open and view a stored page in the browser
- View the properties of a stored page
- Send a stored page's address in a text message
- Remove a stored page

- Remove all of the stored pages

### Access the stored pages screen

1. On the **browser** screen, tap **options** .
2. Tap **manage > stored pages**.  
The **stored pages** screen appears, displaying the list of stored pages.

### Open a stored page

1. On the **stored pages** screen, select the desired page.  
The **options** menu appears.
2. Tap **open**.  
The **browser** screen appears, displaying the stored page.

### View the properties of a stored page

1. On the **stored pages** screen, select the desired page.  
The **options** menu appears.
2. Tap **properties**.  
The **properties** screen appears, displaying the name, address, and size of the stored page.
3. Touch and hold a property to see the entire text for that property.
4. Tap the Back key  to return to the **stored pages screen**.

### Send a stored page's address in a text message

1. On the **stored pages** screen, select the desired page.  
The **options** menu appears.
2. Tap **send address**.  
The keypad appears, containing the address of the stored page.

## Web browser

- (Optional) Add text to the message.
- Tap **send** .  
The **options** menu appears.
- Do one of the following actions:
  - Send to recipients by selecting them from the contact list:
    - Tap **from contact list**.
    - Select one or more contacts from the list (to search for a contact, see **Search for a contact** on page 49).
    - Tap **OK**.  
The message is sent and is saved in the **sent items** folder.
  - Send to a recipient by entering a phone number:
    - Tap **enter new number**.
    - Enter the recipient's phone number.
    - Tap **save** .  
The message is sent and is saved in the **sent items** folder.

### Remove a stored page from the list of stored pages

- On the **stored pages** screen, select the page that you want to remove.  
The **options** menu appears.
- Tap **delete**.  
You are asked if you want to delete the selected stored page.
- Tap **yes**.

### Remove all stored pages from the list of stored pages

- On the **stored pages** screen, select any stored page.

The **options** menu appears.

2. Tap **delete all**.
3. You are asked if you want to delete all of the stored pages.
4. Tap **yes**.

## Manage history

The **history** screen displays your recently visited web pages sorted by date into lists under the headings **today**, **yesterday**, and **before yesterday**. You can do the following actions:

- Open and view links from the history lists
- Remove one or all lists, pages, and links

## Access the history screen

1. On the **browser** screen, tap **options** .
2. Tap **manage > history**.



**TIP:** You can also view and manage history on the **browser** screen: tap **options** , and then tap **open > history**.

## Open a link from the history screen

1. On the **history** screen, select the **today**, **yesterday**, or **before yesterday** list.  
The **options** menu appears.
2. Tap **open**.  
The list of web pages for the selected category appears.
3. Select the desired web page.  
The **options** menu appears.
4. Tap **open**.  
The web page's links appear.
5. Select the desired link.

## Web browser

The **options** menu appears.

6. Tap **open**.

### Remove a list from the history screen

1. On the **history** screen, select the history list that you want to remove.

The **options** menu appears.

2. Tap **delete**.

The selected list is removed, and the **history** screen appears.

### Remove all lists from the history screen

1. On the **history** screen, select any one of the history lists.  
The **options** menu appears.

2. Tap **delete all**.

All the history lists are removed, and the **history** screen appears.

### Remove a web page from the history list

1. On the **today**, **yesterday**, or **before yesterday** screen, select the web page that you want to remove from the history list.  
The **options** menu appears.

2. Tap **delete**.

The web page is removed from the history list, and the **today**, **yesterday**, or **before yesterday** screen appears again.

### Remove all web pages from a history list

1. On the **today**, **yesterday**, or **before yesterday** screen, select any one of the web pages.

The **options** menu appears.

2. Tap **delete all**.

All the web pages are removed from the list, and the **today**, **yesterday**, or **before yesterday** screen appears again.

## FM radio

### FM radio

You can manually tune in to a station or choose to automatically search for a station.

To use the FM radio, you need to connect your modu headset or a compatible headset to your modu™ T phone. For information about connecting the headset, see **Use the headset** on page 36.

### Listen to the radio

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **FM radio**.



3. You can perform the following actions:
  - To listen to the next station or the previous station, tap  or .
  - To adjust the volume, tap  or .

- To switch to the speaker, tap **options** , and then tap **switch to speaker**.
- To switch to the headset, tap **options** , and then tap **switch to headset**.

### Search for stations automatically

You can automatically search for up to 10 stations, which are then saved in your station list.



**NOTE:** Stations that are found in the automatic search overwrite the stations previously saved in the station list.

1. On the **FM radio** screen, tap **options** .
2. Tap **quick 10 stations**.



**NOTE:** You can tap **stop** to end the search before the scan is completed. The stations that were found before you stopped the scan are then saved in your station list.

When the phone finishes searching, the **station list** screen appears, listing the stations found by the scan.

### Select and listen to a radio station from the station list

1. On the **station list** screen, tap the desired station.
  2. Tap **options** .
  3. Tap **select station**.
- The **FM radio** screen appears, and the radio begins to play.

### Manually tune to a frequency

You can manually set a frequency between 87.5 MHz and 108.0 MHz.

1. On the **FM radio** screen, tap **options** .

## FM radio

2. Tap **enter station manually**.  
The keypad appears.
3. Enter the desired frequency (between 87.5 MHz and 108.0 MHz).
4. Tap **close** to set the frequency and return to the **FM radio** screen.

### Manually save a station in the station list

1. On the **FM radio** screen, tune the radio to the desired frequency.
2. Tap **options** .
3. Tap **save station**.  
The **station list** screen appears.
4. Select the desired station list location that you want to use (0 through 9).  
If the location is empty, a message indicates that the station was saved.
5. If you are asked whether you want to overwrite the selected location, tap **yes**.

### Manage your radio stations

1. On the **FM radio** screen, tap **options** .
2. Tap **station list**.  
The **station list** screen displays your list of saved stations.  
From the **station list** screen, you can do the following actions:
  - Listen to a station
  - Remove a station from the list
  - Change a station's settings

### Change a radio station's name or frequency

1. On the **station list** screen, tap the desired station.

2. Tap **options** .
3. Tap **edit station**.  
The **edit station set** screen displays your list of stations containing the name of the station and its frequency.
4. To change the radio station's name, do the following actions:
  - a. Tap **name**.  
The keypad appears.
  - b. Write a new name.
  - c. Tap **save** .
5. To change the radio station's frequency, do the following actions:
  - a. Tap **frequency**.  
The keypad appears.
  - b. Enter a new frequency.
  - c. Tap **close**.

### Remove a station from the station list

1. On the **station list** screen, tap the desired station.
2. Tap **options** .
3. Tap **delete station**.  
You are asked if you want to delete the selected station.
4. Tap **yes**.

## Calculator

### Calculator

Make simple and complex calculations, and perform calculations with numbers stored in the calculator's memory.

#### Make a calculation

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **calculator**.
3. Enter the first number of the calculation.  
The number appears in the calculator's display area.
4. Select the desired mathematical operation:
  - Tap **function**  $\times \frac{+}{-} \div$ , and tap a key for an arithmetic operation: **+** for adding, **-** for subtracting,  **$\times$**  for multiplying, or  **$\div$**  for dividing.
  - Tap **options**  $\ominus$ , and tap one of the following keys:
    - **sqrt(x)**: displays the square root of x.
    - **$x^2$** : displays the value of x squared.
    - **$1/x$** : displays the inverse of x.
    - **$x^y$** : displays x to the y power.
    - **+/-**: changes a positive number to a negative number or vice versa.
    - **Pi**: displays the value of pi to nine decimal places.
    - **MS**: adds the number to the calculator's memory. When the memory is in use, **M** appears in the calculator's display area.
    - **MR**: displays the total that is stored in the memory so that you can use the value. The current total appears in the options menu in parentheses.

- **MC**: Clears the stored total from the memory and removes **M** from the calculator's display area.
5. Continue entering numbers and using the mathematical operations as needed.
  6. Tap  to see the result.

## Games

### Games

Your modu™ T phone comes preloaded with an assortment of Skiller games:

- 4InaRow
- Tic-Tac-Toe
- PerfectHit
- Dropps
- Reversi



**NOTE:** To see the list of games and applications that you download and install, on the **home** screen swipe up, and tap **downloads**.

### Play a game

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **apps & games**, and then select the desired game.  
The game's menu appears.
3. Tap **start playing**.

## Applications

Your modu™ T phone is designed to run Java applications. Java applications enable mobile phones to interact with online web services and to participate in multi-player games. JAD and JAR files are used to package Java applications or games that can be downloaded to mobile phones.

You can download Java applications from the web directly onto your modu T phone for you to install. These applications are then accessed from the **downloads** screen.



**TIP:** Alternatively, you can download the applications to your computer and then transfer them to a folder in your phone via Bluetooth or the micro USB cable.

### Download an application

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **web > open new page > edit new address**.  
The keypad appears.
3. Write the web address of the site that provides the application that you want to download—for example, [www.snaptu.com](http://www.snaptu.com).
4. Tap **save** .
5. The **browser** screen displays the web page.
6. On the web page, tap the download link of the desired application—for example, Download Snaptu.  
You are asked if you want to download the application.
7. Tap **yes**.  
A message says that the file was saved and the Java application was verified.

## Applications



**NOTE:** If a message says that this version is already installed and asks if you want to overwrite it, tap **no**. The download is then canceled, and then the **browser** screen appears.

You are asked if you want to install the application.

**7.** Tap **yes**.

A message asks if you want to download a Java application.

**8.** Tap **yes**.

The phone downloads the application and installs it, and the **browser** screen appears.

**9.** To exit the **browser** screen, tap **options** .

**10.** Tap **exit browser**.

The main menu appears.

**11.** On the **main menu** screen, tap **downloads**.

The **downloads** screen displays the list of installed applications.

### Start an application

**1.** On the **home** screen, swipe up.

The main menu appears.

**2.** Tap **downloads**.

**3.** Select the application or game that you want to start.

The **options** menu appears.

**4.** Tap **start**.

The application starts and provides instructions for you to follow.

### View an application's properties

**1.** On the **home** screen, swipe up.

The main menu appears.

2. Tap **downloads**.
3. Select the application or game whose properties you want to view.

The **options** menu appears.

4. Tap **properties**.

The following details are displayed:

- **name**: the name of the application or game.
- **produced by**: the name of the producer of the application or game.
- **size**: the amount of memory used by the application or game.
- **version**: the software version of the application or game.
- **URL**: the producer's web address.
- **domain**: the security domain. Unsigned applications are not trusted and are assigned to untrusted domains, which restrict the application's ability to make a connection, such as to the web, or access your data. The application works, but each time the application tries to to make a connection or access your personal data , the phone asks your permission. However, you do have an option to allow the application to take these actions, one time or always, from this time on.
- **CLDC version**: the version of the Connected Limited Device Configuration (CLDC), which indicates the set of libraries and features that must be present in a Java ME device.

## Applications

- **MIDP version:** the version of the Mobile Information Device Profile (MIDP), which is part of the Java ME framework and interacts with the CLDC.

### Delete an application

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **downloads**.
3. Select the application or game that you want to delete.  
The **options** menu appears.
4. Tap **delete**.  
You are asked if you want to delete the application.
5. Tap **yes**.

### Social networking

On your modu™ T phone, you can communicate with friends and other users through private or public messages, chats, and interest groups.

The modu T phone can access social networking services through the browser or applications, which generally contain most of the functionality of the full web site.

Your modu T phone comes preloaded with the following social networking applications:

- Facebook
- YouTube
- Twitter

Social networking sites that are specially designed for mobile phones, such as MySpace and LinkedIn, are accessed through the browser and can be bookmarked.

### Access a social networking application

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **apps & games**, and select the desired social networking application.  
Depending on the application that you select, you may need to make further selections or to log on.

## File manager

### File manager

Using the file manager, you can create folders, copy and move files and folders, rename files, delete files and folders, and sort your files and folders.

Folders on your modu™ T phone can contain files and other folders.

### View the contents of a folder

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **tools > file manager**.
3. Tap the desired folder.  
The **options** menu appears.
4. Tap **open**.
5. If the selected folder contains other folders, repeat steps 3 and 4 until the desired folder is open.

### View information about a file or folder

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **tools > file manager**.
3. Select the folder that contains the file or folder that you want to find out about.  
The **options** menu appears.
4. Tap **open**.
5. If the selected folder contains other folders, repeat steps 3 and 4 until the desired folder is open.
6. Select the file or folder that you want to find out about.  
The **options** menu appears.
7. Tap **view details**.  
The **details** screen displays the following information:

- For a file: the name, date of creation, and size
  - For a folder: the name and date of creation
8. Tap **OK**.

### Create a folder

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **tools > file manager**.
3. Do one of the following actions:
  - To create a folder at the top level of the file manager, do the following actions:
    - a. Select any folder.  
The **options** menu appears.
  - To create a folder at a sub level, do the following actions:
    - a. Select the folder where you want to create the new folder.  
The **options** menu appears.
    - b. Tap **open**.  
If the selected folder contains other folders, repeat steps a and b until the desired folder is open.
    - c. If the selected folder is empty, tap **options** .
4. Tap **add folder**.  
The keypad appears.
5. Write the name of the new folder.



**NOTE:** Acceptable characters are A-Z, 0-9, \$ % - \_ @ ~ ` ! ( ) { } ^ # &. Duplicate folder names in the same folder are not allowed.

6. Tap **save** .

## File manager

### Open a file

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **tools > file manager**.
3. Tap the folder that contains the file that you want to open.  
The **options** menu appears.
4. Tap **open**.
5. If the selected folder contains other folders, repeat steps 3 and 4 until the desired folder is open.
6. Select the desired file.  
The **options** menu appears.
7. Tap **open**.

### Rename a file



**NOTE:** You can rename files but not folders.

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **tools > file manager**.
3. Tap the folder that contains the file to be renamed.  
The **options** menu appears.
4. Tap **open**.
5. If the selected folder contains other folders, repeat steps 3 and 4 until the desired folder is open.
6. Select the file to be renamed.  
The **options** menu appears.
7. Tap **rename**.  
The keypad appears, and the text display area shows the current name of the file.
8. Write a new name for the file.



**NOTE:** Acceptable characters are A-Z, 0-9, \$ % - \_ @ ~ ` ! ( ) { } ^ # &. Duplicate file names in the same folder are not allowed.



**IMPORTANT:** Be sure to include a file name extension at the end of the new file name (for example, .mp3 or .jpg). If the file name extension is changed, the phone may not be able to open the file.

9. Tap **save** .

### Send a file from your modu T phone via a multimedia message, Bluetooth, or email message

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **tools > file manager**.
3. Tap the folder that contains the file to be sent.  
The **options** menu appears.
4. Tap **open**.
5. If the selected folder contains other folders, repeat steps 3 and 4 until the desired folder is open.
6. Select the file to be sent.  
The **options** menu appears.
7. Tap **send file via**.
8. Select the method that you want to use to send the file:
  - Tap **MMS**. For more information, see **Send a multimedia message** on page 71.
  - Tap **Bluetooth**. For more information, see **Send an image or video via Bluetooth** on page 121.
  - Tap **email**. For more information, see **Send an email message** on page 85.

## File manager

### Copy a file or folder

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **tools > file manager**.
3. Select the source folder (the folder that contains the file or folder to be copied).  
The **options** menu appears.
4. Tap **open**.  
The source folder's name is displayed in the screen title.
5. If the selected folder contains other folders, repeat steps 3 and 4 until the desired folder is open.
6. Select the file or folder to be copied.  
The **options** menu appears.
7. Tap **copy**.  
The **file manager** screen appears, displaying your folders.
8. Select the destination folder (the folder that you want to move the file or folder to).  
The destination folder's name is displayed in the screen title, and the list of folders appears, with the first entry shown as **"/**".
9. If the selected folder contains other folders, repeat step 8 until the desired folder is open.
10. Tap **./** to copy the file or folder into the destination folder.  
The file or folder is in both the destination folder and the source folder.



**NOTE:** Duplicate file or folder names in the same folder are not allowed.

### Move a file or folder

1. On the **home** screen, swipe up.

The main menu appears.

2. Tap **tools > file manager**.
3. Select the source folder (the folder that contains the file or folder to be moved).  
The **options** menu appears.
4. Tap **open**.  
The source folder's name is displayed in the screen title.
5. If the selected folder contains other folders, repeat steps 3 and 4 until the desired folder is open.
6. Select the file or folder to be moved.  
The **options** menu appears.
7. Tap **move**.  
The **file manager** screen appears, displaying your folders.
8. Select the destination folder (the folder that you want to move the file or folder to).  
The destination folder's name is displayed in the screen title, and the list of folders appears, with the first entry shown as "./".
9. If the selected folder contains other folders, repeat step 8 until the desired folder is open.
10. Tap **./** to move the file or folder into the destination folder.



**NOTE:** Duplicate file or folder names in the same folder are not allowed. If the moving process fails because of a duplicate name, the file or folder remains in the source folder.

### Sort files and folders

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **tools > file manager**.

## File manager

3. Select any file or folder at any level of the file manager.  
The **options** menu appears.

4. Tap **sort by**.

5. Tap one of the following options:

- **date**
- **name**
- **type**

All files and folders are rearranged according to the selected category. The folders are listed first, then the files.

### Delete a file or folder

1. On the **home** screen, swipe up.  
The main menu appears.

2. Tap **tools > file manager**.

3. Tap the folder that contains the file or folder to be deleted.  
The **options** menu appears.

4. Tap **open**.

5. If the selected folder contains other folders, repeat steps 3 and 4 until the desired folder is open.

6. Select the file or folder to be deleted.  
The **options** menu appears.

7. Tap **delete**.

You are asked if you want to delete the file or folder.

8. Tap **yes**.

### Check your memory card's status

1. On the **home** screen, swipe up.  
The main menu appears.

2. Tap **tools > file manager**.

3. Tap any folder.

The options menu appears.

4. Tap **memory status**.

The **memory status** screen appears and displays the total memory and the free memory.

5. To return to the previously selected folder, do one of the following actions:

- Tap any line of information.
- Tap the Back key .

## Cell broadcast

### Cell broadcast

Cell broadcast messaging simultaneously delivers messages to all cell phone users in a specified geographical area. Some service providers use cell broadcast for nationwide or citywide emergency alerts, weather reports, mass messaging, and location based news. Not all providers have the cell broadcast messaging function activated in their network.

Cell broadcasts are divided into topics (also called channels), which are numbered from 0 to 999. You choose the topics that you want to receive. Contact your service provider for a list of available cell broadcast topics.

A unique type of cell broadcast is one that uses channel 50. These messages appear on your home screen, instead of in the cell broadcast inbox, while you are in the cell broadcast area. For example, an airport or a shopping mall may broadcast a welcome message while you are there. When you leave the cell broadcast area, the message is gone. You cannot disable these messages.

### View a cell broadcast message

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **messages > cell broadcast > inbox**.
3. Select a cell broadcast message.  
The **options** menu appears.
4. Tap **view**.

### Delete a cell broadcast message

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **messages > cell broadcast > inbox**.

3. Select the cell broadcast message that you want to delete.  
The **options** menu appears.
4. Tap **delete**.  
You are asked if you want to delete this cell broadcast message.
5. Tap **yes**.

## Push messages

### Push messages

Wireless Access Protocol (WAP) "push" messages allow WAP content to be automatically transferred to your phone. A WAP "push" is a specially encoded message that includes a link to a WAP or web address.

The following WAP push messages are supported:

- Push indication messages, which notify you that new WAP content is available
- Push load messages, which automatically link your phone to the content (depending on the security level set in your phone)

In addition, you can send your service provider, and receive from your service provider, other types of service requests and messages, such as activation commands for network services. This service may not be available in all regions.

### Receive a push message

Service messages can be initiated by your service provider via a phone call, text message, or the web. When you receive a service message, your modu™ T phone tells you that you have a new message.

1. Tap **close**.



**NOTE:** There is no need to view the message.

A message informs you that the new network settings were received, and asks you whether you want to install them.

2. Tap **yes**.

A message asks whether you want to apply the settings.

3. Tap **yes**.

A series of screens notifies you that the settings were applied to your modu T phone.

### View a WAP push message

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **messages > service messages**.
3. Select the desired message.  
The **options** menu appears.
4. Tap **view**.

## Settings

### Settings

#### Change the tone settings

##### Access the tone settings

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **tools > settings > tones**.

##### Select a ringtone

1. On the **tones** screen, tap **ringtone**.  
The **select ringtone** screen appears and the following options are listed:
  - **standard tones**: a list of ringtones that are provided with your modu™ T phone
  - **phone tones**: your audio files
2. Do one of the following actions:
  - Tap **standard tones**.  
A list of ringtone files appears.
  - Tap **phone tones**, and select the folder that contains the audio file that you want to use.  
Your list of audio files appears.
3. To listen to a ringtone or audio file, do the following actions:
  - a. Select the desired file.  
The **options** menu appears.
  - b. Tap **play**.
4. To select a ringtone or audio file, do the following actions:
  - a. Select the desired file.  
The **options** menu appears.



## Settings

- b. Tap **select**.

### Select phone alerts

You can assign a tone to alert you in various situations—when your phone is out of range, when the battery is low, when you touch a key on the keypad, when you receive a message, when you turn the phone on or off, and when you receive a network alert.

1. On the **tones** screen, tap **misc tones**.  
A list of alert types appears. Check marks indicate that the alert types are selected.
2. Tap an alert type that you want to assign a tone to.  
A check mark indicates that the alert type is selected.
3. If you do not want a tone to sound for a certain type of alert, tap the alert type.  
The check mark is removed.
4. Tap **OK**.

### Set your ring type

You can choose what your modu T phone should do for sound-related features: play a ringtone only; vibrate only; play a ringtone and vibrate; play a ringtone and then vibrate; or be silent.

1. On the **tones** screen, tap **ring type**.
2. Select the desired ring type.

### Change the display settings

#### Access the display settings

1. On the **home** screen, swipe up.  
The main menu appears.

2. Tap **tools > settings > display**.

### Select a wallpaper background for the home screen

1. On the **display** screen, tap **wallpaper**.
2. Do one of the following actions:
  - Select from a list of wallpaper images that are provided with your modu T phone.
  - Select one of your image files: tap **custom image**, locate the folder that contains the image that you want to use, and then select the desired image.

### Set the brightness of your screen

1. On the **display** screen, tap **brightness**.
2. Do one of the following actions:
  - Tap  to increase the brightness
  - Tap  to decrease the brightness
3. Tap **OK**.

### Change the screen-lock timer settings

To help you save battery power and avoid performing unwanted actions (such as unintentionally dialing a call), your modu T phone has an automatically locks the screen after a few seconds of inactivity. When your modu T phone screen is locked, the screen is black. You can press the Lock key to unlock the screen.

You can select the amount of time that should pass before the screen is locked.

1. On the **display** screen, tap **screen lock**.
2. Select the amount of time of inactivity that the phone should wait before locking your screen.

## Settings

### Change the language settings

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **tools > settings > phone > language**.
3. Do one of the following actions:
  - Select the desired language
  - Select **automatic** to have the language set by your service provider.

### Set the date and time

#### Access the date and time settings

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **tools > settings > phone > date and time**.

#### Turn the automatic date and time on or off

When the automatic date and time option is set to **on**, you can have the date and time set automatically by your service provider.


1. On the **date and time** screen, tap **auto time and date**.
2. Tap **on** or **off**.

### Set the time

#### » To set the time:

1. On the **date and time** screen, tap **time**.

2. Tap **set time**.

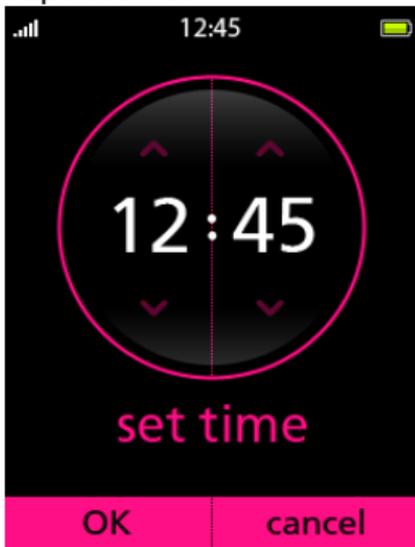

3. Tap the up arrow or the down arrow to set the hour and minutes.



**NOTE:** The am/pm option appears only if you selected **AM/PM** as your time format.

4. Tap **OK**.



**NOTE:** If **auto time and date** is set to **on**, you are asked if you want to override the automatic setting. To keep the changes that you made, tap **yes**.

» **To set the time format:**


1. On the **date and time** screen, tap **time**.
2. Tap **time format**, and select the desired time format: **AM/PM** or **24 hour**.

## Settings

### Set the date

» To change the month, day, or year:

1. On the **date and time** screen, tap **date**.
2. Tap **set date**.

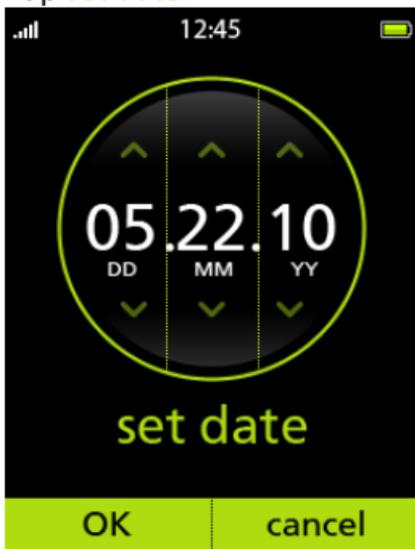

3. Tap the up arrow or down arrow to set the month, day, and year.
4. Tap **OK**.



**NOTE:** If **auto time and date** is set to **on**, you are asked if you want to override the automatic setting. To keep the changes that you made, tap **yes**.

» To change the date format:

1. On the **date and time** screen, tap **date**.
2. Tap **date format**, and select the desired format.

3. Tap **date separator**, and select the type of symbol (a slash or a dot) that you want to use to separate the month, day, and year.

## Change call settings

### Access the call settings

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **tools > settings > call features**.

### Turn call waiting on or off

1. On the **call features** screen, tap **call waiting**.
2. Do one of the following actions:
  - Tap **on** to turn call waiting on
  - Tap **off** to turn call waiting off
  - Tap **status check** to check whether call waiting is currently on or off

### Show or hide caller ID for incoming or outgoing calls

When you make a call, you can choose whether your mobile phone number appears on the recipient's phone display. You can also choose whether the phone number of the caller appears on your modu T phone's display.

1. On the **call features** screen, tap **hide number**.
2. To show or hide the caller ID of people who call you, tap **incoming caller ID**, and then do one of the following actions:
  - Tap **show incoming call number** to have the number of the caller appear on your modu T phone's display.

## Settings

- Tap **hide incoming call number** to have the words "Blocked ID" appear on your modu T phone's display instead of the caller's number.
3. To show or hide your phone number when you make a call, tap **outgoing caller ID**, and then do one of the following actions:
    - Tap **show outgoing call number** to have your mobile number appear on the recipient's phone display.
    - Tap **hide outgoing call number** to have the words "Private number" appear on the recipient's phone display instead of your mobile number.

### Turn call forwarding on

Your modu T phone can automatically forward incoming calls to another number. You select the circumstances under which your calls will be forwarded. For example, you can forward calls that come in while your line is busy or when you don't answer the phone.

1. On the **call features** screen, tap **call forwarding**.  
A list of options for forwarding calls appears: **when busy**, **when unanswered**, **when unreachable** (your phone is off or in flight mode), and **always**.
2. Tap the options that you want to turn on.
3. Tap **on**.  
The keypad appears.
4. Enter the number that you want to forward calls to, and tap **save** .

### Check the status of a call forwarding option

1. On the **call features** screen, tap **call forwarding**.

A list of options for forwarding calls appears: **when busy**, **when unanswered**, **when unreachable**, and **always**.

2. Tap the desired option.

3. Tap **status check**.

A message tells you whether call forwarding is on or off for the selected option.

### Turn a call forwarding option off

1. On the **call features** screen, tap **call forwarding**.

A list of options for forwarding calls appears: **when busy**, **when unanswered**, **when unreachable**, and **always**.

2. Tap the option that you want to turn off.

3. Tap **off**.

### Turn off call forwarding

Use this feature to turn off all of the options that you selected for call forwarding.

■ On the **call features** screen, tap **call forwarding > never**.

A message tells you that all call forwarding options are turned off.

### Restrict certain types of calls

You can prevent your mobile phone from receiving certain types of incoming calls and from making certain types of outgoing calls.

1. On the **call features** screen, tap **restrict calls**.

A list of call types appears.

2. Do one of the following actions:

- To restrict incoming calls, tap **incoming calls**, and then tap the type of calls that you want to restrict: **all incoming**, or **all incoming while roaming**.

## Settings

- To restrict outgoing calls, tap **outgoing calls**, and then tap the type of calls that you want to restrict: **all outgoing**, **all international**, or **all international except home**.
  - To restrict all calls, tap **all calls**.  
The keypad appears.
3. Enter your network password, and tap **save** .  
A message confirms that your selection has been applied.
  4. If desired, repeat steps 2 and 3 to restrict additional types of calls.

### Check the status of a call restriction

1. On the **call features** screen, tap **restrict calls**.  
A list of call types appears.
2. Do one of the following actions:
  - To check whether a call restriction for incoming calls is on or off, tap **incoming calls**, and then tap the type of calls that you want to check: **all incoming**, or **all incoming while roaming**.
  - To check whether a call restriction for outgoing calls is on or off, tap **outgoing calls**, and then tap the type of calls that you want to check: **all outgoing**, **all international**, or **all international except home**.
3. Tap the option that you want to check.  
A message tells you whether the call restriction is on or off for the selected option.

### Stop restricting certain types of calls

1. On the **call features** screen, tap **restrict calls**.

A list of call types appears.

2. Do one of the following actions:
3. Tap the desired type of calls that you want to restrict.
  - To stop restricting incoming calls, tap **incoming calls**, and then tap the type of calls that you want to stop restricting: **all incoming**, or **all incoming while roaming**.
  - To stop restrict outgoing calls, tap **outgoing calls**, and then tap the type of calls that you want to stop restricting: **all outgoing**, **all international**, or **all international except home**.

The keypad appears.

4. Enter your network password, and tap **save** .
5. If desired, repeat steps 2 and 3 to stop restricting additional types of calls.

### Stop restricting all types of calls

Use this feature to remove all the call restrictions that you selected.

1. On the **call features** screen, select **restrict calls > all calls**.  
The keypad appears.
  2. Enter your network password.
  3. Tap **save** .
- A message tells you that all call restrictions have been removed.

### Speed dial numbers

On the **speed dial** screen, you can perform the following actions:

## Settings

- View your speed dial number assignments.
- Assign empty speed dial numbers to a contact.
- Change the assignment of a speed dial number.
- Remove a contact from a speed dial number.

### View your speed dial number list

1. From the **home** screen, tap **menu > contacts**.
2. Tap any contact.  
The **options** menu appears.
3. Tap **speed dial**.  
The **speed dial** screen displays your list of speed dial numbers.

For information about using speed dial numbers, see Use speed dial numbers.

### Assign a speed dial number to a contact

1. On the **speed dial** screen, tap the desired speed dial number.
2. Tap **assign**.
3. Select the desired contact.  
A message confirms that the speed dial number has been assigned.

For information about using speed dial numbers, see Use speed dial numbers.

### Remove a contact or service number from a speed dial number

1. On the **speed dial** screen, tap the desired speed dial number.
2. Tap **remove**.

A message asks you if you want to clear the assigned speed dial number.

3. Tap **yes**.

You can now assign this number to a different contact.

### View your voicemail phone number

1. On the **home** screen, swipe up.

The main menu appears.

2. Tap **tools > settings > network**.



**NOTE:** Depending on your service provider, you may be able to edit your voicemail number by tapping **voicemail number**, entering a new voicemail number, and tapping **save** .

### Change your text message settings

1. On the **home** screen, swipe up.

The main menu appears.

2. Tap **messages > settings > text messages**.

3. For **service center**, keep the default number, which was set by your cellular service provider to enable you to send and receive text messages. If you use a different service for text messages, write the text messaging service center number that your phone should use.

4. For validity period, select the amount of time that the network keeps a text message available for a recipient:

- **maximum** (keeps the text message for the maximum amount of time that the recipient's service provider allows)
- **1 week**
- **2 days**

## Settings

- 1 day

5. For **delivery report**, tap **on** to be notified when a text message that you sent is delivered to the recipient(s) or cannot be delivered.



**NOTE:** Setting **delivery report** to **off** saves space in the phone's memory.

## Change the multimedia message settings

### Access the multimedia message settings

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **messages > settings > multimedia messages**.  
The **MMS settings** screen appears.

### Change your send settings

1. On the **MMS settings screen**, tap **send settings**.
2. For **validity period**, select the amount of time that the network keeps a multimedia message available for a recipient:
  - **maximum**: keeps the message for the maximum amount of time that the recipient's service provider allows
  - 1 week
  - 1 day
  - 12 hoursThe default is **maximum**.
3. For **delivery report**, select **on** to be notified when a message is delivered.

4. For **read report**, select **on** to be notified when a message has been read.
5. For **priority**, select the priority of your messages on the service provider's network: tap **high**, **normal (the default setting)**, or **low**.
6. For **delivery time**, select how soon messages should be sent: tap **immediate** (the default value), **1 hour**, or **12 hours**.
7. For **auto save**, select **on** to save multimedia messages in the **sent items** folder.

### Change your receive settings

1. On the **MMS settings** screen, tap **receive settings**.
2. For **home network**, select how your phone handles multimedia messages when connected to your service provider's network:
  - **manual download**: the message content is not downloaded into your phone until you allow it
  - **auto download**: the message content is automatically download into your phone
  - **deny download**: multimedia messages are not received on your phoneThe default option is **auto download**.
3. For **roaming**, select how your phone should handle multimedia messages when you're outside your service provider's network (roaming):
  - **as home**: use the same setting as your home network
  - **manual download**: the message content is not downloaded into your phone until you allow it

## Settings

- **deny download**: multimedia messages are not received on your phone

The default option is **manual download**.

4. For **read report**, select **on** to send a report to the message sender when you read a message.
5. For **delivery report**, select **on** to send a delivery report to the message sender when you receive a message.

### Change your filter settings

1. On the **MMS settings** screen, tap **filter settings**.
2. For **anonymous**, select **allow** to accept messages from anonymous senders.
3. For **max size**, select the maximum message size that your phone should accept: enter the desired size in kilobytes (the default size is 300 KB).
4. For **advertisement**, select **allow** to accept advertisement messages.

### View the status of your message folders

- On the **MMS settings** screen, tap **message status**.  
The following details are shown:
  - **Use**: displays how many messages are stored and the total number of messages allowed.
  - **Free space**: displays how much space is available for content such as multimedia messages and Java applications.

### Change the multimedia profile settings

A multimedia profile stores the settings needed to access your service provider's multimedia message center.

Your phone may come preloaded with the necessary multimedia message profile.

Contact your service provider or modu T phone retailer if you need help with these settings.

### Access the multimedia profile settings

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **messages > settings > multimedia messages > profile settings**.

### Select a multimedia profile

1. On the **profile settings** screen, select a multimedia profile.  
The **options** menu appears.
2. Tap **on**.  
The selected profile becomes your active profile for multimedia messaging.

### View a multimedia profile's settings

1. On the **profile settings** screen, select a multimedia profile.  
The **options** menu appears.
2. Tap **view**.

### Change a multimedia profile's settings

1. On the **profile settings** screen, select the multimedia profile that you want to change.  
The **options** menu appears.
2. Tap **edit**.
3. Change the desired settings. For more information about changing the settings, see **Add a multimedia profile** on page 182.

## Settings

### 4. Tap **OK**.

### Add a multimedia profile

1. On the **profile settings** screen, do one of the following actions:
  - If the phone already has profiles, select any profile and then tap **add**.
  - If the phone does not have any profiles, tap **options** , and then tap **add**.
2. Change the profile's name by doing the following actions:
  - a. Tap **profile name**.  
The keypad appears.
  - b. Write a new name.
  - c. Tap **save** .
3. Change the URL of your service provider's multimedia service center by doing the following actions:
  - a. Tap **MMSC URL**.  
The keypad appears.
  - b. Write the new URL.
  - c. Tap **save** .
4. Change the connection profile by doing the following actions:



**NOTE:** The connection profile stores the settings needed to connect to your service provider for multimedia messaging service. Your phone may come preloaded with the necessary profile.

- a. Tap **connection profile**.
  - b. Select the connection profile that you want to use.
5. Change the communications protocol used by your service provider, by doing the following actions:

- a. Tap **connection type**.
  - b. Tap the type of connection that you want to use: **HTTP** (the default type), **connection oriented**, or **no connection**.
6. Change the IP address of your service provider's WAP gateway, by doing the following actions:
  - a. Tap **WAP gateway**.  
The keypad appears.
  - b. Enter the IP address of the WAP gateway. Use the right arrow  and left arrow  to move between the four parts of the WAP gateway value.
  - c. Tap **save** .
7. Change the WAP gateway port that your service provider uses for multimedia messages by doing the following actions:
  - a. Tap **WAP gateway port**.  
The keypad appears.
  - b. Enter the value for the new WAP gateway port.
  - c. Tap **save** .
8. Change the user name used by your service provider for the multimedia service center by doing the following actions:
  - a. Tap **username**.  
The keypad appears.
  - b. Write the new user name.
  - c. Tap **save** .
9. Change the password used by your service provider for the multimedia service center by doing the following actions:
  - a. Tap **password**.  
The keypad appears.
  - b. Write the new password.

## Settings

c. Tap **save** .

10. Tap **OK** to save your changes.

## Change your email settings

To send and receive email, you need to do the following actions:

- Change your encryption settings (see **Change your general email settings** on page 185)



**NOTE:** All other settings are optional.

- Add a new email account (see **Add a new email account** on page 186)

## Change your general email settings

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **messages > email > general settings**.
3. For **from contact**, do the following actions:
  - a. Write the name that you want to appear in the **from line** of the email message.
  - b. Tap **save** .
4. For **save sent email**, tap **on** to save a copy of each email message that you send.  
The copy is saved in the **sent items** folder.



**NOTE:** Setting **save sent email** to **off** saves space in the phone's memory.

5. For **download**, do one of the following actions:
  - Tap **no restrictions** if you want to download the body of every email message.
  - Tap **only headers** if you want to download only the message headers.

## Settings

- Tap **maximum size** if you want to download the body of email messages that do not exceed a size that you select (30, 100, 300, 500, or 1024 KB).



**NOTE:** For email messages that exceed the selected size, only the headers are downloaded.

6. For **encryption**, do the following actions:



**NOTE:** Email servers require an encrypted connection for sending and receiving email.

- Tap **incoming**, and then tap **SSL/TLS**.
- Tap **outgoing**, and then tap **TLS**.

### Add a new email account

Your modu T phone can have up to three email accounts that must support IMAP or POP protocols.



**IMPORTANT:** Before adding and using an email account, make sure that you set the encryption settings. For more information, see ***Change your general email settings*** on page 185.



**TIP:** Before adding a new email account, have your email account and mail server information available.

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **messages > email > account settings > add new account**.  
The **email account editor** screen appears.
3. For **account name**, write the name that you want the **account settings** screen to display—for example, My Work Email.

4. For **connection profile**, select the connection profile to use for this email account.
5. For **email address**, write the email address for this account—for example, john.smith@gmail.com.
6. For **incoming server**, write the name of the server for retrieving your email—for example, imap.gmail.com.
7. For **incoming protocol**, select the email protocol, **IMAP4** or **POP3**, to use for this account.
8. For **incoming port**, write the port value for retrieving your email. For example, for Gmail, write "993" for IMAP4 and "995" for POP3.
9. For **auto check interval**, select how often you want your phone to check this account for new email messages.
10. For **incoming username**, write the user name for this account—for example, john.smith@gmail.com.
11. For **incoming password**, write the password for this account.
12. For **outgoing username**, write the user name for sending your email. Usually this is the same as the incoming user name—for example, john.smith@gmail.com.
13. For **outgoing password**, write the password for this account.
14. For **outgoing port**, write the port value for sending your email. For example, for Gmail, write "25" for IMAP4 and "465" for POP3.
15. For **outgoing server**, write the name of the server for sending your email—for example, smtp.gmail.com.
16. Tap **save**.

## Settings

### Activate an email account

If you have more than one email account set up in your modu T phone, you need to activate the email account that you want to use for sending and receiving mail.



**NOTE:** Only one email account can be active at one time.

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **messages > email > account settings**.
3. Select the email account that you want to activate.  
The **options** menu appears.
4. Tap **activate**.  
The activated account is indicated by a check mark.

### View an email account's settings

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **messages > email > account settings**.
3. Select the email account whose settings you want to view.  
The **options** menu appears.
4. Tap **view**.

### Make changes to an email account

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **messages > email > account settings**.
3. Select the email account that you want to view.  
The **options** menu appears.
4. Tap **edit**.  
The **email account editor** screen appears.

5. Make any desired changes (see **Add a new email account** on page 186).

### Set up a signature

A signature is text that can be automatically added to the email messages that you send.

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **messages > email > general settings**.
3. Tap **add signature**, and then tap **on** to add the text in the **signature** box to the email messages that you send.
4. Tap **signature**, write the text that you want to include in the email messages that you send, and then tap **Save** .

### Change your email deletion settings

You can decide how you want the mail server to handle the deletion of your email messages. You can have each message deleted right after you download it from the email server, or you can have the server keep the messages until you are ready to delete them.



**NOTE:** If you download only message headers, the email messages are kept on the mail server until you designate them for deletion.

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **messages > email > general settings**.
3. Tap **delete on server**, and do the following actions:
  - Tap **when downloaded**, and then tap **yes** if you want the mail server to delete your messages after you download them.

## Settings

- Tap **when downloaded on handset**, and then tap **yes** if you want the mail server to delete your messages after you delete them from your phone.  
They will be deleted the next time that you check your email.

### Delete an email account



**NOTE:** The email account that you want to remove must be inactive. For information about activating a different email account, see ***Activate an email account*** on page 188.

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **messages > email > account settings**.
3. Select the inactive email account that you want to remove.  
The **options** menu appears.
4. Tap **delete**.  
You are asked if you want to delete the account.
5. Tap **yes**.

### Change your network settings

#### Access your network settings

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **tools > settings > network > network settings**.

## Change your network connection

» To have your phone network automatically selected for you:

- On the **network settings** screen, tap **network selection > automatic**.

» To select a specific network:

1. On the **network settings** screen, tap **network selection > manual**.

The phone searches for available networks.

2. Select a network from the list.

The phone verifies the network connection that you selected.

## Change your network type

1. On the **network settings** screen, tap **network type**.

2. Select the desired network type:

- **automatic**: the type of phone network is automatically selected for you depending on your location.
- **2G**
- **3G**

## Change an application's settings

### Change the volume, vibrate, or network settings

1. On the **home** screen, swipe up.

The main menu appears.

2. Tap **downloads**.

3. Select the application or game whose settings you want to change.

## Settings

The **options** menu appears.

4. Tap **settings**.
5. For **volume**, tap **+** to increase the volume, or tap **-** to decrease the volume.
6. For **vibrate**, tap **on** to have the screen vibrate when you tap it.
7. For **network settings**, select the game profile that contains the settings needed to access your service provider's game services.



**NOTE:** Your phone may already come preloaded with the necessary game profile.

### View the memory status of an application

You can view information about available space and installed applications.

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **downloads**.
3. Select the desired application.  
The **options** menu appears.
4. Tap **settings > memory status**.

### Change an application's profile settings

#### Access the network profile settings

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **downloads**.
3. Select the application or game whose profile settings you want to change.  
The **options** menu appears.

#### 4. Tap **settings > network settings**.

### Add a profile

- On the **network settings** screen, do one of the following actions:
  - If the phone already has profiles, select any profile, and then tap **add**.
  - If the phone does not have any profiles, tap **options** , and then tap **add**.

### Activate a profile

1. On the **network settings** screen, select the profile that you want to activate.  
The **options** menu appears.
2. Tap **activate**.  
The selected profile becomes your active profile for games and applications.

### View a profile's settings

1. On the **network settings** screen, select the profile that you want to view.  
The **options** menu appears.
2. Tap **view**.

### Change a profile's settings

1. On the **network settings** screen, select the profile whose settings you want to change.  
The **options** menu appears.
2. Tap **edit**.
3. For **profile name**, write a new name.

## Settings

4. For **connection profile**, select the connection profile that you want to use.
5. For **use proxy**, select **enable** or **disable**.
6. For **proxy IP address**, enter the proxy IP address.
7. For **proxy port**, enter the new proxy port.
8. Tap **save**.

### View your connection profiles' details

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **tools > settings > connect profiles**.
3. Select the desired profile.  
The **options** menu appears.
4. Tap **view**.

## Change the phone and SIM card security settings

### Change your PIN1 code

Before you can change your PIN1 code, you must turn on your PIN lock.

#### » To turn on your PIN lock:

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **tools > settings > security > PIN1 > PIN lock**.
3. Tap **on**.  
The keypad appears.
4. Enter your PIN1 code.
5. Tap **save** .  
A message confirms that your PIN1 lock has been activated.

**» To change your PIN1 code:**

1. On the **home** screen, swipe up.  
The main menu appears.  
Tap **tools > settings > security > PIN1 > change PIN1**.  
You are asked to enter your PIN1 code.
2. Enter your PIN1 code.
3. Tap **save** .  
You are asked to enter a new PIN1 code.
4. Enter a new PIN1 code.
5. Tap **save** .  
You are asked to re-enter your new PIN1 code.
6. Enter your new PIN1 code again.
7. Tap **save** .  
A message confirms that your PIN1 code has been changed.

**Change your PIN2 code**

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **tools > settings > security > PIN2 > change PIN2**.  
You are asked to enter your PIN2 code.
3. Enter your PIN2 code.
4. Tap **save** .  
You are asked to enter a new PIN2 code.
5. Enter a new PIN2 code.
6. Tap **save** .  
You are asked to re-enter your new PIN2 code.
7. Enter your new PIN2 code again.
8. Tap **save** .  
A message confirms that your PIN2 code has been changed.

## Settings

### Change your network password

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **tools > settings > security > network password**.  
You are asked to enter your network password.
3. Enter your network password.
4. Tap **save** ✓.
5. You are asked to enter a new network password.
6. Enter a new network password.
7. Tap **save** ✓.
8. You are asked to re-enter your new network password.
9. Enter your new network password again.
10. Tap **save** ✓.  
A message confirms that your network password has been changed.

### Lock your modu T phone

You can protect your modu T phone by using the **phone lock** option. When the **phone lock** option is set to **on**, you need to enter your PIN1 code every time you turn on your modu T phone.

#### » To turn your phone lock on:

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **tools > settings > security > phone lock > phone lock**.
3. Tap **on**.  
The keypad appears.
4. Enter your lock code.
5. Tap **save** ✓.

**» To change your phone lock code:**

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **tools > settings > security > phone lock > change code**.  
You are asked to enter your lock code.
3. Enter your lock code.
4. Tap **save** .  
You are asked to enter a new lock code.
5. Enter a new lock code.
6. Tap **save** .  
You are asked to re-enter your new lock code.
7. Enter your new lock code again.
8. Tap **save** .  
A message confirms that your lock code has been changed.

**Check your software and hardware version or your IMEI code**

Your service provider may ask you to check the software version, hardware version, or IMEI code on your modu T phone.

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **tools > settings > about**.  
The software version, hardware version, and IMEI number appear.

**Reset your modu T phone**

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **tools > settings > reset phone > reset phone**.  
You are asked to confirm this process.

## Settings



**IMPORTANT:** If you reset your modu T phone, all of your data will be lost.

3. If you are sure that you want to reset the phone, tap **yes**.  
The keypad appears.
4. Enter your phone lock code (PIN1 code).
5. Tap **save** .

### Change all your settings back to the factory default settings

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **tools > settings > reset phone > reset settings only**.  
You are asked to confirm this process.



**IMPORTANT:** If you continue, all of your settings will be changed back to the factory settings.

3. If you are sure that you want to reset all your settings, tap **yes**.  
The keypad appears.
4. Enter your phone lock code (PIN1 code).
5. Tap **save** .

### Update the software version on your modu T phone

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **tools > settings > firmware update**.  
A message indicates the software version that is installed on your modu T phone, and you are asked if you want to check for an update.
3. Tap **yes**.  
Your phone searches for an update. If one is found, you are asked if you want to continue the update process.

**4. Tap **yes**.**

A message indicates that the update is being downloaded. Once the update is downloaded, you are asked if you want to install the update.



**NOTE:** The installation process can take several minutes. During this time, your phone will be in flight mode. You will not be able to make or receive calls or send or receive messages.

**5. Tap **yes**.**

Your modu T phone automatically turns off and on. The installation process begins. After the installation is finished, your modu T phone turns off and on again. The phone is then ready to use.

**Change cell broadcast topic settings****Turn on cell broadcast reception**

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **messages > cell broadcast > settings > reception**.
3. Tap **on**.

**Activate or deactivate a cell broadcast topic**

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **messages > cell broadcast > settings > topic list**.
3. From the **topic list**, select the topic that you want to activate or deactivate.  
The **options** menu appears.
4. If the topic is currently activated, tap **off** to turn off reception.

## Settings

5. If the topic is currently deactivated, tap **on** to turn on reception.

### Add a cell broadcast topic

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **messages > cell broadcast > settings > topic list**.
3. Do one of the following actions:
  - If the topic list is empty, tap **options** , and then tap **add topic**.
  - If the topic list is not empty, select any topic, and then tap **add topic**.
4. To add a **topic name**, do the following actions:
  - a. Tap **topic name**.
  - b. Write the name that you want to call this topic.
  - c. Tap **save** .
5. To select a **topic code**, do the following actions:
  - a. Tap **topic code**.
  - b. Enter the code of the topic (0-999) as provided by your service provider.
  - c. Tap **save** .
6. To receive call broadcasts on this topic, tap **receive status**, and then tap **on**.
7. Tap **save**.

### Edit a cell broadcast topic's settings

1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **messages > cell broadcast > settings > topic list**.
3. Select the topic whose settings you want to change.

The **options** menu appears.


4. Tap **edit topic**.
5. To change the **topic name**, do the following actions:
  - a. Tap **topic name**.
  - b. Write the name that you want to call this topic.
  - c. Tap **save** .
6. To change the **topic code**, do the following actions:
  - a. Tap **topic code**.
  - b. Enter the code of the topic (0-999) as provided by your service provider.
  - c. Tap **save** .
7. Tap **receive status**, and do one of the following actions:
  - To stop receiving cell broadcasts on this topic, tap **off**.
  - To receive cell broadcasts on this topic, tap **on**.
8. Tap **save**.

### Delete a cell broadcast topic


1. On the **home** screen, swipe up.  
The main menu appears.
2. Tap **messages > cell broadcast > settings > topic list**.
3. From the topic list, select the topic that you want to delete.  
The **options** menu appears.
4. Tap **remove topic**.  
You are asked if you want to delete the topic.
5. Tap **yes**.

### sportify your modu T phone

1. Make sure that your modu T phone is on and you are at the **home** screen.
2. Connect the control box's micro USB connector to the micro USB port on your modu T phone.

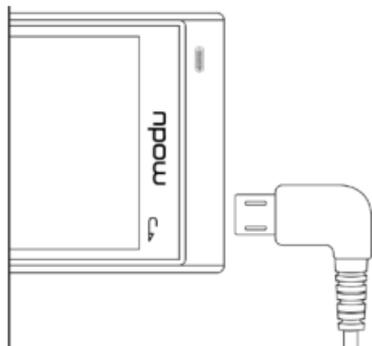

3. Connect the headset to the control box.

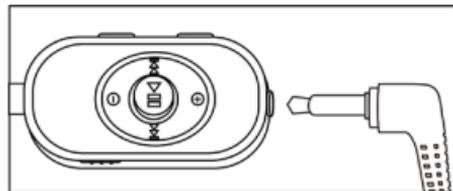

**NOTE:** The ear huggers on the headset can be removed.

The **sportify** screen appears.




After you sportify your modu T phone, you can also begin your workout by tapping **sport** on the main menu.

### Set your personal settings

1. At the bottom of the **sportify** screen, tap **settings** .
2. Tap **personal details** to enter your age, height, and weight.
3. Tap **during call** and select whether to pause or continue your workout if you receive a phone call during your workout.

### Use the armband

1. With the top of your modu T phone facing down, insert your modu T phone into the armband.
2. (Optional) Lift the flat to secure the cord of your headset to the armband.

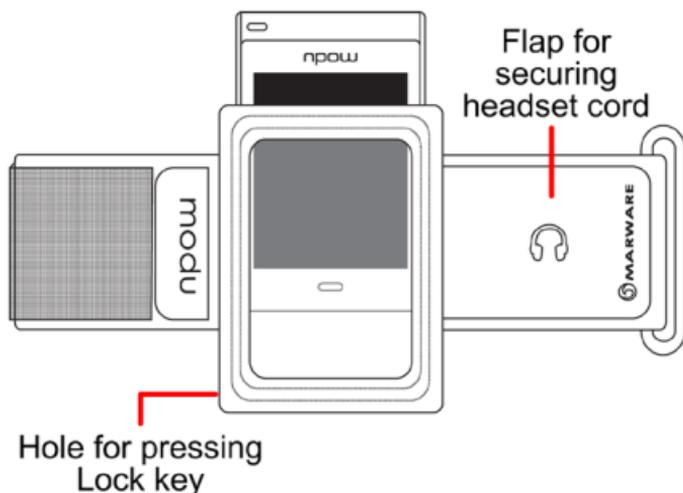

While your modu T phone is in the armband, you can press the Lock key on your modu T phone, if necessary.

The touch screen is fully operable when your modu T phone is in the armband.

The armband is 100% neoprene. Follow the guidelines below for washing and drying the armband.


-  Hand wash only.
-  Air dry.

### Start your workout

Do one of the following actions:

- Tap **go** to start your workout and listen to the last song played on your modu T phone.
- Tap **music & go** to start your workout, and choose a specific song.



The **workout screen** appears and your workout begins. The **workout in session** icon  also appears on the status bar.

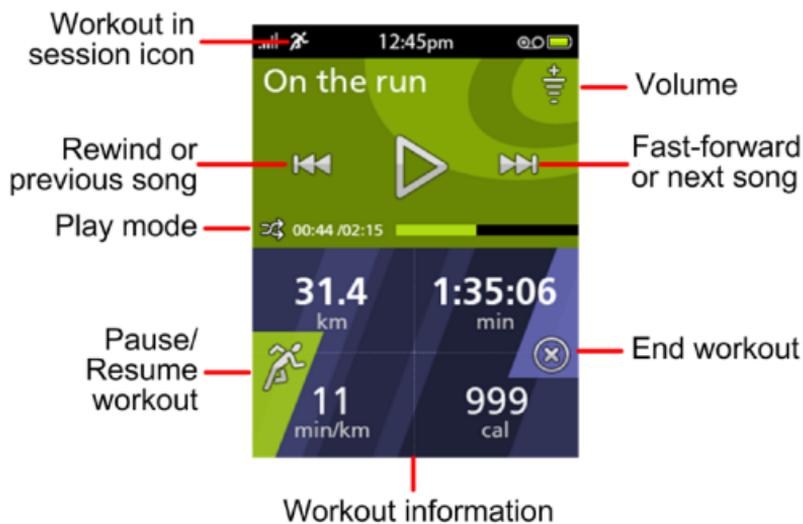

## Use the control box

Use the control box to:

- Increase or decrease the volume
- Play or pause a song
- Skip to the next or previous song
- Fast-forward or rewind a song
- Pause or resume your workout
- Answer or end a call

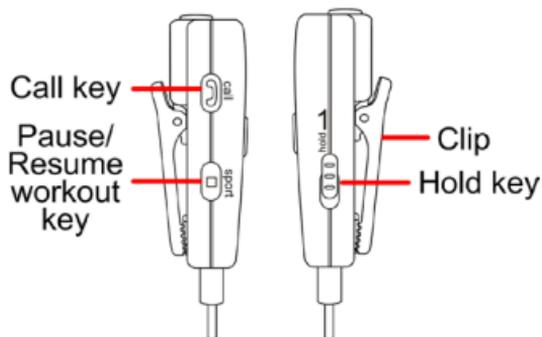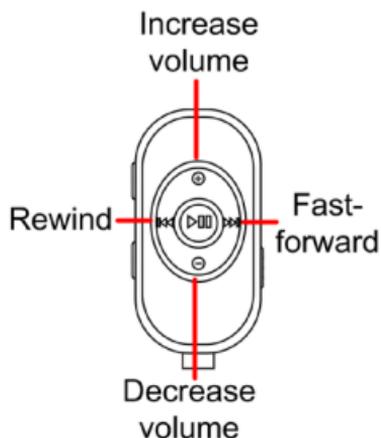

» **To lock the control box:**

- Slide the Hold key into the lock position to make sure that you don't perform an unwanted action.

**Change workout or music settings during your workout**

- To pause your workout, tap .
- To resume your workout, tap .
- To adjust the volume, do the following actions:
  - a. Tap .
  - b. Change the volume to the desired level.
  - c. Tap **OK**.
- To choose a different song, do the following actions:
  - a. Press the Lock key to return to the spotify main menu.
  - b. Tap **music & go**.
  - c. Select the desired song. For more information about selecting a song, see **Play a song** on page 100.

**Send a text message, check a contact, or view your call log during your workout**

You can use any application on your modu T phone and your workout session will not be stopped. On the status bar at the top of the screen, the **workout in session** icon  tells you that your workout is still in session.

**End your workout**

- To end your workout, tap .

## sportify

### Keep track of your workout sessions online

You can create an account at [modu.endomondo.com](http://modu.endomondo.com) to keep track of your workout sessions online, see your history of workout routes and statistics, and socialize with friends.

1. On the web site, click **SIGN UP**, and follow the directions for creating an account.
2. On the **sportify** screen, tap **web** .  
The **web connectivity** screen appears.
3. Tap **allowed**, and then select **allowed**.
4. Tap **user name**, and enter the user name that you created at [modu.endomondo.com](http://modu.endomondo.com).
5. Tap **password**, and enter the password that you created at [modu.endomondo.com](http://modu.endomondo.com).
6. At the end of your workout, tap **upload** to upload your workout information to the Endomondo web site.

## camerafy


## camerafy your modu™ T phone

- Slide your modu T phone into your camerafy device.
- After you camerafy your modu T phone, you can access the camera by pushing the shutter button down. You can also access the camera by selecting **camera** on the main menu.

## Take a picture

1. Push the shutter button halfway down to focus, and all the way down to take the picture.

The **preview** screen appears for seven seconds, and the image is saved in **gallery > images**, with the file name, "pic\_001.jpg".

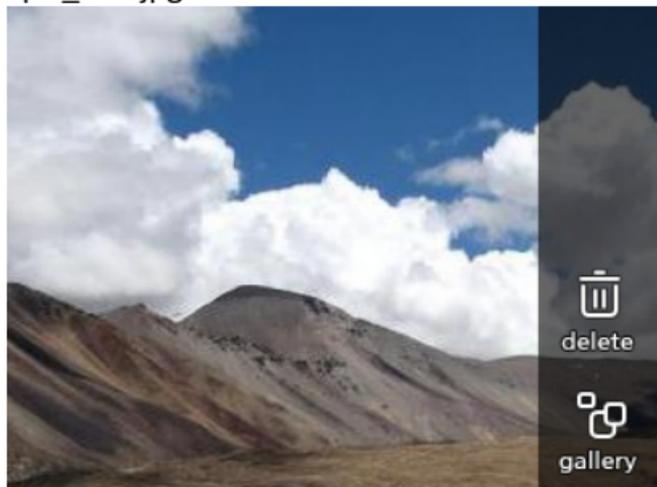


2. When the **preview** screen is displayed, you can do any of the following actions:
  - Tap **gallery**  to view images in the gallery.
  - Tap **delete**  to delete the image.

## camerify

- Tap the Back key  to return to the **camera** screen.

### Change your camera settings

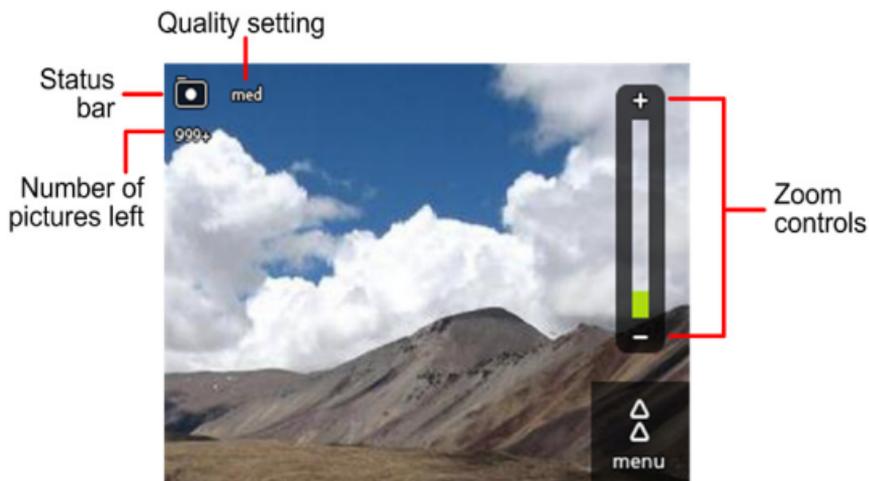

- To zoom in or out, tap **+** or **-**.
- To change your settings, tap **menu** .

Function	Description
<b>switch</b> 	Switches between <b>camera mode</b>  and <b>video mode</b> 
<b>modes</b> 	select <b>normal</b> , <b>night</b>  , or <b>sports</b> 
<b>flash</b> 	select <b>on</b>  or <b>off</b>

Function	Description
quality 	<p>The quality/size of the image file:</p> <ul style="list-style-type: none"> <li>■ <b>max</b> (5MP)</li> <li>■ <b>high</b> (2MP)</li> <li>■ <b>medium</b> (0.8MP - email)</li> <li>■ <b>low</b> (0.3MP - MMS)</li> </ul>

## Shoot a video

1. On the **camera** screen, tap **menu**, and then tap **switch**.

The **video mode** icon  appears on the status bar.

2. To start recording your video, push the shutter button.

The **record** icon  on the status bar indicates that recording has started.

3. To stop recording your video, push the shutter button. Your video is saved in **gallery > videos**, with the file name "vid\_001.mp4".



## camerify

After you stop the recording, you can do any of the following actions:

- Tap **play**  to play your video.
- Tap **gallery**  to view videos in the gallery.
- Tap **delete**  to delete the video.

### Change your video settings



- To zoom in or out, tap **+** or **-**.
- To change your settings, tap **menu** .


Function	Description
<b>switch</b> 	Switches between <b>camera mode</b>  and <b>video mode</b> 
<b>modes</b> 	select <b>normal</b> or <b>night</b> 
<b>effects</b> 	select <b>off</b> , <b>black &amp; white</b> , <b>negative</b> , or <b>sepia</b>

Function	Description
 light (white balance)	 auto,  daylight,  , or  fluorescent

**boostify**

**boostify**

**boostify your modu™ T phone**

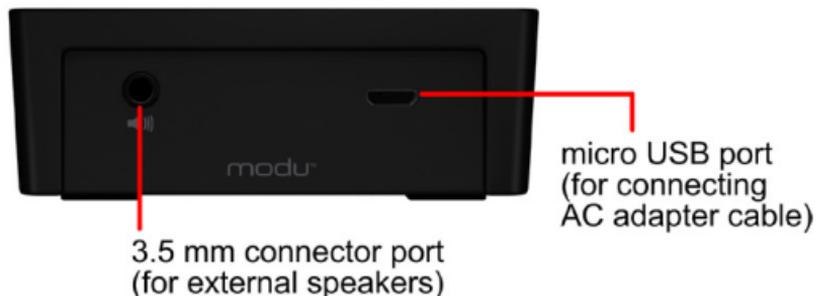

1. Using your boostify AC adapter, insert the AC plug into an electrical outlet.
2. Connect the other end of the AC adapter to the micro USB port on your boostify.

### 3. Insert your modu T phone into your boostify.

When you boostify your modu T phone, the boostify device automatically charges your phone.

Use the boostify button to:

- answer a call
- snooze an alarm
- play or pause music
- access the main menu – enabling you to use all of your modu T phone applications

#### **Answer or make a call**

- To answer a call, press the boostify button.
- To make a call or end a call, use the touch screen on your modu T phone.

#### **Listen to FM radio**

- Press the boostify button to access the main menu, and then use the touch screen on your modu T phone to select the FM radio.

#### **Listen to music**

1. Press the boostify button to access the main menu, and then use the touch screen on your modu T phone to select the music player.
2. Once you have selected a song, press the boostify button to pause or play.

#### **Use your boostify device as an alarm clock**

- Press the boostify button to access the main menu, and then use the touch screen on your modu T phone to set an alarm.

## **boostify**

- To snooze an alarm, press the boostify button.
- To turn off an alarm, use the touch screen on your modu T phone.

### **Use external speakers**

- Connect your external speakers by inserting the 3.5 mm connector into the back of your boostify device.

### **Unlock your modu T phone screen**

- Press the boostify button or the Lock key.

**modu™ PC Suite**

modu™ PC Suite enables you to use your computer for managing the information on your modu™ T phone. For more information, see the modu™ PC Suite help.

## General information

### General information

#### Care and maintenance of your modu™ T phone

- Keep the device dry. Any type of liquid or moisture can damage the device.
- Do not store in areas that contain dust or dirt.
- Do not store in areas of extreme hot or cold temperatures.
- Do not open the device.
- Do not handle the device in a rough manner. Dropping, banging or shaking the device can break internal circuit boards and fine mechanics.
- Use a soft dry cloth to clean the screen.

#### About your modu T phone

The wireless device described in this guide is approved for use on cellular networks. Contact your service provider for more information.

When you use the features in this device, obey all laws and respect privacy and legitimate rights of others.

When you use images and/or media, obey all laws and respect local customs as well as the privacy and legitimate rights of others.

Warning: this device must be on to use any features. Do not switch the device on if its use may cause interference or danger.

#### Support and contact information

To contact modu support, go to [www.modumobile.com](http://www.modumobile.com).

## Safety

Read the following precautions carefully to avoid dangerous situations and to ensure ideal performance of your modu T phone.

### Symbols and information



**Switch On Safely.** Do not turn your modu T phone on anywhere that it is prohibited or if it may cause interference or damage.



**Road Safety.** Safety comes first. Always keep your hands free while driving. Obey all traffic laws.



**Interference.** As with all wireless devices, interference may affect performance.



**Switch Off In Hospitals.** Follow all hospital rules. Turn your modu T phone off near medical equipment.



**Switch Off In Aircraft.** Follow all airline rules. As with all wireless devices, your modu T phone may cause interference in aircraft.



**Switch Off When Refueling.** Do not use your modu T phone near fuel or chemicals. Turn off your modu T phone while refueling.



**Switch Off Near Blasting.** Do not use your modu T phone near blasting. Follow all restrictions.



---

**Safe Volume Level.** Your modu T phone has been tested to comply with the sound pressure level requirement specified in the applicable EN 50332-1 and/or EN 50332-2 standards.

Permanent hearing loss may occur if earphones or headphones are used at a high volume level for prolonged periods of time.

---



**Use Sensibly.** Use your modu T phone only in the normal manner described in this User Guide.

---



**Qualified Service.** Only qualified personnel may repair or service your modu T phone.

---



**Enhancements and Batteries.** Use only approved batteries and parts. There is a risk of explosion if an incorrect battery type is used. Dispose of used batteries as indicated in the instructions. Do not connect to products that are not supported by your modu T phone.

---



**Water Resistance.** Your modu T phone is not water resistant. Keep away from all liquids.

---



**Backup Copies.** Remember to back up all data stored in your modu T phone.

---



**Connecting to Other Devices.** Read all instructions before connecting to another device. Do not connect to products not supported by your modu T phone.

---



---

**Emergency Calls.** Make sure your modu T phone is turned on. Enter the emergency number for your present location. Press the Call key. Give the operator your location. Do not end the call until instructed to do so by the operator.

---

### AC adapter

Follow these guidelines to ensure your AC adapter (charger) works properly.

- Avoid penetration of water or humidity into the AC adapter.
- Keep the AC adapter away from extreme temperatures such as ovens, or places exposed to the sun.
- Keep the AC adapter away from lamps, flames, cigarettes, cigars, etc.
- Avoid dropping objects or splashing liquids, including acids, on the AC adapter.
- For indoor use only. Do not use in places that are exposed to rain, sun, or flammable fumes.
- Plug the AC adapter into a socket that supplies the power indicated on the power supply.
- To minimize damage to the electrical cable, do not disconnect the power supply from the socket by pulling the cable. When disconnecting, hold the power supply and pull it from the socket.
- Make sure the AC adapter cable is routed so that it is not stepped on, and people do not trip over it.
- If you are using an extension cord, make sure it is properly grounded.

**WARNING:**

## Safety

- Use only the original modu™ AC adapter supplied with this product. Using another AC adapter may invalidate the warranty, and could endanger the user.
- Use only original replacement parts. If the plug does not match the socket, use a dedicated adapter based on the manufacturer's recommendation. A bad connection endangers the user.
- When charging your modu T phone using the USB cable, connect your modu T phone to a computer or device that has a high-power USB port and is USB 2.0 compliant or higher.

### Small children

Keep your modu T phone and all modu fy devices and accessories out of the reach of small children. Small parts may cause choking or serious hazard if swallowed.

### Pacemakers

To avoid possible interference with pacemaker functioning, mobile device manufacturers and the independent research group, Wireless Technology Research, recommends maintaining a minimum of 15 centimeters (6 inches) between mobile devices and a pacemaker. It is therefore recommended to:

- Always keep your modu T phone at least 15 centimeters (6 inches) away from your pacemaker.
- Never keep your modu T phone in your breast pocket.
- Use your modu T phone on the ear opposite your pacemaker.

If you have any reason to suspect interference with your pacemaker or any other medical device, immediately turn off your modu T phone and move it away.

**Magnetic fields**

Exposure to magnetic fields may damage your modu T phone or your SIM card. Parts of your device may be magnetic. Do not store credit cards or other magnetic stored media near the device, as data may be erased.

**Temperature**

For safe and optimal performance, use your modu T phone in an ambient temperature range of 0°C–40°C.

If the modu T phone's internal temperature exceeds 45°C, and you are charging the phone, charging might stop unexpectedly.

**Radio frequency signals**

Your modu T phone emits Radio Frequency (RF) signals that may interfere with the operation of unprotected equipment such as hearing aids, pacemakers, medical devices and other electronic equipment in your home or vehicle. For information about pacemakers, see Pacemakers. If you experience any interference, consult with the manufacturer of the electronic device.

When used normally your modu T phone meets RF exposure guidelines.

**Protect your hearing**

Listening to mobile devices at high volumes can damage your hearing. Use the minimum volume necessary to hear your conversation or music.

## Safety

### Certification information

This mobile device meets guidelines for exposure to radio waves.

This mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health. The exposure guidelines for mobile devices employ a unit of measurement known as the Specific Absorption Rate or SAR. The SAR limit stated in the ICNIRP guidelines is 2.0 watts/kilogram (W/kg) averaged over 10 grams of tissue. Tests for SAR are conducted using standard operating positions with the device transmitting at its highest certified power level in all tested frequency bands. The actual SAR level of an operating device can be below the maximum value because the device is designed to use only the power required to reach the network. That amount changes depending on a number of factors such as how close you are to a network base station. The highest SAR value under the ICNIRP guidelines for use of the device at the ear is 0.85 W/kg.

Use of the mobile phone with mobile devices, accessories, and enhancements may result in different SAR values. SAR values may vary depending on national reporting and testing requirements and the network band.

### Limited warranty

modu Ltd. ("modu") provides this limited warranty for your mobile phone and original accessories delivered with your mobile device (hereinafter referred to as "Product").

Should your Product need warranty service, please return it to the dealer from whom it was purchased.

### The warranty

Subject to the conditions of this Limited Warranty, modu warrants this Product to be free from defects in design, material and workmanship at the time of its original purchase by a consumer, and for a subsequent period as set forth below:

3. Twelve (12) months for the modu T phone and accessories (whether included in the modu T phone sales package or sold separately) other than the consumable parts and accessories listed in sections 3 and 4 below;
4. Six (6) months for the modu fy device and accessories (whether included in the modu fy device sales package or sold separately) other than the consumable parts and accessories listed in sections 3 and 4 below;
5. Six (6) months for the following consumable parts and/or accessories: batteries, chargers, cables and covers;
6. Ninety (90) days for the media on which any software is provided (that is, CD-ROM, memory card).

If, during the warranty period, the Product fails to operate under normal use and service, due to defects in design, materials or workmanship, modu authorized distributors or service agents, in the country/region where you purchased the Product, will, at their option, either repair or replace the

## Limited warranty

Product in accordance with the terms and conditions stipulated herein.

modu and its service agents reserve the right to charge a handling fee if a returned Product is found not to be under warranty according to the conditions below.

Please note that some of your personal settings, downloads or other information may be lost when your Product is repaired or replaced. At present, modu may be prevented by applicable law, other regulation or technical restrictions from making a backup copy of certain downloads. modu does not take any responsibility for any lost information of any kind and will not reimburse you for any such loss. You should always make backup copies of all the information stored on your Product such as downloads, calendar and contacts before handing in your Product for repair or replacement.

### Conditions

1. This warranty is valid only if the original proof of purchase (specifying the date of purchase and serial number\*) issued to the original purchaser for this Product by a modu authorized dealer, is presented with the Product to be repaired or replaced. modu reserves the right to refuse warranty service if such information has been removed or changed after the original purchase of the Product from the dealer.
2. If modu repairs or replaces the Product, the repaired or replaced Product shall be warranted for the remaining time of the original warranty period or for ninety (90) days from the date of repair, whichever is longer. Repair or replacement may involve the use of functionally equivalent

reconditioned units. Replaced parts or components will become the property of modu.

3. This warranty does not cover any failure of the Product due to normal wear and tear, or due to misuse, including but not limited to use in other than the normal and customary manner, in accordance with the modu instructions for use and maintenance of the Product. Nor does this warranty cover any failure of the Product due to accident, software or hardware modification or adjustment, acts of God or damage resulting from liquid.

A rechargeable battery can be charged and discharged hundreds of times. However, it will eventually wear out – this is not a defect. When the talk-time or standby time is noticeably shorter, it is time to replace your battery.

Battery replacement should be performed only by a modu-authorized service agent. modu recommends that you use only chargers approved by modu.

Minor variations in display brightness and color may occur between phones. There may be tiny bright or dark dots on the display. These are called defective pixels and occur when individual dots have malfunctioned and cannot be adjusted. Two defective pixels are deemed acceptable.

Minor variations in camera image appearance may occur between phones. This is not uncommon and is not regarded as a defective camera module.

4. Since the cellular system on which the Product is to operate is provided by a carrier independent from modu, modu will not be responsible for the operation, availability, coverage, service or range of that system.

## Limited warranty

5. This warranty does not cover Product failures caused by installations, modifications, repair, opening, disassembling or an attempt to disassemble the Product by a non-modu authorized person.
6. This warranty does not cover Product failures which have been caused by use of accessories or other peripheral devices which are not modu branded original accessories intended for use with the Product.
7. Tampering with any of the seals on the Product will void the warranty.
8. THERE ARE NO EXPRESS WARRANTIES, WHETHER WRITTEN OR ORAL, OTHER THAN THIS PRINTED LIMITED WARRANTY. ALL IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY. IN NO EVENT SHALL MODU OR IT LICENSORS BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY NATURE WHATSOEVER, INCLUDING BUT NOT LIMITED TO LOST PROFITS OR COMMERCIAL LOSS; TO THE FULL EXTENT THOSE DAMAGES CAN BE DISCLAIMED BY LAW.

Some countries/states do not allow the exclusion or limitation of incidental or consequential damages or limitation of the duration of implied warranties, so the preceding limitations or exclusions may not apply to you.

The warranty provided does not affect the consumer's statutory rights under applicable legislation in force, nor the consumer's rights against the dealer arising from their sales/purchase contract.

\* In some countries/regions additional information is requested. If so, this is clearly shown on the valid proof of purchase.



## Index

## A

## a

Web • See Browser

Alarm clock • 111

Change the settings for an alarm • 113

Delete an alarm • 113

Set an alarm • 111

Turn an alarm off or on • 112

Applications • 148

Delete an application • 151

Download an application • 148

Start an application • 149

View an application's properties • 149

## B

Battery • 17

Bluetooth • 126

Manage your Bluetooth devices • 127

Change the name of a device • 127

Delete one or all devices • 127

View a list of devices that you added to your phone • 127

Send a file from your modu T phone via a multimedia message, Bluetooth, or email message • 156

Set your Bluetooth settings • 126

Turn Bluetooth on or off • 126

Browser • 129

Access the browser • 129

Bookmark a web page in your browser • 132

Browse the web • 129

Exit the web • 133

Manage bookmarks • 133, 134, 135

## Index

- Manage history • 138, 139, 140
- Manage stored pages • 135, 136, 137, 138
- Navigate saved web pages • 133
- Search for text on a web page • 132
- Store a web page for offline viewing • 132
- Use Google™ to search the web • 131

## C

- Calculator • 145
  - Make a calculation • 145
- Call forwarding
  - Check the status of a call forwarding option • 173
  - Turn a call forwarding option off • 174
  - Turn call forwarding on • 173
  - Turn off call forwarding • 174
- Call log
  - Delete a call from the call log • 38
  - View your call log • 38
- Call waiting
  - Answer a waiting call • 39
  - End one of the calls • 41
  - Switch to a held call • 41
- Caller ID • 172
- Calls • 33
  - Adjust the volume • 35
  - Answer, reject, or silence a call • 34
  - Call a number from a text message • 34
  - Call a number from the call log • 33
  - Call a number from the contacts list • 33
  - Call another number • 35
  - Call your voicemail • 38
  - Loudspeaker • 35
  - Make a call • 33
  - Mute or unmute your microphone • 35

- Place a call on hold • 36
  - Speed dial numbers • 39
  - View the contact list during a call • 36
- Cell broadcast • 161
- Delete a cell broadcast message • 161
  - View a cell broadcast message • 161
- Clock
- Set the date and time • 169
- Conference calls
- End all calls in a conference • 44
  - End one of the calls in the conference • 43
  - Mute or unmute the microphone of your mobile phone during a conference call • 44
  - Set up a conference call • 42
  - Speak to a conference participant privately • 43
  - Use the loudspeaker during a conference call • 44
- Contacts
- Add a contact • 48
  - Assign a ringtone to a contact • 53
  - Assign a speed dial number to a contact • 54
  - Assign an image to a contact • 54
  - Check how much space is left for contacts on your phone and SIM card • 58
  - Copy a contact to your SIM card • 56
  - Copy all contacts to your SIM card • 57
  - Delete a contact • 52
  - Edit contact information • 53
  - Send a contact's business card via multimedia message or Bluetooth • 55

## Index

Store contact information  
• 56

Copy a file or folder • 157

### D

Default settings • 198, 199

Delete a file or folder • 159

Delivery reports • 71

Delete a delivery report •  
71

Delete all delivery reports  
• 71

View a delivery report for  
a text message • 71

Display settings

Access the display settings  
• 167

Change the screen-lock  
timer settings • 168

Select a wallpaper  
background for the  
home screen • 168

Set the brightness of your  
screen • 168

### E

Email messages • 86

Delete all email messages  
from an email folder •  
99

Delete an email message  
• 99

Forward an email  
message • 98

Receive an email message  
• 93

Reply to the sender and  
all recipients of an  
email message • 97

Reply to the sender of an  
email message • 96

Save or retrieve a draft  
version of an email  
message • 92

Save the contact  
information of  
recipients of an email  
message • 95

- Send a file from your modu T phone via a multimedia message, Bluetooth, or email message • 156
  - Send an email message • 86
  - Send an email message from your contact list • 92
  - View and save an email attachment • 95
- F**
- Factory default settings • 125, 199
  - File manager • 153
    - Check your memory card's status • 159
    - Copy a file or folder • 157
    - Create a folder • 154
    - Delete a file or folder • 159
    - Move a file or folder • 157
    - Open a file • 155
    - Rename a file • 155
  - Send a file from your modu T phone via a multimedia message, Bluetooth, or email message • 156
  - Sort files and folders • 158
  - View information about a file or folder • 153
  - View the contents of a folder • 153
- FM radio • 141
- Change a radio station's name or frequency • 144
  - Listen to the radio • 141
  - Manage your radio stations • 143
  - Manually save a station to the station list • 143
  - Manually tune to a frequency • 142
  - Remove a station from the station list • 144
  - Search for stations automatically • 142

## Index

Select and listen to a radio station from the station list • 142

### G

Gallery • 114

Copy images and videos to your modu T phone • 121

Delete a video • 121

Play a video • 119

Receive an image or video via Bluetooth • 123

Rename a video • 120

Send an image or video via Bluetooth • 122

Set an image as your wallpaper • 118

Videos • 119

View a slide show • 118

View information about a picture • 118

Games • 147

Play a game • 147

Getting Started • 14

Indications and symbols • 29

Lock or unlock the screen • 32

Navigate between screens • 25

Options menu • 23

The status screen • 26

The what's new? screen • 26

Use the touch screen • 20

### H

Hardware • 198

Headset • 37

Home screen • 25

### I

Images • See Gallery

IMEI code • 198

### L

Language • 169

Lock or unlock the screen • 32

Lock your modu T phone •  
197

Loudspeaker

Use the loudspeaker • 35

Use the loudspeaker  
during a conference  
call • 44

## M

Magnetic fields • 224

Main menu • 28

Message templates

Send a text message using  
a predefined template  
• 62

Messages • See Text  
messages

MMS • See Multimedia  
messages

Move a file or folder • 157

Multimedia messages • 72

Add a page to a  
multimedia message •  
78

Change the amount of  
time for a multimedia  
message page to be  
displayed • 83

Delete a draft multimedia  
message • 81

Delete a multimedia  
message from a  
message folder • 84

Delete a page from a  
multimedia message •  
84

Delete all draft  
multimedia messages •  
81

Delete all multimedia  
messages from a  
message folder • 84

Forward a multimedia  
message from a  
message folder • 82

Navigate between pages  
in a multimedia  
message • 84

Reply to a multimedia  
message • 82

## Index

- Save or retrieve a draft version of a multimedia message • 80
- Send a file from your modu T phone via a multimedia message, Bluetooth, or email message • 156
- Send a multimedia message • 72
- Send a multimedia message from your contact list • 77
- Send a multimedia message to a number from your call log • 78
- View the details of a multimedia message • 83
- Music player • 101
  - Add music to your modu T phone • 101
  - Add songs to a playlist • 107
  - Adjust the equalizer • 103
  - Adjust the volume • 103
  - Create a new playlist • 106
  - Delete a playlist • 109
  - Play a song • 101
  - Playlists • 105
  - Remove songs from a playlist • 108
  - Rename a playlist • 108
  - Set your play mode • 105
  - Start a song by clapping your hands • 109
  - Start playing songs in a playlist • 106
  - View a playlist • 106
  - View information about a song • 103
- Mute • 35, 44
- N**
  - Network selection • See Network settings
- P**
  - Pacemakers • 223

- Paired device • See Bluetooth
  - PC Suite • 218
  - Pictures • See Gallery
  - PIN1 code • 195
  - PIN2 code • 196
  - Playlists • 105, See Music player
  - Predictive text
    - Turn predictive text on or off • 63
    - Write a text message using predictive text • 63
  - Profiles • 124
    - Personalize the settings of the normal profile • 125
    - Rename the normal profile • 124
    - Reset the normal profile settings to the factory default settings • 125
  - Push messages • 163
    - Receive a push message • 163
    - View a WAP push message • 164
- R**
- Radio frequency signals • 224
  - Restricted Calls
    - Access the call settings • 172
    - Check the status of a call restriction • 175
    - Restrict certain types of calls • 174
    - Stop restricting all types of calls • 176
    - Stop restricting certain types of calls • 175
- S**
- Safety • 220, 223, 224
  - Security settings • 195, 196, 197
  - Service numbers • 44, 45
  - Settings • 165
    - Application profile settings • 193

## Index

- Access the network profile settings • 193
- Activate a profile • 194
- Add a profile • 194
- Change a profile's settings • 194
- View a profile's settings • 194
- Application settings • 192
  - Profile settings • 193
  - View the memory status of an application • 193
  - Volume, vibrate, or network settings • 192
- Call settings • 172
- Cell broadcast topic settings • 200
  - Activate or deactivate a cell broadcast topic • 200
  - Add a cell broadcast topic • 201
  - Delete a cell broadcast topic • 202
  - Edit a cell broadcast topic's settings • 201
  - Turn on cell broadcast reception • 200
- Change your network password • 197
- Date and time settings • 169
  - Set the date • 171
  - Set the time • 169
- Display settings • 167
  - Select your wallpaper • 168
  - Set the brightness of your screen • 168
- Email settings • 186
  - Activate an email account • 189
  - Change your email deletion settings • 190
  - Change your general email settings • 186

- Delete an email account • 191
- Make changes to an email account • 189
- Set up a signature • 190
- View an email account's settings • 189
- Language settings • 169
- Lock your modu T phone • 197
- Multimedia message settings • 179
  - Access the multimedia message settings • 179
  - Change your filter settings • 181
  - Change your receive settings • 180
  - Change your send settings • 179
  - View the status of your multimedia message • 181
- Multimedia profile settings • 181
  - Access the multimedia profile settings • 182
  - Add a multimedia profile • 183
  - Change a multimedia profile's settings • 182
  - Select a multimedia profile • 182
  - View a multimedia profile's settings • 182
- Network settings • 191
  - Access your network settings • 191
  - Change your network connection • 192
  - Change your network type • 192
- Phone and SIM card security settings • 195
- Screen-lock timer settings • 168

## Index

- Show or hide the caller ID for incoming or outgoing calls • 172
  - Text message settings • 178
  - Tone settings • 165
    - Access the tone settings • 165
    - Select a ringtone • 165
    - Select a tone for incoming messages • 166
    - Select phone alerts • 167
    - Set the ringtone volume • 166
    - Set your ring type • 167
  - Turn the automatic date and time on or off • 169
  - View your connection profiles' details • 195
  - SIM card
    - Insert SIM card • 15
    - Remove SIM card • 16
  - Slide show • 118
  - SMS • See Text messages
  - Social Networking • 152
    - Access a social networking application • 152
  - Software
    - Check your software and hardware version or your IMEI code • 198
    - Update the software version on your modu T phone • 199
  - Speed dial numbers
    - Assign a speed dial number to a contact • 177
    - Remove a contact from a speed dial number • 177
    - Use speed dial numbers • 39
    - View your speed dial number list • 177
- T**
- Text messages • 59

Call a number from a text message • 34

Delete a text message • 68

Delete all the text messages in a folder • 68

Extract a set of numbers from a text message • 69

Forward a text message • 67

Reply to a text message • 66

Send a text message • 59, 60, 61

Send a text message using a predefined template • 62

Turn predictive text on or off • 63

View a text message • 65

View new and unread text messages • 64

Time • See Date and time settings

Tones

Ring volume • 166

Select a ringtone • 165

## V

## Videos

Delete a video • 121

Play a video • 119

Rename a video • 120

Set the fast-forward and rewind speed • 120

## Voicemail

Call your voicemail • 38

View your voicemail number • 178

## Volume

Adjust the volume during a call • 35

Adjust the volume when playing music • 103

Adjust the volume when watching a video • 120

Ring volume • 166

## W

Wallpaper • 168

[www.modumobile.com](http://www.modumobile.com)

EN072010  
PAC000359-A02



PAC000359-A02