

SIEMENS

SIEMENS

Issued by
BenQ Mobile GmbH & Co. OHG
Haidenauplatz 1
D-81667 Munich

© BenQ Mobile GmbH & Co. OHG 2005
All rights reserved. Subject to availability.
Rights of modification reserved.
Manufactured by BenQ Mobile GmbH & Co. OHG
under trademark license of Siemens AG

www.siemens.com/c72



Designed for life

C72

Safety precautions	2	Email	35
Overview of phone	4	Voice message/CB	36
Display symbols	6	Inst. message	37
Getting started	7	Surf & fun	43
Switching on/off, PIN entry	9	Setup	46
General instructions	10	Fast access	54
Standard functions	12	Organizer	55
Security	14	Extras	57
Calling	16	My stuff	59
Text entry	18	Customer Care	60
Default book	20	Care and maintenance	62
Addressbook	21	Product data	63
Phonebook	23	SAR	64
Call records	25	Guarantee certificate (UK)	65
Camera	26	Guarantee certificate (IRL)	65
Message lists	28	License Agreement	67
SMS	29	Index	70
MMS	31		

This is a summarised version of the User Guide. The complete version can be found in the Internet at this address:
www.siemens.com/c72

Safety precautions

Information for parents

Please read the operating instructions and safety precautions carefully before use. Explain the content to your children and the hazards associated with using the phone.



Remember to comply with legal requirements and local restrictions when using the phone. For example, in aeroplanes, petrol stations, hospitals or while driving.



Mobile phones can interfere with the functioning of medical devices such as hearing aids or pacemakers. Keep at least 20 cm between phone and pacemaker. When using the mobile phone hold it to the ear which is further away from the pacemaker. For more information consult your doctor.



The ringtones (page 48), info tones (page 49) and handsfree talking are reproduced through the loudspeaker. Do not hold the phone to your ear when it rings or when you have switched on the handsfree function (page 16). Otherwise you risk serious permanent damage to your hearing.



Only use original Siemens batteries (100% mercury-free) and charging devices. Otherwise you risk serious damage to health and property. The battery could explode, for instance.



Small parts such as the SIM card, sealing stop, lens ring and lens cap can be dismantled and swallowed by small children. The phone must therefore be stored out of the reach of small children.



Do not look at the LED (e.g. activated infrared port, flash LED) with optical magnifiers because of radiation.

This product complies with IEC/EN 60825-1 "Safety of Laser Products" for LED Class 1M products; such products are safe under reasonably foreseeable operating conditions.



The mains voltage specified on the power supply unit (V) must not be exceeded. Otherwise the charging device may be destroyed. The power supply must be plugged into an easily accessible AC mains power socket when charging the battery. The only way to turn off the charging device after charging the battery is to unplug it.



The phone may cause interference in the vicinity of TV sets, radios and PCs.



You may only open the phone to replace the battery (100 % mercury-free) or SIM card. You must not open the battery under any circumstances. All other changes to this device are strictly prohibited and will invalidate the guarantee.



Use only Siemens original accessories. This will avoid potential risks to health or property and ensure compliance with all relevant regulations.



Do not place the phone near to electromagnetic data carriers such as credit cards and floppy disks. Information stored on them could be lost.



All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.

This crossed-out wheeled bin symbol on the product means the product is covered by the European Directive 2002/96/EC.

The correct disposal and separate collection of your old appliance will help prevent potential negative consequences for the environment and human health. It is a precondition for reuse and recycling of used electrical and electronic equipment.

For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product.

Improper use will invalidate the guarantee!
These safety instructions also apply to Siemens original accessories.

As mobile devices offer a range of functions, they can be used in positions other than the head, such as on the body. In this case, at data transfer (GPRS) a separation distance of **1.0 cm** is required.

Overview of phone


① Call key

Dial displayed/highlighted phone numbers/names, take calls. Show last phone numbers dialed in standby mode.






② On/Off/End key.

- Switched off: press and **hold** to switch on.
- During a conversation or in an application: press **briefly** to finish.
- In menus: press **briefly** = go back a level. Press and **hold** = go back to standby mode.
- In standby mode: press and **hold** to switch off phone.




③ Joystick

 Press the joystick down vertically to start an application or function.



In standby mode:

-  Open main menu.
-  Open user profiles.
-  Open Phonebook/Address-book.
-  Open Inbox.
-  Start the camera.

In lists, messages and menus:


-  Scroll up and down.
-  Back a level.
-  Function as for right soft key.

During a call:

-  Set volume.
-  Call options.



④ Soft keys

The current functions of this key are shown in the bottom line of the display as **Text**/symbol (e.g. )

- ⑤ Function when pressing the joystick (see p. 10).

① **Integrated antenna**

Do not obstruct the phone above the battery cover unnecessarily. This reduces the signal quality.

② **Loudspeaker**

③ **Display**

④ **Infrared interface (IrDA)**

⑤ **Access to the Internet portal**

⑥ **Input keys**

⑦  **Ringtone**

- Press and **hold** in standby mode: Switch all audible signals on/off (except alarm).
- Press and **hold on** incoming call: Switch off ringtone for this call only.

⑧  **Key lock**

 
Press and **hold** in standby mode: Switch key lock on/off.

⑨ **Connection socket**

For charger, headset, flash etc.

⑩ **Connection for external antenna**

⑪ **Camera lens**

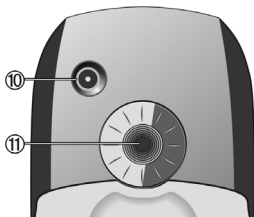

Display symbols

Display symbols (selection)



Signal strength



Charging



Battery charge level, e.g. 50 %



Phonebook



Call records

Surf & fun/
Service provider portal

Organizer



Messages



Camera



Extras



My stuff



Setup



All calls are diverted



Ringer off



Alarm set



Keypad locked



Activated and available



Browser is being connected



IrDA transmission

Events (selection)



SMS memory full



MMS memory full



Phone memory full



No network access



Missed call



Delete assistant

Message symbols (selection)



Unread



Read



Draft



Sent



MMS not sent



MMS received



MMS read



MMS with DRM contents (p. 11)



E-mail forwarded



E-mail with attachment



Voice mail received

Camera symbols



Brightness



Zoom factor



White balance



 
Flash connected

Getting started


Inserting SIM card/ battery

The service provider supplies you with a SIM card on which all the important data for your line is stored. If the SIM card has been delivered in credit-card size, snap the smaller segment out and remove any rough edges.

Press the grooved area ①, then push the battery cover towards the front in the direction indicated by the arrow ②.

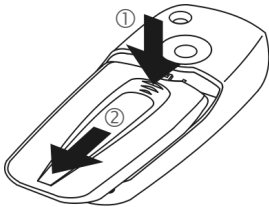

 - Place the SIM card in front of the slot with the contact surface facing **downwards**. Then push the SIM card in using gentle pressure ③ (ensure that the chamfered corner is in the correct position).

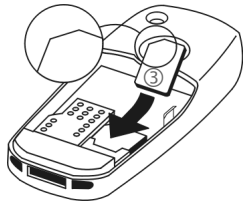


- Insert the battery sideways into the phone ④, then press it downwards ⑤ until it clicks into position.



- To remove, press the hook on the right side ⑥ outwards, turn the phone over, and then shake out the battery.

 - Push the battery cover onto the side hooks ⑦, until it clicks into position.

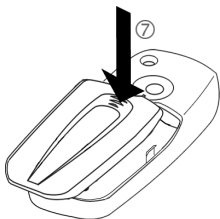


Please switch off your phone before removing the battery!

Only 3V SIM cards are supported. Please contact your service provide if you have an older card.

Charge battery

Charging

 The battery is not fully charged when delivered. Plug the charger cable into the bottom of the phone, plug the power supply unit into a mains power socket and charge for at least **two hours**.

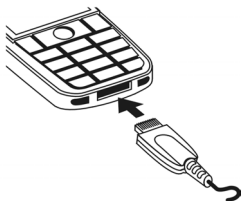

Display during charging.

Charging time

An empty battery is fully charged after about 2.5 hours. Charging is only possible within a temperature range of +5 °C to +45 °C. If the temperature rises/falls 5 °C above/below this, the charge symbol flashes a warning. The mains voltage specified on the power supply unit must not be exceeded.

Operating time

The operating time depends upon the respective conditions of use. Extreme temperatures considerably reduce the phone's standby time. You should therefore avoid leaving the phone in the sun or on a radiator.

Talktime: 100 to 300 minutes

Standby time: 60 to 300 hours

Charge icon not visible

If the battery has been discharged fully, the charge icon is not immediately visible when the power supply is plugged in. It will appear after up to two hours. In this case the battery is fully charged after 3 to 4 hours.

Only use the plug-in power supply unit included in delivery!

Display during operation

Charge level display during operation (empty-full):



A beep sounds when the battery is nearly empty. The charge level of the battery is only displayed correctly after an uninterrupted charging/discharging cycle. You should therefore **not remove the battery unnecessarily** and where possible **not terminate the charging process before completion**.

The power supply unit heats up when used for long periods. This is normal and not dangerous.

If the battery is removed for longer than 30 seconds, the clock must be reset.

Switching on/off, PIN entry

Switching on/off




Press and **hold** the On/Off/End key.

Entering PIN

The SIM card can be protected with a 4 to 8-digit PIN.



Enter the PIN using the number keys. The characters **** appear in the display to ensure nobody can read your PIN. Correct with .




Confirm by pressing the joystick. Logging on to the network will take a few seconds.

Changing the PINp. 14

Clearing SIM card barring.....p. 15

Emergency number (SOS)

Only to be used in real emergencies!

By pressing the left soft key  you can make an emergency call on any network **without** a SIM card and without entering a PIN (not available in all countries).

Switching your phone on for the first time

Time/date

Set the clock correctly once when getting started.



Press, then **Change**.



First enter the date (day/month/year), then the time (24 hours, including seconds).



Press. The time and date are updated.

Time zones

Set the time zone for where you currently are .



Select the city in the desired time zone from the list ...

Set

... press to set.

Copy SIM addresses

The first time the SIM card is inserted, the entries on it can be copied to the Addressbook. Please **do not interrupt this procedure**. During this time **do not accept incoming calls**. Follow instructions in the display.

You can also copy data from the SIM card at a later time (p. 24).

General instructions

Standby mode

The phone is in **standby mode** and is **ready for use** when the name of the service provider appears on the display.



Press and **hold** the On/Off/End key to return to standby mode from any situation.

Receiving signal



Strong reception signal.



A weak signal reduces the call quality and may lead to loss of the connection. Change your location.

Joystick

The symbol in the centre of the lower line of the display shows the current function when the centre key is pressed, e.g.



Main menu



Camera



OK, confirm



Zoom



Accept call

Digital Rights Mgmt. (DRM)

Remember that your phone has Digital Rights Management. The use of downloaded pictures, sounds or applications can be restricted by the suppliers, e.g. copy protection, use for a limited period of time only, the number of times it can be used etc. (see also p. 45).

Main menu

The main menu is displayed graphically with symbols:



Call up from standby mode.



Select the application symbols.



Start an application.

Main menu options

Options Open menu.

Different functions are available depending on the context.

Big letters	Select one of two font sizes.
Illumination	Set display light brighter/darker.
Help	Display a help text.

User guide

Symbols

The following symbols are used to explain operation:



 
Enter numbers or letters.



On/Off/End key



Call key



Soft keys

Menu

Displays a soft-key function.

The joystick can be moved in 5 directions.



Press vertically down on the joystick (to call up the menu, for example).



Press the joystick in the direction indicated.



Function dependent on service provider. May require special registration.

Menu controls

The steps needed to reach a function are shown in a **condensed form** in the user guide, e.g. to display record of missed calls in condensed form:




This comprises the following steps:



Open main menu.



Select (highlight)  by moving the joystick upwards, then press vertically down on the joystick before using the joystick to highlight **Missed calls**.




Confirm. The record is opened.

Standard functions

Option menus

Functions which appear repeatedly in the options menu are listed here.

Options Open menu.

Edit	Open the entry to edit.
View	Display entry.
Delete/ Delete all	Delete entry / delete all entries after confirmation.
New entry	Create new entry.
Send...	Select transmission service and medium for sending or printing.
Reply/ Reply to all	The sender becomes the recipient. The received text is transferred into the new message.
Save	Store entry.
Save to 	Save recipients in the current address directory.
Sort	Set sort criteria (alphabetical, type, time).

Text input (p. 18)	T9 preferred: Activate/deactivate T9 input. Input language: Select language for text.
Rename	Rename selected entry.
Capacity	Display memory capacity.
Attributes	Display properties of the highlighted object
Help	Display help text.

Highlighting mode

With some applications (e. g. Phonebook/Addressbook), you can highlight one or more entries in a list in order to carry out a function jointly.

Options Open menu.

Mark Activate highlighting mode.

If a **non-highlighted** entry is selected, this can be highlighted:

Mark The current entry is highlighted.

If a **highlighted** entry is selected, the highlighting can be deleted:

Unmark Unmark the current entry.

Additional highlighting functions:

Mark all	Highlight all entries.
Unmark all	Delete highlighting on all highlighted entries.
Delete marked	All highlighted entries are deleted.

Menu speed dialling

All menu functions are numbered internally. A function may be selected directly by entering these numbers in sequence. These numbers are shown in the top right of the display.

e.g. write new SMS
(from standby mode):



Press to display the main menu. Then press



for **Messages**, then



for **Create new**, then



for **SMS text**.

Security

The phone and SIM card are protected against misuse by several security codes.

Keep these security codes in a safe place where you can access them again if required.

Codes

PIN	Protects your SIM card (Personal Identification Number).
PIN2	This is needed to set the charge detail display and to access additional functions on special SIM cards.
PUK PUK2	Key code. Used to unlock SIM cards after the wrong PIN has been entered repeatedly.
Phone code	Protects your phone. Must be entered at the first security setting.



PIN control

The PIN is usually requested each time the phone is switched on. You can deactivate this feature but you risk unauthorised use of the phone together with your SIM card. Some service providers do not permit deactivating the control.

Select Press.



Enter PIN.



Confirm input.

Change

Press.



Confirm.

Change PIN

You can change the PIN to any 4 to 8-digit number you find easier to remember.



Enter **current** PIN.



Press.



Enter **new** PIN.



Repeat **new** PIN.



Change PIN2

(Display only if PIN2 is available).

Proceed as for **Change PIN**.

Chg.phonecode

(Change phone code)

You define the phone code (4-8 digit number) the first time you call up a phone-code protected function (e.g. **Direct call**, p. 15). It is then valid for all phone-code protected functions. Following the third incorrect attempt, access to the phone code and the functions that use it is denied. If this happens please contact Siemens Service (p. 60).

Clearing SIM card barrings

If the PIN is entered incorrectly three times, the SIM card is barred. Enter the PUK (MASTER PIN) provided by your service provider with the SIM card in accordance with the instructions. If the PUK (MASTER PIN) has been lost, please contact your service provider.

Preventing accidental activation

Even if PIN use is deactivated (p. 14) confirmation is required to switch on the phone.

This prevents the phone from being switched on accidentally, e. g. when carried in a pocket or whilst you are on an aircraft.



Press and **hold**.



Press. The phone switches on.


Cancel

Press (or no further input) to stop switch-on procedure. The phone does not switch on.

Calling



Enter the number (always with dialling code/international dialling code).

 A **short** press clears the last digit, a **long** press clears the entire phone number.



Dial phone number.

End call



Press the End key **briefly**.

Set volume



Press upwards/downwards to regulate the volume.

Redial previous numbers



Press **twice**. The phone number **last** called is redialled.

Call up the redial list:



Press **once**.



Pick out a phone number, then to dial press the ...



... key.

Auto. redial

Auto dial The phone number is dialled up to 10 times at increasing time intervals.

Reminder

Prompt A beep reminds you to redial the displayed phone number after 15 minutes.

Accept call



Press.

Reject call



Press **briefly**.

Accept the call before bringing the phone to your ear in order to avoid ear damage caused by the ringtones.



Store phone number in the Addressbook/Phonebook.



Handsfr. Playback using loudspeaker (handsfree talking).

Always switch off "handsfree talking" before holding the phone to your ear. This will avoid damage to your hearing.



Press and hold to switch microphone off.

International dialling codes



Press and **hold** until a "+"-is displayed.



Country Select country.

Call options

Options Functions which are only available **during** the call are offered.

Swap between two calls



Establish a second connection

Options Open menu

Hold Hold current call, then dial the new phone number.

Options Open menu.

Swap Swap between calls.

Incoming calls during a call

You will hear the "call waiting" tone and you can now:

- **Accept the waiting call in addition to the first**

Swap Accept the call and put the current call on hold.

- **Reject the waiting call**

Reject Reject the call, or divert it to the mailbox via **Divert**.

- **Accept the waiting call and end the current call**



End call



Accept new call.

End call(s)



Press the End key.

Yes

Resume held call.

No

End all calls.

Conference



You call up to 5 conference participants one after the other. Once you have established a connection:

Options Open menu and select **Hold**. The current call is put on hold.



Now dial a new number. When the new connection is established ...

Options ... open menu and select **Conference**. Repeat until all participants are connected.

End



All calls in the multiparty conversation are ended when the End key is pressed.

Tone sequences (DTMF)

Enter tone sequences (digits) for remote inquiries to an answering machine.

Options Open menu and select **Send DTMF**.

Text entry

Text entry without T9

Press number key repeatedly until the required letter appears.

Example:



Press once **briefly** to write the letter **a**, twice to write **b** etc. **Press and hold** to write the number.



Press briefly to delete the letter before the cursor; press and **hold** to erase the whole word.



Move the cursor (forwards/back).



Press briefly: Swap between *abc*, *Abc*, *T9abc*, *T9Abc*, *T9ABC*, *123*.

Press and hold: All input-variants are displayed.



Press briefly: Special characters are shown.

Press and hold: Open input menu.



Press once/repeatedly:

., ? ! ' " 0 + - () @ / : _

Press and hold: Writes 0.



Writes blank. **Press twice** = line break.

Special characters



Press briefly.



Navigate to characters.



Press.

Text entry menu



Press and **hold:**

Text format (SMS only),
Input language, **Mark**,
Copy/Insert

Text input with T9

"T9" deduces the correct word from the various key inputs.



Activate/deactivate T9.

Select input language



Open text menu.

Select **Text input**, then select **Input language**.



Confirm.

Write with T9

It is best if you finish a word without looking at the display.

You simply press the keys where the relevant letter is located **once**.



/ ● A blank space or moving to the right ends the word.

Do not input special characters such as Ä. Use standard characters only e. g. A. T9 will do the rest.

T9 word suggestions

If several options are found in the dictionary for a word, the most probable is displayed first.



Press. If this word is also incorrect, press



Keep pressing until the correct word is displayed.

Add a new word to the dictionary:



Select and enter word without T9. Then **Save**.

Correct a word

Words written **with** T9:



Move left or right, word by word, until the required word is **highlighted**.



Scroll through the T9 word suggestions again.



Deletes the last character in a word **and** displays a new possible word.

T9®Text Input is licensed under one or more of the following: U.S. Pat. Nos. 5,187,480, 5,818,437, 5,945,928, 5,953,541, 6,011,554, 6,286,064, 6,307,548, 6,307,549, 6,636,162 and 6,646,573; Australian Pat. Nos. 727539, 746674, and 747901; Canadian Pat. Nos. 1,331,057, 2,302,595, and 2,227,904; Japan Pat. No. 3532780, 3492981; United Kingdom Pat. No. 2238414B; Hong Kong Standard Pat. No. HK1010924; Republic of Singapore Pat. No. 51383, 66959, and 71979; European Pat. Nos. 0 842 463 (96927260.8), 1 010 057 (98903671.0), 1 018 069 (98950708.2); Republic of Korea Pat. Nos. KR201211B1 and KR226206B1. People's Republic of China Pat. Application Nos. 98802801.8, 98809472.X and 96196739.0; Mexico Pat. No. 208141; Russian Federation Pat. No. 2206118; and additional patents are pending worldwide.

Text modules



→ Text modules

Text modules can be stored in the phone for adding to your messages (SMS, MMS, e-mail).



Press briefly: Switch between: abc, Abc, T9abc, T9Abc, 123.

Press and **hold:** All input modes are displayed.



Press and **hold:** Opens input menu (p. 18).

Default book



→ Select function.

Show entries

The entries in the default book (Addressbook or Phonebook) are shown.



Select a name with the first letter and/or scroll.

New entry

Create new entry.

Addressbook (see also p. 21)

Phonebook (see also p. 23)

Default book

You can set which directory you prefer to use.

The selected default book is opened in standby mode with the joystick.



Open Phonebook or Addressbook

Addressbook

A lot of data can be recorded in the Addressbook for each entry, and additional functions (e.g., pictures, birthdays) can be used.

Phonebook

The Phonebook is located on the SIM card. Only one phone number can be entered per entry. The Phonebook on the SIM card can easily be transferred into a different phone.

Business card

Create your own business card to send to a different GSM-phone. If no business card has been created yet, you will be asked for your input.



Move from field to field to enter your details.

Save

Press.

The contents of the business card and the Addressbook entries correspond to international standards (vCard).



Copy numbers from Addressbook/Phonebook.

Groups

See p. 22.

<Info numbers>

See p. 24.

Addressbook

The Addressbook can store up to 1000 entries, each with a variety of phone numbers and additional address details. These entries are managed separately from those in the Phonebook in the phone memory.

New entry

The Addressbook is set as standard:



Open Addressbook
(in standby mode).



Display input fields.



Select required input
fields.



Fill in input fields.

At least one name must be entered. Always enter phone number with prefix.

Special input fields:

Group: Allocation to a group (p. 22).

Address: Extension to enter the complete address:
Street:, Post code:, City:, Country:

Com. services

Information if the entry is being used as a chat contact:

Nickname:, WV user ID:, ICQ number:, AIM screen name:

Birthday: After activation, you can enter the date of birth.

Reminder: The telephone reminds you one day before the birthday at the time entered.

Picture: Assign a picture to the entry. It is displayed if you are called by a corresponding phone number.

All fields/Reduced fields

Displays the required input fields.






Save the entry.



Temporary switch to Phonebook.





Display/find entry

-  Open Addressbook (in standby mode).
-  Select required entry.
-  Display.




Display options

- Options** Displays functions for the selected input field.

Change entry

-  Open Addressbook (in standby mode).
-  Select entry and press **Edit**.
-  Select input field and, if applicable, press **Edit**.
-  Make changes, then **Save**.

Call entry

-  Open Addressbook (in standby mode).
-  Select a name with the first letter and/or scroll.
-  The number is dialed.

If there are several numbers in the Addressbook entry, these are offered for selection.

Addressbook options



Different functions are available, depending on the context:

Options	Open menu.
Move to ...	Copy current entry or highlighted entries to a group.
Copy to SIM	Copies name and number to the SIM card (Phonebook).
Import	Set up readiness to receive for an Addressbook entry via IrDA (p. 51) or SMS (p. 29).

(For standard functions, see p. 12)

Groups

Nine groups are specified in your phone to enable you to arrange your Addressbook entries clearly. You can rename seven groups.

-  Open Addressbook (in standby mode).
- <Groups>** Select (the number of entries is listed behind the group name).
-  Select group.

Ringtone for group





See p. 48.

Phonebook

Entries in the Phonebook (on the SIM card) are managed separately from the Addressbook.

New entry

If the Phonebook has been selected as standard:

-  Open Phonebook (in standby mode).
-  Select <New entry>.
-  Display input fields.
-  Navigate between and fill in the input fields.

Phone number:

Always enter phone number with dialling code. An entry is not saved without a phone number.

Name:

Enter first and/or last names.

Group:

Default **No group**

Important phone numbers are combined together in a group (VIP).

Location:

Default **SIM**

Special SIM cards can save phone numbers in a protected area (**Protected SIM**) (PIN2 required).

Record number:

Is automatically assigned to every entry. The phone number can be dialled with your entry number.

Save Press to store the new entry.







Temporary switch to Addressbook.

Country

International dialling code p. 16

Call (search for an entry)

-  Open Phonebook.
-  /  Select a name with the first letter and/or scroll.
-  Phone number is dialled.

Change entry



Select entry in Phonebook.



Press.



Select desired input field.



Make changes.



Press.

Phonebook options

The following functions are available, depending on the current situation.

Options Open menu.

Copy into  Copy all highlighted entries to the Addressbook.

Copy all to  Copy all entries to the Addressbook.

Delete all Delete entire Phonebook. PIN-protected.

Import Set up readiness to receive for a Phonebook entry via IrDA (p. 51) or SMS (p. 29).

(For standard functions see p. 12)

<Special books>



Open Phonebook and select <Special books>.

<Own numbers>

Enter "own" phone numbers in Phonebook (e.g., fax) for information.

<VIP numbers>

Display the phone numbers saved in the VIP group.

<SIM phonebook>

Entries stored in the Phonebook on the SIM card can also be used on other GSM phones.

<Protected SIM>



On special SIM cards, phone numbers can be stored in a protected location. PIN2 is required for editing.

<Service nos.>/<Info numbers>

There might be phone numbers saved in your Phonebook that have been provided by your service provider.

Call records

Phone numbers are saved to make it easier to redial them.



Select record.



Open record.



Select phone number.



Dial phone number.

10 phone numbers can be stored in each call record:

Missed calls



The phone numbers of calls that you have received but not answered are stored for call back purposes.



Missed call.

Calls received

Accepted calls are listed.

Calls dialled

Access to the last numbers dialled by you.



Fast access in standby mode.

Delete records

The records are deleted.

Time/charge

You can display the charges and duration during a call.



Last call:, Incoming calls:,
Outgoing calls:, All calls:,
Remaining units:



Reset the selected setting.

Charge sett.



Open menu.

Personal rate

Enter the currency as well as the charge per unit and time.

Account limit

Special SIM cards allow you or the service provider to define a credit limit or a period after which the phone is barred for outgoing calls.

Auto display

Call duration and charges are displayed automatically.

Camera

You can view photos recorded on the integrated camera immediately and

- use the photo as a background image, logo, a switch on/off animation or a screensaver.
- send the photo via MMS or e-mail.

Switch on



Or



Start camera in standby mode.

The current (preview) image is displayed. You will see the following in the first line from left to right:



Brightness



Zoom factor



White balance



Flash connected.

The number of photos that can still be taken in the selected resolution is displayed in the top right-hand corner of the preview image.

This number varies considerably from motif to motif (storage space required). Information about the selected resolution is located under the preview image.

Record



Takes a photo.



Displays the preview image of the next photo.

The photo is saved with a name, the date and the time. To enter the name, see **Setup** in the options menu (p. 27).

Settings prior to taking a photo:



Sets the brightness.



Sets the zoom factor.

Image resolution

It is possible to set the quality of the image regardless of the preview image resolution, e.g. **Premium**, **Medium**, **Wallpaper**

The resolution may decrease depending on the selected digital zoom.

Flash (Accessories)

If the flash is active, this is shown by a symbol in the display. The flash is charged constantly while it is connected to the phone and the camera is activated. This reduces the stand-by time.



This symbol appears when the flash is being loaded.

For settings, see options menu.

Camera options

The following functions are available, depending on the current situation.

Options Open menu.

Settings	<ul style="list-style-type: none">• Name for recordings• Image resolution
Pictures	The last picture taken is shown.
Use flash	Choose between: Automatic, Off, Red eye red.
Self timer	The photo is taken approx. 15 seconds after triggering. For the last 5 seconds, you will hear a signal tone each second.
White balance	Choose between: Automatic, Indoor, Outdoor

(For standard functions see p. 12)



There is insufficient storage space available. Start the delete assistant to delete specific data (p. 50).

Message lists

Inbox

The central inbox folder contains all messages which have been received. The entries are marked with a symbol to indicate their type and status (p. 6).

To call up the central inbox folder, e.g. if a new SMS has been received:



Press the soft key beneath the symbol.

When you open an entry, the relevant application also starts. After a set time (**Options**), entries which have already been read and opened are only displayed in the message-related incoming lists.

You will find the following **message types** in the inbox folder:
SMS, MMS, Email

System messages:

Message about
MMS, Missed alarm, Missed appts.,
Missed calls, WAP push, Voice message

Data items:

Ringtones, Pictures, calendar entries,
Notes and Business card.

Message lists

All SMS, MMS and Email are each displayed in four lists.



→ Inbox

→ Select message type.

List of received messages.



→ Draft

→ Select message type.

List of saved drafts.



→ Unsent

→ Select message type.

List of messages not yet successfully sent.



→ Sent

→ Select message type.

List of sent messages.

 
 
 
 
Options

Call up the function menu to process the messages.

SMS

You can transmit and receive very long messages (up to 760 characters) on your phone. They are automatically composed of several "normal" SMS messages (note higher charges). The maximum possible length of an SMS is reduced if you use special letters from some languages. If you do not wish to use these letters then change the input language in the options menu. You can also insert simple pictures and sounds in an SMS.

Write/send








Special functions

 
Picture&sound

Send simple pictures and tones with or without accompanying text. Remember that these may be protected (DRM, p. 11).



With the text input field open:

-  Open menu.
-  Select **Picture&sound**.
-  Select list.
-  Confirm. The first entry of the selected section is displayed.
-  Scroll to entry required.

For **Fix animations/Fix sounds**:



  For **Own animat., Own pictures, Own sounds**:



SMS archive



The list of SMS messages stored in the phone is displayed.

SMS to group

You can send an SMS message as a "circular" to a recipient group.

Options

Open menu.

Send

Select.

Group

The list of groups is displayed.



Select group.



Open group and highlight all/individual entries.



Transmission is started after a security prompt.

Read



Arrival of a new SMS announced in the display.

Inbox is opened. It offers you a quick overview of the messages that have been received.



To read the SMS, press the joystick.



Scroll through message line by line.



If this symbol flashes, the SIM memory is full. Delete or archive messages.

Reply

You can answer the currently open SMS immediately. The newly added text is placed above the received text.



Functions for a direct reply.

Setting

SMS signature



→ → Message setup
→ SMS → SMS signature

You can enter a "signature" with a maximum of 16 characters. This signature will then be attached to each SMS except for a **Reply** and when changes are made to an existing SMS.

SMS profiles



→ → Message setup
→ SMS → SMS profiles

Up to 5 SMS profiles can be set. The transmission characteristics of an SMS are defined in these.

Activate profile



Select profile.



Activate.

Set profile



Select profile and open with **Edit** to process it.

MMS

The **Multimedia Messaging Service** enables you to send texts, pictures and sounds in a combined message to another mobile phone or to an e-mail address.

Depending on your telephone setting, you will either receive the complete message or only a notification with sender details and size. The actual MMS can then be downloaded manually later.

Create


An MMS consists of the address header and the content. This may consist of a series of pages. Each page may contain a text, a picture and a sound. Remember that pictures and sounds may be protected (DRM, p. 11).

Create standard MMS



First select an object for processing to be added to the first page of the MMS:

<Picture> Select.

 Display picture functions:
Insert picture, Camera

<Sound> Select.



Display sound functions:
Insert sound, Record

<Text> Select.



Display text functions
(see also p. 18).

Options

Options Open menu.

Send MMS	Send MMS.
Play	Playback entire MMS on the display.
Picture...	See above.
Sound...	See above.
Text...	See above.
Page	<p>Add page: Insert new page behind current one.</p> <p>Delete page: Delete current page.</p> <p>Page list: Display available pages.</p> <p>Timing: Set the time sequence for the MMS presentation:</p> <ul style="list-style-type: none"> • Page duration: Automatic or Manual • Show page: Only if Manual is set in front of it. Enter the lifespan of a page.

Msg. details	Enter sending parameters (see next chapter).
Save as templ.	Save created MMS as a template. See also below:
Layout	Select one of four possible layouts: Text above, beneath, beside (on left or right of) picture.
Colours	Select the colours for: <ul style="list-style-type: none"> • Message • Page • Bitmap • Text backg. • Text colour

(For standard functions see p. 12)

Templates



→ MMS templates

MMS templates are saved MMSs with no address. They can be sent as new MMSs or used as part of a new MMS. A maximum of 10 templates can be saved.

Create templates by writing a new MMS or using an MMS which you have already received.

Options

 
Open menu and select **Save as templ.**

Send

The page(s) of the new MMS has (have) already been created.
The MMS is displayed.



Open address entry.

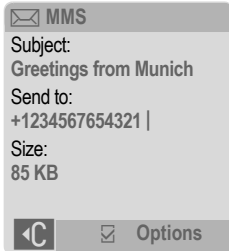

Subject: Enter a brief description of the MMS.

Send to: Enter one or more phone number(s) / e-mail address(es).

Size: Display the MMS size.
Start sending procedure.



The MMS is sent after confirmation.

More: Provide additional address fields.



Sending options

Options Open menu.

Send MMS	Send MMS.
Play	Play entire MMS on the display.
Edit	Display object selection to change an object.
Add recipient	Add recipient from the current address directory.
Delete recip.	Delete individual recipient.
Add attachm.	Add attachment: <ul style="list-style-type: none"> • File • Business card • Appointment
Page list	Display MMS pages for viewing and/or changing.
Save as templ.	Save created MMS as a template.

(For standard functions see p. 12)

Receive

 /  Arrival of new MMS/notification announced on display.



Start reception. Depending on the setting, (p. 34) the MMS/notification is transferred into the central incoming message list (Inbox).

In order to receive the complete MMS **subsequently**, the notification must be opened.

Receive Start transmission.

Read

An MMS has been received in full.



Start playback.

Key functions for playback:



To the next page.



Press briefly once to return to the start of the current page; press briefly twice to return to the start of the previous page.



Set volume.



End.

The message details are displayed when the MMS is complete.

Subject: Description of the MMS.

From: Information about the sender.

Size: Size of the MMS in KB.

More: Additional input fields.


Setting

 →  → Message setup → MMS
 → Select function.


MMS profile:

Six MMS profiles can be set. The sending properties are specified in these profiles. In most cases, the setting has already been made. If necessary, please check with your service provider.

 Select profile.

 Open to edit the profile.

Setting options

 Open menu.

Activate, Rename, Change sett.

User settings

Set the MMS dispatch to suit your requirements:

Delivery report: Request delivery confirmation for sent messages.

Read reply: Request confirmation that the MMS has been read.

Default priority: Send priority:
 Normal, High, Low

Validity: Select the period in which the service centre is to try to deliver the message:
 Manual, 1 hour, 3 hours, 6 hours, 1 day, 1 week, Maximum*
 * Maximum period that the service provider permits.

Earliest deliv. time: Transmission from the service centre to the recipient: Immediate, Tomorrow

Default duration: Length of display for an MMS page (standard requirement).

Retrieval: Receive complete MMS or only notification of arrival.
Immediate
 Receive complete MMS immediately.
Auto.homenet
 Receive complete MMS immediately in home network.

Manual
 Only the notification is received.

Spam filter: Settings for receipt of promotional MMS.

Size indication: Set a max. message size and how it is to be dealt with.

Email

Your phone has an e-mail program (client) with which you can write and receive e-mails.

Writing/sending


 →  → Create new → Email

Enter address data:

Send to: Enter one/several e-mail address(es).

Subject: Enter the title of the e-mail.

Content Enter text.

 Start sending process.

Or

More: Open additional input fields.

Attachments:

Add attachments such as pictures and sounds.

Receive/read

 →  → Inbox
→ Select function.

Before an e-mail can be read, it must be retrieved from the server.

Retr. e-mail

Only the message header is retrieved.

Options Open menu and select **Retrieve body**.

Send/rec. mail

E-mails are transferred to **Inbox** and completed e-mails in the **Unsent** list are sent.

Setting

 →  → Message setup
→ Email setup

Accounts

Before using this service, you must set the server access and your e-mail parameters. You can obtain all the necessary data from your service provider.


www.siemens.com/c72

Activating access

 Select access.

 Activate access.

Setting access

 Select access or <Empty> .

Edit

Fill in the data fields as specified by your service provider.

Voice message/CB

Voice message



If you have a mailbox, a caller can leave a voice message for you

- if your phone is switched off or not ready to receive,
- if you do not want to answer,
- or if you are making a phone call.

You may have to register for this function and set it manually.

Setup



The service provider supplies you with two phone numbers:

Save mailbox number

 
Call this phone number to listen to your voice messages.



Enter phone number and confirm with **OK**.

Save call divert number

Calls are diverted to this phone number.



Enter phone number and register it at the network with **OK**.

Listen to message



A new voice message can be announced as follows, depending on the service provider:



Symbol plus beep.

Or



Notification via SMS.

Or

You receive a call with an automatic announcement.

Call your mailbox and play the message(s) back.



Press and **hold** (if necessary enter mailbox number once). Confirm with **OK** and **Mailbox** depending on your service provider.

CB services



Some service providers offer information services (info channels, **Cell Broadcast**). If reception is activated, you will receive messages on the activated topics in your Topic list.

Inst. message



Through the chat you can receive text, audioclips, pictures and files in real time as well as send them to one or more end devices (mobile phone, PC). This function is not offered by all service providers. Please ask your service provider.

Your dialogue partners are entered in contact lists. When a connection has been established, these lists show who is available, whether he/she wants to be disturbed and what mood he/she is in at present.

For the **Inst. message** to function correctly it might be necessary for you to first enter your own mobile phone number in the Phonebook (on the SIM card) under <Own numbers> (p. 24).

GPRS must be switched on.



→ Inst. message

Start menu

Login Connect to the account through which the dialogue is to take place

or

Account: Select account (p. 42).

Msg. history

Read the messages from the last session.

Setup Settings for your representation, the application and servers.

Quit End application.

Rapidly to chat

Connect to account (p. 42):



→ Inst. message → Login

The current contact list or the overview is displayed (if necessary, set account first, p. 42).

Specify your own status (p. 42):

Options Open menu.

My settings

Select and make entries.



Return to contact list.

Enter new contact (p. 38):

Options Open menu.

Manage Select, then

Add contact

Select and enter at least the user ID.



Return to contact list.

Hold dialogue with new contact (p. 40):



Select the contact.



Start chat.



Open editor.



Write text.



Sent text ... and so on.

Login



→ Inst. message → Login

Connect to the last account used (see also [Automatic login](#): p. 42).

Contact lists

When the connection has been established, the contact list or the overview of the contact lists is shown for selection.

In the contact list, you will find a list of the most recently used contacts. The first time you log in, an “empty” contact list will be generated by the server if necessary.

Displays in the list:

-Conversation

Displays online contacts for whom there are messages.

-Online

Online contacts with whom no conversation is being held at the moment.

-Group



Groups for holding a dialogue with several contacts.

-Offline

Contacts who are not online at present.

Manage contacts



Select a contact.

Options

Open menu.

Manage

Select.

Contacts

Different functions are offered depending on the selection:

Add contact

User ID:

Enter a unique user (login) name.

Nickname:

Enter your own nickname for the contact.

Friend:

The contact receives the status **Friend**: and access to personal information (p. 42).

Search contact

Search for contact.

Delete contact Delete contact from the list.

Block contact No more messages are received from the contact and the contact receives no status information from you. This function works for all your lists.

Manage groups



Select one of the groups you set up yourself.

Options Open menu.

Manage Select.

Manage group

Different functions are offered depending on the selection:

Add member Add a new group member, see also Add contact

Search memb. Search for group member.

Invite Invitation to the contacts in your own group to Inst. Message.

Delete member Delete contact from the group member list.

Add group Add new group.

Search group Search for group on the server (also groups no longer managed in the list).

Create group **Group ID:** Enter an unambiguous group name.

Name: Name of group.

Topic: Topic of group.

Searchable: Other people can look for the group.

Welcome note: Enter own greeting.

Delete group Delete group.

Create a new contact list

The current contact list is displayed.

Options Open menu.

Contact lists

Available contact lists are displayed.

Options Open menu.

Create Select.

Contact list ID:

Give the contact list its own specific name.


Name: Allocate a self-explanatory name.



Confirm.

Contact list options

Options Open menu.

Details 	Additional information about the contact or the group.
My settings	Information on your current personal status (p. 42).
Manage	Functions for managing a contact or a group.
Contact lists	Display contact lists for selection.
Block list	Display all blocked contacts. Can be unblocked.
Appl. settings	Set the application (p. 42).
Suspend	End the application; the server remains connected.
Logout	Log off from the server and return to start menu.
Help	Display help text.

Start chat visit

A contact list must be displayed.



Select a contact or a group.



Start communication with the contact.

The page in the chat is displayed. When a group is engaged in a dialogue, the name of the sender is placed in front of each contribution.



Open editor.



Write text.



Send text. The text appears in the chat soon afterwards.

Naturally, you can also receive messages from contacts you do not know. This will be pointed out to you in the display, and you can either switch to Inst. Message or ignore/block the contact.

Receiving objects

If sounds or pictures are sent to you during a dialogue, you will be informed of such in the display.


Receive Accept object


or


Reject Reject object.

Options (individual contact)

Options Open menu.

Send sound  Select and send a melody/sound from the list (DRM, p. 11).

Send picture  Select and send a picture from the list (DRM, p. 11).

Send any  Send any file.

Details Information about the contact if they authorise this.

Clear all Delete all texts in the current Inst. Message.

Block contact No more messages are received from the contact and the contact receives no status information from you. This function works for all your lists.

Options (group contact)

Options Open menu.

Joined users List group participants currently online.

Leave group Exit group.

Details Information about the group:
Group ID:, Name:, Topic:, Owner:

Clear all Delete all texts in the current Inst. Message.

 
Msg. history

 →  → Inst. message
→ Msg. history

The messages from the last meeting are displayed. You can read and delete the contributions.

Requirement: The server must be disconnected, see **Suspend** (p. 40) and **Automatic login**: (p. 42).

Setup



Account

Display the access list.



Select an account to establish a connection.

Or

<New entry>/Account sett.



Set up an account or change the settings as specified by the service provider. Depending on the service provider, the settings may not be changeable.

Name:	Name of account.
URL:	Enter URL, e.g. http://www.abc.com
User ID:	Enter a unique user (login) name.
Password:	Enter password (shown as a series of asterisks).

My settings

Alias:	Your own alias under which you can be found on the server.
Screen name:	Name to be displayed in the group.

Mood:	Information about your mood, e.g. Happy, Sad, Sleepy, usw.
Status text:	General text information, e.g. "Am at home".
Availability:	Status display
Mobile:	Enter the phone number with international dialling code.

Options	Specify who is allowed to view your personal information:
	Public: All contacts.
	Private: Contacts designated as Friend: (p. 38).
	Hidden: Nobody.

Appl. settings

Automatic login:	Auto-reconnect to the last account used.
Timeout:	Time without action after which the application is terminated. However, the server remains connected.
Message info:/Online info:	Signal the receipt of messages: Yes/No Signal given as: Sound, Silent alert, Pop-up

Surf & fun

Get the latest information from the Internet that is specifically adapted to the display options of your phone. In addition, you can download games and applications to your phone. Internet access may require registration with the service provider.

Internet



The browser is activated with the pre-set option as soon as you call up the function (**Browser settings**, S. 44; may be specified/pre-assigned by service provider).

Browser menu

Options Open menu.

Homepage	Call up the pre-set homepage or the current profile (p. 44).
Bookmarks	Display bookmarks stored in the phone; save bookmark.
Go to...	Enter a URL.
Reload	Reload current page.

Show URL	Display the URL of the page currently loaded for sending via SMS/MMS/e-mail.
History	Display last Internet sites to be visited.
Disconnect	Disconnect the Internet.
File	Save object on the current page or save the complete page, display saved pages.
Setup	Browser settings (p. 44).
Exit browser	Close the browser.

End connection



Press and **hold** to clear down the connection and close the browser.

Navigation in the browser



- Select a link.
- Settings, status on/off.



- Press **briefly**: back a page.

 


- One input field/link forward/back.
- Scroll one line.

Display symbols in the browser



Enter special characters



Browser settings



Options Open menu.

Setup Select.

Browser	Set start option as well as handling of pictures and tones and send options.
Profiles	The list of profiles is displayed for activation/setting (see below).
Protocol parameters	Set protocol parameters, push messages and abort time as well as handling of Cookies.
Security	Set encryption.
Context	Reset session; delete cache, history and Cookies.

Your Internet browser is licensed by:



Profiles

Preparation of the phone for Internet access depends on the service provider concerned:

Profile pre-set

In most cases, access profiles have already been created for one or more service provider(s).

 Select profile.

 Activate profile.

Set profile manually

If necessary, contact your service provider. You can change settings and delete profiles here.

Bookmarks



URLs stored in the phone are displayed. New bookmarks can be saved. It is possible to process or manage bookmarks in files.

Games and Applications

Games and applications are offered on the Internet. Once downloaded these are available to you on your phone. Most applications include instructions. Some applications and games are already pre-installed on your phone. You will find these listed here:

www.siemens.com/c72

Requirements

Browser profile (p. 44) and the access (p. 51) must be configured.


Download


Select the correct access depending on whether you are loading games or applications:

 →  → Games/Applications

In addition to URLs and service providers for the download, any available applications/games and folders will be displayed.

Download new

 Select a service provider or URL.

 Start browser and visit URL.

Downl. assist.

 →  → Downl. assist.

You will not be left on your own during the download!

You can use Browser to download applications (e.g. ringtones, games, pictures, animations) from the Internet. Siemens excludes all warranty and liability claims in respect of or in connection with any applications subsequently installed by the customer and any software not included in the original delivery package. This also applies to functions enabled subsequently at the customer's instigation. The purchaser bears sole risk for the loss of, damage to, and any defects arising in, this device or the applications and for any direct damage or consequential damage of whatever nature resulting from the use of this application. For technical reasons, such applications and subsequent enabling of certain functions are lost in the event of the device being replaced/re-supplied and may be lost if it is repaired. In such cases, the buyer is required to download or release the application again. Please ensure that your phone has Digital Rights Management (DRM) so that individual applications downloaded via Internet are protected from unauthorised reproduction. These applications are then exclusively intended for your phone and cannot be transferred from this even to create a backup. Siemens does not warranty, guarantee or accept any liability for the customer's ability to download or enable applications again, or to do so free of charge. We recommend that you carry out a backup from time to time of the applications on your PC using the "Mobile Phone Manager". You can download the relevant latest version of the MPM from the Internet at: www.siemens.com/c72

Setup

Profiles



Several settings can be stored in a phone profile in order, for example, to adapt the phone to the surrounding level of noise.

 
- Five standard profiles are provided with default settings. They can be changed however: **Normal environment**, **Quiet environment**, **Noisy environment**, **Car Kit**, **Headset**
- You can set two personal profiles (<Name>).
- The special profile **Aircraft mode** is fixed and cannot be changed.

Profile settings

Edit a default profile or create a new personal profile:



Select profile.



Open menu and select **Change sett.**

The list of available functions is displayed. When you have finished setting a function, you return to the profile menu where you can change a further setting.

Car Kit

If an original Siemens Car Kit is used, the profile is switched on automatically when the phone is inserted into the cradle.

Headset

The profile is only switched on automatically if an original Siemens headset is used.

Aircraft mode

The acoustic signals and vibration for the alarms (appointments, alarm clock) are switched off. The alarms continue to be shown in the display only.

Switch on



Scroll to **Aircraft mode**.



Confirm selection.



Confirm safety prompt again to activate the profile. The phone switches itself off automatically.

Normal mode




When you switch on your phone again, the previously set profile will be reactivated automatically.

Themes



Load a completely new visual presentation onto your phone. At the press of a key, various functions are reorganised on a theme basis, e.g. switch on/off animation, background image, screensaver, switch on/off melody, additional animations.

Activate new theme

-  Select theme.
-  Display theme preview.
-  Activate new theme.


Display



Language

Set the language of the display text. When "automatic" is set, the language of your home service provider is used.

If a language that you do not understand happens to be set, the phone can be reset to the language of your home service provider with the following input (in standby mode):

*#0000# 

Text input

T9 preferred

Activate/deactivate intelligent text entry.

Input language

Select language for text entry.

Wallpaper

Set wallpaper graphic for the display.

Logo

Choose graphic to be displayed instead of the provider logo.

Colour skin

Select colour scheme, incl. background image for the entire user interface.

Screensaver

The screensaver shows a picture in the display when a period set by you has elapsed. An incoming call and/or pressing any key will end the function except if the safety function is activated.

The "picture" (animated) and "digital clock" screensavers significantly reduce the phone's standby time.

Startup anim.

Shown when the phone is switched on.

Shutdn anim.

Shown when the phone is switched off.

Own greeting

Is displayed instead of an animation when you switch on the phone.

Big letters

You can choose between two font sizes for the display.

Illumination

Set display illumination to brighter/darker.

Contrast

Set display contrast.

Ringtones



Set the signal tones on the phone to suit your requirements.

Ringer setting

Activate/deactivate the ringer or reduce it to a short beep.

Silent alert

To avoid the disturbance caused by a ringing phone, you can activate the silent alert function. This alert can be activated in addition to the ringtone.

The function is deactivated when the battery is being charged and accessories are connected (except the headset).

Volume

Set different volumes for types of call/functions.

Please make sure you have accepted the call before holding the phone to your ear. This will avoid damage to your hearing from loud ringtones.

Assign ringtone

A ringtone which has already been selected will be played or the list of possible ringtones will be displayed for selection.

Call setup



Hide ID



If activated, your phone number will not appear on the other party's display (depending on the service providers).

Call waiting



If you are registered for this service, you can check whether it is set and you can activate/deactivate it.

Divert

You can specify when calls should be diverted to your mailbox or other phone numbers.

Set up call divert (example):

Unanswered



Select **Unanswered**. (Includes the conditions **Not reachable**, **No reply**, **Busy**, see below.)



Confirm and select **Set**, then enter the phone number to which the call will be diverted.



Confirm. The setting is confirmed by the network.

All calls



All calls are diverted.



Icon in the top line of the display in standby mode.

Other possibilities for divert:

Not reachable, **No reply**, **Busy**, **Receiving fax**, **Receiving data**

Call screening

Only calls from phone numbers that are in the Phonebook/Addressbook or assigned to a group are signalled. Other calls are only displayed.

Any key answ.

Incoming calls can be accepted by pressing any key (except for).

Minute beep

During a call you have initiated you, and only you, will hear a beep every minute so you can check the call's duration.

Phone setup



→ Phone setup
→ Select function.

Key tones

Set the type of acoustic key acknowledgement.

Info tones

Set service and alarm tones.

Automatic switch off

The phone switches off each day at the set time.

Phone identity

The phone identity number (IMEI) is displayed. This information may be useful for customer service.

Alternatively enter in standby mode:

***#06#**

More

Display further information about the appliance.

Device check

A self-test and an individual test are offered after the last information page. If you select **Selftest**, individual tests are carried out.

Memory assis.

The delete assistant will help you if there is insufficient phone memory.

File system

Format

(Phone-code protected)

The phone memory is formatted and **all** saved data such as ringtones, pictures, games etc. are deleted. Formatting may take longer than 1 minute.


Clean up

Create more memory by deleting temporary files no longer required.

Master reset

Reset phone to default values (factory setting). This does not affect the SIM card or the network settings.

Alternatively enter in standby mode:

*#9999# 

Clock



Time/date

Change First enter the date, then the time.

Time zones

 
World map:

Displays world time zones.



City list:

List of world cities.



Date format

Select the display format for the date.

Time format

Select **24h** or **12h**.

Buddhist year

Activate the Buddhist calendar.

Show clock

Activate/deactivate time display.

Auto time zone



The time is set automatically via the GSM network.

Connectivity



GPRS



(General Packet Radio Service)

GPRS is a method for transmitting data faster in the mobile network. For symbols in the display see p. 6.

GPRS info

Display connection information.

IrDA

The distance between two devices must not exceed 30 cm. The infrared windows in both appliances must be aligned as accurately as possible with each other. For symbols in the display see p. 6.

Data services

Default setting and activation of the connection profiles for **MMS**, **WAP** applications. The phone default setting varies from service provider to service provider. Consult your service provider or go to this address in the Internet for more information www.siemens.com/mobilephonescustomercare in the FAQ section.

HTTP profile

The phone default setting varies from service provider to service provider. Consult your service provider or go to this address on the Internet for more information

www.siemens.com/mobilephonescustomercare in the FAQ section.

Authentication

Activate or deactivate encrypted WAP dial-up (CSD connections only).

Security



Auto key lock

The keypad is locked automatically if no key has been pressed for one minute in standby mode. This prevents the phone from being used accidentally. However, you can still be called and you can still make an emergency call.

Additional information

Block/unblock in standby mode.
In each case:



Press and hold.

Direct call

Only **one** phone number can be dialed. The required phone code (4 to 8 digits) is set by you and entered at the first security prompt.



To switch off, press and **hold**, then enter the phone code.

Only



Restrict calls to SIM-protected numbers in the Phonebook.

This SIM only



Your phone is prevented from being used with a **different** SIM card.

Codes

For description, see p. 14.

Barrings

Network barring restricts the use of your SIM card.

All outgoing

All outgoing calls except emergency numbers are barred.

Outgoing intl. (outgoing international)

Only national calls can be made.

Out.int.x.home (outgoing international without home country)

No international calls, only calls to the home country.

All incoming

The phone is barred for all incoming calls.

When roaming

You will not receive calls when outside your home network.

Status check

Status check for network barring.

Clear all

Clear all barrings.

Network



→ Network
→ Select function.

Line



Two independent phone numbers must be registered.

Network info

The list of GSM networks currently available is displayed.

Choose network

Network search is restarted.

Auto network

If activated, the next network is dialed in the order of your "preferred networks".

Pref. network

Set the service providers you prefer when you leave your home network.

Band selection



Select either GSM 900, GSM 1800 or GSM 1900.

Fast search

Network reconnection is speeded up.

User group



Depending on the service provider, you can create groups with this service. These can have access to internal (company) information, for example, or special tariffs apply. Please check with your service provider for details.

Accessories



→ Accessories

→ Select function.

Car Kit

Only in combination with an original Siemens handsfree car kit (see accessories). The car kit profile is activated automatically when the phone is inserted into the cradle.

Auto answer

(factory default: off)

Calls are accepted automatically after a few seconds. Eavesdropping is possible!

Automatic switch off

(factory default: 2 hours)

The phone is powered by the car's power supply. Set the time that must elapse after the ignition has been switched off before the phone is automatically switched off.

Car loudspk.

Improves playback in certain circumstances.

Headset

Only in conjunction with an original Siemens headset (see accessories). If an original Siemens headset is used the profile is automatically activated when the headset is plugged in.

Auto answer

(factory default: off)

Calls are accepted automatically after a few seconds (except where the ringer is switched off or set to beep). You should therefore be wearing the headset.

Auto answer

If you do not notice that your phone has accepted a call, there is the danger that the caller may eavesdrop.


Fast access

Soft keys

Assign one phone number or function to each of the two soft keys.

Change

For example, the **Internet** function is assigned to the soft key. To change this (in standby mode):

Internet Press **briefly**, then **Change**. Select a new function from the list and confirm with .

Apply



The "Internet" is just used as an example here.

Internet Press and **hold**; the application is started.

Speed dialling keys

Assign a phone number or function to each of the keys from 2 to 9. Number key 1 is reserved for the mailbox.

Assign

 Press number key (e.g. the 3) **briefly** then press **Set**. Select a new function from the list and confirm with .

Apply

Select a stored phone number or start a stored application (e.g. **Internet**).

In standby mode:



Press and **hold**.

My menu



Press.

My menu Press.

Set up your own menu. The list of 10 entries is preset, but can be changed.

Change menu

You can replace each entry (1-10) with another entry from the selection list.



Select entry.

Change

Open the function list to make a selection.



Select the **new** entry from the list.



Confirm. The entry is saved.

Reset all

Reset all Select. After a security prompt, the default setting is reset.

Organizer



→ Select function.

Calendar

You can enter appointments in the calendar. Time and date must be set correctly.

The calendar offers you three views: monthly view, weekly view, daily view.

The various entries are colour-coded. Appointments are shown as a vertical colour bar on the horizontal hour division.

Navigation:



Scroll between weeks/days/hours.

Calendar setup

Start of day:

Time when the working day begins.

Start of week:

Weekday on which the monthly and weekly view on the left starts

Set weekend

Set the days for the weekend.

Show birthdays:

Yes/No.

Appointments

Appointments are displayed in chronological order in a list.

Enter new appointment

<New entry>

Select.

Types:



Memo: Text input for description.



Voice memo: Enter voice memo.



Call: Enter phone number. This is shown with the alarm.



Meeting: Text input for description.



Holiday: Enter start and end date.



Birthday: Enter name and date.

Different input/selection fields are displayed depending on the type. The number of fields can be restricted, see **Standard** at the end of the list.



Alarm clock, alarm set.



Appointment, alarm set.

An alarm sounds even when the phone is switched off (except in **Aircraft mode**, p. 46). The phone does not go to standby mode. To deactivate it press any key.

Tasks

A task is displayed like an appointment in the agenda for the selected day. However, unlike an appointment it does not require a time. When no time is entered the task appears at the top of the list every day until it is marked as completed. The entries are same way as **Appointments** (see "Appointments").

Notes

T9 support (p. 18) makes writing short notes such as shopping lists easier. Save confidential notes with the phone code.

Missed appts.

Events with an alarm (**Appointments**, **Tasks**) to which you have not reacted are listed for reading.

Dictat.machine

Use the dictating machine to record short voice memos.

New recording

<New entry>

Select.



After a brief beep, say the text.



Alternate between pause/record.



End recording. The recording is automatically saved with a time stamp. Rename with **Options**.

Playback



Select the desired recording.



Alternate between playback/pause.



Press and hold rapid rewind and fast forward.

Warning!

The use of this feature may be subject to restrictions under criminal law.

Please inform the other party to the conversation in advance if you want to record the conversation and please keep such recordings confidential.

You may only use this feature if the other party to the conversation agrees.

Time zones


See p. 50.

Extras

 →  → Select function.

SIM services (optional)


Your service provider may offer applications such as mobile banking, share prices, etc. via the SIM card.


 Symbol for SIM services.


For further information, please contact your service provider.


Alarm clock


The alarm will ring at the time set by you, even when the phone is switched off.

 Activate/deactivate the alarm.

 Set the time for the alarm call (hh:mm).

 Navigate to the various days.

 Display options: alarm call time and days.

 Set days for alarm calls. Press and **hold** to highlight/unhighlight all the days.

OK Confirm setting.

You can set the alarm to repeat with Snooze.

Sound recorder

Use the Sound recorder to record noises or sounds for use as ringtones.

New recording


<New entry>


Select. The remaining time available, as well as the recording time, are shown in the display.

Start it from another application as follows:

The recording display appears:

 A brief tone sounds when the recording starts.


 Alternate between pause/record.


 End recording.


The recording is saved with a timestamp in the **Sounds** folder. Rename with **Options**.

Insert Transfer the recording into the application.

Playback

 Select the desired recording.

 Alternate between playback/pause.

 Press and **hold** for rapid rewind and fast forward.

Calc.

The calculator can be used in a basic version with an extended range of functions (**Options**).



Enter digit(s).



Navigate functions.



Use function.

Unit converter

You can convert various measurement units into other measurement units.



Select the source unit/currency, then enter the quantity.



Select the target measurement unit/currency. The result is displayed.

Special key functions:



Set decimal point.



Change sign.

Currency

When you first call up the function, enter the basic currency.



Enter currency (e. g. euro) and save the entry with **Save**.

Now enter the name and exchange rate of the currency to be converted.

Stopwatch

Two intermediate times can be recorded and saved.



Start/stop/reset to zero.

Countdown

A set time elapses. The last 3 seconds are indicated by a beep. At the end a special beep sounds.

Remote synchronisation

You can use this function remotely to access externally filed data (addresses, calendar, etc.) and synchronise these with the data on your phone.

Synchronise

Sync

Select calculator, start synchronisation.

Next

Scroll through the various displays.

Sync. setting

You can choose between 5 profiles.

My stuff

A file management function is available for you to organise your files. This functions in the same way as on a PC. Folders have already been created for different data types. If, for example, you would like to download new pictures or sounds, the appropriate folder contains the download function.

Remember that pictures and sounds may be protected (DRM, p. 11).



The list of the folders and files is displayed.

Navigation



Select file/folder in lists.



The cursor can be moved as required in the preview.



Open folder or start file with related application.

Options

Access to various administration functions.

Media player

When you are viewing a picture or listening to a melody, the application starts a media playback.



Browse to the next media file.



Switch on display illumination.

Pictures



Zoom. The two soft keys (+/-) enlarge/reduce the picture. The joystick moves the picture detail.



Centre picture.



Switch to full screen mode and back again.



Send via MMS or e-mail for example.

Melodies



Play or stop, depending on the situation.



Switch to mute.



Set volume.



End playback.

Picture processing



Open menu and select Edit.

Customer Care

We offer fast, individual advice! You have several options:

Our online support on the Internet:

**www.siemens.com/
mobilephonescustomer care**

We can be reached any time, any place. You are given 24 hour support on all aspects of our products. Here you will find an interactive fault-finding system, a compilation of the most frequently asked questions and answers, plus user guides and current software updates to download.

When calling customer service, please have ready your receipt and the phone identity number (IMEI, to display press *#06#), the software version (to display, press *#06#, then **More**) and if available, your Siemens Service customer number.

You can also get personal advice about our range of products on our Premium Hotline: **United Kingdom** **0906 9597500** (0.75 £ per minute)

Qualified Siemens employees are waiting to offer you expert information about our products and installation.

In some countries repair and replace services are impossible where the products are not sold through our authorised dealers.

If repair work is necessary, please contact one of our service centres:

Abu Dhabi	0 26 42 38 00
Argentina	0 81 02 22 66 24
Australia	13 00 66 53 66
Austria	05 17 07 50 04
Bahrain	40 42 34
Bangladesh	0 17 52 74 47
Belgium	0 78 15 22 21

Bolivia	0 21 21 41 14
Bosnia Herzegovina	0 33 27 66 49
Brunei	02 43 08 01
Bulgaria	02 73 94 88
Cambodia	12 80 05 00
Canada	1 88 87 77 02 11
Chile	8 00 53 06 62
China	40 08 88 56 56
Colombia	01 80 07 00 66 24
Croatia	0 16 10 53 81
Czech Republic	2 33 03 27 27
Denmark	35 25 86 00
Dubai	0 43 96 64 33
Ecuador	18 00 10 10 00
Egypt	0 23 33 41 11
Estonia	6 30 47 97
Finland	09 22 94 37 00
France	01 56 38 42 00
Germany	0 18 05 33 32 26
Greece	80 11 11 11 16
Hong Kong	28 61 11 18
Hungary	06 14 71 24 44
Iceland	5 11 30 00
India	22 24 98 70 00 Extn: 70 40
Indonesia	0 21 46 82 60 81
Ireland	18 50 77 72 77
Italy	02 24 36 44 00
Ivory Coast	05 02 02 59
Jordan	0 64 39 86 42
Kenya	2 72 37 17
Kuwait	2 45 41 78
Latvia	7 50 11 18
Lebanon	01 44 30 43
Libya	02 13 50 28 82
Lithuania	8 70 07 07 00
Luxembourg	43 84 33 99
Macedonia	0 23 13 14 84
Malaysia	+ 6 03 77 12 43 04
Malta	+ 35 32 14 94 06 32
Mauritius	2 11 62 13
Mexico	01 80 07 11 00 03
Morocco	22 66 92 09
Netherlands	0 90 03 33 31 00
New Zealand	08 00 27 43 63

Nigeria	0 14 50 05 00
Norway	22 70 84 00
Oman	79 10 12
Pakistan	02 15 66 22 00
Paraguay	8 00 10 20 04
Peru	0 80 05 24 00
Philippines	0 27 57 11 18
Poland	08 01 30 00 30
Portugal	8 08 20 15 21
Qatar	04 32 20 10
Romania	02 12 09 99 66
Russia	8 80 02 00 10 10
Saudi Arabia	0 22 26 00 43
Serbia	01 13 07 00 80
Singapore	62 27 11 18
Slovak Republic	02 59 68 22 66
Slovenia	0 14 74 63 36
South Africa	08 60 10 11 57
Spain	9 02 11 50 61
Sweden	0 87 50 99 11
Switzerland	08 48 21 20 00
Taiwan	02 23 96 10 06
Thailand	0 27 22 11 18
Tunisia	71 86 19 02
Turkey	0 21 64 59 98 98
Ukraine	8 80 05 01 00 00
United Arab Emirates	0 43 66 03 86
United Kingdom	0 87 05 33 44 11
Uruguay	00 04 05 46 62
USA	1 88 87 77 02 11
Venezuela	0 80 01 00 56 66
Vietnam	84 89 20 24 64
Zimbabwe	04 36 94 24

Care and maintenance

Your phone has been designed and manufactured to the highest of standards and should be treated with great care. The suggestions below will help you to enjoy your phone for many years.

- Protect your phone from moisture and humidity. Precipitation, humidity and liquids contain minerals that will corrode electronic circuits. Nevertheless, should your phone become wet, disconnect it immediately from the power supply to avoid electric shock. Do not place your phone (even to dry it) on/in a source of heat such as a microwave oven, oven or radiator. The phone may become overheated and possibly explode.
- Do not use or store the phone in dusty, dirty areas. Its moving parts may be damaged and the casing may become deformed and discoloured.
- Do not store your phone in hot environments (e.g. vehicle instrument panel in the summer). High temperatures can shorten the life of electronic devices, damage batteries and warp or melt certain plastics.
- Do not store your phone in cold environments. When the phone warms up again (to its normal ambient temperature), moisture can form inside the phone, which may damage electronic circuit boards.
- Do not drop, knock or shake your phone. Rough handling can damage internal circuit boards!
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the phone!

The suggestions given above apply equally to your phone, battery, charger and all accessories. If any of these parts is not working properly, obtain fast and reliable help at our service centres.

Battery quality statement

The capacity of your mobile phone battery will reduce each time it is charged/emptied. Storage at too high or low temperatures will also result in a gradual capacity loss. As a result the operating time of your mobile phone may be considerably reduced, even after a full recharge of the battery.

Regardless of this, the battery has been designed and manufactured so that it can be recharged and used for six months after the purchase of your mobile phone. After six months, if the battery is clearly suffering from loss of performance, we recommend that you replace it. Please buy only Siemens original batteries.

Display quality declaration

For technological reasons, a few small dots with different colours may appear in the display in exceptional cases.

Just remember that the appearance of brighter or darker dots generally does not mean that a fault has occurred.

Product data

Declaration of conformity

BenQ Mobile hereby declares that the phone described in this user guide is in compliance with the essential requirements and other relevant provisions of European Directive 1999/5/EC (R&TTE). The relevant declaration of conformity (DoC) has been signed. Please call the company hotline if you require a copy of the original:

www.siemens.com/mobiledocs

CE 0168

Technical data

GSM class:	4 (2 watt)
Frequency range:	880 - 960 MHz
GSM class:	1 (1 watt)
Frequency range:	1,710 - 1,880 MHz
GSM class:	1 (1 watt)
Frequency range:	1,850 - 1,990 MHz
Weight:	86 g
Size:	105 x 47 x 18 mm (75.6 ccm)
Li-Ion battery:	750 mAh
Operating temperature:	-10 °C to 55 °C
SIM card:	3.0 V

Phone ID

You will need the following details if you lose your phone or SIM card:

the number of the SIM card (on the card):

.....

15-digit serial number of the phone
(under the battery):

.....

the customer service number of the service
provider:

.....

Lost phone

If you lose your phone or SIM card contact your service provider immediately to prevent misuse.

Operating times

The operating time depends upon the respective conditions of use. Extreme temperatures considerably reduce the phone's standby time. Avoid placing the phone in the sun or on a heater.

Talktime: 100 to 300 minutes

Standby time: 60 to 300 hours

Action taken	Time (min)	Reduction of stand-by time by
Calling	1	30 - 90 minutes
Light *	1	40 minutes
Network search	1	5 - 10 minutes
* Keypad input, games, organiser etc.		

SAR

European Union (RTTE) and international (ICNIRP)

INFORMATION ON RF EXPOSURE /
SPECIFIC ABSORPTION RATE (SAR)

THIS MODEL MEETS INTERNATIONAL
GUIDELINES FOR EXPOSURE TO RADIO
WAVES

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

The guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit for mobile devices is 2 W/kg and was adopted into the European Standard EN 50360 and into other national standards. The CE mark demonstrates that the EU requirements are met.

The highest SAR value for this device when tested at the ear was **0.70 W/kg¹**. As mobile devices offer a range of functions, they can be used in positions other than the head, such as on the body. In this case, at data transfer (GPRS) a separation distance of **1.0 cm** is required.

As SAR is measured utilizing the device's highest transmitting power, the actual SAR of this device while operating is typically below that indicated above. This is due to automatic changes to the power level of the device to ensure it only uses the minimum level required to reach the network.

The World Health Organization has stated that present scientific information does not indicate the need for any special precautions for the use of mobile devices. They note that if you nevertheless want to reduce your exposure then you can do so by limiting the length of calls or using a 'hands-free' device to keep the mobile phone away from the head and body.

Additional Information can be found on the websites of the World Health Organization (www.who.int/emf) or BenQ Mobile (www.benqmobile.com).

1 The tests are carried out in accordance with international guidelines for testing.

Guarantee certificate (UK)

Without prejudice to any claim the user (customer) may have in relation to the dealer or retailer, the customer shall be granted a manufacturer's Guarantee under the conditions set out below:

- In the case of new devices and their components exhibiting defects resulting from manufacturing and/or material faults within 24 months of purchase, Siemens shall, at its own option and free of charge, either replace the device with another device reflecting the current state of the art, or repair the said device. In respect of parts subject to wear and tear (including but not limited to, batteries, keypads, casings, small parts on casings, protective coverings where included in the scope of delivery), this warranty shall be valid for six months from the date of purchase.
- This Guarantee shall be invalid if the device defect is attributable to improper treatment and/or failure to comply with information contained in the user manuals.
- This Guarantee shall not apply to or extend to services performed by the authorised dealer or the customer themselves (e.g. installation, configuration, software downloads). User manuals and any software supplied on a separate data medium shall be excluded from the Guarantee.
- The purchase receipt, together with the date of purchase, shall be required as evidence for invoking the Guarantee. Claims under the Guarantee must be submitted within two months of the Guarantee default becoming evident.
- Ownership of devices or components replaced by and returned to Siemens shall vest in Siemens.

- This Guarantee shall apply to new devices purchased in the European Union. For Products sold in the United Kingdom the Guarantee is issued by Siemens plc, Siemens House, Oldbury, Bracknell, Berkshire, RG12 8FZ.
- Any other claims resulting out of or in connection with the device shall be excluded from this Guarantee. Nothing in this Guarantee shall attempt to limit or exclude a Customers Statutory Rights, nor the manufacturer's liability for death or personal injury resulting from its negligence.
- The duration of the Guarantee shall not be extended by services rendered under the terms of the Guarantee.
- Insofar as no Guarantee default exists, Siemens reserves the right to charge the customer for replacement or repair.
- The above provisions does not imply a change in the burden of proof to the detriment of the customer.

To invoke this Guarantee, please contact our online support on the Internet www.siemens.com/mobilephonescustomer-care or the Siemens telephone service. The relevant number is to be found in the accompanying user guide.

Guarantee certificate (IRL)

Without prejudice to any claim the user (customer) may have in relation to the dealer or retailer, the customer shall be granted a manufacturer's Guarantee under the conditions set out below:

- In the case of new devices and their components exhibiting defects resulting from manufacturing and/or material faults within 24 months of purchase, Siemens shall, at its own option and free of charge, either replace the device with another device reflecting the current state of the art, or repair the said device. In respect of parts subject to wear and tear (including but not limited to, batteries, keypads, casings, small parts on casings, protective coverings where included in the scope of delivery), this warranty shall be valid for six months from the date of purchase.
 - This Guarantee shall be invalid if the device defect is attributable to improper care or use and/or failure to comply with information contained in the user manuals.
 - In particular claims under the Guarantee cannot be made if:
 - The device is opened (this is classed as third party intervention)
 - Repairs or other work done by persons not authorised by Siemens.
 - Components on the printed circuit board are manipulated
 - The software is manipulated
 - Defects or damage caused by dropping, breaking, lightning or ingress of moisture. This also applies if defects or damage was caused by mechanical, chemical, radio interference or thermal factors (e.g.: microwave, sauna etc.)
 - Devices fitted with accessories not authorised by Siemens
 - This Guarantee shall not apply to or extend to services performed by the authorised dealer or the customer themselves (e.g. installation, configuration, software downloads). User manuals and any software supplied on a separate data medium shall be excluded from the Guarantee.
 - The purchase receipt, together with the date of purchase, shall be required as evidence for invoking the Guarantee. Claims under the Guarantee must be submitted within two months of the Guarantee default becoming evident.
 - Ownership of devices or components replaced by and returned to Siemens shall vest in Siemens.
 - This Guarantee shall apply to new devices purchased in the European Union. For Products sold in the Republic of Ireland the Guarantee is issued by Siemens Ireland Limited, Ballymoss Road, Sandyford Industrial Estate, Dublin 18 - The Republic of Ireland.
 - Any other claims resulting out of or in connection with the device shall be excluded from this Guarantee. Nothing in this Guarantee shall attempt to limit or exclude a Customer's Statutory Rights, nor the manufacturer's liability for death or personal injury resulting from its negligence.
 - The duration of the Guarantee shall not be extended by services rendered under the terms of the Guarantee.
 - Insofar as no Guarantee default exists, Siemens reserves the right to charge the customer for replacement or repair.
 - The above provisions does not imply a change in the burden of proof to the detriment of the customer.
- To invoke this Guarantee, please contact our online support on the Internet **www.siemens.com/mobilephonescustomercare** or the Siemens telephone service. The relevant number is to be found in the accompanying user guide.

License Agreement

This License Agreement ("Agreement") is between You and Siemens Aktiengesellschaft, Germany ("Siemens"). The Agreement authorizes You to use the Licensed Software, specified in Clause 1 below, which may be included in your phone, stored on a CD-ROM, sent to You by electronic mail or over the air, downloaded from Siemens Web pages or servers or from other sources under the terms and conditions set forth below.

Read this Agreement carefully before using your phone. By using your phone or installing, copying, and/or using the Licensed Software, You acknowledge that You have read and understood the Agreement and agree to be bound by all of the terms and conditions stated below. You further agree that if Siemens or any licensor of Siemens ("Licensor") is required to engage in any proceeding, legal or otherwise, to enforce their rights under this Agreement, Siemens and/or its Licensor shall be entitled to recover from You, in addition to any other sums due, reasonable attorney's fees, costs and disbursements. If You do not agree to all of the terms and conditions of this Agreement, do not install or use the Licensed Software. This Agreement governs any Updates, releases, revisions, or enhancements to the Licensed Software.

1. **LICENSED SOFTWARE.** As used in this Agreement, the term "Licensed Software" means collectively: all the software in Your phone, all of the contents of the disk(s), CD-ROM(s), electronic mail and its file attachments, or other media with which this Agreement is provided and includes any related Siemens or third party software and upgrades, modified versions, updates, additions and copies of the Licensed Software, if any, distributed over the air, downloaded from Siemens Web pages or servers or from other sources.

2. **COPYRIGHT.** The Licensed Software and all related rights, without limitation including proprietary rights therein, are owned by Siemens, its Licensors or affiliates and are protected by international treaty provisions and all applicable national laws. This Agreement does not convey to You nor allow You to acquire any title or ownership interest in the Licensed Software or rights therein. The structure, organization, data and code of the Licensed Software are the valuable trade secrets and confidential information of Siemens, its Licensors or affiliates. You must reproduce and include the copyright notices with any permitted copies You make of the Licensed Software.

3. **LICENSE AND USE.** Siemens grants to You a non-exclusive, non-transferable end user right to install the Licensed Software or use the Licensed Software installed on the phone. The Licensed Software is licensed with the phone as a single integrated product and may be used with the phone only as set forth in these licensing terms.

4. **LIMITATIONS ON LICENSE.** You may not copy, distribute, or make derivative works of the Licensed Software except as follows:

(a) You may make one copy of the Licensed Software, excluding the documentation, as an archival backup copy of the original. Any other copies You make of the Licensed Software are in violation of this Agreement.

(b) You may not use, modify, or transfer the right to use the Licensed Software other than together with the accompanying hardware or copy the Licensed Software except as expressly provided in this Agreement.

(c) You may not sublicense, rent or lease the Licensed Software.

(d) You may not reverse engineer, decompile, modify, or disassemble those Licensed Software programs except and only to the extent that such activity is expressly permitted by applicable law notwithstanding this limitation.

Parts of the Licensed Software may be supplied by third parties and may be subject to separate license terms. Such terms are set out within the documentation.

5. MISUSE OF THE LICENSED SOFTWARE OR DATA GENERATED BY THE LICENSED SOFTWARE IS STRICTLY PROHIBITED BY SIEMENS, MAY VIOLATE GERMAN, U.S. AND OTHER LAWS AND MAY SUBJECT YOU TO SUBSTANTIAL LIABILITY. You are solely responsible for any misuse of the Licensed Software under this Agreement and for any liability or damage related in any way to your use of the Licensed Software in violation of this Agreement. You are also responsible for using the Licensed Software in accordance with the limitations of this Agreement.

6. TERMINATION. This Agreement is effective from the first date You install, copy or otherwise use the Licensed Software. You may terminate this license at any time by deleting or destroying the Licensed Software, all back up copies and all related materials provided to You by Siemens. Your license rights terminate automatically and immediately without notice if You fail to comply with any provision of this Agreement. The rights and obligations under sections 2, 5, 6, 7, 9, 12 and 13 of this Agreement shall survive the termination of this Agreement.

7. YOU ACKNOWLEDGE THE LICENSED SOFTWARE IS PROVIDED "AS IS" AND NEITHER SIEMENS NOR ANY OF ITS LICENSORS MAKE ANY REPRESENTATIONS OR WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OR THAT THE LICENSED SOFTWARE WILL NOT INFRINGE ANY THIRD PARTY PATENTS, COPYRIGHTS, TRADEMARKS OR

OTHER RIGHTS. THERE IS NO WARRANTY BY SIEMENS OR ITS LICENSORS OR BY ANY OTHER PARTY THAT THE FUNCTIONS CONTAINED IN THE LICENSED SOFTWARE WILL MEET YOUR REQUIREMENTS OR THAT THE OPERATION OF THE LICENSED SOFTWARE WILL BE UNINTERRUPTED OR ERROR-FREE AND SIEMENS AND ITS LICENSORS HEREBY DISCLAIM ANY AND ALL LIABILITY ON ACCOUNT THEREOF. NO ORAL OR WRITTEN INFORMATION OR ADVICE GIVEN BY A SIEMENS REPRESENTATIVE SHALL CREATE A WARRANTY OR IN ANY WAY AFFECT THIS DISCLAIMER. YOU ASSUME ALL RESPONSIBILITY TO ACHIEVE YOUR INTENDED RESULTS AND FOR THE INSTALLATION, USE, AND RESULTS OBTAINED FROM IT.

8. NO OTHER OBLIGATIONS. This Agreement creates no obligations on the part of Siemens other than as specifically set forth herein.

9. LIMITATION OF LIABILITY. IN NO EVENT SHALL SIEMENS, ITS EMPLOYEES, LICENSORS, AFFILIATES OR AGENTS BE LIABLE FOR ANY DIRECT DAMAGES, LOST PROFITS, DATA OR BUSINESS, OR COSTS OF PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES, PROPERTY DAMAGE, INTERRUPTION OF BUSINESS OR FOR ANY SPECIAL, INDIRECT, INCIDENTAL, EXEMPLARY, ECONOMIC, PUNITIVE OR CONSEQUENTIAL DAMAGES, HOWEVER CAUSED, AND WHETHER ARISING UNDER CONTRACT, TORT, NEGLIGENCE, OR OTHER THEORY OF LIABILITY, OR ARISING OUT OF THE USE OF OR INABILITY TO USE THE LICENSED SOFTWARE, EVEN IF SIEMENS IS ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. THE LIMITATION OF LIABILITY SHALL NOT APPLY IF AND TO THE EXTENT SIEMENS' LIABILITY IS MANDATORY UNDER THE APPLICABLE LAW E.G. ACCORDING TO PRODUCT LIABILITY LAW OR IN THE EVENT OF INTENTIONAL MISCONDUCT, PERSONAL INJURY OR DEATH.

10. TECHNICAL SUPPORT. Siemens has and its Licensors have no obligation to furnish You with technical support unless separately agreed in writing between You and Siemens or the applicable Licensor.

Siemens and where applicable its Licensors in the Licensed Software shall be free to use any feedback received from You resulting from your access to and use of the Licensed Software for any purpose including (without limitation) the manufacture, marketing and maintenance or support of products and services.

11. EXPORT CONTROL. The Licensed Software may include technical data and cryptographic software and is subject to German, European Union and U.S. export controls and may be subject to import or export controls in other countries. You agree to strictly comply with all applicable import and export laws and regulations. Specifically, You agree, to the extent required by U.S. Export Administration Regulations, that You shall not disclose or otherwise export or re-export the Licensed Software or any part thereof delivered under this Agreement to (a) Cuba, Iran, Iraq, Libya, North Korea, Sudan, Syria or any other country (including a national or resident of such country) to which the U.S. has restricted or prohibited the export of goods or services.

12. APPLICABLE LAW AND FORUM. The laws of Germany govern this Agreement. No choice of law rules of any jurisdiction will apply. The courts in Munich shall settle any disputes arising out of or relating to this Agreement provided you are a merchant.

13. MISCELLANEOUS. This Agreement represents the entire agreement between You and Siemens relating to the Licensed Software and (i) supersedes all prior or contemporaneous oral or written communications, proposals, and representations with respect to its subject matter; and (ii) prevails over any conflicting or additional terms of any acknowledgement or similar communication between the parties during the term of this License. Notwithstanding the foregoing, some products of Siemens may require You to agree to additional terms through an online "click-wrap" license, and such terms shall supplement this Agreement. If any provision of this Agreement is held invalid, all other provisions shall remain valid unless such validity would frustrate the purpose of this Agreement, and this Agreement shall be enforced to the full extent allowable under applicable law. No modification to this Agreement is binding, unless in writing and signed by a duly authorized representative of each party. This Agreement shall be binding on and shall inure to the benefit of the heirs, successors, and assigns of the parties hereto. The failure of either party to enforce any right resulting from the breach of any provision of this Agreement by the other party will not be deemed a waiver of any right related to a subsequent breach of such provision or any other right hereunder. Notwithstanding anything to the contrary in this Agreement, Siemens and/or its licensors may enforce its rights, including but not limited to copyright, trademark or trade names, in accordance with the rules of law in each country.

Index

A

Aircraft mode.....	46
Alarm (alarm clock).....	57
Alarm clock.....	57
All calls (diversion).....	49
All incoming (barrings)	52
Answering service (external)	36
Any to answer.....	49
Appointments.....	55
Auto display	
Clock.....	50
Duration/charges	25
Auto key lock.....	51
Auto. network selection	52
Auto. redial.....	16

B

Band selection	53
Battery	
Charging	8
Inserting.....	7
Operating times.....	8, 63
quality declaration	62
Browser	43
Buddh. year	50
Business card	20

C

Calculator	58
Calendar.....	55
Call	
Accept/end	16
Barring	52
Charges.....	25
Conference.....	17
Divert.....	49
End	16
Hold	17
Menu	16
Reject	16
Swap (change)	17
Call divert	49
Call screening	49
Call waiting.....	48
Calling	16
Calls dialled (call record)	25
Calls received (call record).....	25


Camera	26
Car kit (setting)	53
Care and maintenance.....	62
Care of phone	62
Cell Broadcast (CB)	36
Central inbox.....	28
Charge rate	25
Charges.....	25
Charging the battery	8
Chat.....	37
Clock.....	50
Codes.....	14
Colour skin	47
Conference	17
Connectivity.....	51
Contact list.....	38
Control code (DTMF)	17
Countdown	58
Credit limit	25
Currency	58

D

Date format.....	50
Default book	20
Delete assistant	50
Dialling code	16
Dialling with number keys	16
Dictating machine	56
Digital Rights Management.....	11
Display	
Illumination	48
Language.....	47
Symbols	6
Wallpaper.....	47
Divert.....	49
Download	45
DTMF tones (tone sequences).....	17
Duration/charges.....	25

E

E-mail	
Receiving/reading.....	35
Writing.....	35
Email	
Settings	35
Emergency number	9
Extras.....	57

- F**
- Fast access..... 54
 - Fast search 53
 - File system..... 50
 - Formatting (phone memory)..... 50
 - Frequency range..... 53
- G**
- Games and applications 45
 - GPRS..... 51
 - Groups 22
 - Guarantee certificate 65
- H**
- Handsfree talking..... 16
 - Headset (setting) 53
 - Hide ID 48
 - Highlighting mode..... 13
 - Hold call 17
 - Hotline 60
- I**
- Identity number (IMEI) 49
 - IMEI number..... 49
 - Info tones 49
 - Information services (CB) 36
 - Infrared 51
 - Infrared (IrDA) 51
 - Input language (T9) 18
 - International dialling code 16
 - Internet 43
- K**
- Key tones..... 49
- L**
- Language 47
 - License Agreement 67
 - Limit (call time/charge) 25
 - Loss of phone, SIM card 63
- M**
- Mailbox 36
 - Maintenance of phone 62
 - Master reset..... 50
 - Media player..... 59
 - Menu
 - Control..... 11
 - My menu 54
 - Quick dial 13
- Message**
- CB..... 36
 - E-mail 35
 - Lists 28
 - MMS 31
 - SMS 29, 30
- Minute beep..... 49
 - Missed appointments 56
 - Missed calls (call record) 25
 - MMS
 - Receive 33
 - My stuff 59
- N**
- Network
 - Barring..... 52
 - Connection 52
 - Setup 52
 - Notes 56
- O**
- Only  52
 - Operating times (battery) 8, 63
 - Organiser 55
 - Own (phone) numbers 24
- P**
- Phone code 14
 - Phone data 63
 - Phone identity number (IMEI) 49
 - Phone number transmission 48
 - Phonebook
 - Protected SIM..... 24
 - Photo 26
 - Pictures & sounds (SMS) 29
 - PIN
 - Changing 14
 - Entering 9
 - Use 14
 - PIN2 14
 - Preferred network 53
 - Preventing accidental activation 15
 - Product data 63
 - Profiles (phone)..... 46
 - Provider logo 47
 - PUK, PUK2 14

R

Receiving signal	10
Records	25
Redial	16
Reminder	16
Remote synchronisation	58
Ringtones	48

S

Safety precautions	2
Screensaver	47
Security	14
Service tones	49
Set time/date	50
Settings	46
Short message (SMS)	29
Shown in the display	6
Shut down animation	48
Silent alert	48
SIM card	
Clearing barrings	15
Inserting	7
SIM services (optional)	57
SMS push	28
SOS	9
Sound recorder	57
Special books	24
Special characters	18
Speech time (battery)	63
Speed dialling keys	54
Standard functions	12
Standby mode	10
Standby time	8
Start up animation	47
Stopwatch	58
Storage location (Phonebook)	23
Surf & fun	43
Swap	17
Switch off phone	
Automatic	49
Manual	9
Switching on (phone)	9
Symbols	6
Synchronisation	58

T

T9	
Text entry	18
Word suggestions	19
Tasks	56
Technical data	63
Text entry	18
Text modules	19
Themes	47
This SIM only	52
Time zones	10, 50

U

Unanswered	49
Unit converter	58
Upper and lowercase letters (T9)	18
User group	53

V

Voice message	36
Volume	
Handset volume	16
Profiles	46
Ringtone	48

W

Wallpaper (display)	47
---------------------------	----