

# SIEMENS

# SIEMENS



Siemens Aktiengesellschaft,  
issued by Communications,  
Haidenauplatz 1  
D-81667 Munich

© Siemens AG 2005  
All rights reserved. Subject to availability.  
Rights of modification reserved.

Siemens Aktiengesellschaft  
[www.siemens.com/m75](http://www.siemens.com/m75)

Designed for life

M75

<b>Safety precautions</b> .....	3	<b>Phonebook</b> .....	35
<b>Overview of phone</b> .....	5	New entry .....	35
<b>Display symbols</b> .....	7	Call (search for an entry) .....	36
<b>Getting started</b> .....	9	Change entry .....	36
Insert SIM card/battery .....	9	<Special books> .....	37
Inserting an		<b>Call records</b> .....	<b>38</b>
RS MultiMediaCard .....	10	<b>Durat/charges</b> .....	<b>39</b>
Charge battery .....	11	<b>Camera</b> .....	<b>40</b>
<b>Switch on/off, PIN entry</b> .....	<b>12</b>	Photo mode .....	41
Entering the PIN .....	12	Video mode .....	41
Emergency number (SOS) .....	12	<b>Inbox</b> .....	<b>43</b>
<b>General instructions</b> .....	<b>13</b>	<b>SMS</b> .....	<b>44</b>
Standby mode .....	13	Write/send .....	44
Signal strength .....	13	Read .....	46
Digital Rights Mgmt. (DRM) ....	13	Setting .....	48
Main menu .....	13	<b>MMS</b> .....	<b>50</b>
<b>Standard functions</b> .....	<b>15</b>	Create .....	50
Highlighting mode .....	16	Templates .....	52
Menu speed dialling .....	16	Send .....	53
<b>Security</b> .....	<b>17</b>	Receive .....	54
PIN codes .....	17	Read .....	55
Preventing accidental		Setting .....	56
activation .....	18	<b>E-mail</b> .....	<b>58</b>
<b>Text entry</b> .....	<b>19</b>	Write .....	58
<b>Calling</b> .....	<b>23</b>	Receive/read .....	59
<b>My items</b> .....	<b>29</b>	Setting .....	60
<b>Default book</b> .....	<b>30</b>	<b>Voice message/mailbox</b> .....	<b>61</b>
<b>Addressbook</b> .....	<b>31</b>	<b>Inst. message</b> .....	<b>62</b>
New entry .....	31	Start menu .....	62
Change entry .....	33	Login .....	63
Call entry .....	33	Contact lists .....	63
Groups .....	34	Start Inst. message .....	66

**See also Index at the end of this User Guide**

Msg. history .....	67	<b>Extras .....</b>	<b>107</b>
Setting .....	67	SIM services (optional) .....	107
<b>CB services .....</b>	<b>69</b>	Music player .....	107
Text zoom .....	69	Push to talk .....	108
<b>Surf &amp; fun .....</b>	<b>70</b>	Alarm clock .....	113
Internet .....	70	Sound recorder .....	114
Bookmarks .....	72	Calculator .....	115
Games and Applications .....	73	Unit converter .....	116
Downl. assist. ....	73	Stopwatch .....	117
<b>Setup .....</b>	<b>75</b>	Countdown .....	117
Profiles .....	75	Remote synchronisation .....	118
Themes .....	77	Device manag. ....	119
Display setup .....	78	<b>Media player .....</b>	<b>120</b>
Ringtones .....	80	<b>My stuff .....</b>	<b>121</b>
Call setup .....	82	RS MultiMediaCard .....	122
Phone setup .....	84	<b>Mobile Phone Manager .....</b>	<b>123</b>
Clock .....	86	<b>Questions &amp; Answers .....</b>	<b>125</b>
Connectivity .....	87	<b>Customer Care .....</b>	<b>128</b>
Security .....	93	<b>Care and maintenance .....</b>	<b>130</b>
Network .....	95	<b>Product data .....</b>	<b>131</b>
Accessories .....	97	<b>Accessories .....</b>	<b>132</b>
<b>My menu .....</b>	<b>98</b>	<b>SAR – European Union (RTTE) ..</b>	<b>134</b>
<b>Fast access .....</b>	<b>99</b>	<b>SAR – International (ICNIRP) ..</b>	<b>136</b>
Speed dialling keys .....	100	<b>Quality .....</b>	<b>137</b>
<b>Organiser .....</b>	<b>101</b>	<b>Guarantee certificate (UK) .....</b>	<b>138</b>
Calendar .....	101	<b>Guarantee certificate (IRL) .....</b>	<b>139</b>
Appointments .....	102	<b>License Agreement .....</b>	<b>140</b>
Tasks .....	103	<b>Menu tree .....</b>	<b>143</b>
Notes .....	104	<b>Index .....</b>	<b>149</b>
Missed appts. ....	104		
Dictat.machine .....	105		
Time zones .....	106		

**See also Index at the end of this User Guide**

# Safety precautions

## Information for parents

Please read the operating instructions and safety precautions carefully before use. Explain the content and the hazards associated with using the phone to your children.



Remember to comply with legal requirements and local restrictions when using the phone. For example in aeroplanes, petrol stations, hospitals or while driving.



Mobile phones can interfere with the functioning of medical devices such as hearing aids or pacemakers. Keep at least 20 cm/9 inches between phone and pacemaker. When using the mobile phone hold it to the ear which is further away from the pacemaker. For more information consult your doctor.



Small parts such as the SIM card, sealing stop, lens ring and lens cap can be dismantled and swallowed by small children. The phone must therefore be stored out of the reach of small children.



Do not use an optical magnifier to look at the activated infrared interface [Class 1 LED product (classification as per IEC 60825-1)].



The mains voltage specified on the power supply unit (V) must not be exceeded. Otherwise the charging device may be destroyed.

The power supply must be plugged into an easily accessible AC mains power socket when charging the battery. The only way to turn off the charging device after charging the battery is to unplug it.



The ringtones (p. 80), message tones (p. 84) and handsfree (p. 25) talking are reproduced through the loudspeaker. Do not hold the phone to your ear when it rings or when you have switched on the handsfree function (p. 25). Otherwise you risk serious permanent damage to your hearing.



Only use original Siemens batteries (100% mercury-free) and – charging devices. Otherwise you risk serious damage to health and property. The battery could explode, for instance.



You may only open the phone to replace the battery (100% mercury-free) or SIM card. You must not open the battery under any circumstances. All other changes to this device are strictly prohibited and will invalidate the guarantee.



Please dispose of unwanted batteries and phones as permitted by the laws in your country.



The phone may cause interference in the vicinity of TV sets, radios and PCs.



Use only Siemens original accessories. This will avoid potential risks to health or property and ensure compliance with all relevant regulations.

Improper use will invalidate the guarantee!  
These safety instructions also apply to Siemens original accessories.

## Bluetooth®

Your phone has a Bluetooth interface. This makes it possible to establish a wireless connection of your phone with a headset or a car kit, or with other Bluetooth-enabled devices.

In order to establish a secure link between the devices and to prevent a third party from having access to your phone, you should observe the following points:

- The initial connection between two devices, what is called "pairing", should take place in familiar surroundings.
- Both devices must be able to identify themselves one time by using a password/PIN. To ensure sufficient security, you should choose a 16-digit number combination for a password that would be difficult to guess (if a PIN has not been assigned).
- An automatic connection acceptance ("connection without confirmation") should only be used in exceptional cases.
- In general, only trustworthy devices should be linked in order to minimize security risks.
- The name of your phone is transmitted in a Bluetooth connection. The factory default is the "Bluetooth ID". The first time Bluetooth is activated, or later in the Bluetooth menu, you can change this name (**My BT name** (page 89)).
- If Bluetooth is not needed, this function should be deactivated.

Before using Bluetooth accessories, or a mobile phone inside a vehicle, check the vehicle user guide for any limitations on the use of these products.

# Overview of phone

## ① Call key

Dial displayed/highlighted phone numbers/names, take calls. In standby mode, show last phone numbers dialled.






## ② On/Off/End key

- Switched off: press and **hold** to switch on.
- During a conversation or in an application: press **briefly** to finish.
- In menus: press **briefly** to go back a level.  
Press and **hold** to return to standby mode.
- In standby mode: press and **hold** to switch off phone.



## ③ Joystick

- Press the joystick down vertically to start an application or function. The current function is displayed between the softkeys (page 14).



### In standby mode

-  Open main menu.
-  Open user profiles.
-  Open Phonebook/Addressbook.
-  Open Inbox.
-  Start the camera.

### In lists, messages and menus


-  Scroll up and down.
-  Back one level.

## During a call

-  Set volume.
-  Call options.



## ④ Softkeys

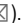The current functions of this key are shown in the bottom line of the displays as **Text**/symbol (e.g. )

## ⑤ Internet

Access to the Internet portal.

### ① Integrated antenna

Do not obstruct the phone above the battery cover unnecessarily. This reduces the signal quality.

### ② Loudspeaker

### ③ Sidekeys

#### Camera

- Press in standby mode: Start the camera.
- During a call: Decrease volume.

#### Push to talk

- Press in standby mode: Start push to talk.
- During a call: Increase volume.

### ④ Display

### ⑤ Infrared interface (IrDA)

### ⑥ Ringtone

- Press and **hold** in standby mode: switch acoustic signals on/off (except for alarm clock).
- Press and **hold** when incoming call is received: switch off ringtone for this call only.

### ⑦ Key lock

Press and **hold** in standby mode or when playing a music file: Switch key lock on/off.

### ⑧ Connection socket

For charger, headset, flash, etc.

### ⑨ Slot for RS MultiMediaCard

### ⑩ Car kit holder

### ⑪ Connection for external antenna

### ⑫ Camera lens

### ⑬ Mirror



# Display symbols

## Display symbols (selection)



Strength of receiving signal



Charging



Battery charge level, e.g. 50%



Phonebook



Call records



Surf & fun/  
Service provider portal



Organiser



Messages



Camera



Extras



My stuff



Setup



All calls are diverted



Ringer (beep) off



Short ring (beep) only



Ringtone only if the caller is  
stored in the Phonebook



Alarm set



Keypad locked



Auto answer feature on



Activated and available



Registered



Temporarily interrupted



Internet offline



Internet online



Internet via GPRS online



Internet no network



IrDA activated



IrDA transmission



Bluetooth activated



Bluetooth transmission

## Events (selection)



SMS memory full



MMS memory full



Phone memory full



No network access



Missed call



Memory assistant



**Message symbols (selection)**

Unread



Read



Draft



Sent



MMS not sent



MMS notification received



MMS notification read

MMS with DRM contents  
(page 13)

E-mail forwarded



E-mail with attachment



Voice mail received

**Camera symbols**

Switch to photo mode



Switch to video mode



Brightness



Zoom factor



White balance



Flash connected

# Getting started

The phone is packaged in dismantled form and must be re-assembled prior to using for the first time.



Your phone's display is supplied with a **protective film**. Remove this film slowly before assembling the phone.


In rare cases, static discharge may cause discolouration at the edges of the display. However, this will disappear within approx. 10 minutes.

## Insert SIM card/battery


The service provider supplies you with a SIM card on which all the important data for your line is stored. If the SIM card has been delivered in credit-card size, snap the smaller segment out and remove any rough edges.

- Place the SIM card flat in front of the slot with the contact surface facing **downwards**. Then push

the SIM card in using gentle pressure ① (ensure that the chamfered corner is in the correct position).

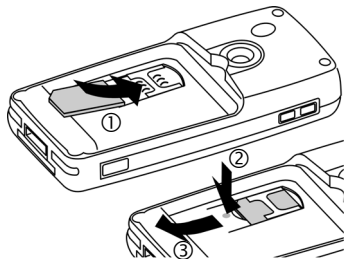


- To remove the SIM card push the latch downwards ② and pull out the SIM card in shown direction ③. Please do not use any tools.
- Insert the battery sideways into the phone ④, then press it downwards ⑤ until it clicks into position.

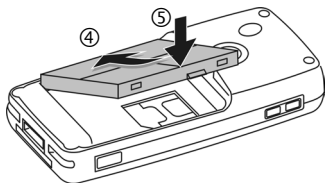


- To remove the battery, pull it out with the retaining tab on the side.

- Place the cover in position and push it towards the front ⑥.

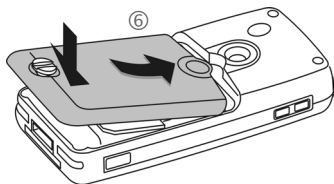

- Close the cover by turning the locking catch ninety degrees clockwise ⑦.

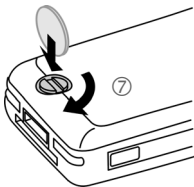

#### Additional information


Please switch off your phone before removing the battery!

The phone supports 1.8 V and 3 V SIM cards. Please contact your service provider if you have an older card.


## Inserting an RS MultiMediaCard

When delivered, the RS MultiMediaCard is not yet in the phone.

- To insert the RS MultiMediaCard, gently push the card right in until it clicks into place ①.

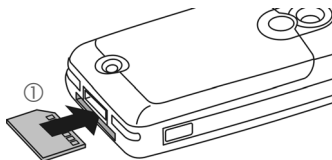

- If necessary, use the plug ②.

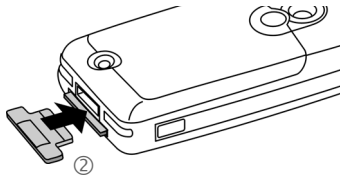



- Before removing** the RS MultiMediaCard, carry out the **Eject card** function in the **My stuff** options menu. This prevents any possible data loss.
- To remove the RS MultiMediaCard, open the cover and press the card briefly (if necessary, use the plug). The card will pop out a little and you can remove it. Finally, close the cover again.

## Charge battery

### Charging procedure

The battery is not fully charged when delivered. Plug the charger cable into the bottom of the phone, plug the power supply unit into a mains power socket and charge for at least **two hours**.

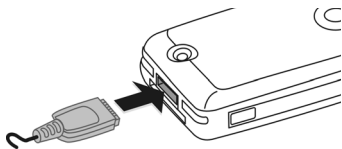

 Display during charging.

### Charging time

An empty battery is fully charged after about 2 hours. Charging is only possible within a temperature range of +5 °C to 45 °C. If the temperature rises/falls 5 °C above/below this, the charge symbol flashes a warning. The mains voltage specified on the power supply unit must not be exceeded.

### Operating times

The operating time depends upon the respective conditions of use. Extreme temperatures considerably reduce the phone's standby time. Avoid placing the phone in the sun or on a heater.

Talktime: up to 300 minutes

Standby time: up to 250 hours

### Charge icon not visible

If the battery has been discharged fully, the charge icon is not immediately visible when the power supply is plugged in. It will appear after up to two hours. In this case, the battery is fully charged after 3 to 4 hours.

**Only use the plug-in power supply unit included in delivery!**

### Display while in service

Charge level display during operation (empty–full):



A beep sounds when the battery is nearly empty. The charge level of the battery is only displayed correctly after an uninterrupted charging/discharging cycle. Therefore **do not remove the battery unnecessarily**, and where possible, **do not end the charging process prematurely**.

#### Additional information

The power supply unit heats up when used for long periods. This is normal and not dangerous.

If the battery is removed for longer than 30 seconds, the clock must be reset.

# Switch on/off, PIN entry

## Switching phone on/off



Press and **hold** the On/Off/End key.

## Entering the PIN

The SIM card can be protected with a 4 to 8-digit PIN.



Enter the PIN using the number keys. The characters \*\*\*\* appear to ensure nobody can read your PIN on the display. Correct with **⌫**.

**OK**

Confirm. Logging on to the network will take a few seconds.

### Additional information

Change PIN.....page 17

Clear SIM card barring .....page 18

## Emergency number (SOS)

### Only to be used in real emergencies!

By pressing the **SOS** softkey you can make an emergency call on any network **without** a SIM card and without entering a PIN (not available in all countries).

## Switching your phone on for the first time

### Time/date

Set the clock correctly on a one-off basis when getting started.



Press this key, then select **Change**.



First enter the date (day/month/year), then the time (24 hours, including seconds).



Press. The time and date are updated.

### Time zones

Set the time zone for your area.



Select the city in the desired time zone from the list ...

**Set**

... and set it.

### Copy SIM addresses

The first time the SIM card is inserted, the entries on it can be copied to the Addressbook. Please **do not interrupt this procedure**. During this time, **do not accept incoming calls**. Follow the instructions in the display.

You can also copy data from the SIM card at a later time (page 36).

# General instructions

## Standby mode

The phone is in **standby mode** and is **ready for use** when the name of the service provider appears on the display.



Press and **hold** the On/Off/End key to return to standby mode from any situation.

## Signal strength



Strong receiving signal.



A weak signal reduces the voice quality, can cause the connection to be lost, and consumes more current. Change your location.

## Digital Rights Mgmt. (DRM)

Remember that your phone has Digital Rights Management. The use of downloaded pictures, sounds or applications can be restricted by the suppliers, e.g. copy protection, use for a limited period of time only, the number of times it can be used etc. (see also page 74).

## Main menu

The main menu is displayed graphically with symbols:



Call main menu up from standby mode.



Select the application symbols.



Start an application.

## Main menu options



Options Open menu.

Different functions are available depending on the context.



Big letters Select one of two font sizes.



Illumination Set display illumination to brighter/darker.



Eject card Allows the RS MultiMedia-Card to be removed without loss of data.







## User guide

### Menu controls

The steps needed to reach a function are shown in a **condensed form** in the user guide, e.g. to display record of dialled calls in condensed form:








This comprises the following steps:

-  Open main menu.
-  Select .
-  Confirm.
-  Select **Calls dialled** function.
-  Confirm.

### Symbols

The following symbols are used to explain operation:

-  Enter numbers or letters.
-  On/Off/End key
-  Call key
-  Softkeys
-  Displays a softkey function.



Press vertically down on the joystick (to call up the menu, for example).



Press the joystick in the direction indicated.



Function dependent on service provider. May require special registration.

### Press joystick

The symbol in the centre of the lower line of the display shows the current function when the joystick is pressed down vertically.



Display menu



Take photos



Zoom



Call, accept call



OK




Play/Pause for sounds & videos.

# Standard functions

## Option menus

Functions which appear repeatedly in the options menu are listed here.



<b>Options</b>	Open menu.
<b>Edit</b>	Open the entry to edit.
<b>View</b>	Display entry.
<b>Delete/ Delete all</b>	Delete entry/delete all entries after confirmation.
<b>New entry</b>	Create new entry.
<b>Send...</b>	Select transmission service and medium for sending or printing e.g. IrDA or Bluetooth.
<b>Reply/ Reply to all</b>	The sender becomes the recipient, "Re:" is placed in front of the subject matter and the received text is transferred to the new message.
<b>Save</b>	Save entry.
<b>Save to</b> 	Save recipients in the current address directory.
<b>Sort</b>	Set sort criteria (alphabetical order, type, time).

<b>Text input</b> (page 19)	<b>T9 preferred:</b> Activate/deactivate T9 input. <b>Input language:</b> Select language for text.
<b>Rename</b>	Rename selected entry.
<b>Capacity</b>	Display memory capacity.
<b>Attributes</b>	Display properties of the highlighted object.
<b>Help</b>	Display help text.



## Highlighting mode

With some applications (e.g. Phone-book/Addressbook), you can highlight one or more entries in a list in order to carry out a function jointly.

- Options** Open menu.
- Mark** Activate highlighting mode.
-  Select entry/entries.
-  Highlight or delete highlighting.
- Mark** The current entry is highlighted.
- Unmark** Unhighlight the current entry.

Additional highlighting functions:

- Options** Open menu.
- Mark all** Highlight all entries.
- Unmark all** Delete highlighting on all highlighted entries.
- Delete marked** All highlighted entries are deleted.

## Menu speed dialling

All menu functions are numbered internally. A function may be selected directly by entering these numbers in sequence.

E.g., to write new SMS (from standby mode):



Press to display the main menu. Then press



for **Messages**, then



for **Create new**, then



for **SMS**.

 
# Security

The phone and SIM card are protected against misuse by several security codes.

**Keep these security codes in a safe place where you can access them again if required.**

## PIN codes

PIN	Protects your SIM card (Personal Identification Number).
PIN2	This is needed to set the charge detail display and to access additional functions on special SIM cards.
PUK PUK2	Key code. Used to unlock SIM cards after the wrong PIN has been entered repeatedly.
Phone code	Protects your phone. Must be entered at the first security setting.



## PIN control

The PIN is usually requested each time the phone is switched on. You can deactivate this feature but you risk unauthorised use of the phone. Some service providers do not permit deactivating the control.

**Change** Press.



Enter PIN.



Confirm entry.

## Change PIN

You can change the PIN to any 4 to 8-digit number you find easier to remember.

**Select** Press.



Enter **current** PIN.



Press.



Enter **new** PIN.



Repeat **new** PIN.



## Change PIN2

(Display only if PIN2 is available)

Proceed as for **Change PIN**.

## Chg.phonecode

(Change phone code)

You define the phone code (4 to 8 digits) when you call up a phone-code protected function for the first time (e.g. **Direct call**, page 27). It is then valid for all phone-code protected functions.

Following the third unsuccessful attempt, access to the phone code and the functions that use it is denied. If this occurs, contact Siemens Service (page 128).

## Clear SIM card barring

If the PIN is entered incorrectly three times, the SIM card is barred. Enter the PUK (MASTER PIN) provided by your service provider with the SIM card in accordance with the instructions. If the PUK (MASTER PIN) has been lost, please contact your service provider.

## Preventing accidental activation

Even if PIN control is deactivated (page 17) confirmation is required to switch on the phone.

This prevents accidental activation of the phone, e.g. when you are carrying it in a bag or when you are travelling in an aircraft.



Press and **hold**.



Press. The phone switches on.



Press this key or take no action. The phone does not switch on.

# Text entry

## Text entry without T9

Press the number key repeatedly until the required character appears. After a brief interval the cursor will advance. Example:



Press **once briefly** to write the letter **a**, twice to write **b** etc.

Press and **hold** to write the number.

Ä, ä, 1-9

Unusual characters and numbers are displayed after the relevant letters.



Press **briefly** to delete the letter before the cursor. Press and **hold** to erase the whole word.



Move the cursor (forwards/back).



Press **briefly**: Swap between *abc*, *Abc*, *T9abc*, *T9Abc*, 123. Status shown in top line of display.

Press and **hold**: all input-variants are displayed.



Press **briefly**: special characters are shown.

Press and **hold**: open input menu.



Press **once/repeatedly**:

.,?!' "0+-()@/!:\_

Press and **hold**: writes 0.



Writes blank. Press twice = line break.

## Special characters



Press **briefly**. The symbols chart is displayed:

1)	¿	¡	_	;	.	,	?	!
+	-	"	'	:	*	/	(	)
¤	¥	\$	£	€	@	\	&	#
[	]	{	}	%	~	<	=	>
	^	`	§	Γ	Δ	Θ	Λ	≡
Π	Σ	Φ	Ψ	Ω				

1) Line break



Navigate to characters.



Press.

## Input menu

For text input:



Press and **hold**. The input menu is displayed:

Text format (SMS only)

Input language

Mark

Copy/Insert

## Text entry with T9

“T9” deduces the correct word from the individual key entries by making comparisons with an extensive dictionary.

### Activate, deactivate T9

**Options** Open text menu.

**T9 input** Select.

**Change** Activate T9.

### Select input language

Select the language in which you want to compose your message.

**Options** Open text menu.

**Input language**  
Select.



Select language.

**Select** Confirm. The new language is set. Languages with T9 support are marked with the T9 symbol.

## Writing with T9

The display changes as you proceed.

**It is therefore best if you finish a word without looking at the display.**

Simply press the keys **once** where the relevant letter is located. For “hotel”, for example:



Press **briefly** for T9Abc then



A blank ends a word.

Do not use special characters such as Ä. Use standard characters instead, e.g. A; T9 will do the rest for you.

T9® Text Input is licensed under one or more of the following:

U.S. Pat. Nos. 5,818,437, 5,953,541,

5,187,480, 5,945,928 and 6,011,554;

Canadian Pat. No. 1,331,057;

United Kingdom Pat. No. 2238414B;

Hong Kong Standard Pat. No. HK0940329;

Republic of Singapore Pat. No. 51383;

Euro.Pat. No. 0 842 463 (96927260.8)


DE/DK, FI, FR, IT, NL, PT, ES, SE, GB;


and additional patents are pending worldwide.

## T9 word suggestions

If several options are found in the dictionary for a key sequence (a word), the most probable is displayed first. If the word you want has not been recognised, the next suggestion from T9 may be correct.

The word must be shown **highlighted**. Then press

 Press. The displayed word is replaced with a different word. If this word is also incorrect, press again.

 Press. Repeat until the correct word is displayed.




If the word you want is not in the dictionary, it can also be written without T9.

To add a word to the dictionary:

**Spell** Select.


The last suggestion is deleted and the word may now be entered without T9 support. Press **Save** to add it automatically to the dictionary.

## Correct a word


-  Move left or right, word by word, until the required word is **highlighted**.
-  Scroll through the T9 word suggestions again.
-  Deletes the character to the left of the cursor **and** displays a new possible word.


### Additional information

Within a "T9 word", individual letters may not be edited without first removing the T9 status. In most cases it is better to rewrite the complete word.

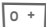
 Set a full stop. The word is concluded if it is followed by a space. Within a word, a full stop represents an apostrophe or hyphen:

e.g. **provider.s** = provider's.

 Moving the cursor to the right ends the word.

 Press **briefly**: switch between: **abc**, **Abc**, **T9abc**, **T9Abc**, **123**. Status shown in top line of display.

Press and **hold**: all input variants are displayed.

 Press **briefly**: select special characters (page 19).

Press and **hold**: opens input menu (page 20).

## Text modules

Text modules can be stored in the phone for adding to your messages (SMS, MMS, e-mail).

### Write text modules



→ Text modules

<New entry>

Select.



The input field is opened.



Write text.

**Options**

Open menu and select **Save**. Accept the suggested name or allocate a new one.



Save.

### Use text modules



Write message (SMS, MMS, e-mail).

**Options**

Open text menu.

Insert...

Select.



Select Text module.



Select text module from the list.

**Select**

Confirm. The text module is displayed.



Confirm. The text module is inserted in the message to the right of the cursor.

# Calling

## Dialling with number keys

The phone must be switched on (standby mode).



Enter the number (always with area/international dialling code).

◀ A **short** press clears the last digit, a **long** press clears the entire phone number.



Press the Call key. The displayed phone number is dialled.

## End call



Press the End key **briefly**. Press this key even if the person on the other end of the line has hung up first.

## Set volume

It is only possible to adjust the volume during a call.



With the joystick or with the sidekeys.

If a car kit is used, its volume setting will not affect the usual setting on the phone.

## Redial previous numbers

To redial the phone number **last** called:



Press the Call key **twice**.

To redial other numbers that were dialled previously:



Press the Call key **once**.



Pick out the phone number from the list, then to dial press the ...



... key.



## If the number is busy

If the called number is busy or cannot be reached because of network problems several options are available (depending on the service provider). An incoming call or any other use of the phone interrupts these functions.

Either

### Auto. redial

**Auto dial** The phone number is automatically dialled ten times at increasing time intervals. End with:



End key.

Or

### Call back

**Call back** Your phone rings when the busy number is free. Press the Call key to dial the number.



## Reminder

**Prompt** A beep reminds you to redial the displayed phone number after 15 minutes.

### Additional information



Store phone number in the Addressbook/Phonebook.

### Handsfr.

Switch on Handsfree (playback from loudspeaker).



Press and **hold** to switch microphone off.

### International dialling codes



Press and **hold** until a "+" is displayed.

### Country

Press and select country.

### Phone number memo

You can enter a phone number during the call. The person to whom you are speaking can hear these entries. When the connection has ended you can save or dial the phone number.

## Accept call

The phone must be switched on. An incoming call will interrupt any other use of the phone.



Press.

Or



Press.

A phone number transmitted by the network plus the corresponding name (possibly with a picture) are displayed if they are stored in the Phonebook/Addressbook (page 32).

## Reject call

**Reject** Press.

Or



Press **briefly**.

### Warning!

Please make sure you have accepted the call before holding the phone to your ear. This will avoid damage to your hearing from loud ringtones.

### Additional information



Press and **hold** to switch off the ringtone and silent alert.



Missed call display.

## Handsfree

You can put the phone down during a call. You can then hear the caller via the loudspeaker.

**Handsfr.** Activate handsfree talking.



Switch on.



Regulate the volume with the joystick.

**Handsfr.** Deactivate.

### Warning!

Always switch off "handsfree talking" before holding the phone to your ear! Otherwise, you will damage your hearing!

## Swap between 2 calls

### Establish a second connection

You can call another number during a call.




Open call menu.

**Hold**

The current call is put on hold.



Now dial the new phone number or select

 Open the call menu, then select **Default book**, and then select the phone number.

When the new connection is established:

**Swap** Swap between calls.

## Incoming calls during a call

You may need to register for this service with your service provider and set your phone accordingly (p. 82). During a call, you may be advised that there is another call waiting. You will hear a special tone during the call. You have the following options:

- **Accept the waiting call in addition to the first**

**Swap** Accept the waiting call, putting the current call on hold to do so.

Always proceed as above to swap between the two calls.

- **Reject the waiting call**

**Reject** Press.

Or

**Divert** The waiting call is diverted, for example, to the mailbox.

- **Accept the waiting call and end the current call**



End the current call.



Accept new call.

## End call(s)



Press the End key.

After the **Return to held call?** display, you have the following selection:

**Yes**

You accept the call on hold.

**No**

You end the second call too.

## Conference



Call up to 5 parties one by one and link them together in a multiparty call. Some of the functions described may not be supported by your service provider or may have to be enabled specially.

A connection has already been established:



Open the call menu and select **Hold**. The current connection is maintained.



Now dial a new number. When the new connection is established ...



... Open the call menu and select **Conference**. The held call is joined.

Repeat procedure until all participants are linked together (up to 5 participants).

## End




All calls in the conference are ended when you press the End key.

## Call options

The following functions are only available during a call:



Press.

Hold	Hold current call.
Microphone on	If switched off, the person on the other end of the line cannot hear you (muting). Also:  Press and hold.
Handsfree	Playback through the loudspeaker.
Volume	Adjust handset volume.
Default book	Phonebook/Addressbook.
Conference	(page 26)
Time/charge	Display talktime that has elapsed so far and (if set) charges incurred during the connection (page 39).
Send DTMF	Enter tone sequences (numbers) for remote inquiries to an answering machine.

### Call transfer



Connect the original call to a second call. For you, both calls are now ended.

### Main menu

Access to the main menu.

### Call status

List all held and active calls (e.g. participants in a conference).

## Direct call

If this is active, only **one** number can be dialled.

### Switch on



Security → Direct call



Confirm selection.



Enter phone code.

When first prompted you define and enter the phone code (4–8 digits).



Confirm selection.

**Please do not forget this code (page 17)!**



Select phone number from the Phonebook/ Addressbook or enter it.



Confirm.

## Apply

**Carola**

To dial the phone number (e.g. Carola's phone number), press and **hold** the right softkey.

## Switch off



Press and **hold**.



Enter phone code.



Confirm input.

## Tone sequences (DTMF)

You can, for example, enter control codes (numbers) for remote access to an automatic answering machine **while another connection exists**. These entries are transmitted directly as DTMF codes (control codes).



Open the call menu.

**Send DTMF**

Select.

## Using the Phonebook/ Addressbook

Store phone numbers **and** control codes (DTMF codes) in the Phonebook/Addressbook in the same way as a normal entry.



Enter phone number.



Press until a "+" appears in the display (wait for the connection to be established).



Enter DTMF codes (numbers).



If necessary, wait again for three seconds at a time for the receiver to process the entries safely.



Enter a name.

**Save**

Store entry.

You may also store just the DTMF codes (numbers) and then send them during the call.

# My items

Set your phone as you wish for the following items:

## **Ringtones (p. 80)**

Assign individual ringtones to caller groups or special dates.

## **Pictures (p. 121)**

Assign individual pictures or photos to your Addressbook entries.

## **Animations (p. 79)**

Choose a start up and shut down animation as well as a personal greeting.

## **Themes (p. 77)**

Load a completely new visual presentation onto your phone.

## **Screensaver (p. 78)**

Choose an analogue or digital clock, or a personal picture.

## **(Operator) Logo (p. 78)**

Choose an individual picture (to be displayed in standby mode)

## **Wallpaper (p. 78)**

Choose your own permanent background image.

## **Colour skin (p. 78)**

Select a colour skin for the user interface.

## **Applications (p. 73)**

Download your own applications from the Internet.

## **Where do I get what?**

You can purchase additional ringtones, logos, animations and Java applications from your service provider or directly from Siemens.

## **Service provider portal**

Depending on your service provider, you will find direct access to his portal on your telephone via menu items or bookmarks. Please contact your service provider for more information on these services.

## **Siemens Mobile Portal**

You will find additional ringtones, logos, animations and screensavers as well as more applications, games and services on the Internet at:

**[www.siemens.com/mobilephones](http://www.siemens.com/mobilephones)**

or you can download them directly from the Internet:

**[wap.siemens.com](http://wap.siemens.com)**

You will also find a service for saving data here as well as a list of the countries in which these services are available.

## **My menu**

Create your own menu (p. 98) with frequently used functions, phone numbers or Internet pages.

# Default book

 →  → Select function.

## Show entries

The entries in the default book (Addressbook or Phonebook) are shown.



Select a name with the first letter and/or scroll.

## New entry

Create new entry.

**Addressbook** (see also page 31)

**Phonebook** (see also page 35)

## Default book

You can set which directory you prefer to use.

The selected default book is opened in standby mode with the joystick.



Open Phonebook or Addressbook

## Addressbook

A lot of data can be saved in the Addressbook for each entry and additional functions (e.g., **Birth day**:, **Picture**:, **Inst. message**) can be used.

## Phonebook

The Phonebook is located on the SIM card. Only one phone number can be entered per entry. The Phonebook on the SIM card can easily be transferred into a different phone.

## Business card

Create your own business card to send to a different GSM-phone. If no business card has been created yet, you will be asked for your input.



Move from field to field to enter your details.

**Save**

Press.

### Additional information

The content of the business card corresponds to international standards (vCard).



Copy numbers from Addressbook/Phonebook.

## Groups

See page 34.

## <Info numbers>

See page 37.

# Addressbook

The Addressbook can store up to 1,000 entries, each with a variety of phone and fax numbers as well as additional address details. These entries are managed in the phone memory separately from those in the Phonebook. However, you can exchange data between the Addressbook and the Phonebook on the SIM card.

## New entry

The Addressbook is set as standard:



Open Addressbook (in standby mode).



Display input fields.



Select required input fields.



Fill in input fields. The maximum number of characters available is shown at the top of the display.

At least one name must be entered. Always enter phone number with dialling code.

## Possible input fields

Last name:	URL:
First name:	Inst. message >>
Phone number:	Group:
Phone no./office:	Company:
Phone no./mobile:	Address: >>
Fax:	Birthday: >>
Fax 2:	Picture:
E-mail:	
E-mail 2:	All fields

## Additional information

**Group:** Allocation to a group (page 34).

**Address:** Extension to enter the complete address:

Street:, Post code:, City:, Country:

## Com. services

Information if the entry is being used as an Inst. Message contact (page 62) or for push to talk:

Nickname:, Push to talk ID:, Push to talk type:, WV user ID:, ICQ number:, AIM screen name:



**Birthday:** After activation, the date of birth is entered.

**Reminder:** The phone reminds you at the time you set one day before the birthday.

**Picture:** Assign a picture to the entry. This is displayed when you are called by a corresponding phone number.

#### All fields/Reduced fields

Displays the number of input fields.

#### Save

Save the entry.

#### Additional information



Temporary switch to Phonebook.

#### Synchronisation

With the mobile phone manager (page 123) you can synchronise your Addressbook with Outlook®, Lotus Notes™ and other Siemens phones.

Using **Remote syncr.** you can synchronise your mobile with an organiser stored on the Internet (see also page 118).

## Display/find entry



Open Addressbook (in standby mode).



Select a name with the first letter and/or scroll.



Display.








## Display options

#### Options




The options menu only ever offers the functions for the currently selected input field.

<b>Move to ...</b>	Assign current entry or highlighted entries to a group.
<b>View</b>	Display an assigned picture.
<b>Copy to SIM</b>	Copy name and <b>one</b> phone number to the SIM card (Phonebook).
<b>New SMS, New MMS, New e-mail</b>	Create a message with the selected entry.
<b>Browser</b>	Start browser and visit URL.
<b>Inst. Message</b>	Start a dialogue with the selected entry (page 62).
(For standard functions see page 15)	



## Change entry

-  Open Addressbook (in standby mode).
-  Select required entry.
-  Press.
-  Select input field.
-  Open entry.
-  Make changes.
-  Save.

## Call entry

-  Open Addressbook (in standby mode).
-  Select a name with the first letter and/or scroll.
-  The number is dialed.

If there are several numbers in the Addressbook entry, these are offered for selection.

-  Select phone number.
-  The number is dialed.

## Addressbook options

Depending on the actual situation, different functions will be offered. These functions can be applied to the entry currently selected as well as to multiple selected entries:

**Options** Open menu.

**Move to ...** Assign current or highlighted entries to a group.

**Copy to SIM** Copy name and phone number to the SIM card (Phonebook).

**Filter** Only those entries which match the filter criteria are displayed.




**Import** Set up readiness to receive for a Phonebook entry via IrDA (page 87) or SMS (page 44).

**Search** Enter search term.

(For standard functions see page 15)

## Groups

Nine groups are specified in your phone to enable you to arrange your Addressbook entries clearly. You can rename seven groups.

-  Open Addressbook (in standby mode).
- <Groups>** Select (the number of entries is listed after the group name).
-  Select group.
-  List entries in the group for viewing and editing.

## Groups menu

**Options** Open menu.

<b>Rename</b>	Change name of group.
<b>Group symbol</b>	Assign a symbol to a group. The symbol will then appear in the display when one of the group members calls.







### Additional information

**No group:** Contains all Addressbook entries that do not belong to a group (name cannot be changed).

**Received:** Contains Addressbook entries received by IrDA (page 87), Bluetooth (page 88) or SMS (page 44) (name cannot be changed).

## Ringtone for group

Assign a ringtone to a group that plays when one of its members calls you.





-  →  → Ringtones → Group calls
-  Select group.
-  Confirm. If a ringtone has already been set, it will be played. Otherwise, the ringtone list will be displayed and you can select one.
-  If necessary, select a ringtone.
-  Confirm.

# Phonebook

Entries in the Phonebook (on the SIM card) are managed separately from those in the Addressbook. You can, however, exchange data between the Phonebook and the Addressbook.

## New entry

If the Phonebook has been selected as the default book:

-  Open Phonebook (in standby mode).
- <New entry>  
Select.
-  Display input fields.
-  Select input field.
-  Fill in input fields. The maximum number of characters available is shown at the top of the display.

### Number:

Always enter phone number with dialling code. An entry will not be saved without a phone number.

### Name:

Enter first and/or last names.

### Group:

Default: **No group**

Important phone numbers can be put in one group (**VIP**). This group is independent from groups in the Addressbook.

### Location:

Default: **SIM**

Special **SIM** cards can save phone numbers in a protected area (**Protected SIM**) (PIN2 required).

### Record number:

Each entry is automatically assigned a record number. You can also dial using the record number.

**Save** Press to store the new entry.

### Additional information



Temporary switch to Addressbook.

**Country** International

dialling code .....page 24

Functions concerning Text entry... page 19

## Call (search for an entry)



Open Phonebook.



Select a name with the first letter and/or scroll.



Phone number is dialed.

## Call using record no.

A record number is automatically assigned to every new entry in the Phonebook.



Enter record number.



Press.



Press.

## Change entry



Select entry in Phonebook.

**Edit**

Press.



Select desired input field.



Make changes.

**Save**

Press.

## Phonebook options

The following functions are available, depending on the current situation.

### Options

Open menu.

### Copy into



Copy all highlighted entries to the Addressbook.

### Copy all to



Copy all entries to the Addressbook.

### Delete all

The whole Phonebook is deleted (PIN-protected).

### Import

Set up readiness to receive for a Phonebook entry via IrDA (page 87) or SMS (page 44).

(For standard functions see page 15)

## <Special books>



Open Phonebook  
(in standby mode).

### <Special books>

Select.

## <Own numbers>

Enter “own” phone numbers in Phonebook (e.g., fax) for information. These numbers can be changed, deleted and also sent as an SMS message.

## <VIP numbers>

Display the phone numbers saved in the VIP group.

## <SIM phonebook>

Entries stored in the Phonebook on the SIM card can also be used on other GSM phones.

## <Protected SIM>



On special SIM cards, phone numbers can be stored in a protected location. PIN2 is required for editing.

## <Service nos.>/<Info numbers>

There might be phone numbers saved in your Phonebook that have been provided by your service provider. They may be used to call local or national information services or to use services offered by your service provider.

### Completing phone numbers in the Phonebook

Digits may be replaced by a “?” when phone numbers are entered in the Phonebook:



Press and hold.

These wildcards must be replaced with numbers before dialling (e.g., with the extension numbers in a phone system).

To make a call, select the phone number from the Phonebook.



Press.



Replace “?” with numbers.



The phone number is dialled.

# Call records

The phone number of a caller is displayed if

- the caller has switched off the **Hide ID** function and
- the network supports the “Caller Identity” function.

Alternatively, a caller’s name is displayed if it is stored in the Phonebook/Addressbook.

Your phone stores the phone numbers of calls for convenient redialling.



Select record.



Open call record.



Select phone number.



Dial phone number.

Or

**View**

Display information on the phone number.

Up to 500 entries are stored in the records.

## Calls missed



The phone numbers of calls that you have received but not answered are stored for call back purposes.



Symbol for missed call (in standby mode). Press the softkey beneath the symbol to bring up the **Inbox** (page 43).

## Calls received

Accepted calls are listed.

## Calls dialled

Access to the last numbers you have dialled.



Fast access in standby mode.

## Delete records

The records are deleted.

## Records menu

The records menu can be called up if an entry is highlighted.

**Options**

Open menu.

**Copy into**

Copy the currently selected phone number into the preferred directory.

(For standard functions see page 15)

# Durat/charges

You can display the charges and duration during a call. You can set a unit limit for outgoing calls.



Select:

Last call

All outg. calls

All incom.calls

Remain. units

Charge sett.



Scroll through the display.



Open item.

**Reset**

Reset the currently selected setting.

## Charge sett.



Open menu.

## Currency

Enter desired currency.

## Personal rate

(PIN2 prompt)

Enter the currency as well as the charge per unit and time.

## Account limit

(PIN2 prompt)

Special SIM cards allow you or the service provider to define a credit limit or a period after which the phone is barred for outgoing calls.

**Edit**

Press.



Enter PIN2.

**Account limit**

Switch on.



Enter number of units.

**OK**

Confirm.

Then confirm the credit or reset the counter. The status display for pre-paid cards may vary depending on the service provider.

## Auto display

Call duration and charges are displayed automatically.



# Camera

You can view photos/videos recorded on the integrated camera immediately and

- use the photo as a background image, logo, a start-up/shutdown animation or a screensaver;
- assign the photo to an Address-book entry;
- send the photo/video via MMS or e-mail;
- save the photo in **My stuff** (page 121) or on the **RS MultiMediaCard** (page 122).

## Switch on



Or



Pressing the sidekey to start the camera in stand-by mode.



Switch to single image and video recording.



The current (preview) image is displayed. You will see the following in the first line from left to right:



Brightness



Zoom factor




White balance (page 42)



Flash connected

The number of photos which can still be taken in the selected resolution is displayed in the top right-hand corner of the preview image. This number varies considerably depending on the subject matter and how much storage space is required.

The selected resolution is indicated beneath the preview image or, if video mode has been selected, there is an indication as to how much recording time has already been used and how much time is still available for a video.

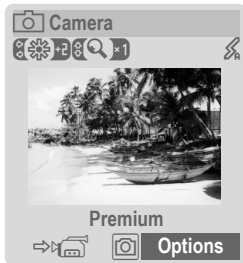

## Photo mode



Take a photo.



Display the preview image for the next photo.

The photo is saved with a name, the date and the time. To enter the name, see **Setup** in the options menu.

Settings prior to taking a photo:



Set the brightness.



Set the zoom factor.

## Image resolution

The quality of the image can be set in four stages regardless of the preview image resolution. The highest possible resolution is 1280 × 960 pixels.

To create your own display background, select the **Wallpaper** resolution (page 78).

The resolution may decrease depending on the selected digital zoom.

## Video mode

The video mode resolution is the same as the preview image resolution. You can set two different resolutions.



Start the video recording.



End the video recording.

A red dot appears in the top right of the display while the video recording is being made.



Plays the video recording.

## Flash (accessories)

If the flash is active, this is shown by a symbol in the display. The flash is constantly charged while connected to the phone and switched on. This reduces the stand-by time.



This symbol appears when the flash is being charged.

For settings, see options menu.

## Camera options

The following functions are available, depending on the current situation.

**Options** Open menu.

<b>Settings</b>	<ul style="list-style-type: none"> <li>• Name for recordings</li> <li>• Image resolution</li> <li>• Colour mode: normal, sepia, grey tones.</li> <li>• Storage medium: My stuff (page 121) or RS MultiMediaCard (page 122)</li> </ul>
<b>Pictures</b>	Display list of photos.
<b>Other videos</b>	Display list of videos.
<b>Microphone on</b>	Switch microphone on or off.
<b>Use flash</b>	Choose between: Automatic, Off, Red eye red.
<b>Self timer</b>	The photo is taken approx. 15 seconds after triggering. For the last 5 seconds, you will hear a beep each second.
<b>White balance</b>	Choose between: Automatic, Indoor, Outdoor

(For standard functions see page 15)

### Additional information



Insufficient memory available. Start the memory assistant to delete specific data (page 84).

Alternatively, you can transfer data to the RS MultiMediaCard.

# Inbox

The inbox folder offers immediate access to the messages currently received. This means that you no longer have to look through all inbox folders for the various message types. The entries are marked with a symbol to indicate their type and status. You will find an overview of the symbols on page 7.

To call up the inbox folder, e.g. if you have received a new SMS:



Press the softkey beneath the symbol.

**Or**



Press in standby mode.

In the inbox folder you will find the following message types:

**SMS, MMS, E-mail**

## System messages

Notification about **MMS, Missed alarm, Missed appts., Calls missed, WAP push, Voice message**

## Data objects

**Ringtones, Pictures and Video, calendar entries, Notes and Business card.**



When you open an entry, the relevant application also starts.

After a set period, entries which have already been read and opened are only displayed in the message-related incoming lists (see **Setup** in the options menu).

## Inbox options

**Options** Open menu.

**Rec. e-mails** Select set account and send all e-mails.

**Setup** If entries have been read, remove them from the **Inbox**:  
**Daily, Never, Immediately**  
 If **Daily** has been selected, specify the time.

(For standard functions see page 15)

### Additional information

Where applicable you will receive WAP push messages from special servers. These may contain information from the service provider or important data such as how to set up a connection profile.

**Accept** For example, start setting up a connection profile automatically.

# SMS

You can use your phone to transmit and receive very long messages (up to 760 characters). They are automatically composed of several "normal" SMS messages (note higher charges).

Additionally, you can insert pictures and sounds in an SMS.

## Write/send



→ → Create new  
→ SMS text



Enter text.

You will find information on writing texts with and without T9 in the chapter "Text entry" (page 19).

The following is displayed in the display line: text entry status, number of SMS required, number of characters still available.



Start sending procedure.



Select phone number from the Phonebook/Addressbook or enter it.

**Group** If necessary, select a group.



Confirm. The SMS is transmitted to the service centre to be sent and saved in the **Sentbox** list.

## Text options

**Options** Open menu.

Save	Save composed text in draft list.
Pic- ture&sound	Add pictures, animations and sounds to message (see following text).
Insert...	Text module (page 22), Bookmarks, From  (Addressbook/Phonebook).
Format	Font size: Small font, Medium font, Large font Underline Alignment: Default alignm., Left, Centre, Right Mark (highlight text with the joystick)
Delete text	Delete the whole text.
Send with...	Select SMS profile so the SMS can be sent.

(For standard functions see page 15)

## Picture&sound

Send pictures and sounds with or without accompanying text.

Remember that these may be protected (DRM, page 13).

With the text input field open:

### Options

Open menu.



Select **Picture&sound**.

The menu contains:

**Fix animations**

**Fix sounds**

**Own animat.**

**Own pictures**

**Own sounds**



Select list.



Confirm. The first entry of the selected section is displayed.



Scroll to entry required.

For **Fix animations/Fix sounds**:



The selection is added to the SMS.

For **Own animat./Own pictures/Own sounds**:



The selection is displayed/played back.



The selection is added to the SMS.

The pictures which have been added are displayed. Sounds are displayed in the form of "wildcards".

## SMS to group

You can send an SMS message as a "circular" to a recipient group.



Start sending procedure.

### Group

The Addressbook is opened.

<Groups>

The list of groups is displayed.



Select group.



Open group and highlight all/individual entries.



Transmission is started after a security prompt.

## Read




Arrival of a new SMS announced in the display. Open Inbox (page 43) with the softkey beneath it.



Reading the SMS.



Scroll through message line by line.

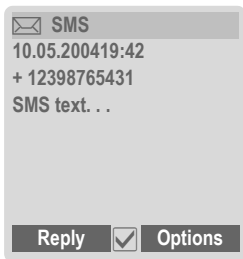

## Reply

You can answer the SMS that is currently open immediately. The newly added text is placed above the received text.



Reply immediately.

## Reply options

**Reply** Open reply menu.

**Write message** Create a new reply text.

**Edit** Edit received SMS or add new text.

**Answer is YES** Add Answer is YES to the SMS.

**Answer is NO** Add Answer is NO to the SMS.

**Please call back, Delay, Thank you** Add a standard text as a reply to the SMS.

## Read options

**Options** Open reply menu.

**Reply** See "Reply options" above.

**Picture&sound** Save picture/sound contained in the SMS.

**Text zoom** Enlarge or reduce text display.

**Archive** Move SMS message to archive.

(For standard functions see page 15)

## Lists

All SMS messages are archived in different lists, according to their status. (For overview of message symbols, see page 7):

### Inbox



The list of received SMS messages is displayed.

### Draft



The list of not yet transmitted SMS messages is displayed.

### Unsent



The list of concatenated SMS messages not yet sent is displayed. Transmission can be restarted.

### Sentbox



The list of sent SMS messages is displayed.

### SMS archive



The list of SMS messages stored in the phone is displayed.

## List options

Different functions are offered depending on the list.

**Options** Open menu.

Send	Send or forward entry.
Send with...	Select an SMS profile for transmission.
Archive	Move SMS message to archive.

(For standard functions see page 15)



## Setting

### SMS signature



You can enter a “signature” with up to 16 characters. This signature will then be attached to each SMS except for a **Reply** and when changes are made to an existing SMS.

### SMS profiles



Up to 5 SMS profiles can be set. These define the transmission characteristics of an SMS. The pre-setting depends on the SIM card inserted.

#### Activate profile



Select profile.



Activate.

#### Set profile



Select profile.

**Edit** Open to edit the profile.

**Service centre** Enter the phone numbers for the service centre as provided by the service provider.

**Recipient** Enter a standard recipient for the profile.

**Message type**

- **Manual:** Inquiry for all messages.
- **Standard text:** Normal SMS message.
- **Fax:** Transmission via SMS.
- **E-mail:** Transmission via SMS.
- **New:** You may need to obtain the required code number from your service provider.

**Validity period** Period in which the service centre is to try to deliver the message:

Manual, 1 hour, 3 hours, 6 hours, 1 day, 1 week, Maximum\*

\* Maximum period that the service provider permits.

**Status report** Receive confirmation of successful/failed transmission of a message. This service may be subject to a charge.

**Direct reply** If activated, the reply to your SMS message is handled via your service centre (for information, please contact your service provider).

**SMS via GPRS** Send SMS automatically via GPRS (page 87).

**Save aft. send** Sent SMS messages are saved in the **Sentbox** list.


## More information on SMS

### SMS status report


If the message cannot be transmitted to the service centre you are offered the chance to repeat the transmission. If this also fails, contact your service provider. The **Message sent!** message only indicates transmission to the service centre. This will then attempt to relay the message within a certain period.

See also **Validity period** (page 48).

### Phone number in SMS

Phone numbers displayed **highlighted** in the text can be dialled () or saved in the Phonebook/Addressbook.

### Downloading ringtones and logos

You can receive links for downloading ringtones, logos, screensavers, animations and information about applications with an SMS. Please highlight this link and, by pressing the Call key () , start the download. Please check that the dial-in access is configured (page 90).

Remember that these may be protected (DRM, page 13).

### **SIM memory full**

If the message symbol flashes the SIM memory is full. **No** more SMS messages can be received. You need to delete messages or move them to the RS MultiMediaCard.

# MMS

The **Multimedia Messaging Service** enables you to send texts, pictures/videos and sounds in a combined message to another mobile phone or to an e-mail address. All elements of an MMS message are merged to form a “slide show”.

Depending on your phone's settings, you will receive either the complete message automatically or notification that an MMS has been saved in the network, giving sender and size details. You may then download it to your phone to read it.

Ask your service provider whether this service is available. You may need to register for this service separately.

## Create



An MMS consists of the address header and the content.

An MMS may consist of a series of pages. Each page may contain a text, a picture/video and a sound. Remember that pictures and sounds may be protected (DRM, page 13).

Write **texts** with the help of T9 (page 19).

**Pictures** and **videos** can be recorded with the integrated camera and/or loaded from **My stuff** (page 121).

**Sounds** can be recorded with the sound recorder and/or loaded from **My stuff** (page 121).

First select an object for processing to be added to the first page of the MMS:

## Pictures/videos

Limits on picture size can be set in the user settings.



Display picture/video functions:

### Insert picture

Open list to select a picture.

### Insert video

Open list to select a video.

### Camera

Activate the camera to take a photo or record a video for the MMS (page 40).



Also possible.

### Open

Display picture.

### Delete item

Delete inserted picture/video.

### Save picture/Save video

Save picture/video for use later on.

### Rights details

Display properties, including any user right restrictions (page 13).

## Sounds

**SOUND** Select.



Display sound functions:

### Insert sound

Open list to select a sound.

### Record

Activate sound recording to record sounds (page 114).



Also possible.

### Open

Play back sound.

### Delete item

Delete inserted sound.

### Save sound

Save sound to use later on.

### Rights details

Display properties, including any user right restrictions (page 13).


## Text

**TEXT** Select and write the text.



The text functions are displayed (see also page 19):

### Insert

Choose any of the following for insertion: **Text module**, **Bookmark**, **From** 

### Delete text

Delete text on current page.

### Save text

Save text on the page as a text module.

### T9 input

T9 settings:

T9 preferred, Input language

### Mark

Text processing together with **Copy** and **Insert**.

## Generation options

<b>Options</b>	Open menu.
Send	Send MMS.
Preview	Play entire MMS on the display.
Picture...	See page 50.
Sound...	See page 51.
Text...	See page 51.
Page...	<p><b>Add page:</b> Insert new page after current one.</p> <p><b>Delete page:</b> Delete current page.</p> <p><b>Page list:</b> Display available pages.</p> <p><b>Timing:</b> Enter the lifespan of a page in seconds.</p>
Msg. details	Enter sending parameters (page 54).
Save as templ.	Save created MMS as a template. See also below.
Layout	<p>Select one of four possible layouts:</p> <p>Text above, beneath, beside (on left or right of) picture.</p>
Colour...	<p>Select the colours for:</p> <ul style="list-style-type: none"> <li>• <b>Picture backg.</b></li> <li>• <b>Text backg.</b></li> <li>• <b>Text colour</b></li> </ul>

(For standard functions see page 15)

## Templates



MMS templates are MMS messages that are saved without an address. They can be sent as new MMS messages or used as part of a new MMS. A maximum of 10 templates can be saved.

Create templates by writing a new MMS or using an MMS which you have already received.


**Options** Open menu and select **Save as templ.**

## Send

The page(s) of the new MMS is (are) already created and the MMS is displayed.




Open address entry.

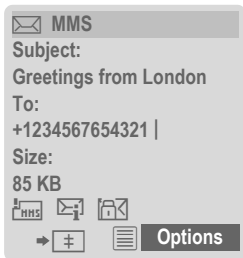

**Subject:** Enter a brief description.

**Send to:** Enter one or more phone number(s) / e-mail address(es).

 → Insert from Address-book.

**Size:** Display the size of the current MMS in kilobytes (KB).

### Attachments:

Insert attachments.



Start sending procedure.



The MMS is sent after confirmation.

### Expanded address fields



Scroll downwards.



**More:** Provide additional address fields.

**Cc:** Address(es) of copy recipient(s).

**Bcc:** Address(es) of copy recipient(s) who are not visible to the other recipients.

**Date:** Creation date.

### Use delivery time:

Use specified send time.

If **Yes**:

**Delivery date:**

Send date.

**Delivery time:**

Send time.

### Symbols for status information



Priority



Send report



Contains DRM (page 13)

## Sending options

<b>Options</b>	Open menu.
<b>Send</b>	Send MMS.
<b>Play</b>	Play entire MMS on the display.
<b>Edit</b>	Display object selection so that object can be changed.
<b>Add recipient</b>	Add recipient from the current address directory.
<b>Delete recip.</b>	Delete individual recipient.
<b>Add attachm.</b>	Add attachment: <ul style="list-style-type: none"> <li>• Business card</li> <li>• Appointments</li> <li>• Picture</li> <li>• Video</li> <li>• Sound</li> <li>• File</li> </ul>
<b>Page list</b>	Display MMS pages for viewing and/or changing.
<b>Save as templ.</b>	Save created MMS as a template.

(For standard functions see page 15)

## Receive

Depending on the setting (page 56), an MMS can be received in two ways:

### Complete transmission

The complete MMS is sent to your phone. This can take quite a while if the MMS is large.



Shown in the display.



Start reception. The MMS is sent.

### Preliminary notification

You are notified that an MMS is waiting to be received.



Shown in the display.



Open the notification. Display sender/date.



Display the properties of the MMS.

**Receive**

The complete MMS is sent.

**OK**

Display in Inbox.

## Read

An MMS has been received in full.



Select the MMS.



Start automatic playing of the MMS.

Key functions for playback:



To the next page.



Press briefly once to return to the start of the current page; press briefly twice to return to the start of the previous page.



Set volume.



End.

The message details are displayed when the MMS is complete.

**Subject:** Description of the MMS.

**From:** Information about the sender.

**Size:** Size of the MMS in KB.

### Expanded address fields



Scroll downwards.

**More:** Additional input fields.

**Cc:** Copy recipient.

**Attachments:**  
Save attachments.

**Date:** Date received.

Symbols for status information (see page 53).

## Lists

All MMS messages are saved in four different lists (for overview of message symbols, see page 7):

### Inbox



The list of MMS messages and notifications received is displayed. To receive an MMS at a later time, open notification and press **Receive**.

### Draft



The list of stored drafts is displayed.

### Unsent



The list of the MMS messages not yet fully transmitted is displayed.

### Sentbox



The list of sent MMS messages is displayed.



## List options

Different functions are offered depending on the list/situation.

**Options** Open menu.

Play	Play MMS on the display.
Edit	Display MMS for processing.
View	Display MMS for viewing only (write-protected).
Send all	Send MMS.
Reply to all	Reply to MMS immediately.
Forward	Enter recipient(s) for forwarding.
Msg. details	Display message parameters.
Receiv.all MMS	Send all new MMS messages immediately.
(For standard functions see page 15)	


## Setting




## Connection profile:

Six MMS profiles can be set (5 in the telephone memory, one on the SIM card). The send properties can be specified in them. In most cases, they have already been set. If necessary, check with your service provider for details.

### Activate profile

-  Select profile.
- OK** Profile is activated.


### Set profile

- Change** Display list of profiles.
-  Select profile.
- Edit** Press. Make settings.

## User settings

Set the MMS dispatch to suit your requirements:

<b>Delivery report:</b>	Request delivery confirmation for sent messages.
<b>Default priority:</b>	Send priority: Normal, High, Low
<b>Expiry time:</b>	Select the period of time in which the service centre is to try to deliver the message: Manual, 1 hour, 3 hours, 6 hours, 1 day, 1 week, Maximum* * Maximum period that the service provider permits.
<b>Page duration:</b>	Enter the lifespan of a page in seconds (standard requirement). Scroll forward in Manual or Automatic mode.

<b>Retrieval:</b>	Receive complete MMS or only notification of arrival. <b>Automatic</b> Receive complete MMS immediately. <b>Auto.homenet</b> Receive complete MMS immediately in home network. <b>Manual</b> Only receive the notification.
<b>Creation mode:</b>	Free, Restricted, Warning May be used to receive a warning message or to limit the size of a message.
<b>Size indication:</b> 	Set max. message size and message handling.

# E-mail

Your phone has an e-mail program (client). You can use it to create and receive e-mails.

## Write



→ Create new → E-mail

Enter the address details for the e-mail:

- To:** Enter one or more e-mail address(es).  
 → Insert from Addressbook/Phonebook.
- Subject:** Enter e-mail heading (up to 255 characters).

**Text:** Enter text.

### Expanded address fields

- More:** Open additional input fields.
- Cc:** Address(es) of copy recipient(s).
- Bcc:** Address(es) of copy recipient(s) who are not visible to the other recipients.

### Attachments:

Add attachments such as images and sounds.

### To send



Press.

## Options

Different functions are offered depending on the position of the cursor.

**Options** Open menu.

Send	Send e-mail.
Send later	Transfer e-mail into the Unsent list.
Save	Save e-mail in the Draft list.
Add recipient	Add recipient from the current address directory.
Delete line	Delete current line.
Insert...	Text module Bookmark From  insert from the Addressbook/Phonebook.
Add attachm.	My stuff Open to make a selection. Remember that pictures and sounds may be protected (DRM, page 13).
Delete text	Delete the whole text.
Text input	<ul style="list-style-type: none"> <li>• T9 preferred</li> <li>• Input language</li> </ul>

## Receive/read



Before an e-mail can be read, it must be retrieved from the server. You have two options:

### Retr. e-mail

Only the message header in the **Inbox** (page 43) is sent. You can then decide if you also want to receive the contents:

**Options** Open menu and select **Retrieve body**.

or if you want to delete the e-mail on the server:

**Options** Open menu and select **Del. on server**.

### Send/rec. mail

The set access is selected and all e-mails transferred to the **Inbox** (page 43). At the same time, completed e-mails are transferred from the **Unsent** list.

## Attachments

Contains the e-mail attachments; these can be saved in **My stuff** (page 121).

**Options** Open menu and select **Save attach**.

## Lists

All e-mails are saved in different lists depending on their status (for overview of message symbols, see page 7):

### Inbox



The list of received e-mails is displayed.

### Draft



The list of e-mails not yet transmitted is displayed.

### Unsent



The list of e-mails not yet transmitted is displayed.

### Sentbox



The list of transmitted e-mails is displayed.

## List options

Different functions are offered depending on the list.

**Options** Open menu.

<b>Retr. e-mail</b>	Only transfer the message header into the <b>Inbox</b> (page 43).
<b>Retrieve body</b>	Retrieve the contents from the server if only the message header was received.
<b>Del. on server</b>	Delete the contents on the server if only the message header was received.


(For standard functions see page 15)

## Setting


-  →  → Message setup
- E-mail setup
- Select function.

## Accounts

Before using this service you must set the server access and your e-mail parameters. You will receive the necessary data from the service provider.

-  Select account.

### Activate access

-  Activate an account that has already been created.

### Set access

- Edit** Start editing. Fill in the data fields as specified by your service provider.

## General sett.

Enter an e-mail address to which a **Bcc** (blind carbon copy) is **always** sent.

# Voice message/mailbox



Most service providers provide a mailbox in which a caller can leave a voice mail for you

- if your phone is switched off or not ready to receive,
- if you do not want to answer,
- if you are making a phone call (and if **Call waiting** (page 82) is not activated).

If the voice mail service is not part of your service provider's standard package, you will need to register, and possibly adjust the settings manually. The following sequence may vary from service provider to service provider.

## Setup




The service provider supplies you with two phone numbers:

### Save mailbox number

You call this phone number to listen to the voice mails left for you.



 Select number from Phonebook/Addressbook or enter/change it.

**OK** Confirm.

### Save call divert number

Calls are diverted to this phone number.



Enter phone number.

Or

**Mailbox** Press to divert call to the mailbox number.

**OK**

Registration with the network is confirmed a few seconds later.

## Listen to message



A new voice message can be announced as follows, depending on the service provider:



Symbol plus beep.

Or



Notification via SMS.

Or

You receive a call with an automatic announcement.

Call your mailbox and play the message(s) back.



Press and **hold** (if necessary enter mailbox number once). Confirm with **OK** and **Mailbox** depending on your service provider.

## Inst. message



With **Inst. message** you can transfer text, audio clips, pictures and files straight to and from one or more terminals (mobile phone, PC). This function is not offered by all service providers. Please ask your service provider about this.

Your dialogue partners are entered in contact lists. When a connection has been established, these lists show who is available, whether he/she wants to be disturbed and what mood he/she is in at present.

**GPRS must be switched on.**



## Start menu

**Login** Select the access through which the dialogue is to take place  
**or**  
 select **Account** (page 67).

**Msg. history** Read the messages from the last session.

**Setup** Settings for your representation, the applications and servers.

**Quit** End application.

## Fast access ...

### Select account (page 67)



The current contact list or the overview is displayed (if necessary, set account first, page 67).

### Specify your own status (page 68)

**Options** Open menu.

#### My settings

Select and make entries.



Return to contact list.

### Enter new contact

**Options** Open menu.

**Manage** Press, then:

#### Add contact

select and enter at least the user ID.



Return to contact list.

### Hold dialogue with new contact (page 66)



Select the contact.



Start dialogue.



Open editor.



Write text.



Send text ...  
... and so on.

## Login



Select the last account used (see also **Automatic login**: page 68).

## Contact lists

When the connection has been established, the contact list or the overview of the contact lists is shown for selection.

In the contact list, you will find a list of the most recently used contacts. The first time you log in, an “empty” contact list will be generated by the server if necessary.

Displays in the list:

### -Conversation

Displays online contacts for whom there are messages.

### -Online

Online contacts with whom no conversations are being held at present.

### -Group

Groups for Inst. Messaging with several contacts.



### -Offline

Contacts who are not online at present.

## Manage contacts



Select a contact.

### Options

Open menu.

### Manage

Select.

### Contacts

Different functions are offered depending on the selection:

#### Add contact

##### User ID:

Enter an unambiguous user (login) name.

##### Nickname:

Enter your own nickname for the contact.

##### Friend:

The contact receives the status **Friend**: and access to personal information (page 68).

#### Search contact

Search for contact.

#### Delete contact

Delete contact from the list.

#### Block contact

No more messages are received from the contact and the contact receives no status information from you. This function works for all your lists.



## Manage groups



Select one of the groups you set up yourself.

**Options** Open menu.

**Manage** Select.

### Manage group

Different functions are offered depending on the selection:

**Add member** Add a new group member, see also **Add contact**.

**Search memb.** Search for group member.

**Invite** Invitation to the contacts in your own group to Inst. Message.

**Delete member** Delete contact from the group member list.

**Add group** Add new group.

**Search group** Search for group on the server (also groups no longer managed in the list).

**Create group** Group ID:

Enter an unambiguous group name.

**Name:**

Name of group.

**Topic:**

Topic of group.

**Searchable:**

Other people can look for the group.

**Welcome note:**

Enter own greeting.

**Delete group** Delete group.

## Create a new contact list

The current contact list is displayed.

**Options** Open menu.

### Contact lists

Available contact lists are displayed.

**Options** Open menu.

**Create** Select.

### Contact list ID:

Give the contact list an unambiguous name.

**Name:** Allocate self-explanatory name.



Confirm.

## Contact list options

**Options** Open menu.

<b>Details</b>	Additional information about the contact or the group.
<b>My settings</b>	Information on your current personal status (page 68).
<b>Manage</b>	Functions for managing a contact or a group.
<b>Contact lists</b>	Display contact lists for selection.
<b>Block listtp</b>	Display all blocked contacts. Can be unblocked.
<b>Appl. settings</b>	Set the application (page 68).
<b>Suspend</b>	End the application; the server remains connected.
<b>Logout</b>	Log off from the server and return to start menu.
<b>Help</b>	Display help text.

## Start Inst. message

A contact list must be displayed.



Select a contact or a group.



Start communication with the contact.

The page with the **Inst. message** is displayed.

When a group is engaged in a dialogue, the name of the sender is placed in front of each contribution.



Open editor.



Write text.



Send text. The text appears in the **Inst. message** soon afterwards.

Naturally, you can also receive messages from contacts you do not know. This will be pointed out to you in the display, and you can either switch to Inst. Message or ignore/block the contact.

## Options (individual contact)

**Options** Open menu.

**Send sound** Select and send a melody/sound from the list (DRM, page 13).

**Send picture** Select and send a picture from the list (DRM, page 13).

**Send any** Send any file.

**Details** Information about the contact, if they authorise this.

**Clear all** Delete all texts in the current Inst. Message.

**Block contact** No more messages are received from the contact and the contact receives no status information from you.

This function works for all your lists.

## Options (group contact)



**Options** Open menu.

**Leave group** Exit group.

**Details** Information about the group:  
Group ID:, Name:, Topic:, Owner:

**Clear all** Delete all texts in the current Inst. Message.

## Receiving objects



If sounds or pictures are sent to you during a dialogue, you will be informed of such in the display.

**Receive** Accept object

or

**Reject** Reject object.

## Msg. history

→ → Inst. message  
→ Msg. history

The messages from the last meeting are displayed. You can read and delete the contributions.

Requirement: The server must be disconnected, see **Suspend** (page 65) and **Automatic login:** (page 68).

## Setting

→ → Inst. message  
→ Setup → Select function.

## Account

The list of available accounts is displayed.

Select an account to establish a connection.

Or

<New entry>/Account sett.

Set up an account or change the settings as specified by the service provider. Depending on the service provider, the settings may not be changeable.

<b>Name:</b>	Name of account.
<b>URL:</b>	Enter URL, e.g. www.abc.com
<b>User ID:</b>	Enter an unambiguous user (login) name.
<b>Password:</b>	Enter password (shown as a series of asterisks).

## My settings

Information on your current personal status:

<b>Alias:</b>	Your own alias under which you can be found on the server.
<b>Screen name:</b>	Name to be displayed in the group.
<b>Mood:</b>	Information about your own mood, e.g. Happy, Sad, Sleepy etc.
<b>Status text:</b>	General text information, e.g. "Am at home".
<b>Availability:</b>	Availability: Available, Busy, Busy
<b>Mobile:</b>	Enter the phone number with international dialling code.

**Options** For **each** setting, specify who is allowed to view your personal information:

**Public**

All contacts.

**Private**

Contacts designated as Friend: (page 63).

**Hidden**

Nobody.

## Appl. settings

Settings for the application used:

<b>Automatic login:</b>	Auto-reconnect to the last account used.
<b>Timeout:</b>	Time without action after which the application is terminated. However, the server remains connected.
<b>Message info:/ Online info:</b>	Signal the receipt of messages: Yes/No Signal given as: <ul style="list-style-type: none"> <li>• Sound</li> <li>• Silent alert</li> <li>• Pop-up Popup windows authorised: Yes/No</li> </ul>

# CB services



Some service providers offer information services (info channels, **Cell Broadcast**). If reception is activated, you will receive messages on the activated topics in your **Topic list**.

CB messages are displayed in standby mode; longer messages are scrolled automatically.

## Receive CB

You can activate and deactivate the CB service. If the CB service is activated, standby time for the phone will be reduced.

## Topic list

You can add any topics to this personal list from the topic index. You can preset 10 entries with their channel numbers (ID) and, if applicable, with their names.

**New topic** Select.

- If no topic index is available, enter a topic with its channel number and confirm with **OK**.
- If the topic index has already been transmitted, select a topic and activate it with **Options**.

**Topic** Select

**Options** Open list menu.

If a topic is selected in the list you can view it, activate/ deactivate it, edit it or delete it.

## CB languages

Receive Cell Broadcast messages in only one specific language or in all languages.

### Displays

- |  |                                     |
|--|-------------------------------------|
| <input checked="" type="checkbox"/> <input type="checkbox"/> | Topic activated/deactivated.        |
|  | New messages received on the topic. |
|  | Messages already read.              |

## Text zoom

You can set three fixed sizes for the presentation of the display texts across the entire message range:

**Standard** Medium font size

**Zoom +** Large font

**Zoom -** Small font

## Surf & fun

Obtain the latest information from the Internet that is specifically adapted to the display options of your phone. In addition, you can download games and applications to your phone. Internet access may require registration with the service provider.

### Access to the service provider

Direct call-up of the browser with the URL from your service provider.

### Internet



The browser is activated with the pre-set option as soon as you call up the function (**Browser settings**, page 71; may be specified/pre-assigned by service provider).

### Browser menu

**Options** Open menu.

Homepage	Call up the pre-set homepage for the current profile.
Bookmarks	<p>List bookmarks Display list of bookmarks stored in the phone.</p> <p>Bookmark site The current page is saved as a bookmark.</p>
Go to...	Enter URL to dial an Internet address directly, e.g. <b>wap.siemens.com</b>
Reload	Reload current page.
Show URL	Display the URL of the page currently loaded for sending via SMS/MME/e-mail.
History	Display most recently visited Internet sites.
Disconnect	Disconnect the Internet.
File	Save object on the current page or save the complete page; display saved pages.
Setup	Set or reset browser (page 71).
Exit browser	Close the browser.

## End connection



Press and **hold** to clear down the connection and close the browser.

## Navigation in the browser



- Select a link.
- Settings, status on/off.



- Press **briefly**: one page back.



- One input field/link forward/back.
- Scroll one line.

## Display symbols in the browser (selection)



Connect



No network



Network



GPRS online

## Enter special characters



Table of special characters (page 19).



List of special characters, depending on the situation.

## Browser settings



Internet

### Options

Open menu.

### Setup

Select.

### Browser

Set start option as well as handling of pictures and sounds plus send options.

### Profiles

The list of profiles is displayed for activation/setting. For more information, contact your service provider.

### Protocol parameters

Set protocol parameters, push messages and abort time as well as handling of cookies.

### Security

Set encryption.

### Context

Reset session; delete cache, history and cookies.

Your Internet browser is licensed by:



OPENWAVE™





## Profiles

Preparation of the phone for Internet access depends on the service provider concerned:

### Profil pre-set

In most cases, access profiles have already been created for one or more service provider(s).



Select profile.



Activate profile.

### Set profile manually

If necessary, please contact your service provider.

**Options** Open menu.

**Edit** Start processing. For the Internet-specific settings below, please contact your service provider.

**Delete** Delete selected profile.

## Bookmarks



→ Bookmarks

### Display URL/call up page

#### List bookmarks

Display list of bookmarks stored in the phone.



Select bookmark.



Call up URL.

### Save

#### Bookmark site

The current page is saved in the phone as a bookmark.

### Bookmark options

**Options** Open menu.

Here you will find functions for changing and managing bookmarks and their folders. This includes editing individual entries with the corresponding URLs as well as deleting and moving them to other folders.

## Games and Applications

Games and applications are offered on the Internet. Once downloaded, you can access these via the phone. Most applications include instructions. Some applications and games are already pre-installed on your phone. You will find these described under

[www.siemens.com/m75](http://www.siemens.com/m75)

### Requirements

Browser profile (page 71) and access (page 90) must be configured already.

### Download

Select the correct access depending on whether you are loading games or applications:

 →  → Games

or

 →  → Applications

Load or start games, or else start applications or reload them with Download-Assistant.

### Description file only



The description file is loaded for information purposes only. The application/game itself must be loaded separately.

### or complete download



The application/game is completely loaded.

### Apply

Remember that applications/games may be protected (DRM, page 13).



The executable application is saved on the phone and can be started immediately.

## Downl. assist.

 →  → Downl. assist.

You will not be left on your own during the download!

## Games&More options

Processing and managing your applications and folders:

<b>Move</b>	Move applications between folders.
<b>New folder</b>	Create and name new folder.
<b>Update</b>	Reinstall an application (update).
<b>Security</b>	Select a security level.
<b>Reinstall</b>	Repeat after transmission error.
<b>Attributes</b>	Show details of the application/folder (name, version, size, path, producer, date).
<b>HTTP profile</b>	Display profile list for activation/setting
(For standard functions see page 15)	

### Additional information

You can use the browser to download applications (e.g. ringtones, games, pictures, animations) from the Internet.

Siemens excludes all warranty and liability claims in respect of or in connection with any applications subsequently installed by the customer and any software not included in the original delivery package. This also applies to functions enabled subsequently at the customer's instigation. The purchaser bears sole risk for the loss of, damage to, and any defects arising in, this device or the applications and for any direct damage or consequential damage of whatever nature resulting from the use of this application. For technical reasons, such applications and subsequent enabling of certain functions are lost in the event of the device being replaced/re-supplied and may be lost if it is repaired. In such cases, the buyer is required to download or enable the application again. Please ensure that your phone has Digital Rights Management (DRM) so that downloaded applications are protected from unauthorised reproduction. These applications are then exclusively intended for your phone and cannot be transferred from this even to create a backup. Siemens offers no warranty or guarantee nor does it accept any liability for the customer's ability to download or enable applications again or to do so free of charge. We recommend that you carry out a backup from time to time of the applications on your Windows® PC using the "Mobile Phone Manager" ([www.siemens.com/m75](http://www.siemens.com/m75)), page 123.

# Setup

## Profiles



Several settings can be stored in a phone profile in order, for example, to adapt the phone to the surrounding level of noise.

- Six standard profiles are provided with default settings. They can be changed however:

Normal environment

Quiet environment

Noisy environment

Car Kit

Headset

Mob.music set

- You can set two personal profiles (<Name>).
- The special profile **Aircraft mode** is fixed and cannot be changed.

## Switch on



Select default profile or personal profile.



Switch on profile.

## Profile settings

Edit a default profile or create a new personal profile:



Select profile.

### Options

Open menu.

### Change sett.

Select.

The list of available functions is displayed.

When you have finished setting a function, return to the profile menu where you can change a further setting.

### Additional information

Call up the list in standby mode:



The profile list is displayed.

The active profile is identified with

## Profile options

**Options** Open menu.

**Activate** Activate selected profile.

**Change sett.** Change profile settings.

**Copy from** Copy settings from another profile.

**Rename** Change personal profile (except default profiles).

## Car Kit

If an original Siemens car kit is used, the profile is switched on automatically when the phone is inserted into the cradle (see also page 133).

## Headset

The profile is only switched on automatically if an original Siemens headset is used (see also page 132).

## Aircraft mode

All alarms (appointments, alarm clock) are deactivated. This profile **cannot be modified**.

### Switch on



Scroll to **Aircraft mode**.



Confirm selection.



Confirm safety inquiry again in order to activate the profile. The phone switches itself off automatically.

### Normal mode

When you switch on your phone again, the previously set profile will be reactivated automatically.

## Themes



Load a completely new visual presentation onto your phone. At the press of a key various functions are re-organised on a theme basis, e.g.:

Start up/shut down animation, wallpaper, screensaver, start up/shut-down melody, additional animations.

Theme files are compressed to save memory space. After being downloaded or called up from *My stuff*, these are automatically unzipped when activated.

### Activating a new theme



Select theme.



Display theme preview.



Activate new theme.


## Display setup



### Language

Set the language for the display text. When “automatic” is set, the language of your home service provider is used.

If a language that you do not understand happens to be set, the phone can be reset to the language of your home service provider with the following input (in standby mode):

\*#0000# 

### Text input

#### T9 preferred

Activate/deactivate intelligent text entry.

#### Input language

Select language for text entry. Languages with T9 support are marked with the T9 symbol.

## Wallpaper

Set wallpaper graphic for the display.

### Logo

Choose graphic to be displayed instead of the provider logo.

### Colour skin

Select colour skin, incl. background image for the entire user interface.

## Screensaver

After a specifiable time, the screensaver shows a picture in the display. An incoming call and/or pressing any key will end the function except if the code protection is activated.

Change settings:

**Change** Settings are displayed:

### Preview

Display the screensaver.

### Style:

Select **Analogue clock**, **Digital clock**, **Bitmap**, **Energy saving**

### Picture:

Select image in **My stuff**.

**Timeout:**

Set period after which the screen-saver starts.

**Code protection:**

The phone code is requested to close the screensaver.

**Auto key lock:**

Automatic keypad locking if no key has been pressed for one minute in standby mode.

**Unlocking:**

Press and **hold**.

**Note**

The animated **Bitmap** screensaver and the **Digital clock** considerably reduce the phone's standby time.

**Start up anim.**

Select animation to be shown when phone is switched on.

**Shutdn anim.**

Select animation to be shown when phone is switched off.

**Own greeting**

Enter greeting to be displayed instead of animation when phone is switched on.

**Big letters**

You can choose between two font sizes for the display.

**Illumination**

Set display illumination to brighter/darker. The darker the setting the longer the standby time.



Press the joystick repeatedly at the top/bottom to adjust up or down.



## Ringtones



Set the signal tones on the phone to suit your requirements.


### Ringer setting


**On/off**      Activate/deactivate all tones.


**Beep**        Reduce ringtone to a short signal (beep).

### Silent alert

To avoid the disturbance caused by a ringing phone, you can activate the silent alert function as an alternative. The silent alert can also be activated in addition to the ringtone (e.g. in noisy environments). This function is deactivated when the battery is being charged and accessories are connected (except the headset).


 Settings are displayed for changing.

 Select from several silent alert versions.

 Confirm setting.

## Volume

Set different volumes for types of call/functions.

 Settings are displayed for changing.

 Select

Calls

Push to talk

Messages


CB services

Alarm clock


Organiser

System

Applications

 The ringtone sounds again.

 Set volume.

 Confirm setting.

### Additional information

Please make sure you have accepted the call before holding the phone to your ear. This will avoid damage to your hearing from loud ringtones.

## Assign ringtone

A ringtone which has already been selected will be played or the list of possible ringtones will be displayed for selection.

### Calls

Assign a single ringtone to all phone numbers in the Addressbook.

### Group calls

Assign a different ringtone to each group.

### Other calls

Assign one ringtone to the remaining calls.

### Push to talk

Assign one ringtone to Push to talk calls.

### More melodies

Assign further ringtones for:

Messages

Alarm clock

Organiser

Startup melody

Shutdown mel.

or record new with:

Sound recorder (page 114)

You will find a list of all supported formats for ringtones in **My stuff** (page 122).

## Call setup



### Hide ID



When you make a call, your phone number can be displayed on the recipient's display (depending on the service providers).

To suppress this display, you can enable the "Hide ID" mode for all subsequent calls or just for the next call. You may need to register separately with your service provider for these functions.

### Call waiting



If you are registered for this service, you can check whether it is set and you can activate/deactivate it.

### Divert

You can specify the conditions under which calls should be diverted to your mailbox or other numbers.

#### Status check

You can check the current divert status for all conditions. After a short pause, the current situation is transmitted by the network and displayed.



Condition set.



Not set.



Display if status is unknown (e.g. with a new SIM card).

#### Clear all



All set diversions are cleared.

### Set up call divert (example)

The most common condition for call divert is, for example:

#### Unanswered



Select **Unanswered**. (Includes the conditions **Not reachable**, **No reply**, **Busy**, see below.)



Confirm.

Set

Select.



Confirm.



Select or enter the phone number to which the calls are to be diverted.

**Mailbox** Use existing mailbox phone numbers, or enter them if necessary.

OK

Confirm. After a short pause, the setting is confirmed by the network.

## All calls



All calls are diverted.



Symbol in the top line of the display in standby mode.

## Not reachable

Divert occurs if phone is switched off or is out of range.

## No reply

A call is only diverted after a delay that is determined by the network. The period can be set to a maximum of 30 seconds in 5-second intervals.

## Busy

Divert occurs if a call is in progress. If **Call waiting** is activated (page 24), you will hear the call waiting tone during a call (page 26).

## Receiving fax



Fax calls are diverted to a number with a fax connection.

## Receiving data



Data calls are diverted to a phone number with a PC connection.

### Additional information

Note that the divert is stored in the network and not in the phone (e.g. when the SIM card is changed).

### Reactivate divert

The last divert has been stored. Proceed as with "Set divert". The stored phone number is displayed. Confirm number.

## Call screening



Only calls from phone numbers that are in the Phonebook/Addressbook or assigned to a group are signalled. Other calls are only displayed.

## Any key answ.

Incoming calls can be accepted by pressing any key (except for ).

## Minute beep

During the call, you will hear a beep after each minute as a reminder of the time elapsed. The person you are talking to does not hear this beep.

## Phone setup



### Key tones

Set the type of acoustic key acknowledgement.

### Info tones

Set service and alarm tones:

**On/off** Activate/deactivate tones.

**Extended** If switched on, a wider range of service tones is available, e.g. end of menu reached, network connection interrupted.

### Auto off

The phone switches off each day at the set time.

#### Activate

**Time** Press.



Enter time  
(24-hour clock).

**OK** Confirm.

#### Deactivate

**Manual** Press.

**OK** Confirm.

## Phone identity

The phone identity number (IMEI) is displayed. This information may be useful for customer service.

### Device check

After the last information page, a self-test as well as individual tests are offered. If you select **Selftest**, all individual test are carried out.

#### Software version

Display the software version for your phone in standby mode:

\* # 0 6 #, then press **More**.

## Memory assis.

The memory assistant will help you if there is insufficient phone memory. If required it can also be started automatically from applications.

After their capacities have been checked, all files and folders are displayed along with their size and may be viewed/opened and, if necessary, deleted.

## File system

### Format

(Phone-code protected)

The telephone memory is formatted and **all** saved data such as ringtones, pictures, games, etc. is deleted.

Formatting may take longer than one minute.

### Clean up

Create more memory by deleting temporary files no longer required.

### Format card

**All** saved data on the RS MultiMedia-Card are deleted.


### Eject card

Allows the RS MultiMediaCard to be removed without loss of data.

## Master reset

The phone is reset to default values (factory setting). This does not affect the SIM card or the network settings.

Alternatively, in standby mode enter:

**\*#9999#** 

## Clock



### Time/date

The clock must be set correctly once, at start-up.

**Change** Press.



First enter the date (day/month/year), then the time (hours/minutes/seconds).

#### Additional information

If the battery is removed for longer than 30 seconds, the clock must be reset.

### Time zones

The time zone can be selected in the world map or a city list:

#### World map



Select the desired time zone.

#### City list



Select a city in the selected time zone.

**Options** Open menu.

<b>Set</b>	Set time zone.
<b>Auto time zone</b>	Have the time zone automatically set by the network.
<b>Search city</b>	Search for a city.
<b>Help</b>	Operating instructions.

### Date format

Select the display format for the date.

### Time format

Select 24h or 12h.

### Buddhist year

Switch to the Buddhist year (not on all phone models).

### Show clock

Activate/deactivate time display in standby mode.

### Auto time

The time zone is identified automatically.



## Connectivity



### GPRS

(General Packet Radio Service)



GPRS is a method for transmitting data faster in the mobile network. Use GPRS and if the network has sufficient capacity, you can be connected to the Internet permanently. The network provider charges only for the volume of data transmitted. Some service providers do not yet support this service.

Shown in the display:

	Activated and available.
	Registered.
	Temporarily interrupted.

### GPRS info

Display the transmitted volume.

 
### IrDA



Your phone has an infrared interface. With this interface, you can exchange data such as pictures, ringtones, Addressbook entries, business cards or organiser data with other devices which also have an infrared interface.

The infrared interface is on the left side of the phone. The distance between the two devices must not exceed 30 cm. The infrared windows in both appliances must be aligned as accurately as possible with each other.

Shown in the display:



If IrDA is activated, standby time for the phone will be reduced.



## Bluetooth® (BT)

Bluetooth is a short-range radio connection by means of which a headset or car kit, for example, can be connected without the need for wires. Using the **Send/print** function in the options menu for the application concerned you can also use this route to send data.

With SAP (SIM Access Profile) a car phone GSM module can, for example, use the access data from the SIM card on your phone. There is no need to swap the SIM card. It is possible that SAP might not be supported by your service provider.

Each Bluetooth device has its own specific address and can be given a self-explanatory name as an option. Password protection ensures the security of a Bluetooth connection, as does including the BT partner in a list as a “confidential” device.

To establish a Bluetooth connection between your phone and other Bluetooth devices you must activate Bluetooth.

The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Siemens are under license. Other trademarks and trade names are those of their respective owners.



Activate/deactivate Bluetooth.

**My BT name:** You can give the phone a name when you activate Bluetooth for the first time.

If Bluetooth is activated, IrDA (infrared) is not active and vice versa.

If Bluetooth is activated, standby time for the phone will be reduced.

### Bluetooth setup



Call up the setting functions (Bluetooth must be activated).

#### • Search/Search all

Specify which BT devices are to be searched for:

All	All BT devices
Audio	E.g. headset, car kit
Phone	Other BT phones
PC	Personal computer with BT connection



Start search

The number and name of the most recently found BT device are displayed.



The search is ended and the first 10 devices found are shown in a list.

**Retry** Start new search.



Scroll to entry required.



Dial the device or start the procedure for acceptance as a “confidential” device (see below).

### Options

Open menu.

<b>Details</b>	Display the name and address of the BT device.
<b>Trusted dev.</b>	Add the device as confidential to the list of known devices. To do this, enter the password for the other device. The device must first be set to a “confidential mode”. If the list is full it is not possible to add another device.
<b>To known list</b>	Add to the list of known devices (see below).
<b>To black list</b>	Add to the black list (see below).
<b>Retry</b>	Start new search.

### • Known devices

To make selection easier, frequent BT partners can be recorded in the known device list. If entries are “confidential”, no password query is made.

### • Last connect.

List of most recently and/or still connected devices.

### • Black list

Attempts to make connections to devices in this list are rejected.

### List options

Each list offers different functions.

**Options** Open menu.

<b>Mark as audio</b>	If not possible automatically, specify device as an “audio” device.
<b>Increase prio.</b>	Move entry up the list so that, for example, a specific audio device is used first.
<b>Decrease prio.</b>	Move entry down the list.
<b>To known list</b>	Move entry to the list of known devices.
<b>To black list</b>	Move entry to the black list.

(For standard functions see page 15)

### • My BT name

The phone is given a name (max. 16 characters) – this is the name the partner sees. If no name is given, the phone uses the non-changeable device address.

### • Visib.to others

Set how your phone should respond to other BT devices. This means (if “visible”) for example that the device address or the BT name of your phone is shown to other BT devices if they request this in order to receive or send data.





- **Not visible**

Your phone is not “visible” to other BT devices. Known devices such as Bluetooth-Headset/Car Kit continue operating.

- **Auto mode**

Your phone is “visible” to other BT devices for several minutes. You will then be asked if “visibility” should continue.

#### Shown in the display

	Bluetooth activated.
	Bluetooth visible to others.
	Bluetooth during data transfer.
	Call to Bluetooth device accepted.

## Data services

Basic setting and activation of the connection profiles for data transmission such as **MMS, WAP**.

The phone default setting varies from service provider to service provider:

- The settings have already been implemented by the provider. You can start immediately.
- Access profiles have already been created by your provider. Then select and activate profile.
- The access profiles must be configured manually.

If necessary, check with your service provider for details. You will also find the current settings for the service provider on the Internet at [www.siemens.com/mobilephonescustomercare](http://www.siemens.com/mobilephonescustomercare) in the FAQ section.

### Select profile



Select the profile.



Confirm selection.

### Set profile



Select the profile.

### Options

Open menu.

### Edit

Open the selection.



Select **CSD settings**, and/or **GPRS settings**.

### Edit

Make the settings as specified by your service provider.

## HTTP profile

The phone default setting varies from service provider to service provider:

- The settings have already been implemented by the provider. You can start immediately.
- Access profiles have already been created by your provider. Then select and activate profile.
- The access profiles must be configured manually.

If necessary, check with your service provider for details. You will also find the current settings for the service provider on the Internet at [www.siemens.com/mobilephonescustomercare](http://www.siemens.com/mobilephonescustomercare) in the FAQ section.



Make the settings.

## Authentication

Activate or deactivate encrypted dial-up (CSD connections only) for Internet access.

## Fax/data

### Fax/data mode using a PC

With the phone and a connected PC, you can transmit and receive faxes and data. Appropriate software for fax and data communication must be available on your PC and there must be a connection to the phone.

Fax and data services must be enabled by the service provider. There are variations in fax and data reception, depending on the network. Please ask your service provider about this.

### Send voice/fax




Set this function on the phone **before** transmission so that you can switch from voice mode to fax mode.

**Rec. voice/fax**

(**Only** if no special fax or data number is available)

Start the required communication program on your PC and activate the function on the phone **during** the call (the PC will take over the connection).

**End transmission**

End transmission with PC software and/or press .

**Rec. fax/data**

Your service provider has given you a number for telephoning and a fax/data number.

The call is signalled by a special ring-tone and the type of call (fax or data) is displayed. Now start the communication program on your PC to receive the fax/data.

## Security



### Auto key lock

The keypad is locked automatically if no key has been pressed for one minute in standby mode. This prevents the phone from being used accidentally. However, you can still be called and you can still make an emergency call.

#### Additional information

The keypad can also be directly locked and unlocked in standby mode.

In each case:

 Press and hold.

### Direct call

(Phone-code protected)

Only **one** phone number can be dialled (see also page 27).

### Only



(PIN2 or phone-code protected)

Dialling options are restricted to SIM-protected phone numbers in the Phonebook. If only area codes are entered, relevant phone numbers can be added to these manually before dialling.

If the SIM card does not support PIN2 input, the **whole** Phonebook can be protected with the phone code.

### PIN codes

For description, see page 17:

**PIN control, Change PIN, Change PIN2, Chg.phonecode**

### This SIM only



(Phone-code protected)

The phone can be connected to a SIM card once the phone code is entered. Unless the phone code is known the phone will not operate with a **different** SIM card.

If the phone is to be used with a different SIM card, enter the phone code when requested.

## Barrings



Barring restricts the use of your SIM card (not supported by all service providers). You need a 4-digit network password for network barring. Your service provider will give you this password. You may need to be registered separately for each barring.

### Outgo. access

All outgoing calls except emergency numbers are barred.

### Outgoing intl.

(International outgoing)

Only national calls can be made.

### Out.int.x.home

(International outgoing without home country)

International calls are not permitted. However you can make calls to your home country when abroad.

### All incoming

The phone is barred for all incoming calls (forwarding all calls to mailbox provides a similar effect).

## When roaming

You do not receive calls when you are outside your home network. This means that no charges are incurred for incoming calls.

### Status check

The following information can be displayed after a status check:



Barring set.



Barring not set.



Status unknown  
(e. g. new SIM card).

### Clear all

All barrings are deleted. A password which the service provider will give you is necessary for this function.

## Network



### Line



This function is only displayed if it is supported by the service provider.

**Two separate** phone numbers must be registered on the phone.

#### Select line

Select the currently used phone number.



Display current phone number.

### Protected

(Phone-code protected)

You may limit usage to one phone number.

#### Additional information

Special settings may be made for each phone number (e.g., melody, call divert etc.) To do this, first switch to the required phone number.

Switch from phone number/connection in standby mode:



Press.



Press.

## Network info

The list of GSM networks currently available is displayed.



Indicates non-authorized service providers (depending on SIM card).

## Choose network

Network search is restarted. This is useful if you are **not** on your home network or want to register on a **different** network. The network list is rebuilt when **Auto network** is set.

## Auto network

Activate/deactivate, see also **Choose network** above. If “Automatic network” is activated, the next network on the list is dialled in ranking order of your “preferred networks”. Otherwise a different network can be selected manually from the list of the available GSM networks.

## Pref. network

Enter your preferred service providers here for when you leave your home network (e.g. if there are differences in price).



Your service provider is displayed:

**List** Display list of preferred networks.

Create/change entry:

<Empty> or select an existing entry, then select a new service provider in the list and confirm.

Record new service provider (last entry in the list):

### Furth.network

Select, enter the provider data and save it.

#### Additional information

If you are outside your home network, your phone automatically dials another GSM network.

If the signal strength of the preferred network is inadequate when you switch on the phone, the phone may register in a different network. This can change when the telephone is next switched on or if another network is selected manually.

### Band selection



Select either GSM 900, GSM 1800 or GSM 1900.

### Fast search

When this function is active, network reconnection is speeded up (standby time is reduced).

### User group



Depending on the service provider, you can create groups with this service. These can have access to internal (company) information, for example, or special rates apply. Please check with your service provider for details.

#### Active

Activate/deactivate function. "User group" must be deactivated for normal phone use.

#### Select group

You can select or add groups other than preferred groups (see below). Code numbers for the groups are obtained from your service provider.

#### Outgo. access

In addition to network control for a user group, it is possible to set whether outgoing calls outside the group are permitted. If the function is deactivated, only calls within the group are permitted.

#### Pref. group

If activated, calls may only be made within this standard user group (depending on the network configuration).

## Accessories



→ Accessories  
→ Select function.

### Car Kit

Only in combination with an original Siemens handsfree car kit (see page 133). The car kit profile is activated automatically when the phone is inserted into the cradle.

#### Auto answer

(factory default: off)

Calls are accepted automatically after a few seconds. Eavesdropping is possible!



Shown on the display.

#### Automatic switch off

(factory default: 2 hours)

The phone is powered by the car's power supply. You can adjust the time between switching off the ignition and the time at which the phone switches off automatically.

#### Car loudspk.

Improves playback in certain circumstances.

### Automatic settings

- Permanent illumination: switched on.
- Key lock: switched off.
- Charging the phone battery.
- Auto. activation of the car kit profile when phone is inserted in the cradle.

### Headset

Only in conjunction with an original Siemens headset (see page 132). If an original Siemens headset is used the profile is automatically activated when the headset is plugged in.

#### Auto answer

(factory default: off)

Calls are accepted automatically after a few seconds (except where the ringer is switched off or set to beep). You should therefore be wearing the headset.

#### Automatic setting

Accept call with Call key or PaT key (Push To Talk), even when the auto key lock is activated.

#### Auto answer

If you do not notice that your phone has accepted a call, there is the danger that the caller may eavesdrop.

# My menu



Press.

**My menu** Press.

Create your own menu with frequently used functions, phone numbers or Internet pages.

The list of 10 entries is preset. You can, however, change it as you wish.

## Use



Select the required entry.



Confirm.

### Or



If the entry selected is a phone number, you can also dial it with the Call key.

## Change menu

You can replace each entry (1–10) with another entry from the selection list.



Select the required entry.

**Change**

The function list is opened for selection.



Select the **new** entry from the list.



Confirm. The entry is saved.

If **Phonebook** is selected, the phone number must also be selected; if **Internet** is selected, the bookmark must also be selected.

## Reset all

(Phone code required)

**Reset all** Select. After a security prompt, the pre-assignment is reset.



# Fast access

You can assign one important phone number or function to each of the two softkeys and number keys 2 to 9 (speed-dial numbers). The phone number can then be dialled or the function can be started at the touch of a button.



## Additional information

The service provider may have already assigned functions to a softkey (e.g. access to "SIM services" or direct call-up of the Internet portal). It may not be possible to modify this key assignment.

The left softkey may sometimes be replaced automatically by  /  to access a new message for example.

## Softkeys

### Change

For example, the **Internet** function is assigned to the softkey. To change this (in standby mode):

- Internet** Press **briefly**.
- Change** Scroll to new assignment in the list.



Confirm.

- Special case **Phone number**. Choose a name from the Phonebook/ Addressbook for assignment to the key.
- Special case **Bookmark**. Scroll to a URL in the bookmark list for assignment to the key.

### Apply

In standby mode:

#### Application

The "Internet" is just used as an example here.

- Internet** Press and **hold**; the application is started.

#### Phone number

The assignment "Carola" is used here only as an example.

- Carola** Press and **hold**. The phone number is dialled.

## Speed dialling keys

Number keys 2 to 9 can be used as speed dialling numbers for fast access. Number key 1 is reserved for the mailbox phone number (page 61) and number key 0 is reserved for switching between two connections during use (page 95).

### Change

In standby mode:



Press number key **briefly** (e.g. the 3).

If this number is still free:

**Set**

Press.

Select a new function from the list and confirm with **OK**.

**Or**

If an assignment has already been made to this key (assignment displayed above the right softkey): e.g. **Games**.

**Games**

Press **briefly**.

**Change**

Scroll to application in the list.



Confirm.

- Special case **Phone number**. Choose a name from the Phonebook/ Addressbook for assignment to the key.
- Special case **Bookmark**. Scroll to a URL in the bookmark list for assignment to the key.

### Apply

Select a stored phone number or start a stored application (e.g. **Calendar**).

In standby mode:



Press **briefly**.

The assignment of the number key 3 is displayed above the right softkey e.g.:

**Calendar**

Press and **hold**.

**Or simply**



Press and **hold**.

# Organiser

## Calendar



You can enter appointments in the calendar. Time and date must be set for the calendar to work correctly.


The calendar offers you three views:


### Monthly view

Special colour coding:

Day with entries for appointments, day-long appointments, weekends.

Navigation:

 One day forward/back.

 One week forward/back.


 Daily view open.


### Weekly view

Special displays:

Appointments are shown as a horizontal colour bar on the vertical hour division.

Navigation:

 One day forward/back.

 Forward/backward by the hour through the day.


## Daily view

Special displays:

Description of appointment.

Navigation:

 One day forward/back.

 To the start/end of the day or next/last entry.

## Calendar setup



**Start of day:**

Time when the working day begins.

**Start of week:**

Weekday on which the monthly and weekly view on the left starts.

**Set weekend**

Set the days for the weekend.

**Show birthdays:**

Shown in the display.

### Synchronising with a PC

With the mobile phone manager (page 123) you can synchronise appointments, tasks and memos with Outlook® or Lotus Notes™.

# Appointments



→ Appointments

Appointments are displayed in chronological order in a list.

## Enter new appointment

<New entry>

Select.

### Category:



**Memo**

Text input for description.



**Voice memo**

Enter voice memo.  
Shown with alarm.



**Call**

Enter phone number to be displayed with the alarm.



**Meeting**

Text input for description.



**Holiday**

Enter start and end date.



**Birthday**

Enter name and date.

Different input/selection fields are displayed depending on the type. The number of fields can be restricted, see **Standard**, page 103.

### Description:

Description of nature of appointment.

### Phone number:

Enter a phone number or select one from the Addressbook.

### Voice memo:

Enter a voice recording, see **Dictat.machine**, page 105.

### Location:

Location of appointment.

### Whole day:

All-day appointment: Yes/No

### Start date:

Date when appointment starts.

### Start time:

Time when appointment starts.

### End date:

Date when appointment ends.

### End time:

Time when appointment ends.

**Alarm:**

On/off or Silent alert.



Enter the period of time **before** the appointment and select the time unit:

Minutes, Hours, Days

**Reoccurrence:**

Select a timeframe for repeating the appointment:

No, Daily, Weekly, Monthly, Yearly

Enter a parameter for repeating:

Forever, Until, Occurrences (number)

If **Weekly** is selected, certain weekdays can be highlighted.

**All fields/Reduced fields**

In the list, select those fields which are to be offered for future entries.

**Additional information**

Display above set alarms:



Alarm clock



Appointment

An alarm sounds even when the phone is switched off (except in aircraft mode, page 76). The phone does not go to standby mode. Press any button to switch the alarm off.

**Information on the alarm**

When the set date and time are reached there is an audio and a visual alarm. If an alarm is missed it appears in the list of missed appointments (page 104).

Alarm type **Memo**:

**Meeting**: The text is shown in the display.

Alarm type **Call**: The phone number is displayed and can be dialled immediately.

Alarm type **Birthday**: You can send special birthday greetings by SMS, MMS, e-mail or a call via **Options**.

Use **Snooze** to set the alarm to repeat.

**Tasks**

→ Tasks

A task is displayed like an appointment in the agenda of the selected day. However, unlike an appointment it does not require a time. When no time is entered the task appears at the top of the list every day until it is marked as completed.

The entries are made in the same way as **Appointments** (see "Appointments"). Then:



**Status:**

Select **Done** or **Outstanding**.

**Priority:**

Select 5 levels from **Lowest** to **Highest**.

**Date in use:**

If activated with **Yes**, the following time input option is offered.

**Due date:/Due time:**

Enter the date and time by which the task is to be completed.

**Alarm:** As for **Appointments**.

## Notes



Write and manage brief text notes.

### Enter a new note

<New entry>

Select.



Enter text. The first line is displayed as a “title” in the notes list. Total length: max. 160 characters.

**Options**

Open menu.

**Save**

Save note. When **Confidential** is selected, a note is protected with the phone code.

## Missed appts.



Events with an alarm (**Appointments**, **Tasks**) to which you have not reacted are listed for reading.

## Organiser options

Depending on the application used (**Calendar**, **Appointments**, **Tasks**, **Notes**) and the current situation, different functions are offered.

**Options** Open menu.

<b>Delete</b>	Delete entry.
<b>Delete until</b>	Delete all entries prior to a certain date.
<b>Delete all</b>	Delete all entries after confirmation.
<b>Delete done</b>	Delete all completed tasks.
<b>Activate/Deactivate</b>	Switch alarm on/off.
<b>Filter</b>	Display all entries with the selected feature.
<b>Confidential</b>	Protect note with phone code. We recommend that you do not store any passwords (PIN, TAN etc.) as notes.
(For standard functions see page 15)	

## Dictat.machine



Use the dictating machine to record short voice memos.

- Use your phone as a dictating machine when on the move.
- Record a memo as a reminder or as a note for others.
- Add a voice memo to an appointment in the calendar.

## New recording

<Record new>

Select.

The remaining time available, as well as the recording time, are shown in the display.



A brief beep sounds when the recording starts. Now dictate the text.



Switch between pause/record.



End recording.

The recording is automatically saved with a time stamp.

Rename with **Options**.

## Playback



Select the desired recording.



Switch between playback/pause.



Press and **hold** for rapid rewind and fast forward.

## Dictating machine options

### Options

Open menu.

### Handsfree

Playback through the built-in loudspeaker.

(For standard functions see page 15)

## Time zones



The time zone can be selected in the world map or a city list:

### World map



Select the desired time zone.

### City list



Select a city in the selected time zone.

## Time zone options

**Options** Open menu.

Set	Specify the time zone.
Auto time zone	The time zone is switched automatically to local time by the network.
Search city	Search for a city.
Help	Operating instructions.

# Extras

## SIM services (optional)



Your service provider may offer special applications such as mobile banking, share prices, etc. via the SIM card.

If you have such a SIM card, the SIM services will appear in the main menu under “Extras” or directly above the softkey (on the left).



Symbol for SIM services.

Where there are several applications, these are displayed in a SIM services menu. With the SIM services menu, your phone can support future additions to your service provider's user package. For further information, please contact your service provider.

## Music player



With the Music Player, you can play music files, e.g. in AAC format, and group together several tracks as a playlist. Music files and playlists are stored by default in **My stuff/Sounds**.

Music files can, for example, be downloaded from the Internet or transferred to the telephone via a PC connection (page 13).

### Playing music

You can play music by

- Starting the **Music player** and selecting a track or a playlist.
- Selecting a music file directly from **My stuff** and opening it.



Press and hold to lock/unlock keypad, when a music file is playing.

### Displays

Music Player entries appear in the following order:

Folder – Playlists – Music files

## New playlist

<New Playlist>

Select.



Enter a name for the playlist.



Select the required track.

Repeat the process until the playlist is complete.

## Music Player options

**Options** Open menu.

Different functions are offered depending on the situation.

Shuffle	Random playback of tracks in the current directory.
Repeat	Repeat tracks in a playlist.
New playlist	Create a new playlist.
Add to playlist	Add a track to the playlist.
Attributes	Display information about a track or a playlist.
(For standard functions see page 15)	

## Push to talk



This application can be used to simultaneously connect multiple subscribers. Like a normal Walkie-Talkie, only one subscriber can speak at a time. The others can only listen until the speaker allows others to talk.

A recipient is selected using their push to talk address (ptt ID) or their phone number. Groups created in advance (page 111) can be invited to a session. Your service provider will supply you with your own ptt address.

The recipient can also use a mobile phone, as well as a PC with an Internet connection and headset (depending on service provider).

To use the application, GPRS (page 87) must be switched on and **Push to talk** (page 113) activated.

## Preparing a session

### From the Addressbook



Open Addressbook (in standby mode).



Select an entry with a push to talk ID (**Com. services**).



The session with the selected subscriber is started. For details of how to invite additional subscribers, see page 110.

## From standby mode

 →  → Push to talk


<New session>

Select.

The possible functions as well as already added subscribers are displayed.

You have several options to combine the subscribers:


<Add from  >

 Search and mark recipient in Addressbook.

 Add recipient.

Or

<Add f. sess.>

 Select a subscriber from an earlier session.

Or

<Enter ptt ID>

 Enter ptt ID of a recipient.


 Add entries.

Or

<Add from grp>

 Select group.


 Open.

 Select and mark recipient.

 Add recipient.


## Starting a session


If all the desired subscribers are combined, start the session:

 The subscribers are displayed, and the authorised speaker is shown in bold.


## Speaking rights

The list of subscribers is displayed. The current authorised speaker is shown in bold.

 Request speaking rights. The delegation of speaking rights is displayed and then the requester can talk.

 Returning speaking rights.

### Additional information

Depending on the setting for **Hold mode** (page 113)  must be pressed and held as long as one speaks.

If the person with speaking rights takes a long pause, the speaking rights are automatically released again.

## Inviting additional subscribers

You can invite additional subscribers during a session.

**Options** Open menu, select **Invite** and mark new subscribers.

## You are being invited

The invitation is shown in a window. You can accept/refuse this invitation.



Accept the invitation.

The list of subscribers is displayed.

## Leaving the session and ending

Only if you yourself started the session.

**Options** Open menu.

### Quit session

Select. You will leave **and** end the current session.

## Letting the session run in the background

The current session remains open in the background and you can listen to the calls. A phone call ends the session.



Press and **hold**.

Request speaking rights:



Press.

View the session again:



→  → Push to talk  
→ Sessions

## Push to talk options

**Options** Open menu.

Different functions are offered depending on the situation.

History view	Display of subscribers in order of speaking.
Session view	Display of subscribers for the current session.
Quit session	End session.
Session details	Start time, Status, Duration, Type etc.
User details	Display subscriber properties (see also <b>My presence</b> , page 112).
Add to 	Save ptt ID in Address-book.
Invite user	Invite a subscriber to a session.
Add to group	Add subscriber to the group.
Clear	Delete the list except for the last entry.
Handsfree	Switch on handsfree talking (loudspeaker).
Request pres.	Request information about the readiness to receive for a subscriber.
Volume	Set volume.  is also possible.

(For standard functions see page 15)

## Sessions



Display subscriber list for the current session. The authorised speaker is shown in bold.

## Records



Select the list of received and made ptt calls as well as the option to delete all lists.

You can mark subscribers for one session in the list.



Start session.

The function **Create as group** in **Options** can be used to combine entries in the list into a new group.

## Groups



Only **your** groups are displayed and can be edited.

### Setting up a new group

<New entry>

Select.



Fill in input fields:

**Push to talk ID:**

Subscriber ID.

**Name:** Group name.

**Type** Instant or Chat.

**Max. users:**

Maximum number of group members ("0" means "no limit").

**Membership:**

Set if membership in this group is open to everyone (**Open**) or if the subscriber is limited to the member list (**Restricted**).

**Memberlist**

Add member to the group.

**Rejectlist** List of subscribers which may not become members of this group.

**Save**

Save group.



**<Rejectlist>**

List of subscribers with whom a session is not desired. Invitations from this list are always refused automatically.

**<Acceptlist>**

List of subscribers whose invitation is automatically accepted (see also **Auto answer**, page 112).

**Starting a session (group conversation)**

Select group.



Start session.

**Viewing group properties**

Select group.



View properties.

**Options**

Open menu.

Add to	Copy group ID to the Addressbook.
Edit	Edit (your own) group.
Copy ID to clip	Save group ID (ptt ID) in the clipboard.
Memberlist	Display the member list.
Rejectlist	Display the refused subscribers.

**My presence**

→ → Push to talk  
→ Presence → My presence

The following properties (yours) can be set:

**Interruption**

Allow, forbid interruption

**Mood**

Display your mood.

**Notes**

Note.

**Settings**

→ → Push to talk  
→ Settings

Some settings must be made by the user or can be copied from your service provider.



Select and confirm the function, area.

**Dwnl. settings**

Download settings from the server of the service provider.

**Ptt online**

Log in/out, status information for login.

**Block ptt calls**

Allow/block push to talk calls.


**Auto answer**

Automatically accept invitations because of the **Acceptlist** (page 112).

**Use Acc.& Rej.**

Activate/deactivate the use of **Acceptlist/Rejectlist** (page 112/ page 112).

## Push to talk

- **Ptt enabled**  
Activate/deactivate push to talk.
- **History length:**  
Number of entries in the list.
- **Timeout(min.):**  
Push to talk is put in the background if not used after an adjustable amount of time.
- **Hold mode**  
Depending on the setting,  must be pressed and held to speak.
- **Default view**  
**Session view** or **History view**.
- **Request pres.**  
The saved properties are displayed.

## Server

Settings for the server. Please check with your service provider.

## Advanced

Further settings. Please check with your service provider.

## Alarm clock



The alarm will ring at the time set by you, even when the phone is switched off.



Press to set.



Activate/deactivate the alarm.



Switch to time setting.



Set alarm call time (hh:mm).



Switch to week days.



Navigate to the various days.



Display options: alarm call time and days.





Set days for alarm calls. Press again to delete the highlighting.

Press and **hold** to highlight/unhighlight all the days.

**OK**

Confirm setting.

#### Additional information



Screen display in standby mode: alarm clock activated.

Use **Snooze** to set the alarm to repeat.

## Sound recorder

Use the sound recorder to record noises and sounds for use as ringtones. The sound recorder is usually started from other applications/functions such as assigning a ringtone.

### New recording

#### Start from main menu



→ Sound recorder

or also start from another application:

<Record new>

Select.

The remaining time available, as well as the recording time, are shown in the display.



A brief beep sounds when the recording starts.



Switch between pause/record.



End recording.

The recording is saved with a timestamp in the **Sounds** folder.

Rename with **Options**.

If starting from another application, e.g. create MMS:

**Insert**

Transfer the recording into the application.

### Playback



Select the desired recording.



Switch between playback/pause.



Press and **hold** for rapid rewind and fast forward.

**Options**

Open menu.

**Handsfree**

Playback through the built-in loudspeaker.

**Set as...**

Set the recording as a ringtone.

(For standard functions see page 15)

## Calculator



The calculator can be used in a basic version and with an advanced range of functions. The input line and two calculation lines (including the matrix with the calculation functions) are located in the top half of the display.



Enter digit(s).



Navigate functions.



Use function.



Enter digit(s).



Use function. The result is calculated and displayed immediately.

### Basic functions

$+$ ,  $-$ ,  $*$ ,  $/$  Basic calculation types

$=$  Result

$1/x$  Reversion

$\%$  Convert to percentage

$.$  Decimal point.

$\pm$  Sign change “+”/“-”

**Options** **Expansion of the range of functions:**

$\sqrt{x}$  Square root

$x^2$  Square

$e$  Exponent

**MS** Save displayed number

**MR** Call up saved number

**M+** Insert number from memory

## Calculator options

**Options** Open menu.

**Convert** Call up the unit converter with the current result.

**Clear all** Delete all units.

**Extended mode/Basic mode** Convert calculation functions.

**Memory save, Memory recall, Memory clear** Save or recall result; delete memory.

(For standard functions see page 15)

## Unit converter



→ Unit converter

You can convert various measurement units into other measurement units.

The following types are offered with various units:

Velocity	Energy
Mass	Pressure
Time	Volume
Area	Length
Power	Temperature
Currency	

Example for Velocity units:

Type	Units
Velocity	Kilometres/h, Metres/sec, Miles/h, Miles/sec, Knots, Mach

### Converting the units/currency



Select the source unit/currency.



Switch to the input field.



Enter the quantity to be converted.



Switch to the selection field.



Select the target measurement unit/currency. The result is displayed.

You can use both input fields alternately.



Opens the calculator with the current converted value.

Special key functions:



Set decimal point.



Change sign.

## Currency

When you call up the function, you must enter a base currency into which the conversions are to be made.



Enter currency (e.g. euro).



Store entry.

Now enter the name and exchange rate of the currency to be converted.



Open menu.

**Add currency** Enter new currency and exchange rate.

**Set as base** Use entered currency as base currency.

**Edit rate** Change the exchange rate of the base currency.

**Calc.** Start calculator.

(For standard functions see page 15)


## Stopwatch



Two intermediate times can be recorded and saved.

Display, also in standby mode.

**Start / Stop**

 Save intermediate time.

After a stop:

**Reset** Reset to zero.

### Stopwatch options

**Options** Open menu.

**Stopwatch list** Display saved entries.

(For standard functions see page 15)


## Countdown





A set time elapses. The last 3 seconds are indicated by a beep. At the end a special beep sounds.


Display, also in standby mode.

If **no time** has been entered:


 Open input window.

 Set period of time.


 Confirm.


 Start countdown.

If a **countdown** time is specified:

 Start countdown.

While the time is elapsing:

 Interrupt counter.

 Let counter continue running.

**Reset** Reset counter to starting time.

**Edit** Enter new period of time and confirm with **OK**.

## Remote synchronisation



You can use this function remotely to access externally filed data (addresses, calendar, etc.) and synchronise these with the data on your phone. The data can, for example, be saved on a company computer or the Internet e.g.:

[www.siemens-mobile.com/syncml](http://www.siemens-mobile.com/syncml)

### Synchronise

**Sync** The computer is selected and synchronisation started. When completed, the actions which have been performed are displayed.

**Next** Scroll through the various displays.

### Sync. setting

The following settings can be made prior to synchronisation:

#### Active profile

You can choose between 5 profiles.

 Select profile.

 Activate profile.

**Or**

**Edit** Set profile.

#### Server sett.

**Providers** Display the current service provider.

**Homepage:** e.g. [www.siemens-mobile.com/syncml](http://www.siemens-mobile.com/syncml)

**Port:** Enter port number e.g. 80.

**User name:** Enter user name (login name).

**Password:** Enter password (shown as a series of asterisks).

**Calendar path:, Contacts path:, Notes path:, Tasks path:**

**HTTP authentication:** Confirmation required; Yes/No (if No, the input fields are not visible).

**HTTP name:** Enter name.

**HTTP password:** Enter password.

#### Last sync:

Time of the last synchronisation.

#### Sync. mode

- Sync data: Modified data or All data
- Sync direction: Two-way, Mobile update or Server update

#### Sync items:

Highlight database areas to be synchronised:

**Calendar, Contacts, Notes, Tasks**

 Save settings.

## Device manag.



If you were informed about software updates by a push message, you can establish a connection to the provider's server using the Device manager, so you can download them.

When downloading is finished, you will be asked to switch the phone off and on again. Afterwards, the software of your phone will be updated. Please follow the instructions in the display.

The phone default setting varies from service provider to service provider:

- The settings have already been implemented by the provider. You can start immediately.
- Access profiles have already been created by your provider. Then select and activate profile.
- The access profiles must be configured manually. If necessary, check with your service provider for details. You will find the current settings for the service provider on the Internet at [www.siemens.com/mobilephonescustomercare](http://www.siemens.com/mobilephonescustomercare) under "FAQ".

## Active profile

A standard profile for downloading the current software of the operating system is displayed.

**Sync** Establish a connection to the active profile.

Or

**Edit** Call up profile list.



Select profile.



Activate profile.

Or

**Edit** Set profile.

## Last connect.

Display last connection.



# Media player


The Media Player is started by the application if you play a media file that has been received by SMS/MMS or downloaded from the Internet.


 Press **briefly** to scroll to the next media file.


 Switch on display illumination.


## Pictures


The following functions can be applied to a displayed picture:

 Zoom function if the displayed picture has a higher resolution than the display.

 The joystick moves the picture detail.


 Centre the picture.


 Switch to full screen mode and back again.

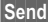 Send via MMS or e-mail, for example.


## Melodies/playlists/video


The media playback offers the following functions for music, playlist and video playback:

 Play or stop, depending on the situation.


 Set volume.

 Switch to mute.

 Pause function.

 End playback.

## Options

 Open menu.

Different functions are offered depending on the starting situation and the object.

<b>Volume</b>	Set the volume with the joystick.
<b>Set as...</b>	Set picture as <b>Wallpaper, Logo</b> , for example, and sounds, for example, for <b>Incoming call, Startup melody</b> .
<b>Slideshow</b>	Automatic run-through in full screen mode. Change individual picture with joystick.
<b>Edit</b>	Access to picture editing.
(For standard functions see page 15)	

# My stuff

To organise your files, you can use the file system like a PC file manager. There are separate folders for the various data types in **My stuff**. If, for example, you want to download new pictures or sounds, the download function is contained in the relevant folder.

Remember that pictures and sounds may be protected (DRM, page 13).



The list of the folders and files is displayed. The first entry in **My stuff** is always the RS MultiMediaCard (page 122).

## Navigation



Select file/folder in lists.



The cursor can be moved as required in the preview.



Open folder and start download or start file with the related application.

# My stuff options

**Options** Open menu.

<b>Move</b>	Place highlighted file(s) or folder in temporary memory.
<b>Copy</b>	Place highlighted file(s) or folder in temporary memory.
<b>Paste</b>	Transfer content of temporary memory into current folder.
<b>New folder</b>	Create a new folder and name it.
<b>Thumbn. view/ List view</b>	Switch over to miniature view/view of list.
<b>Attributes</b>	Display information on file or folder selected.
<b>Format card</b>	Format inserted RS MultiMediaCard.
<b>Eject card</b>	Allows the RS MultiMediaCard to be removed without loss of data.

(For standard functions see page 15)

## Directory structure

Separate folders have already been created for different data types in **My stuff**. These folders cannot be changed.

Folder	Description	Format
MultiMedia-Card	Access to the card	
Pictures	Pictures	bmp bmx jpg/jpeg png gif
Videos	Videos	3gp
Animations	Start up/shut down animations	bmx gif
Sounds	Melodies, music	mp3 m3u aac(+) mid amr wav
Themes	Loaded theme (zipped)	sdt
	Theme configuration (unzipped)	stc
Colour skins	Colour skins for the user interface	scs
Games	Java archive	jar
	Download info	jad
Applica-tions	Applications	*
Misc.	Text modules	tmo
	Voice recordings	vmo

Depending on the service provider, the structure, content and range of functions in **My stuff** may vary.

## RS MultiMediaCard

The RS MultiMediaCard gives your phone a very large memory capacity. This allows you to save picture/video files, and sound recordings, for example. However, you can also use this memory card like a floppy disk to save any other files you may wish to save.



The list of the folders and files is displayed. The first entry is always **My stuff**.

The folders and files on the memory card are managed in the same way as in **My stuff**. If the memory card assigns a file to a function in the phone such as a ringtone, this is copied to **My stuff**.

### Additional information

**RS MultiMediaCard** is a trademark of the MultiMediaCard Association.

### Changing the RS MultiMediaCard (page 10)

#### New RS MultiMediaCard™

1. Create a backup copy on a PC of the data on the old memory card.
2. Format the new memory card.
3. Copy the data from the PC onto the new memory card.

# Mobile Phone Manager

The Windows® PC program, Mobile Phone Manager, enables you to use extended phone functions from your PC. For example, you can update your Addressbook in the phone, read, save and send SMS and MMS messages, or synchronise your phone with Outlook® or Lotus Notes™. The phone and PC communicate via a data cable (See Accessories, page 132).



You can download the software from the Internet:

[www.siemens.com/m75](http://www.siemens.com/m75)

## Contacts management



You can use contacts management to manage the personal contacts you have stored in your phone, to add new ones and to delete and edit them. You can compare and copy contacts between your phone, Outlook®, Lotus Notes™ and other Siemens phones (including Gigaset).

## SMS and MMS management (messages)



Write MMS and SMS messages from the convenience of your PC. Use all the options your PC offers you and use your sounds and pictures to create MMS and EMS messages. You can read, forward, print, delete and archive your messages.

## Backup and restore



With the back-up function, you can regularly make a back-up copy of your telephone data on the PC. If you ever lose the data on your phone or replace the phone, you can quickly re-instate all data with the restore function. Please observe any possible restrictions for DRM-protected data (page 13).

## Bookmark management (browser & bookmarks)



Use your PC to browse through the Internet and define your preferred sites. Save the Internet addresses as bookmarks on your phone so that you can quickly call them up at a later time when you are on the move.

## Phone explorer



You can use the phone explorer to read your phone's file system. Files such as pictures, sounds and much more can easily be copied between the phone and PC by dragging and dropping.

## GPRS modem



The GPRS modem establishes an Internet connection via your mobile phone so that you can surf the Internet on your laptop while on the move and at the touch of a button.

## Processing pictures and photos (images)



Picture/photo processing offers the user the opportunity to conveniently create, edit and manage pictures and photos. Filters and effects are offered to help create colourful, attractive graphics. The user-friendly interface makes child's play of transferring pictures/photos from or to the mobile phone, and of changing the graphic settings.

## Ringtone management (sound)




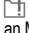


The sound module allows the user to manage nearly all sound formats easily and to save them on the phone.

# Questions & Answers

If you have any questions on the use of your phone, you can contact us at [www.siemens.com/mobilephonescustomercare](http://www.siemens.com/mobilephonescustomercare) around the clock. As further help we have listed below some frequently asked questions and answers.

Problem	Possible causes	Possible solution
Phone cannot be switched on.	On/Off key not pressed long enough.	Press On/Off key for at least 2 seconds.
	Flat battery.	Charge battery. Check charging indicator in the display.
	Battery contacts dirty.	Clean contacts.
	See also below under "Charging error".	
Standby time is too short.	Frequent use of organiser and games.	Restrict use if applicable.
	Fast search activated.	Deactivate speed search (page 96).
	Display illumination switched on.	Switch off display illumination (page 79).
	Unintentional keystrokes (illumination!).	Activate key lock (page 93).
Charging error (charge icon not displayed).	Battery totally discharged.	1) Plug in charger cable, battery is on charge. 2) Charge icon appears after approx. 2 hours. 3) Charge battery.
	Temperature out of range: +5 °C to +40 °C.	Make sure the ambient temperature is right, wait for a while, then recharge.
	Contact problem	Check power supply and connection to the phone. Check battery contacts and telephone connection socket, clean them if necessary, then insert battery again.
	No mains voltage.	Use different mains power socket, check mains voltage.
	Wrong charger.	Only use original Siemens accessories.
	Battery faulty.	Replace battery.
SIM error.	SIM card not inserted correctly.	Check that the SIM card is inserted correctly (page 9).
	Dirty SIM card contacts.	Clean SIM card with a dry cloth.
	SIM card with wrong voltage.	Use 1.8 or 3 V SIM cards only.
	SIM card damaged (e.g. broken).	Carry out a visual check. Have service provider change the SIM card.

Problem	Possible causes	Possible solution
No network connection.	Weak signal. Outside GSM range. Invalid SIM card. New network not authorised.	Move higher, to a window or an open space. Check service provider's coverage area. Complain to the service provider. Try manual selection or select a different network (page 95).
Phone loses network.	Network call barring is set. Network overloaded.	Check network barrings (page 94). Try again later.
Calls not possible.	Signal too weak.	Reconnection to another service provider is automatic (page 95). Switching phone off and on again can speed this up.
Some calls not possible.	Second line set. New SIM card inserted. Charge limit reached. Credit used up.	Set first line  (page 96). Check for new barrings. Reset limit with PIN2 (page 39). Load credit.
Impossible to make entries in Phonebook/Addressbook.	Call restrictions are in place.	Barrings can be set by service provider. Check barrings (page 94).
Voice message not functioning.	Phonebook/Addressbook is full.	Delete entries in the Addressbook/Phonebook (see standard functions, page 15).
 flashes to indicate an SMS.	Call divert to mailbox not set.	Set call divert to mailbox (page 61).
 flashes to indicate an MMS.	SMS memory full.	Delete SMS messages (see standard functions, page 15) or archive them (page 46).
 flashes to indicate an MMS.	MMS memory full.	Delete MMS messages (see standard functions, page 15).
Function cannot be set.	Phone memory full.	Delete messages, pictures, videos, games or applications.
Capacity problems with, for example, Games & More, ringtones, pictures, videos, SMS archive.	Not supported by service provider or registration required.	Contact your service provider.
No Internet access; downloading not possible.	Phone memory full.	Delete files in the relevant areas. You can use the memory assistant to delete specific files (page 84).
	Profile not activated, profile settings wrong/incomplete.	Activate or set browser profile (page 71). If necessary ask your service provider.

Problem	Possible causes	Possible solution
Text message cannot be sent.	Service provider does not support this service.	Contact your service provider.
	Phone number for service centre not set or incorrectly set.	Set service centre (page 48).
	SIM card contract does not support this service.	Contact your service provider.
	Service centre overloaded.	Repeat message.
	Recipient does not have a compatible phone.	Check.
EMS pictures are not displayed on the destination phone.	Destination phone does not support the EMS standard.	
No Internet access possible.	Incorrect browser profile set, or wrong or incomplete settings.	Check browser settings (page 71), or contact your service provider.
PIN error/ PIN2 error.	Three wrong entries.	Enter the PUK (MASTER PIN) supplied with the SIM card according to the instructions. If you have lost the PUK (MASTER PIN), contact your service provider.
Phone code error.	Three wrong entries.	Contact Siemens Service (page 128).
Service provider code error.	No authorisation for this service.	Contact your service provider.
Too few/too many menu entries.	Functions may have been added or deleted by the service provider via the SIM card.	Check with your service provider.
No fax possible.	Wrong settings in the PC.	Check settings (page 91).
	No authorisation for this service.	Contact your service provider.
Charge meter does not work.	Charge pulse is not being transmitted.	Contact your service provider.
Damage		
Severe shock.	Remove battery and SIM and re-insert them. Do not dismantle the phone!	
Phone became wet.	Remove battery and SIM. Dry immediately with a cloth, but do not apply heat. Dry connector contacts thoroughly. Stand mobile upright in an air current. Do not dismantle the phone!	

Reset all settings to factory default, page 85: \* # 9 9 9 9 # 



# Customer Care

We offer fast, individual advice! You have several options:

Our online support on the Internet:

**www.siemens.com/  
mobilephonescustomer-care**

We can be reached any time, any place. You are given 24 hour support on all aspects of our products. Here you will find an interactive fault-finding system, a compilation of the most frequently asked questions and answers, plus user guides and current software updates to download.

When calling customer service, please have ready your receipt and the phone identity number (IMEI, to display press \*#06#), the software version (to display, press \*#06#, then **More**) and if available, your Siemens Service customer number.

You will also find the most frequently asked questions and answers in the section entitled "Questions & Answers" in this user guide on page 125.

You can also get personal advice about our range of products on our Premium Hotline: **United Kingdom** ..... **0906 9597500**  
(0.75 £ per minute)

Qualified Siemens employees are waiting to offer you expert information about our products and installation.

In some countries repair and replace services are impossible where the products are not sold through our authorised dealers.

If repair work is necessary, please contact one of our service centres:

Abu Dhabi .....	0 26 42 38 00
Argentina .....	0 80 08 88 98 78
Australia .....	13 00 66 53 66
Austria .....	05 17 07 50 04
Bahrain .....	40 42 34
Bangladesh .....	0 17 52 74 47
Belgium .....	0 78 15 22 21
Bolivia .....	0 21 21 41 14
Bosnia Herzegovina .....	0 33 27 66 49
Brunei .....	02 43 08 01
Bulgaria .....	02 73 94 88
Cambodia .....	12 80 05 00
Canada .....	1 88 87 77 02 11
Chile .....	8 00 53 06 62
China .....	0 21 23 01 71 88
Colombia .....	01 80 07 00 66 24
Croatia .....	0 16 10 53 81
Czech Republic .....	2 33 03 27 27
Denmark .....	35 25 86 00
Dubai .....	0 43 96 64 33
Ecuador .....	18 00 10 10 00
Egypt .....	0 23 33 41 11
Estonia .....	6 30 47 97
Finland .....	09 22 94 37 00
France .....	01 56 38 42 00
Germany .....	0 18 05 33 32 26
Greece .....	80 11 11 11 16
Hong Kong .....	28 61 11 18
Hungary .....	06 14 71 24 44
Iceland .....	5 11 30 00
India .....	22 24 98 70 00 Extn: 70 40
Indonesia .....	0 21 46 82 60 81
Ireland .....	18 50 77 72 77
Italy .....	02 24 36 44 00
Ivory Coast .....	05 02 02 59
Jordan .....	0 64 39 86 42
Kenya .....	2 72 37 17
Kuwait .....	2 45 41 78
Latvia .....	7 50 11 18
Lebanon .....	01 44 30 43
Libya .....	02 13 50 28 82
Lithuania .....	8 70 07 07 00
Luxembourg .....	43 84 33 99
Macedonia .....	02 13 14 84
Malaysia .....	+ 6 03 77 12 43 04

---

Malta .....	+ 35 32 14 94 06 32
Mauritius .....	2 11 62 13
Mexico .....	01 80 07 11 00 03
Morocco .....	22 66 92 09
Netherlands .....	0 90 03 33 31 00
New Zealand .....	08 00 27 43 63
Nigeria .....	0 14 50 05 00
Norway .....	22 70 84 00
Oman .....	79 10 12
Pakistan .....	02 15 66 22 00
Paraguay .....	8 00 10 20 04
Peru .....	0 80 05 24 00
Philippines .....	0 27 57 11 18
Poland .....	08 01 30 00 30
Portugal .....	8 08 20 15 21
Qatar .....	04 32 20 10
Romania .....	02 12 09 99 66
Russia .....	8 80 02 00 10 10
Saudi Arabia .....	0 22 26 00 43
Serbia .....	01 13 07 00 80
Singapore .....	62 27 11 18
Slovak Republic .....	02 59 68 22 66
Slovenia .....	0 14 74 63 36
South Africa .....	08 60 10 11 57
Spain .....	9 02 11 50 61
Sweden .....	0 87 50 99 11
Switzerland .....	08 48 21 20 00
Taiwan .....	02 23 96 10 06
Thailand .....	0 27 22 11 18
Tunisia .....	71 86 19 02
Turkey .....	0 21 64 59 98 98
Ukraine .....	8 80 05 01 00 00
United Arab Emirates .....	0 43 66 03 86
United Kingdom .....	0 87 05 33 44 11
USA .....	1 88 87 77 02 11
Venezuela .....	0 80 01 00 56 66
Vietnam .....	84 89 20 24 64
Zimbabwe .....	04 36 94 24

## Care and maintenance

A lot of care has gone into designing and manufacturing your phone; please treat it with care. You will enjoy using your phone for a very long time if you follow the suggestions below.

- Keep your phone dry and protect it from moisture. Precipitation, moisture and liquids contain minerals that will corrode electronic circuits. If your phone does become wet, you should immediately disconnect it from the power supply, if there is one, or remove the batteries.
- Never use your phone in dusty or dirty conditions, and don't keep it in such places. The phone's moving parts may be damaged.
- Never keep the phone in places that are too hot. High temperatures can shorten the life of electronic devices, damage batteries and deform or melt certain plastics.
- Never keep the phone in places that are too cold. Moisture that will damage electronic boards may form inside the phone when it warms up again (to its normal operating temperature).
- Never drop the phone; do not expose it to impacts or shocks and do not shake it. Rough treatment like this may break the circuit boards in the device.
- Never clean your phone with corrosive chemicals, cleaning solutions or harsh detergents.

All the above notes apply equally to phones, batteries, chargers and accessories of any kind. If any of these parts do not work properly please take them to your specialist dealer. They will be able to assist you and repair the device if necessary.

# Product data

## Declaration of conformity

Siemens Information and Communication mobile hereby declares that the phone described in this user guide is in compliance with the essential requirements and other relevant provisions of European Directive 1999/5/EC (R&TTE). The declaration of conformity (DoC) concerned has been signed. Please call the company hotline if you require a copy of the original or visit: [www.siemens.com/mobiledocs](http://www.siemens.com/mobiledocs)

**CE 0168**

## Technical data

GSM class:	4 (2 watt)
Frequency range:	880–960 MHz
GSM class:	1 (1 watt)
Frequency range:	1,710–1,880 MHz
GSM class:	1 (1 watt)
Frequency range:	1,850–1,990 MHz
Weight:	110 g
Size:	110.5 × 51.5 × 21 mm (104 ccm)
Li-Ion battery:	750 mAh
Operating temp.:	–10 °C to +55 °C
SIM card:	1.8 or 3.0 V

### Phone ID

You will need the following information if you lose your phone or SIM card:  
the number of the SIM card (on the card):

.....

15-digit serial number of the phone  
(under the battery):

.....

the customer service number of the service  
provider:

.....

### Lost phone

If you lose your phone or SIM card contact your service provider immediately to prevent misuse.

## Operating times

The operating time depends upon the respective conditions of use. Extreme temperatures considerably reduce the phone's standby time. Avoid placing the phone in the sun or on a heater.

**Talktime: up to 300 minutes**

**Standby time: up to 250 hours**

Action taken	Time (min)	Reduction of stand-by time by
Calling	1	30–90 minutes
Light *	1	40 minutes
Network search	1	5–10 minutes

 
\* Key input, games, organiser etc.

# Accessories

## Fashion & Carry

### Carrying Cases

A range of carry cases is available at specialist shops or you can visit the Siemens Mobile Store online at:



## Energy

### Li-Ion Battery (750 mAh) EBA-660

Spare battery.

### Travel Charger

Travel Charger EU ETC-500

Travel Charger UK ETC-510

Travel charger with an extended input voltage range of 100–240 V.

### Car Charger Plus ECC-600

Charger for the cigarette lighter socket in the car. It is possible to make phone calls during charging.

## Handsfree portable

### Headset Basic HHS-500

Simple headset without ptt (push to talk) key.

### Headset HHS-510

Headset with ptt (push to talk) key to accept and end calls.

### Headset Purestyle HHS-610

High quality headset with removable ear-piece and ptt (push to talk) key.

### Headset Stereo HHS-700

Stereo headset with ptt (push to talk) key for listening to music and making calls.

### Headset Bluetooth®

HHB-600 with EU power supply unit

HHB-610 with UK power supply unit

HHB-620 with Australian power supply unit

Elegant, small, easy to wear Bluetooth headset.

## Office

### Data Cable DCA-500

For connecting the phone to the serial RS232 port of the PC.

### Data Cable USB DCA-510

For connecting the phone to the USB port of the PC. With charging function

### Data Cable USB DCA-540

For connecting the phone to the USB port of the PC.

## Multitainment

### Flash IFL-600

Plug-in flash module for taking photos in areas with low ambient light.

### Mobile Music Set IMS-700

The portable Mobile Music Set allows to listen to the music of the mobile phone in excellent sound quality everywhere and share it with others via active loudspeakers.

### Bike-o-Meter IBS-700

The innovative Bike-o-Meter with additional water protection cap for non-outdoor phones and included altimeter combines a robust and handy cradle for the mobile phone with a powerful bike computer.

## Car Solutions

### Mobile Holder Antenna HMH-710

The cradle for connecting an external antenna. Ideal for use with headset or car kit portable.

Can also be used as cradle for retrofitting your handsfree car kit (series 55).

### Car Kit Comfort Basic HKC-710

Handsfree kit with first-class digital call quality and supreme ease of use. The phone specific Mobile Holder Antenna is necessary in addition

### Car Kit Easy HKP-700

Facilitates convenient handsfree talking with high call quality. With the integrated, rotating cradle and the flexible microphone positioning, the telephone can be optimally adjusted to suit any vehicle interior. The power is supplied via the cigarette lighter socket.

### Car Kit Portable HKP-500

With the Car Kit Portable hands-free communication is easily transferred from one vehicle to the next. Simply plug into the cigarette lighter, connect and speak.

### Car Kit Bluetooth® Portable HKW-700

Bluetooth high-tech handsfree kit without cable connection to the mobile phone. Plugs into cigarette lighter socket – no installation effort.

### Car Kit Bluetooth® HKW-600

Innovative Bluetooth handsfree kit with an external display for making in-car calls safely and conveniently.

### Optional car kit accessories

Car-Data Adapter HKO-690

Phone-In Adapter Cable HKO-570

Products can be obtained in specialist shops or you can visit the Siemens Mobile Store online:

	Siemens Original Accessories <a href="http://www.siemens.com/shop">www.siemens.com/shop</a>
---	--

## SAR – European Union (RTTE)

### INFORMATION ON RF EXPOSURE/ SPECIFIC ABSORPTION RATE (SAR)

THIS MOBILE PHONE MEETS THE LIMITS SET BY THE EU (1999/519/EC) FOR PROTECTION OF THE HEALTH OF THE PUBLIC FROM THE EFFECTS OF EXPOSURE TO ELECTROMAGNETIC FIELDS

These limits are part of comprehensive recommendations for the protection of the public. The recommendations were developed and confirmed by independent scientific organisations through periodic and thorough evaluation of scientific studies\*. The limits include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

Before a radio equipment may be placed on the market, compliance with the European laws and the respective technical limit requirements must be demonstrated. Only then the CE mark may be affixed\*\*. The limit for mobile phones recommended by the Council of the European Union employs a unit of measurement known as the Specific Absorption Rate, or SAR. This SAR limit is 2.0 W/kg\*\*\*. This corresponds with the requirements of the International Commission for Non-ionizing Radiation Protection ICNIRP and was adopted into the European Norm for Mobile Radio Equipment

EN 50360. The SAR of mobile phones is determined in accordance with the European Norm EN 50361. This involves measuring the maximum value in all frequency bands of the mobile phone with the phone transmitting at its highest power level. The actual SAR level of the phone during normal operation may be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a base station, the lower the power output.

The highest SAR value for this phone model when tested for compliance against the standard was 0.44 W/kg\*\*\*\*.

You can also find the SAR value for this device on the Internet at this address

**[www.siemens.com/mobilephones](http://www.siemens.com/mobilephones)**

While there may be differences between the SAR levels of various phones and at various positions, all Siemens products meet the legal requirements.

\* The World Health Organization (WHO, CH-1211 Geneva 27, Switzerland) states that present scientific information does not indicate the need for any special precautions for use of mobile phones.

Further information:

**[www.who.int/peh-emf](http://www.who.int/peh-emf), [www.mmfa.org](http://www.mmfa.org),  
[www.siemens.com/mobilephones](http://www.siemens.com/mobilephones)**

\*\* The CE mark confirms that the product is in compliance with the legal requirements of the European Union as a prerequisite for the placing on the market and the free movement of goods within the European internal market.

\*\*\* averaged over 10 g body tissue.

\*\*\*\* SAR values may vary depending on national requirements and frequency bands. SAR information for different regions can be found at

**[www.siemens.com/mobilephones](http://www.siemens.com/mobilephones)**



# SAR – International (ICNIRP)

## INFORMATION ON RF EXPOSURE/ SPECIFIC ABSORPTION RATE (SAR)

THIS MOBILE PHONE MEETS THE LIMITS FOR PROTECTION OF THE HEALTH OF THE PUBLIC FROM THE EFFECTS OF EXPOSURE TO ELECTRO-MAGNETIC FIELDS

Your mobile phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the limits for exposure to radio frequency (RF) energy recommended by international guidelines from the International Commission on Non-Ionizing Radiation Protection (ICNIRP). These limits are part of comprehensive guidelines for the protection of the public and establish permitted levels of RF energy for the population. The guidelines were confirmed by independent scientific organisations through periodic and thorough evaluation of scientific studies\*. The limits include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure limit for mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit stated in the international guidelines is 2.0 W/kg\*\*. Tests for SAR are conducted in all frequency bands using standard operating positions with the phone transmitting at its highest

power level. The actual SAR level of the phone during operation can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a base station, the lower the power output.

The highest SAR value for this model phone when tested for use at the ear is

0.44 W/kg\*\*\*.

SAR information can also be found at [www.siemens.com/mobilephones](http://www.siemens.com/mobilephones). While there may be differences between the SAR levels of various phones and at various positions, they all meet the international guidelines for safe RF exposure.

\* The World Health Organization (WHO, CH-1211 Geneva 27, Switzerland) states that present scientific information does not indicate the need for any special precautions for use of mobile phones.

Further information:  
[www.who.int/peh-emf](http://www.who.int/peh-emf), [www.mmfa.org](http://www.mmfa.org),  
[www.siemens.com/mobilephones](http://www.siemens.com/mobilephones)

\*\* averaged over 10 g of tissue.

\*\*\* SAR values may vary depending on national requirements and frequency bands. Information for different regions can be found at

[www.siemens.com/mobilephones](http://www.siemens.com/mobilephones)

# Quality

## Battery quality declaration

The capacity of your mobile phone battery will reduce each time it is charged/discharged. Storage at too high or low temperatures will also result in a gradual capacity loss. As a result the operating time of your mobile phone may be considerably reduced, even after a full recharge of the battery.

Regardless of this, the battery has been designed and manufactured so that it can be recharged and used for six months after the purchase of your mobile phone. After six months, if the battery is clearly suffering from loss of performance, we recommend that you replace it. Please buy only Siemens original batteries.

## Display quality declaration

For technological reasons, some small dots in other colours may appear in the display in rare cases.

Please remember that if some dots appear brighter or darker in the display, this generally does not mean that a fault has occurred.

## Guarantee certificate (UK)

Without prejudice to any claim the user (customer) may have in relation to the dealer or retailer, the customer shall be granted a manufacturer's Guarantee under the conditions set out below:

- In the case of new devices and their components exhibiting defects resulting from manufacturing and/or material faults within 24 months of purchase, Siemens shall, at its own option and free of charge, either replace the device with another device reflecting the current state of the art, or repair the said device. For wearing parts (e.g., batteries, keypads, housings, small parts on housings, protective coverings where included in the scope of delivery), this durability guarantee shall be valid for six months from the date of purchase.
- This Guarantee shall be invalid if the device defect is attributable to improper treatment and/or failure to comply with information contained in the user manuals.
- This Guarantee shall not apply to or extend to services performed by the authorised dealer or the customer themselves (e.g. installation, configuration, software downloads). User manuals and any software supplied on a separate data medium shall be excluded from the Guarantee.
- The purchase receipt, together with the date of purchase, shall be required as evidence for invoking the Guarantee. Claims under the Guarantee must be submitted within two months of the Guarantee default becoming evident.
- Ownership of devices or components replaced by and returned to Siemens shall vest in Siemens.

- This Guarantee shall apply to new devices purchased in the European Union. For Products sold in the United Kingdom the Guarantee is issued by Siemens plc, Siemens House, Oldbury, Bracknell, Berkshire, RG12 8FZ.
- Any other claims resulting out of or in connection with the device shall be excluded from this Guarantee. Nothing in this Guarantee shall attempt to limit or exclude a Customers Statutory Rights, nor the manufacturer's liability for death or personal injury resulting from its negligence.
- The duration of the Guarantee shall not be extended by services rendered under the terms of the Guarantee.
- Insofar as no Guarantee default exists, Siemens reserves the right to charge the customer for replacement or repair.
- The above provisions does not imply a change in the burden of proof to the detriment of the customer.

To invoke this Guarantee, please contact our online support on the Internet

**[www.siemens.com/  
mobilephonescustomercare](http://www.siemens.com/mobilephonescustomercare)**

or the Siemens telephone service. The relevant number is to be found in the accompanying user guide.

## Guarantee certificate (IRL)

Without prejudice to any claim the user (customer) may have in relation to the dealer or retailer, the customer shall be granted a manufacturer's Guarantee under the conditions set out below:

- In the case of new devices and their components exhibiting defects resulting from manufacturing and/or material faults within 24 months of purchase, Siemens shall, at its own option and free of charge, either replace the device with another device reflecting the current state of the art, or repair the said device. In respect of parts subject to wear and tear (including but not limited to, batteries, keypads, casing), this warranty shall be valid for six months from the date of purchase.
- This Guarantee shall be invalid if the device defect is attributable to improper care or use and/or failure to comply with information contained in the user manuals. In particular claims under the Guarantee cannot be made if:
- The device is opened (this is classed as third party intervention)
- Repairs or other work done by persons not authorised by Siemens.
- Components on the printed circuit board are manipulated
- The software is manipulated
- Defects or damage caused by dropping, breaking, lightning or ingress of moisture. This also applies if defects or damage was caused by mechanical, chemical, radio interference or thermal factors (e.g.: microwave, sauna etc.)
- Devices fitted with accessories not authorised by Siemens
- This Guarantee shall not apply to or extend to services performed by the authorised dealer or the customer themselves (e.g. installation, configuration, software

downloads). User manuals and any software supplied on a separate data medium shall be excluded from the Guarantee.

- The purchase receipt, together with the date of purchase, shall be required as evidence for invoking the Guarantee. Claims under the Guarantee must be submitted within two months of the Guarantee default becoming evident.
- Ownership of devices or components replaced by and returned to Siemens shall vest in Siemens.
- This Guarantee shall apply to new devices purchased in the European Union. For Products sold in the Republic of Ireland the Guarantee is issued by Siemens Ireland Limited, Ballymoss Road, Sandyford Industrial Estate, Dublin 18 – The Republic of Ireland.
- Any other claims resulting out of or in connection with the device shall be excluded from this Guarantee. Nothing in this Guarantee shall attempt to limit or exclude a Customers Statutory Rights, nor the manufacturer's liability for death or personal injury resulting from its negligence.
- The duration of the Guarantee shall not be extended by services rendered under the terms of the Guarantee.
- Insofar as no Guarantee default exists, Siemens reserves the right to charge the customer for replacement or repair.
- The above provisions does not imply a change in the burden of proof to the detriment of the customer.

To invoke this Guarantee, please contact our online support on the Internet

**[www.siemens.com/  
mobilephonescustomercare](http://www.siemens.com/mobilephonescustomercare)**

or the Siemens telephone service. The relevant number is to be found in the accompanying user guide.

# License Agreement

This License Agreement ("Agreement") is between You and Siemens Aktiengesellschaft ("Siemens"). The Agreement authorizes You to use the Licensed Software, specified in Clause 1 below, which may be included in your phone, stored on a CD-ROM, sent to You by electronic mail or over the air, downloaded from Siemens Web pages or servers or from other sources under the terms and conditions set forth below.

Read this Agreement carefully before using your phone. By using your phone or installing, copying, and/or using the Licensed Software, You acknowledge that You have read and understood the Agreement and agree to be bound by all of the terms and conditions stated below. You further agree that if Siemens or any licensor of Siemens ("Licensor") is required to engage in any proceeding, legal or otherwise, to enforce their rights under this Agreement, Siemens and/or its Licensor shall be entitled to recover from You, in addition to any other sums due, reasonable attorney's fees, costs and disbursements. If You do not agree to all of the terms and conditions of this Agreement, do not install or use the Licensed Software. This Agreement governs any Updates, releases, revisions, or enhancements to the Licensed Software.

1. **LICENSED SOFTWARE.** As used in this Agreement, the term "Licensed Software" means collectively: all the software in Your phone, all of the contents of the disk(s), CD-ROM(s), electronic mail and its file attachments, or other media with which this Agreement is provided and includes any related Siemens or third party software and upgrades, modified versions, updates, additions and copies of the Licensed Software, if any, distributed over the air, downloaded

from Siemens Web pages or servers or from other sources.

2. **COPYRIGHT.** The Licensed Software and all related rights, without limitation including proprietary rights therein, are owned by Siemens, its Licensors or affiliates and are protected by international treaty provisions and all applicable national laws. This Agreement does not convey to You nor allow You to acquire any title or ownership interest in the Licensed Software or rights therein. The structure, organization, data and code of the Licensed Software are the valuable trade secrets and confidential information of Siemens, its Licensors or affiliates. You must reproduce and include the copyright notices with any permitted copies You make of the Licensed Software.

3. **LICENSE AND USE.** Siemens grants to You a non-exclusive, non-transferable end user right to install the Licensed Software or use the Licensed Software installed on the phone. The Licensed Software is licensed with the phone as a single integrated product and may be used with the phone only as set forth in these licensing terms.

4. **LIMITATIONS ON LICENSE.** You may not copy, distribute, or make derivative works of the Licensed Software except as follows:

(a) You may make one copy of the Licensed Software, excluding the documentation, as an archival backup copy of the original. Any other copies You make of the Licensed Software are in violation of this Agreement.

(b) You may not use, modify, or transfer the right to use the Licensed Software other than together with the accompanying hardware or copy the Licensed Software except as expressly provided in this Agreement.

(c) You may not sublicense, rent or lease the Licensed Software.

(d) You may not reverse engineer, decompile, modify, or disassemble those Licensed Software programs except and only to the extent that such activity is expressly permitted by applicable law notwithstanding this limitation.

Parts of the Licensed Software may be supplied by third parties and may be subject to separate license terms. Such terms are set out within the documentation.

5. MISUSE OF THE LICENSED SOFTWARE OR DATA GENERATED BY THE LICENSED SOFTWARE IS STRICTLY PROHIBITED BY SIEMENS, MAY VIOLATE GERMAN, U.S. AND OTHER LAWS AND MAY SUBJECT YOU TO SUBSTANTIAL LIABILITY. You are solely responsible for any misuse of the Licensed Software under this Agreement and for any liability or damage related in any way to your use of the Licensed Software in violation of this Agreement. You are also responsible for using the Licensed Software in accordance with the limitations of this Agreement.

6. TERMINATION. This Agreement is effective from the first date you install, copy or otherwise use the Licensed Software. You may terminate this license at any time by deleting or destroying the Licensed Software, all back up copies and all related materials provided to You by Siemens. Your license rights terminate automatically and immediately without notice if You fail to comply with any provision of this Agreement. The rights and obligations under sections 2, 5, 6, 7, 9, 12 and 13 of this Agreement shall survive the termination of this Agreement.

7. YOU ACKNOWLEDGE THE LICENSED SOFTWARE IS PROVIDED "AS IS" AND NEITHER SIEMENS NOR ANY OF ITS LICENSORS MAKE ANY REPRESENTA-

TIONS OR WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OR THAT THE LICENSED SOFTWARE WILL NOT INFRINGE ANY THIRD PARTY PATENTS, COPYRIGHTS, TRADEMARKS OR OTHER RIGHTS. THERE IS NO WARRANTY BY SIEMENS OR ITS LICENSORS OR BY ANY OTHER PARTY THAT THE FUNCTIONS CONTAINED IN THE LICENSED SOFTWARE WILL MEET YOUR REQUIREMENTS OR THAT THE OPERATION OF THE LICENSED SOFTWARE WILL BE UNINTERRUPTED OR ERROR-FREE AND SIEMENS AND ITS LICENSORS HEREBY DISCLAIM ANY AND ALL LIABILITY ON ACCOUNT THEREOF. NO ORAL OR WRITTEN INFORMATION OR ADVICE GIVEN BY A SIEMENS REPRESENTATIVE SHALL CREATE A WARRANTY OR IN ANY WAY AFFECT THIS DISCLAIMER. YOU ASSUME ALL RESPONSIBILITY TO ACHIEVE YOUR INTENDED RESULTS AND FOR THE INSTALLATION, USE, AND RESULTS OBTAINED FROM IT.

8. NO OTHER OBLIGATIONS. This Agreement creates no obligations on the part of Siemens other than as specifically set forth herein.

9. LIMITATION OF LIABILITY. IN NO EVENT SHALL SIEMENS, ITS EMPLOYEES, LICENSORS, AFFILIATES OR AGENTS BE LIABLE FOR ANY DIRECT DAMAGES, LOST PROFITS, DATA OR BUSINESS, OR COSTS OF PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES, PROPERTY DAMAGE, INTERRUPTION OF BUSINESS OR FOR ANY SPECIAL, INDIRECT, INCIDENTAL, EXEMPLARY, ECONOMIC, PUNITIVE OR CONSEQUENTIAL DAMAGES, HOWEVER CAUSED, AND WHETHER ARISING UN-

DER CONTRACT, TORT, NEGLIGENCE, OR OTHER THEORY OF LIABILITY, OR ARISING OUT OF THE USE OF OR INABILITY TO USE THE LICENSED SOFTWARE, EVEN IF SIEMENS IS ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. THE LIMITATION OF LIABILITY SHALL NOT APPLY IF AND TO THE EXTENT SIEMENS' LIABILITY IS MANDATORY UNDER THE APPLICABLE LAW E.G. ACCORDING TO PRODUCT LIABILITY LAW OR IN THE EVENT OF INTENTIONAL MISCONDUCT, PERSONAL INJURY OR DEATH.

10. TECHNICAL SUPPORT. Siemens has and its Licensors have no obligation to furnish you with technical support unless separately agreed in writing between You and Siemens or the applicable Licensor.


Siemens and where applicable its Licensors in the Licensed Software shall be free to use any feedback received from You resulting from your access to and use of the Licensed Software for any purpose including (without limitation) the manufacture, marketing and maintenance or support of products and services.

11. EXPORT CONTROL. The Licensed Software may include technical data and cryptographic software and is subject to German, European Union and U.S. export controls and may be subject to import or export controls in other countries. You agree to strictly comply with all applicable import and export laws and regulations. Specifically, You agree, to the extent required by U.S. Export Administration Regulations, that You shall not disclose or otherwise export or re-export the Licensed Software or any part thereof delivered under this Agreement to (a) Cuba, Iran, Iraq, Libya, North Korea, Sudan, Syria or any other country (including a national or resident of such country) to which the U.S. has restricted or prohibited the export of goods or services.


12. APPLICABLE LAW AND FORUM. The laws of Germany govern this Agreement. No choice of law rules of any jurisdiction will apply. The courts in Munich shall settle any disputes arising out of or relating to this Agreement provided you are a merchant.


13. MISCELLANEOUS. This Agreement represents the entire agreement between You and Siemens relating to the Licensed Software and (i) supersedes all prior or contemporaneous oral or written communications, proposals, and representations with respect to its subject matter; and (ii) prevails over any conflicting or additional terms of any acknowledgement or similar communication between the parties during the term of this License. Notwithstanding the foregoing, some products of Siemens may require You to agree to additional terms through an online "click-wrap" license, and such terms shall supplement this Agreement. If any provision of this Agreement is held invalid, all other provisions shall remain valid unless such validity would frustrate the purpose of this Agreement, and this Agreement shall be enforced to the full extent allowable under applicable law. No modification to this Agreement is binding, unless in writing and signed by a duly authorized representative of each party. This Agreement shall be binding on and shall inure to the benefit of the heirs, successors, and assigns of the parties hereto. The failure of either party to enforce any right resulting from the breach of any provision of this Agreement by the other party will not be deemed a waiver of any right related to a subsequent breach of such provision or any other right hereunder. Notwithstanding anything to the contrary in this Agreement, Siemens and/or its licensors may enforce its rights, including but not limited to copyright, trademark or trade names, in accordance with the rules of law in each country.


# Menu tree

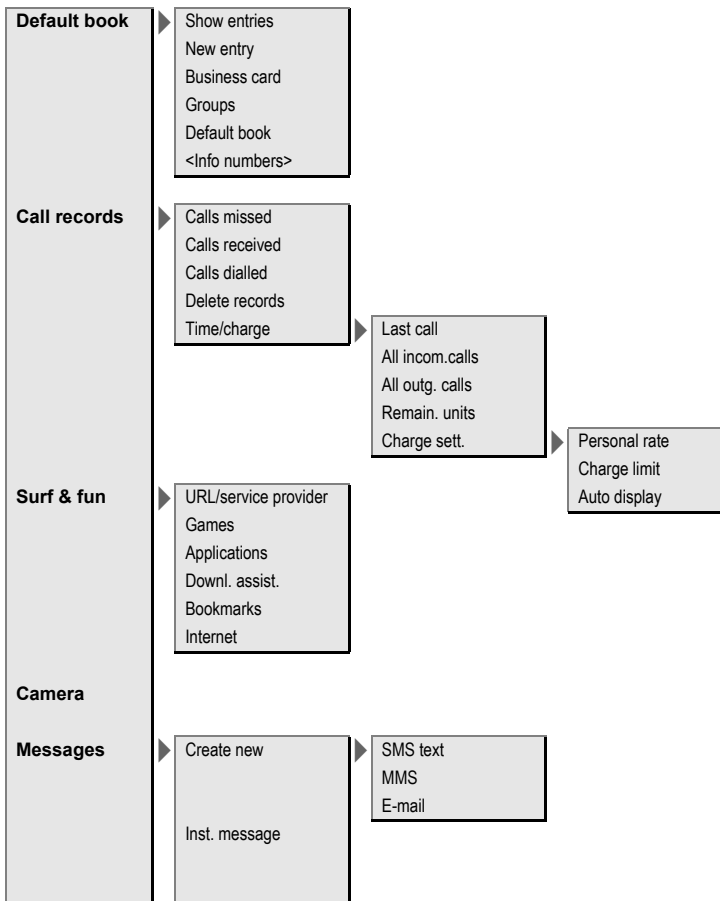





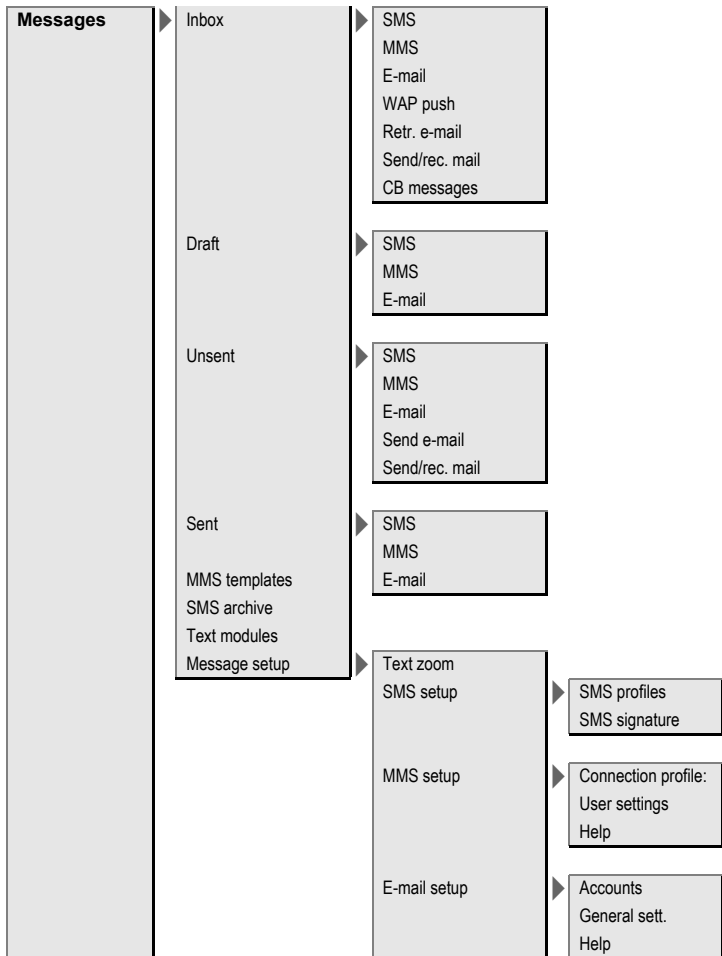

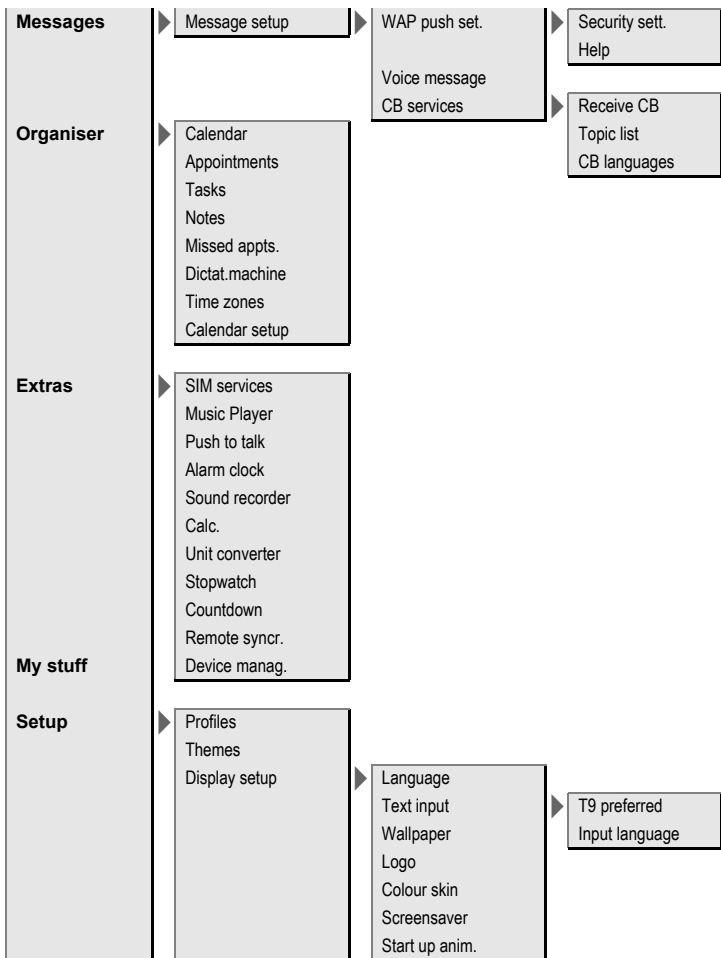

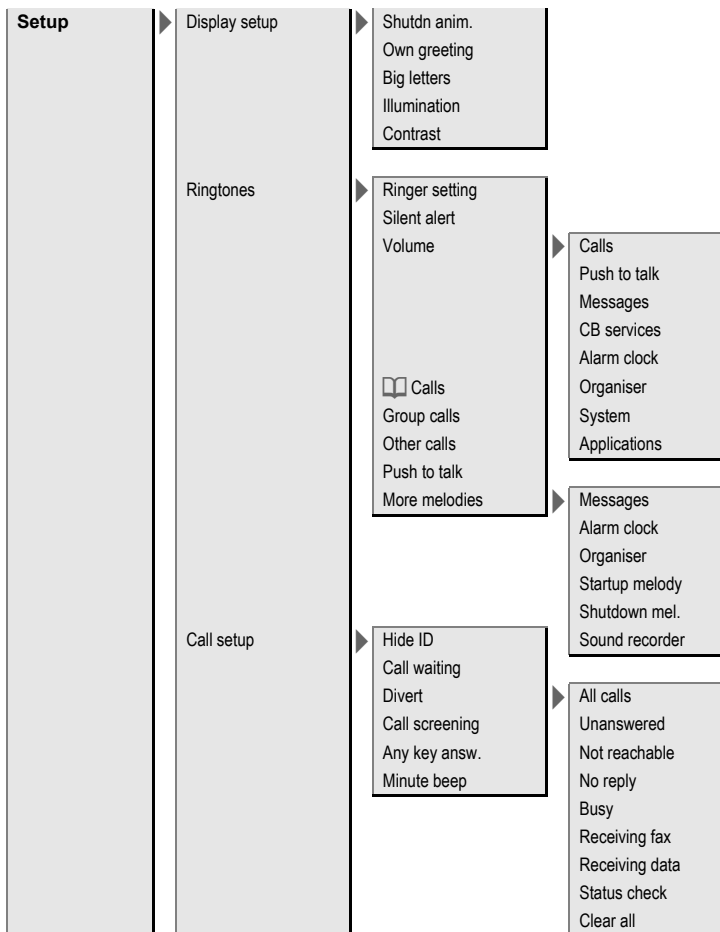

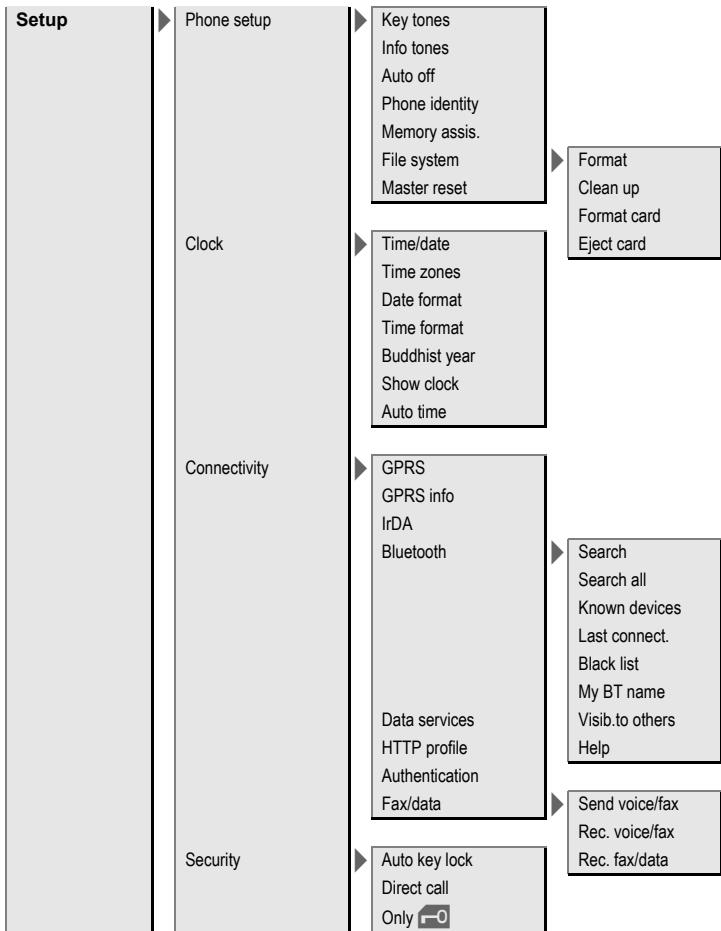

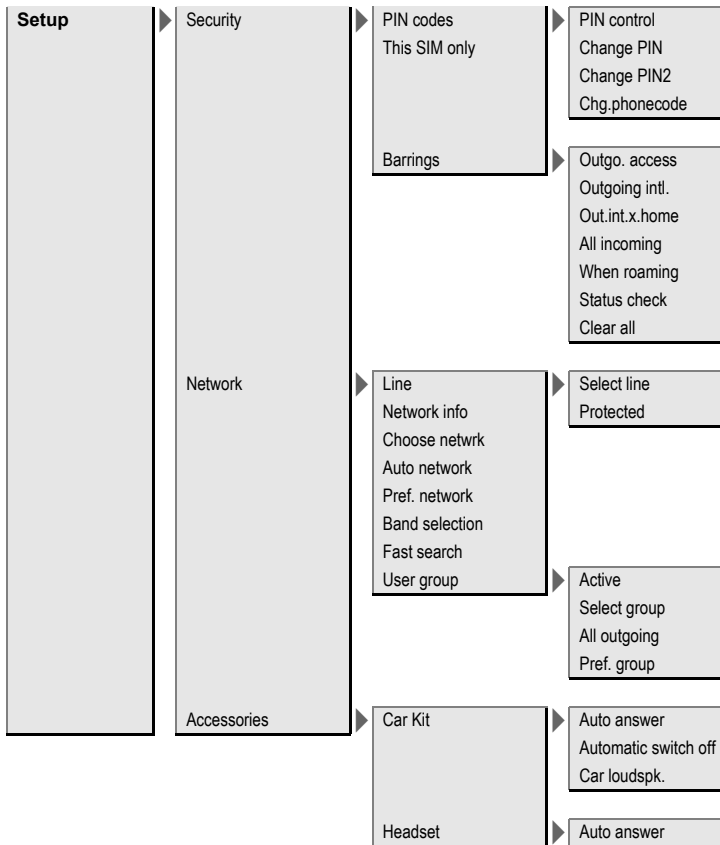


# Index

- A**
- Accessories ..... 132
  - Addressbook
    - Dial entry ..... 33
    - Groups ..... 34
    - New entry ..... 31
    - Read entry ..... 33
  - Aircraft mode ..... 76
  - Alarm
    - Alarm clock ..... 113
    - Type ..... 103
  - Alarm clock ..... 113
  - All calls (diversion) ..... 83
  - All incoming (barrings) ..... 94
  - Answering service (external) ..... 61
  - Any key to answer ..... 83
  - Appointments ..... 102
  - Authentication ..... 92
  - Auto display
    - Clock ..... 86
    - Duration/charges ..... 39
  - Auto key lock ..... 93
  - Auto time zone ..... 86, 106
  - Auto. network dialling ..... 95
  - Auto. redial ..... 24
  - Automobile accessories ..... 133
- B**
- Band selection ..... 96
  - Battery
    - Charge ..... 11
    - Insert ..... 9
    - Operating times ..... 11, 131
    - Quality Declaration ..... 137
  - Big letters ..... 79
  - Bluetooth ..... 88
  - Bookmarks (WAP) ..... 70, 72
  - Browser ..... 71
  - Buddh. year ..... 86
  - Business card ..... 30
  - Busy number ..... 24
- C**
- Calculator ..... 115
  - Calendar ..... 101
  - Call
    - Accept/end ..... 25
    - Barring ..... 94
    - Charges ..... 39
    - Conference ..... 26
    - Divert ..... 82
    - End ..... 23
    - Hold ..... 25
    - Menu ..... 27
    - Reject ..... 25
    - Swap between calls (change) ..... 25
  - Call back ..... 24
  - Call divert ..... 82
  - Call screening ..... 83
  - Call transfer ..... 27
  - Call waiting ..... 26, 82
  - Calling ..... 23
  - Calls dialled (call record) ..... 38
  - Calls received (call record) ..... 38
  - Camera ..... 40
  - Car Kit
    - Accessories ..... 133
    - Setting ..... 97
  - Car kit accessories ..... 133
  - Care of phone ..... 130
  - Cell Broadcast (CB) ..... 69
  - Charges ..... 39
  - Charges/units ..... 39
  - Charging the battery ..... 11
  - Clock ..... 86
  - Colour skin ..... 78
  - Conference ..... 26
  - Connection profiles ..... 90
  - Connectivity ..... 87
  - Contact list ..... 63
  - Control code (DTMF) ..... 28
  - Converter ..... 116
  - Countdown ..... 117
  - Credit limit ..... 39
  - CSD settings ..... 90
  - Currency converter ..... 116
- D**
- Date format ..... 86
  - Default book ..... 30
  - Device manag. .... 119
  - Dialling code ..... 23
  - Dialling with number keys ..... 23
  - Dictating machine ..... 105
  - Digital Rights Management ..... 13
  - Direct reply (SMS) ..... 48

- Display
  - Illumination..... 79
  - Language ..... 78
  - Symbols ..... 7
  - Wallpaper image..... 78
- Divert ..... 82
- Download ..... 73
- DTMF tones (tone sequences) ..... 28
- Duration/charges ..... 39
- E**
- E-mail
  - Lists..... 59
  - Settings ..... 60
  - Write ..... 58
- Emergency number ..... 12
- Extras ..... 107
- F**
- Fast access..... 99
- Fast network search ..... 96
- Fax/data mode ..... 91
- Flash ..... 41
- Formatting (phone memory)..... 85
- Formatting (SMS text)..... 44
- Forwarding (call) ..... 27
- Frequency range ..... 96
- G**
- Games and applications ..... 73
- GPRS..... 87
- Groups ..... 34
- Guarantee certificate ..... 138
- H**
- Handset volume..... 23
- Handsfree talking..... 25
- Headset
  - Accessories..... 132
  - Setting ..... 97
- Hide ID ..... 82
- Highlighting mode..... 16
- Hold call ..... 25, 27
- Home network..... 95
- Hotline ..... 128
- HTTP profile ..... 91
- I**
- Identity number (IMEI) ..... 84
- IMEI number ..... 84
- Inbox ..... 43
- Info tones ..... 84
- Information services (CB) ..... 69
- Infrared (IrDA) ..... 87
- Input language (T9) ..... 20
- Inst. Message ..... 62
- International dialling code ..... 24
- Internet ..... 70
- J**
- Joystick ..... 5
- K**
- Key tones ..... 84
- L**
- Language ..... 78
- License Agreement ..... 140
- Limit (duration/charges) ..... 39
- Logo ..... 78
- Loss of phone, SIM card ..... 131
- M**
- Mailbox ..... 61
- Maintenance of phone ..... 130
- Master reset ..... 85
- Media player ..... 120
- Memory assistant ..... 84
- Menu
  - Controls ..... 14
  - My menu ..... 98
  - Speed dialling ..... 16
- Menu speed dialling ..... 16
- Menu tree ..... 143
- Message
  - CB ..... 69
  - E-mail ..... 58
  - MMS ..... 50
  - SMS ..... 44, 46
- Message memory full ..... 49
- Message type ..... 48
- Microphone on/off..... 27, 42
- Minute beep ..... 83
- Missed appointments ..... 104
- Missed calls (call record) ..... 38
- MMS
  - Lists ..... 55
  - Receive ..... 54
  - Send ..... 53
  - Write..... 50
- Mobile Phone Manager ..... 123
- MultiMediaCard ..... 122
- Muting (microphone) ..... 27, 42
- My items ..... 29
- My menu..... 98
- My stuff ..... 121

- N**
- Network
    - Barring ..... 94
    - Connection..... 95
    - Settings..... 95
  - Notes..... 104
- O**
- One number only..... 27
  - Only  ..... 93
  - Operating times (battery)..... 11, 131
  - Organiser..... 101
  - Own (phone) numbers..... 37
  - Own greeting ..... 79
- P**
- Phone code..... 17
  - Phone data ..... 131
  - Phone identity number (IMEI) ..... 84
  - Phone number memo ..... 24
  - Phone number transmission on/off..... 82
  - Phone setup ..... 84
  - Phonebook
    - Call an entry ..... 36
    - New entry ..... 35
    - Protected SIM ..... 37
    - Special books..... 37
    - VIP numbers ..... 37
  - Photo ..... 40
  - Pictures & sounds (SMS)..... 45
  - PIN
    - Change..... 17
    - Control ..... 17
    - Enter ..... 12
    - Error..... 127
  - PIN2 ..... 17
  - Preferred network..... 95
  - Preventing accidental activation..... 18
  - Product data ..... 131
  - Profiles
    - MMS ..... 56
    - Phone..... 75
    - SMS..... 48
    - WAP ..... 72
  - Prompt ..... 24
  - Provider logo ..... 78
  - PUK, PUK2 ..... 17
  - Push to talk..... 108
- Q**
- Questions & Answers ..... 125
- R**
- Records ..... 38
  - Redial..... 23
  - Reminder ..... 24
  - Remote synchronisation ..... 118
  - Ringtone setting..... 80
  - Ringtones..... 34, 80
- S**
- Safety precautions..... 3
  - Screensaver..... 78
  - Second phone number ..... 95
  - Security ..... 17
  - Security codes ..... 17
  - Service centre (SMS)..... 48
  - Service provider portal..... 29
  - Service tones ..... 84
  - Set time/date..... 86
  - Settings..... 75
  - Short message (SMS)..... 44
  - Shown in the display ..... 7
  - Shut down animation ..... 79
  - Siemens City Portal..... 29
  - Signal strength ..... 13
  - Silent alert..... 80
  - SIM card
    - Clear barring ..... 18
    - Insert ..... 9
    - Problems..... 125
  - SIM services (optional) ..... 107, 112
  - SMS
    - Archive ..... 47
    - Lists ..... 47
    - Profiles..... 48
    - Read ..... 46
    - Settings ..... 48
    - Signature ..... 48
    - T9 input ..... 20
    - To group ..... 45
    - Write..... 44
  - Software version ..... 84
  - SOS ..... 12
  - Sound recorder..... 114
  - Special books ..... 37
  - Special characters..... 19
  - Speech time (battery) ..... 131
  - Speed dialling keys ..... 100
  - Standard functions ..... 15
  - Standby mode ..... 13
  - Standby time ..... 11, 131
  - Start up animation..... 79



Stopwatch .....	117
Storage location (Phonebook) .....	35
Surf & fun .....	70
Swap .....	25
Switch off phone	
Automatic .....	84
Manually .....	12
Switch on phone.....	12
Symbols.....	7
Synchronisation.....	118

**T**

T9 text input.....	20
Tasks .....	103
Technical data .....	131
Text entry	
With T9 .....	20
Without T9 .....	19
Text module .....	22
Themes .....	77
This SIM only .....	93
Time zones .....	12, 86, 106

**U**

Unanswered .....	82
Upper and lowercase letters (T9).....	19
User group.....	96

**V**

Validity (SMS) .....	48
Video mode .....	41
Video playback.....	120
Voice message (mailbox) .....	61
Volume	
Handset volume .....	23
Profiles .....	75
Ringtone .....	80

**W**

Wallpaper (display) .....	78
WAP push .....	43