

**SIEMENS**  
**m**obile



Issued by  
Information and Communication mobile  
Haidenauplatz 1  
D-81667 Munich

© Siemens AG 2004  
All rights reserved. Subject to availability.  
Rights of modification reserved.

Siemens Aktiengesellschaft  
[www.siemens-mobile.com](http://www.siemens-mobile.com)

*Silver Edition*

**MC60**

<b>Safety precautions</b> .....	3	Accept call .....	19
<b>Phone overview</b> .....	5	Reject call .....	19
<b>Display symbols</b> .....	7	Handsfree .....	19
<b>Getting started</b> .....	8	Swap between 2 calls .....	20
Insert SIM card/battery .....	9	Conference .....	21
Charge battery .....	10	Call menu .....	21
<b>Switch on, off / PIN entry</b> .....	11	Babysitter .....	22
Switch on/off .....	11	<b>Text entry</b> .....	23
Enter PIN .....	11	<b>Phonebook</b> .....	27
Emergency number (SOS) .....	11	<New entry> .....	27
Switching on your phone		Call (search for an entry) .....	28
for the first time .....	11	Change entry .....	28
Signal strength .....	11	Assign picture .....	28
<b>General instructions</b> .....	12	<Special books> .....	29
User guide .....	12	Voicedialling .....	30
Without SIM card .....	12	Groups .....	31
Menu controls .....	12	Control codes (DTMF) .....	32
Standby mode .....	12	<b>Records</b> .....	33
<b>Standard functions</b> .....	13	<b>Durat/charges</b> .....	34
Option menus .....	13	<b>Camera</b> .....	35
Highlighting mode .....	13	Switch on .....	35
<b>Security</b> .....	14	Shot .....	35
Codes .....	14	Photo album .....	36
Preventing accidental		<b>Voice message/mailbox</b> .....	37
activation .....	15	<b>SMS</b> .....	38
<b>My phone</b> .....	16	Writing and sending text	
<b>Calling</b> .....	17	messages (SMS) .....	38
Dialling with number keys .....	17	Picture&sound .....	39
End call .....	17	SMS to group .....	40
Set volume .....	17	Read SMS .....	41
Redial .....	17	Lists .....	42
If the number is busy .....	18	SMS archive .....	43
		SMS profiles .....	44

**See also Index at the end of this User Guide**

<b>MMS</b> .....	45	<b>Extras</b> .....	82
Writing/sending MMS messages .....	45	Alarm clock .....	82
MMS options .....	47	Calculator .....	82
Receive MMS .....	47	Currency conv .....	83
Read MMS .....	48	Stopwatch .....	83
MMS profiles .....	50	Countdown .....	84
<b>CB services</b> .....	51	Voice command .....	84
<b>Surf &amp; fun</b> .....	52	New ringtone .....	85
Internet browser (WAP) .....	52	SIM services (optional) .....	85
Games & more .....	55	<b>Fast access key</b> .....	86
<b>Setup</b> .....	58	<b>Filesystem</b> .....	88
Profiles .....	58	<b>Siemens Data Suite</b> .....	90
Display .....	60	<b>Questions &amp; Answers</b> .....	92
Audio .....	62	<b>Customer Care</b> .....	95
Keys .....	64	<b>Care and maintenance</b> .....	97
Phone setup .....	64	<b>Product data</b> .....	98
Clock .....	67	<b>Accessories</b> .....	99
Connectivity .....	68	<b>Battery quality statement</b> .....	101
Security .....	71	<b>Guarantee certificate (UK)</b> .....	102
Network .....	73	<b>Guarantee certificate (IRL)</b> .....	103
Accessories .....	75	<b>SAR - European Union (RTTE)</b> ...	104
<b>My menu</b> .....	76	<b>SAR - International (ICNIRP)</b> ...	106
<b>Organiser</b> .....	77	<b>Menu tree</b> .....	107
Calendar .....	77	<b>Index</b> .....	113
Alarm .....	77		
Notes .....	80		
Missed appointments .....	80		
Time zones .....	81		

**See also Index at the end of this User Guide**

# Safety precautions

## Information for parents

Please read the operating instructions and safety precautions carefully before use. Explain the content and the hazards associated with using the phone to your children.



Remember to comply with legal requirements and local restrictions when using the phone. For example, in aeroplanes, petrol stations, hospitals or while driving.



Mobile phones can interfere with the functioning of medical devices such as hearing aids or pacemakers. Keep at least 20 cm between phone and pacemaker. When using the mobile phone hold it to the ear which is further away from the pacemaker. For more information consult your doctor.



The SIM card may be removed. Caution! Small parts like this could be swallowed by young children.



The mains voltage specified on the power supply unit (V) must not be exceeded. Otherwise the charging device may be destroyed.



The ring tone (p. 63), info tones (p. 63) and handsfree talking are reproduced through the loudspeaker. Do not hold the phone to your ear when it rings or when you have switched on the handsfree function (p. 19). Otherwise you risk serious permanent damage to your hearing.



Only use original Siemens batteries (100% mercury-free) and -charging devices. Otherwise you risk serious damage to health and property: The battery could explode, for instance.



Do not open the phone. Only the battery (100% mercury-free), front and back covers, keypad or SIM card may be replaced. You must not open the battery under any circumstances. Any other changes to this device are strictly prohibited, as they will invalidate the type approval required for operation of the unit.

**Important:**

Please dispose of unwanted batteries and phones as permitted by the laws in your country.



The phone may cause interference in the vicinity of TV sets, radios and PCs.



Use only Siemens original accessories. This will avoid potential risks to health or property and ensure compliance with all relevant regulations.

**Improper use will invalidate the guarantee!**

# Phone overview

## ① Call key

Displayed/selected phone number. /name displayed, take calls. Show last phone numbers dialed in standby mode.

## ② On/Off/End key


- Switched off: **hold down** to switch on.
- During a conversation or in an application: **press briefly** to finish.
- In menus: **Press briefly** to go back a level. **Hold down** to return to standby mode.
- In standby mode: **hold down** to switch off phone.

## ③ Control key top/bottom

In lists, messages and menus:


 scroll up and down.

During a call:

 Start adjusting the volume.


 Open Phonebook.


In standby mode:

 Voice control (hold down).

 Open Phonebook.

## ③ Control key left/right

The current functions of this key are shown in the bottom line of the display as **Text**/symbol (e.g., .

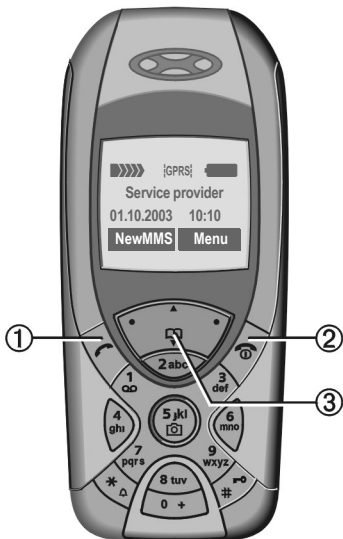

### ① Integrated antenna

Do not obstruct the phone above the battery cover unnecessarily.

### ② Loudspeaker

### ③ Display

### ④ Input keys

### ⑤ Camera

**Hold down** in standby mode:  
Start camera function (p. 35).

### ⑥ Ringtone

- **Hold down** in standby mode: Switch all audible signals on/off (except alarm).
- **Hold down** on incoming call: Switch off ring tone for this call only.

### ⑦ Key lock


**Hold down** in standby mode: Switch key lock on/off.

### ⑧ Plug socket

For charger, headset etc.

### ⑨ Socket for external antenna

### ⑩ Camera lens

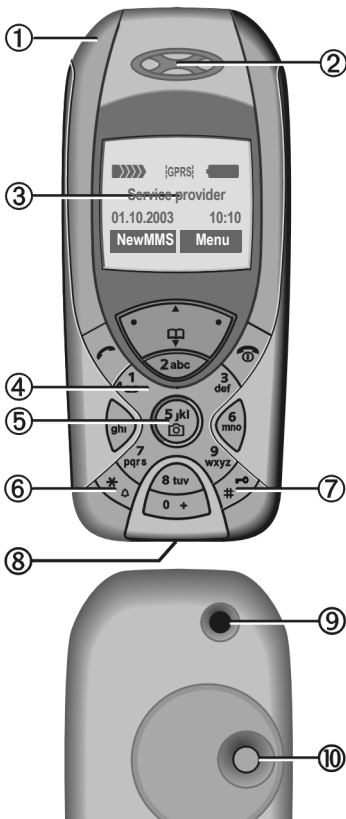

# Display symbols

## Display symbols (selection)



Signal strength.



Charging.



Battery charge level, e.g. 50%.



Phonebook



Records



Surf & Fun/Service provider portal



Organiser



Messages



Camera



Extras



File system



Settings



All calls are diverted.



Ringer off.



Short ring (beep) only.



Ringtone only, if the caller is stored in the Phonebook.



Alarm set.



Alarm clock activated.



Keypad locked.



Message memory full.



No network access.

ABC/  
Abc/abc Indicates whether upper or lower-case letters are active.

T9Abc Text input **with** T9.

GPRS Activated and available.

!GPRS! Registered.

GPRS Temporarily interrupted.

GPRS▶ GPRS download.

WAP online.

WAP via GPRS online.

WAP no network.

Auto answer feature on.

## Organiser symbols (selection)

Memo

Call

Meeting

Birthday

Anniversary

## Access with left control key (selection)

Message received.

MMS received.

MMS notification received.

Voice message received.

Unanswered call.

Depending on the service provider, some of the symbols shown here may vary from those in the phone,



# Getting started

The front and back covers of the casing (CLIPit™ p. 99) as well as the keypad can be changed in a matter of seconds - no tools required. Please switch the phone off first:

## Assembling



## Dismantling



### Note

Your phone is supplied with a protective film applied to the display and the display cover of the front shell. **Remove this film before getting started**

In rare cases the static discharge may cause discoloration at the edges of the display. However this will disappear within 10 minutes.


To avoid damage to the display, the phone should not be used without the front cover.




## Insert SIM card/battery

The service provider supplies you with a SIM card on which all the important data for your line is stored. If the SIM card has been delivered in credit-card size, snap the smaller segment out and remove any rough edges.


Press grooved area ①, then remove the cover forwards/upwards in the direction of the arrow ②.

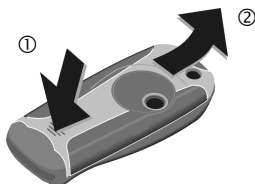


- Place the SIM card into the slot with the contact surface facing **downwards**. Gently push the holder tab over the SIM card ③ (ensure the bevelled corner is correctly positioned).

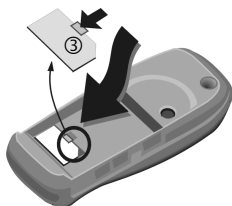

- Insert the battery sideways into the phone ④, then press downwards ⑤ until it engages.

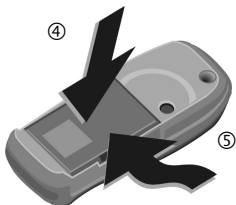

- To remove, press the retaining tab on the side of the battery, then lift the battery out.
- Place cover on phone ⑥ and then push to the lower edge ⑦, until it clicks into place.

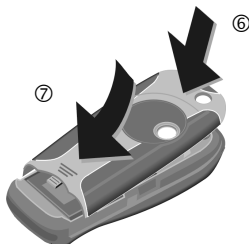

### Additional information


Please switch off your phone before removing the battery!

Only 3V SIM cards are supported. Please contact your service provider if you have an older card.

SIM card problems .....p. 92

## Charge battery

The battery is not fully charged when delivered. Plug charger cable into the bottom of the phone, plug power supply unit into a mains power socket and charge for at least **two hours**.

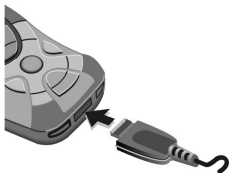

Display when charging is in progress



During charging.

### Charging time

An empty battery is fully charged after about 2 hours. Charging is only possible within a temperature range of +5 °C to +40 °C. If the temperature rises/falls 5 °C above/below this, the charge symbol flashes a warning. The mains voltage specified on the power supply unit must not be exceeded (Operating time, p. 98).

### Charge icon not visible

If the battery has been discharged fully the charge icon is not immediately visible when the power supply unit is plugged in. It will appear after up to two hours. In this case the battery is fully charged after 3-4 hours.

### Only use the power supply unit provided!

### Display while in service

Charge level display during operation (empty-full):



A beep sounds when the battery is nearly empty. The charge level of the battery is only displayed correctly after an uninterrupted charging/discharging cycle. You should therefore **not remove the battery unnecessarily** and where possible **not terminate the charging process early**.

### Additional information

The power supply unit heats up when used for long periods. This is normal and not dangerous.

If the battery is removed for longer than 30 seconds, the clock must be reset.

# Switch on, off / PIN entry

## Switch on/off



Hold **down** On/Off/End key.

## Enter PIN

The SIM card can be protected with a 4- to 8-digit PIN.



Enter the PIN using the number keys. The characters \*\*\*\* appear to ensure nobody can read your PIN on the display. Correct errors with **Clear**.

**OK**

To confirm, press the right of the control key. Logging on to the network will take a few seconds.

### Additional information

Change PIN.....	p. 14
Clear SIM card barring .....	p. 15
Clock settings .....	p. 67

## Emergency number (SOS)

**Only to be used in real emergencies!**

By pressing the left side of the control key **SOS** you can make an emergency call on any network **without** a SIM card and without entering a PIN (not available in all countries).

## Switching on your phone for the first time

### Time/date

Set the clock to the right time once at start-up.

**Yes**

Press.



First enter the date (day/month/year), then the time (24 hours, including seconds).

**OK**

Press. The time and date are updated.

### Time zones

Set the time zone for your area.



Select the required time zone from list ...

**Set**

... and set it.

## Signal strength



Strong reception signal.



A weak signal reduces the call quality and may lead to loss of the connection. Change your location.

# General instructions

## User guide

The following symbols are used to explain operation:



Enter numbers or letters.



On/Off/End key.



Call key.



Press control key (left/right).



Press control key (top/bottom).

**Menu**

Displays a function.



Function dependent on service provider, may require special registration.

## Without SIM card

If you switch on the phone **without** a SIM card you can still use some phone functions.

**Menu**

The functions are displayed.

**SOS**

Emergency, SOS.

## Menu controls

The steps needed to reach a function are shown in a **condensed form** in this user guide.

For example:

To display call list for missed calls in condensed form:


**Menu** →  → **Calls missed**

This comprises the following steps:

**Menu**

Open main menu.



Select , then select the **Calls missed** function.

**Select**

Confirm.

## Standby mode

Very often function descriptions begin in standby mode.

The phone is in **standby mode** and is **ready for use** when the name of the service provider appears on the display.



**Hold down** the On/Off/End key to return to standby mode from any situation.

# Standard functions

## Option menus

Menu functions are made available in options menus. A selection of functions that occur frequently is shown here.

**Options** Open menu.


<b>Edit</b>	Open the entry to edit.
<b>Capacity</b>	Display available capacity.
<b>View</b>	Display entry.
<b>Delete / Delete all</b>	Delete entry/delete all entries after confirmation.
<b>New entry</b>	Create new entry.
<b>Send MMS</b>	Send entry as MMS message.
<b>Send</b>	Dial number or select from the Phonebook, then send.
<b>Save</b>	Store entry.
<b>Sort</b>	Set sort criteria (alphabetical, type, time).
<b>Text input (p. 23)</b>	<b>T9 preferred:</b> Activate/deactivate T9 input. <b>Input language:</b> Select language for text.
<b>Rename</b>	Rename selected entry.

## Highlighting mode

With some applications (e.g. Phonebook) one or more entries in a list can be highlighted to perform multiple functions at once.

**Options** Open menu.

**Mark text** Activate highlighting mode.

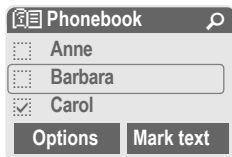

If an **unmarked** entry is selected, this can be highlighted:

**Mark text** The current entry is highlighted.

If a **highlighted** entry is selected, the highlighting can be deleted:

**Unmark** Unmark the current entry.

Additional highlighting functions:

<b>Mark all</b>	Highlight all entries.
<b>Unmark all</b>	Delete highlighting on all marked entries.
<b>Delete marked</b>	All selected entries are deleted.


# Security

The phone and SIM card are protected against misuse by several security codes.

**Keep these confidential numbers in a safe place where you can access them again if required.**

## Codes


PIN	Protects your SIM card (personal identification number).
PIN2	This is needed to set the charge detail display and to access additional functions requiring special SIM cards.
PUK PUK2	Key code. Used to unlock SIM cards after the wrong PIN has been entered repeatedly.
Phone code	Protects your phone. Must be entered at the first security setting.

**Menu** →  → Security → Codes  
→ Select function

## PIN control

The PIN is usually requested each time the phone is switched on. You can deactivate this feature but you risk unauthorised use of the phone. Some service providers do not permit deactivating the control.

**Select** Press.

 Enter PIN.


**OK** Confirm input.

**Change** Press.

**OK** Confirm.

## Change PIN

You can change the PIN to any 4- to 8-digit number you find easier to remember.

 Enter **current** PIN.

**OK** Press.

 **OK** Enter new PIN.

 **OK** Renter new PIN.

## Change PIN2

(Display only if PIN 2 is available).  
Proceed as with **Change PIN**.

Menu →  → Security → Codes

## Chg.phonecode

(Change phone code)

You define the phone code (4-8 digits) when you call up a phone-code protected function for the first time (e.g. Babysitter p. 22). It is then valid for all phone-code protected functions.

Following the third unsuccessful attempt, access to the phone code and the functions that use it is denied. If this happens please contact Siemens Service (p. 95).

## Clear SIM card barring

If the PIN is entered incorrectly three times, the SIM card is barred. Enter the PUK (MASTER PIN), provided by your service provider with the SIM card, according to instructions. If the PUK (MASTER PIN) has been lost, please contact your service provider.

### Additional information

Screensaver .....	p. 60
Auto key lock .....	p. 64
Further security settings .....	p. 71

## Preventing accidental activation

Even if PIN control is deactivated (p. 14) confirmation is required to switch on the phone.

This prevents the phone from being switched on accidentally, e. g. when carried in a pocket or whilst you are on an aircraft.



Press **down**.

Please confirm switch on

OK

Cancel

OK

Press. The phone switches on.

Cancel

Press or take no action. The phone does not switch on.



# My phone

Adjust your phone in the following ways to give it a personal touch and make it just how you want it:

## Ring tones

Assign individual ringtones to caller groups or for special dates (p. 63).

## Pictures

Assign individual images or photos to your Phonebook entries (p. 28).

## Animations

Choose a start-up and closing animation (p. 61) as well as a personal greeting (p. 61).

## Screensaver

Choose an analogue clock or a personal picture (p. 60).

## (Provider) Logo

Choose an individual picture (to be displayed in standby mode) (p. 60).

## Wallpaper

Choose your own permanent wallpaper image (p. 60).

## Applications

Download your own applications from the Internet (p. 56).

## Colour scheme

Select a color scheme for the user interface (p. 60).

## Where do I get what?

Additional ring tones, logos, animations and Java applications are available from your service provider or directly from Siemens.

## Service provider portal

Depending on your service provider, you may have direct access on your phone to its portal via menu options or bookmarks. Please contact your service provider for more information on these services.

## Siemens City Portal

Additional ring tones, logos, animations and screensavers, as well as other applications, games and services, are available on the Internet at

[www.siemens-mobile.com/city](http://www.siemens-mobile.com/city)

Or you can download them direct via WAP:

[wap.siemens-mobile.com](http://wap.siemens-mobile.com)

Here you will also find a storage service, and a list of the countries in which the services are available.

## My menu

Create your own menu with frequently used functions, phone numbers or WAP pages (p. 76).

# Calling

## Dialling with number keys

The phone must be switched on (standby mode).



Enter number (always with area code/international dialling code).

**Clear** A **short** press clears the last digit, a **long** press clears the entire phone number.



Press the Call key. The displayed phone number is dialled.

## End call



Press the End key **briefly**. Press this key even if the person on the other end of the line has hung up first.

## Set volume



Use the top of the control key to start adjusting the volume. Then press top/bottom to adjust the volume as required (only possible during a conversation).

If a Car Kit is used, its volume setting will not affect the usual setting on the phone.

## Redial

To redial the phone number **last** called:



Press the Call key **twice**.

To redial other numbers that were dialled previously:



Press the Call key once.



Pick out the required phone number from the list, then to dial ...



Press ...


## If the number is busy

If the called number is busy or cannot be reached because of network problems several options are available (depending on the service provider). An incoming call or any other use of the phone interrupts these functions.

Either

### Auto. redial

**Auto dial** Press. The phone number is automatically dialed ten times at increasing time intervals. End with:

 End key.

Or

### Call back





**Call back** Press. Your phone rings when the busy number is free. Press the Call key to dial the number.


### Reminder

**Prompt** Press. A beep reminds you to redial the displayed phone number after 15 minutes.

#### Additional information

 Store phone no. in Phonebook .....	p. 27
 Call menu .....	p. 21
<b>Handsfr.</b> Handsfree.....	p. 19
Hide ID .....	p. 64
Microphone off.....	p. 21
Voicedialling .....	p. 30
Auto key lock .....	p. 64

#### International dialling codes

 Hold **down** until a “+” is displayed.

**+List** Press and select country.

#### Phone number memo

You can enter a phone number during a call. The person to whom you are speaking can hear these entries. When the connection has ended you can save or dial the phone number.

## Accept call

The phone must be switched on (standby mode). An incoming call will interrupt any other use of the phone.

**Answer** Press.

Or



Press.

A phone number transmitted by the network is displayed or the corresponding name if it is contained in the Phonebook (p. 27). A picture may also appear (settings p. 28).

## Reject call

**Reject** Press. To divert call, see p. 64.

Or



Press **briefly**.

### Warning!


Please make sure you have accepted the call before holding the phone to your ear. This will avoid damage to your hearing from loud ring tones.

### Additional information

Missed calls.....	p. 33
Accept call using any key .....	p. 64
Switch offringer .....	p. 62

## Handsfree

You can put the phone aside during a call. You can then hear the caller via the loudspeaker.

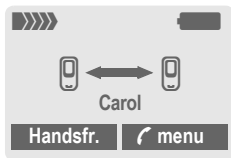

**Handsfr.** Activate handsfree talking.

**Yes** Switch on.



Use the control key to adjust the volume.

**Handsfr.** Switch off.

### Warning!

**Always switch off "handsfree talking" before holding the phone to your ear! This will avoid damage to your hearing!**

**menu** Call menu .....p. 21


## Swap between 2 calls


### Establish a second connection

You can call another number during a call.

 **menu** Open call menu

**Hold** The current call is put on hold.

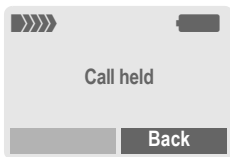

Now dial the new phone number (Phonebook ).

When the new connection is established:

 **menu** Open call menu

**Swap** Swap back and forth between the calls.

### End current call



End the current call and press **Yes**. You are now connected to the caller.

## Incoming calls during a call


You may need to register for this service with your service provider and set your phone accordingly (p. 64). During a call, you may be advised that there is another call waiting. You will hear a special tone during the call. You have the following options:

- **Accept the waiting call**

**Swap** Accept the waiting call, putting the current call on hold to do so.

To swap between the two calls proceed as described above.

End call(s):

Press End key . According to the display: **Return to held call?** you have the following choice:

**Yes** You accept the held call.

**No** You also end the second call.

- **Reject waiting call**

**Reject** Press.

**Or**

**Divert** The waiting call is diverted, for example, to the mailbox.

- **Accept the waiting call and end the current call**




End the current call.

**Answer** Accept new call.


## Conference

Call up to 5 parties one by one and link them together in a conference call. Some of the functions described may not be supported by your service provider or may have to be enabled specially. You have established a connection:

 **menu** Open menu and select **Hold**. The current call is put on hold.



Now dial a new number. When the new connection is established ...

 **menu** ... open menu and select **Conference**. The held call is joined.

Repeat procedure until all participants are linked together (up to 5 participants).


## End


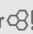


**All** calls in the conference are ended when the End key is pressed.

## Call menu

The following functions are only available during a call:

 **menu** Open menu.

<b>Hold</b>	(p. 20)
<b>Microphone on</b>	If the microphone is switched off the person on the other end of the line cannot hear you (muting). Also: Hold  down.
<b>Handsfree</b>	(p. 19)
<b>Volume</b>	Adjust handset volume.
<b>Conference</b>	(see left)
<b>Durat/charges</b>	Display call duration and (if set, p. 34) costs accruing during the call.
<b>Send DTMF</b>	(p. 32)
<b>Call transfer</b> 	The original call is joined to the second one. For you, both calls are now ended.
<b>Main menu</b>	Access to main menu.
<b>Call status</b>	List all held and active calls (e.g. conference call participants).

## Babysitter

If this is active, only **one** number can be dialed.

### Switch on

**Menu** →  → Security  
→ Babysitter

**Select** Press.



Enter phone code.

The phone code (4- to 8-digits) is set by you and entered at the first security setting.

#### **Please note this code down**

(see also p. 14)!

**OK** Confirm input.

**Change** Press.



Select phone number from the Phonebook (p. 27) or enter new number.

**OK** Confirm "On".

### Apply

To dial, hold **down** the control key on the right.

### Switch off



Press **down**.



Enter phone code.

**OK** Confirm input.

**Change** Press.

**OK** Confirm "Off".

# Text entry

## Text entry without T9

Press number key repeatedly until the required letter appears. After a brief interval the cursor will advance. Example:



Press **once briefly** to type the letter **a**, twice to type **b**, etc.

**Hold down** to write the number.

Ä, ä, 1-9

Umlauts and numbers are displayed after the relevant letters.

**Clear**

**Press briefly** to delete the letter before the cursor, **hold down** to erase the whole word.



Move the cursor (forwards/back).



**Press briefly:** Swap between *abc*, *Abc*, *T9abc*, *T9Abc*, *T9ABC*, *123*. Status shown in top line of display.

**Hold down:** All input variants are displayed.

**Press briefly:** Special characters are shown.

**Hold down:** Open input menu.



**Press once/repeatedly:**

.,?!' " 0 - ( ) @ / : \_

**Hold down:** Writes 0.

Writes blank. Press twice = jumps a line.



## Special characters



Press **briefly**. The symbols chart is displayed:

1)	¿	¡	_	;	!	?	,	.
+	-	"	'	:	(	)	/	*
¤	¥	\$	£	€	&	#	\	@
[	]	{	}	%	~	<	=	>
	^	§	Γ	Δ	Θ	Λ	≡	Π
Σ	Φ	Ψ	Ω					

1) Line break



Navigate to characters.

**Select**

Press.

## Input menu

With text input:



Press **down**. The input menu is displayed:

Text format (SMS only)

Input language

Mark text

Copy/Add



## Text entry with T9

"T9" deduces the correct word from the individual key entries by making comparisons with an extensive dictionary.

### Activate, deactivate T9

**Options** Open text menu.

**Text input** Select.

**T9 preferred**

Select.

**Change** Activate T9.

### Select Input language

Select the language in which you want to compose your message.

**Options** Open text menu.

**Text input** Select.

**Input language**

Select.

**Select** Confirm, the new language is set. Languages with T9 support are marked with the T9 symbol.

## Write a word using T9

Since the display changes as you proceed,

**it is best if you finish a word without looking at the display.**

Simply press the keys **once only** where the relevant letter is located. For "hotel", for example:



press briefly for T9Abc then type



Press. A blank ends a word.

Do not use special characters such as Ä but rather use the standard characters, e.g. A; T9 will do the rest for you.

### Additional information



Set a full stop. A word is concluded if it is followed by a space. Within a word, a full stop represents an apostrophe or hyphen:

e.g. **provider.s** = provider's.



Go to the right. Ends a word.



#### Press briefly:

Swap between: **abc, Abc, T9abc, T9Abc, 123**. Status shown in top line of display.

#### Hold down:

All input modes are displayed.



#### Press briefly:

Select special characters (p. 23).


#### Hold down:

Open input menu (p. 23).



again. Repeat until the correct word is displayed.

If the word you want is not in the dictionary, it can also be written without T9.

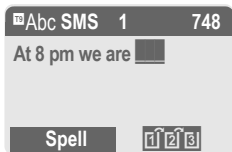

To add a word to the dictionary:

**Spell** Select.

The last suggestion is deleted and the word may now be entered without T9 support. Press **Save** to add it automatically to the dictionary.

## T9 word suggestions

If several options are found in the dictionary for a key sequence (a word), the most probable is displayed first. If the word you want has not been recognised, the next suggestion from T9 may be correct.

The word must be **highlighted**. Then press



again. The displayed word is replaced with a different word. If this word is also incorrect, press

## Correct a word

Words written **with** T9:



Move left or right, word by word, until the required word is **highlighted**.



Scroll through the T9 word suggestions again.

**Clear**

Deletes the character to the left of the cursor **and** displays a new possible word!

Words **not** written with T9:



Move letter by letter to the left/right.

**Clear**

Deletes the letter to the left of the cursor.



Letters are inserted at the cursor position.

### Additional information

Within a "T9-word", individual letters may not be edited without first removing the T9-status. In most cases it is better to rewrite the complete word.

T9® Text Input is licensed under one or more of the following:  
 U.S. Pat. Nos. 5,818,437, 5,953,541, 5,187,480, 5,945 928 and 6,011,554;  
 Canadian Pat. No. 1,331,057;  
 United Kingdom Pat. No. 2238414B;  
 Hong Kong Standard Pat. No. HK0940329;  
 Republic of Singapore Pat. No. 51383;  
 Euro.Pat. No. 0 842 463 (96927260.8)  
 DE/DK, FI, FR, IT, NL, PT, ES, SE, GB;  
 and additional patents are pending worldwide.

## Text modules

Text modules can be stored in the phone for adding to your messages (SMS, MMS).

### Write text modules

**Menu** →  → Text modules

**Options** Select New text.



Write text module.

**Options** Select Save.

Accept the default name or give it a new name, then save with **OK**.

### Use text modules



Write message (SMS, MMS).

**Options** Open text menu.



Select **Text modules**.



Select text module from the list.

**Select** Confirm. The text module is displayed.

**OK** Confirm. The text module is inserted in the message to the right of the cursor.


# Phonebook

Enter frequently used phone numbers in the Phonebook with a special name. If a phone number is stored with a name, it appears on the display when you are called. You can assign important phone numbers to different groups.

## <New entry>



Open Phonebook (in standby mode).

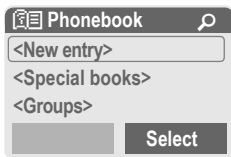

Display input fields.



Select input fields.



Fill in input fields. The maximum number of characters available is shown at the top of the display.

### Number:

Always enter phone number with dialling code. An entry is not saved without a phone number.

### Name:

Enter first and/or last names.

### E-Mail:

Enter e-mail address for MMS (up to 50 addresses).

### Group:

Default: **No group**

**Change** Entries can be organised by groups (p. 31) e.g.: **Family, Friends, Office, VIP...**

### Location:

Default: **SIM**



Select storage location: **Mobile, SIM, Protected SIM** (p. 29).

### Record no.:

Each entry is automatically assigned a record number. You can also dial using the record number (p. 28).



Change the record number.



Press to store the new entry.

### Additional information

Entries are not saved without phone numbers.

**+List** International dialling code ..... S. 18  
Text entry .....p. 23

## Call (search for an entry)



Open Phonebook.



Select a name with the first letter and/or scroll.



Number is dialled.

## Call using record no.

A record number is automatically assigned to every new entry in Phonebook.



Enter record number.



Press.



Press.

## Change entry



Select entry in Phonebook.

**Options**

Press and select **Edit**.



Select input field required.



Make change.

**Save**

Press.

## Phonebook options

The following functions are available, depending on the current situation. Some functions may be applied to the current entry as well as multiple highlighted entries.

Special functions:

**Options**

Open menu.

**Voicedialling**

Record or change voice dialling for an entry. (p. 30).

**Picture**

Assign a picture to a Phonebook entry.

**Send SMS...**

Send as a Phonebook entry or text.

(For standard functions see p. 13)

## Assign picture

Assign a specific picture or photo to Phonebook entries. This picture will appear in the display when there is a call from this number.



Open Phonebook.



Select entry.

**Options**

Open menu.



Select **Picture**. The file system (p. 88) is opened and a list of the pictures is displayed.



Select picture.

**Select**

The picture is displayed.

**Select**

The picture is assigned to the phone number. It appears with a 😊 symbol in the Phonebook.

## Delete/change picture



Select entry with 😊 picture in Phonebook.

**Options**

Press.

**Select**

☑ Select **Picture**.

**Delete**

The assignment is cleared after confirmation.

Or

**Select**

The current image is displayed.

### Additional information

A picture or photo can also be assigned to several phone numbers.

## <Special books>



Open Phonebook (in standby mode).

<Special books>

Select

## <OwnNumbers>

Enter "own" phone numbers in Phonebook (e.g., fax) for information. These numbers can be changed, deleted and also sent as an SMS message.

## <Service numb.>/<Info numbers>

There might be phone numbers saved in your Phonebook that have been provided by your service provider. They may be used to call local or national information services or to use services offered by your service provider.

## <SIM phonebook>

Entries stored in the Phonebook on the SIM card can also be used on other GSM phones.

## <Protected SIM>



On special SIM cards, phone numbers can be stored in a protected location. PIN2 is required for editing (p. 14).

See also function **Only**  (p. 71).

## <Mobile>

Phonebook entries are stored in the phone memory when the SIM card memory is full.

### Completing phone numbers in the Phonebook

Digits may be replaced by a "?" when phone numbers are entered in the Phonebook:



Press **down**.

These wildcards must be replaced with numbers before dialling (e.g., with the extension numbers in a phone system).

To make a call, select the phone number from the Phonebook.



Press.



Replace "?" with numbers.



Phone number is dialled.

## Voicedialling

You can dial numbers by voice command. Up to 20 voice recordings can be saved in the phone for voice dialling or voice commands (not on SIM card!).

### Make a recording



Open Phonebook.



Select entry.



Open menu.

### Voicedialling

Select.



Start recording.

A short signal sounds. Now say the name and **repeat** it when prompted by a beep and display. A beep confirms the recording, which is saved automatically.



Identification of entries in the Phonebook that have voice dialling.

## Apply voice dialling



Press **down** (in standby mode).

Now state the name; the number is dialled.

### Additional information

Noisy environments may affect voice recognition.

## Delete/renew recording

You can delete or renew the voice recording for a Phonebook entry.



Open Phonebook.




Select entry with voicodialling.

### Options

Open menu.



Select  Sprachwahl.

### Delete

Press. Delete voice recording with **Yes**. Phonebook entry is not affected.

Or

### Select

Now you can listen to the recording or renew it.

## Groups




Eight groups are specified in your phone to enable you to arrange your Phonebook entries clearly. You can rename these (**No group**, p. 32).



Open Phonebook (in standby mode).

<Groups>

Select (the number of entries is listed behind the group name).

Groups	
 Leisure	(5)
 Private	(23)
 Business	(11)
<b>Rename</b>	<b>Select</b>



Select group.

### Select

Open group.

## <New entry>

- Insert an entry from the Phonebook.



Open Phonebook.



Select entry.

### Select

Copy entry to the group.

- Create new entry.

### Select

Create a new Phonebook entry (the selected group is the default).



## Change group name

**Rename** Give the selected group a new name.

### Additional information

**No group:** Contains all Phonebook entries that do not belong to a group (name cannot be changed).

SMS to group .....p. 40

## Ring tone for group

Assign a ring tone to a group that plays when one of its members calls you.

**Menu** →  → Audio  
 → Ring tones  
 → Incoming calls  
 → Group calls

 Select group.


**Select** Confirm.

 Select ring tone.

**Select** Confirm.

## Control codes (DTMF)


You can, for example, enter control codes (numbers) for remote access to an automatic answering machine while another connection exists. These entries are transmitted directly as DTMF codes (control codes).


 **menu** Open call menu.


**Send DTMF**  
 Select.


## Use the Phonebook

Store phone numbers **and** control codes (DTMF codes) in the Phonebook in the same way as a normal entry.

 Enter phone number.

 Press until a "+" appears in the display (wait for the connection to be established).

 Enter DTMF codes (numbers).

 If necessary, wait again for three seconds at a time for the receiver to process the entries safely.

 Enter a name.

**Save** Press.

You may also store just the DTMF codes (numbers) and then send them during the call.

# Records

Your phone stores the phone numbers of calls for convenient redialling.

**Menu** → 

**Select** Press.



Select call list.

**Select** Press.



Select phone number.



Dial phone number.


Or

**View** Display information on the phone number.

10 phone numbers can be stored in each call list:

## Calls missed

The phone numbers of calls that you have received but not answered are stored for call back purposes.

 Icon for missed call (in standby mode). Press the control key (left).

The phone number is also displayed if the network supports the "Caller ID" function.

## Calls received

Accepted calls are listed.

## Calls dialled

Access to the last numbers dialled.



Fast access in standby mode.

## Erase records

The records are deleted.

## Call list menu

The call list menu can be called up if an entry is highlighted.

**Options** Open list menu.

**Correct no.** Load number to display and edit there if necessary.

**Save no. to ** Store entry in the Phonebook (see also below).

(For standard functions see p. 13)

# Durat/charges

You can display charge details and the duration of different types of calls while you speak, as well as setting a unit limit for outgoing calls.

**Menu** →  → Durat/charges

Select type of call:

Last call

All outg. calls

All incoming

Remain. units

**Select** Display data.

Once displayed you can:

**Reset** Clear display.

**OK** End display.

## Charge sett.

**Menu** →  → Durat/charges  
→ Charge sett.

**Conv.**

(PIN2 prompt)

Enter the currency in which the charge details are to be shown.

**Personal rate**

(PIN2 prompt)

Enter the charges per unit/period.

**A/c limit**

(PIN2 prompt)

Special SIM cards allow you or the service provider to define a credit or a period after which the phone is barred for outgoing calls.

**Change** Press, enter PIN2.

**A/c limit** Switch on.



Enter number of units.

**OK** Confirm.

Then confirm the credit or reset the counter. The status display for prepaid cards may vary, depending on the service provider.

## Auto display

Call duration and call charges are automatically displayed for each call.



# Camera

Photos you have taken with the integrated camera may be viewed, saved,

- used as wallpaper, startup and shutdown animation and screen-saver, and
- sent as an MMS message.

## Switch on

**Menu** → 

Or



Press **down** (in standby mode).

## Shot

The current (preview) image is displayed.

At the top left of the display, information on the brightness setting for the shot is shown, and on the right the number of shots possible at the selected resolution. The number of possible shots also depends on the size of the image (necessary memory required).

A shot (especially at high resolution) requires a few seconds to be processed and saved.



Setting the brightness.



Press to take a photo.

Or

**Photo**

As the shot is taken, you will hear an advisory tone. The photo is saved automatically with a time stamp as its name (to change the name, p. 36).

**After taking the photo:**

**View pic.** View shot.


**Delete** Delete shot.


## Shot options

**Options** Open menu.

**View pictures** The saved photos are displayed on the phone at a resolution of 101 x 80 pixels. To display them at a higher picture quality (see Image Quality below), you must transfer them to PC.

**Picture quality** Setting the picture quality (pixel resolution).  
 Prem. 352x288 (CIF).  
 High 320x240 (QVGA).  
 Med. 176x144 (QCIF).  
 Low 160x120 (QQVGA).

**Brightness** Set with: 

White balance	Automatic, Indoor, Outdoor Set with: 
Info	Displaying help text.

## Photo album

**Options** Open menu.

View pictures

Select.







Scroll through photos taken.

## Photo options

You can

- use the displayed photo as wallpaper, startup and shutdown animation and screensaver, and
- send it as an MMS message.

**Options** Open menu.

Send MMS	Send photo as MMS (p. 45).
Send to Album 	Save the photo in your personal album your service provider makes available on the Internet.  The provision and description of this facility depends on your service provider.
Full screen	Switch to full screen mode. Also with 
Zoom	Enlarge image section. Navigation using  and  .
Set as...	Use current photo as wallpaper, startup or shutdown animation or screensaver.
Attributes	Information about picture quality.
Filesystem	Open to select saved photos.
Rename	Give the photo a new name.

(For standard functions see p. 13)

### Additional notes

If Please wait appears in the display, the telephone's memory is being reorganised to make the most efficient use of the storage capacity. This operation may take longer than a minute.

# Voice message/mailbox

**Menu** →  → Setup  
→ Voice message

Most service providers offer a mailbox, in which a caller may leave a voice message for you

- if your phone is switched off or not ready to receive,
- if you do not want to answer,
- if you are making a phone call (and **Call waiting** is not activated, p. 64).

If the mailbox is not included in the standard package, you must register for it and, if necessary, make the adjustments manually. Depending on the service provider the following procedure may vary.



## Settings

The service provider supplies you with two phone numbers:

### Save mailbox number

Call this phone number to listen to the voice messages left for you.


**Menu** →  → Setup  
→ Voice message

  Select number from Phonebook or enter/change it

**OK** Confirm.

### Save call divert number

Calls are diverted to this phone number.

**Menu** →  → Phone setup  
→ Divert → e. g., Unanswered  
→ Set



**OK**

Enter phone number.

Registration with the network will be confirmed after a few seconds (for call divert see p. 64).

### Listening to message

A new voice message can be announced as follows, depending on the service provider:



Icon plus beep.

Or



Notification via SMS.

Or

You receive a call with an automatic announcement.

Dial into your mailbox and listen to your message(s).



Hold **down** (if necessary enter mailbox number **once only**). Confirm with **OK** and **Mailbox** depending on your service provider.

# SMS

You can transmit and receive very long messages (up to 760 characters) on your phone. They are automatically composed of several "normal" SMS messages (note higher charges).

Additionally you can insert pictures and sounds in an SMS.

Depending on the service provider, e-mails and faxes can also be sent and e-mails received via SMS (change setting if necessary, p. 44).

## Writing and sending text messages (SMS)

**Menu** →  → New SMS



Text input using "T9" (p. 24) allows you to create longer messages very quickly using just a few key strokes.

**Clear** Press **briefly** to delete letter by letter, hold **down** to delete an entire word.



Press.



Dial number or select from the Phonebook.

**Groups** SMS to group (p. 40).


**OK**

Confirm. The SMS is sent to the service centre for transmission. The sent SMS is saved in the "Sent" list.

**OK**

Back to create a text.

### Displays in the uppermost line:

 Abc SMS 1 739  
We start at 8.

 Abc

T9 active.

abc/Abc/ABC/  
123

Switch between upper-case/letters and digits.

SMS

Display title.

1

Number of SMS messages required.

739

Number of characters still available.

### Additional information

Insert special characters.....p. 23

Insert pictures & sounds .....p. 39

SMS profile.....p. 44

Message type, Validity period, Service centre may be requested .....p. 44

## Text options

**Options** Open text menu

Save	Save composed text in draft list.
Picture&sound	Add pictures, animations and sounds into message (see following text).
Text modules	Insert text module (p. 26).
Format	Line feed Small font, Medium font, Large font Underline Def. alignment, Left, Right, Centre Mark text (highlight text using control key)
Clear text	Delete the whole text.
Insert from...	Insert entry from Phonebook.
Send via ...	Select an SMS profile for transmission (p. 44).

(For standard functions see p. 13)

## Picture&sound

Send pictures and sounds with or without accompanying text.

The text input field opened...

**Options** Open menu.



Select **Picture&sound**.

The menu contains:

Fix animations

Fix sounds

Own anim.

Own pictures

Own sounds



Select section.

**Select** Confirm.

The first entry of the selected section is displayed.



Scroll to entry required.

For **Fix animations/Fix sounds**:

**Select** the selection is added to the SMS.

For **Own anim./Own pictures/Own sounds**:

**Select** the selection is displayed/played back.

**Select** the selection is added to the SMS.



### Additional information

#### EMS (Enhanced Messaging Service)

You can use this service to send pictures and sounds in addition to (formatted) texts (p. 39). Playback only occurs if the destination phone supports the EMS standard.

This can result in messages that are longer than a single SMS. If this happens the individual SMS's are linked together into a single message.

#### SMS status report

If the message cannot be transmitted to the service centre you are offered the chance to repeat the transmission. If this also fails, contact your service provider. The **Message sent!** message only indicates transmission to the service centre. This will then attempt to relay the message within a certain period.


See also **Validity period** (p. 44).

#### SMS push

This function allows you to dial an Internet address (URL) directly from a received SMS. The highlighted URL is displayed after the highlighting. Pressing the Call key automatically starts the WAP browser and dials the highlighted Internet address.

## SMS to group


You can send an SMS message as a "circular" to a recipient group.

- Options** Open menu.
- Send** Select.
- Group** The list of groups is displayed.
-  Select group.
- Select** Open group and select all/individual entries
- Select** Transmission is started after confirmation.

## Read SMS



Arrival of new SMS announced on display.

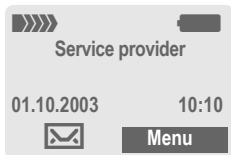

To read the SMS press the left control key.

Date/time

01.10.2003 10:10

Tel. no./sender

55536989876

Message

Are we meeting tomorrow?

Reply

Options



Scroll through message line by line.

**Reply**

See below.

**Options**

See p. 43.

## Reply options

**Reply**

Open reply menu.

**Write mess.**

Create a new reply text.

**Edit**

Edit received SMS or add new text.

**Answer is YES**

Add YES to the SMS.

**Answer is NO**

Add NO to the SMS.

**Call back**

Add a standard text as a reply to the SMS.

**Delay**

**Thank you**

When the SMS has been edited, it can be saved or sent with **Options**.


### Phone number/URL in SMS

Phone numbers **markiert** in the text can be dialled or saved in the Phonebook. It is also possible to select and call URLs (Internet addresses) directly and start an HTTP download. The HTTP profile (p. 70) or WAP profile (p. 54) must be set and activated.



Press to dial phone number/download.

### Download ringtones and logos

You can receive links for downloading ringtones, logos, screensavers, animations and information about applications (p. 55) with an SMS. Please highlight this link and, by pressing the Call key , start the download. Please ensure that the HTTP profile (p. 70) and the connection (p. 69) are configured.



### Message memory full

If the message icon flashes the SIM memory is full. **No** more SMS messages can be received. Delete or file messages (p. 43).

## Lists

All SMS messages are archived in different lists, according to their status:

### Inbox

**Menu** →  → Inbox → SMS

The list of received SMS messages is displayed.

### Draft

**Menu** →  → Draft → SMS

The list of not yet transmitted SMS messages is displayed.

### Unsent

**Menu** →  → Unsent → SMS

The list of concatenated SMS messages not yet completely sent is displayed. Transmission can be restarted.

### Sent

**Menu** →  → Sent → SMS

The list of sent SMS messages is displayed.

## List options


Each list offers different functions:







<b>View</b>	View entry.
<b>Reply</b>	Answer incoming SMS messages immediately.
<b>Mark a.un-read</b>	Mark message as unread.
<b>Save no. to </b>	Copy a highlighted phone number to Phonebook.
<b>Archive</b>	Move SMS message to archive.
<b>Send via ...</b>	Select an SMS profile for transmission (p. 44).
<b>Picture&amp;so und</b>	Save pictures or sounds from the SMS.
(For standard functions see p. 13)	
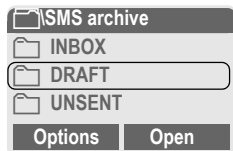
## SMS archive

**Menu** →  → SMS archive

The list of SMS messages stored in the phone is displayed.



- |   |                       |
|---|-----------------------|
|  | Unread.               |
|  | Read                  |
|  | Draft.                |
|  | Sent.                 |
|  | Entry on SIM card.    |
|  | Concatenated message. |

Different functions are available, depending on the context:

## Archive options

See **Listen-Optionen** and **Filesystem**, p. 88.

## SMS profiles

**Menu** →  → Setup → SMS

Up to 5 SMS profiles can be set. The transmission characteristics of an SMS are defined in these. The pre-setting depends on the SIM card inserted.



Select profile.

**Options** Open menu.

Change sett.

Select.

**Service centre** Enter or change the service-centre phone numbers as supplied by service provider.

**Recipient** Enter the standard recipient for this transmission profile or select from Phonebook.

**Message type** **Manual**  
The message type is requested for each message.

**Standard text**

Normal SMS message.

**Fax**

Transmission via SMS.

**E-mail**

Transmission via SMS.

**New**

You may need to obtain the required code number from your service provider.

**Validity period**

Select the period in which the service centre is to try to deliver the message:

**Manual, 1 hour, 3 hours, 6 hours, 12 hours, 1 day, 1 week, Maximum**

\*) Maximum period that the service provider permits.

**Status report**



You will receive confirmation whether delivery of a message has been successful or unsuccessful. This service may be subject to a charge.

**Direct reply** 

The reply to your SMS message is handled via your service centre when Direct Answer is activated (for information please contact your service provider).

**SMS via GPRS**



Send SMS automatically by GPRS (if available).

Requirement: GPRS is activated (p. 68). Ensure that your service provider offers this function.

**Save aft. send**

Sent SMS messages are saved in the **Sent** list.

## Activate profile



Select profile.

**Activate**

Press to activate profile.

## MMS

The **Multimedia Messaging Service** enables you to send texts, pictures (also photos) and sounds in a combined message to another mobile phone or to an e-mail address. All elements of an MMS message are merged to form a "slide show".

Depending on your phone's settings, you will receive either the complete message automatically or notification that an MMS has been saved in the network, giving sender and size details. You may then download it to your phone to read it.

Ask your service provider whether this service is available. You may need to register for this service separately.

## Writing/sending MMS messages

An MMS consists of the address header and the content.

An MMS message can consist of a number of pages. Each page can contain text, a picture and a sound.

**Texts** can be written with the help of T9 (p. 24).

**Pictures** and **graphics** that have been produced with accessories such as digital cameras can be attached in JPEG, WBMP or GIF format. See also **Filesystem**, p. 88.

**Music** is sent and received in a MIDI file, single tones/sounds in an AMR file.



### Navigation



Scroll line by line with the control key.

**Menu** →  → **New MMS**

### Input fields:

**To:**   Phone number/e-mail address of recipient(s).

**Subject:** Enter MMS heading (up to 40 characters).

**Picture:** Press **Insert**. The picture list is opened for selection (see also **Filesystem**, p. 88).

**Text:** Press **Edit**. Write text with the help of T9. Text menu, see p. 47.

**Sound:** Press **Insert**.

**Filesystem:** You can now select a stored melody (see also p. 88).

**New sound:** Record new tones, for sending by MMS only (see below).

**Slide duration:**

Enter length of display for individual pages (minimum 0.1 seconds).

**New recording**

The phone records via its microphone.

**Record** Start recording. The current recording duration and available time remaining are displayed.

**Stop** End recording.

**Play** Replay recording.

**Save** Save. To give the recording its own name, the description **Clear**.

**OK** Save.

**Attach extra pages**

**Options** Open menu.

**New slide** Select.

**Additional information**

**Options** MMS main menu ..... p. 47

**Attach business card**

**Options** Open menu.

**Extras** Select.



Scroll to **Businesscard**.



Attach business card.

**Attach appointment**

**Options** Open menu.

**Extras** Select.



Scroll to **Appointment**.



Import appointment from calendar.

**Check MMS**

Check the MMS message before sending it:

**Options** Open menu.

**Preview slide**

View a single page.

**Prev. message**

Play back the whole MMS in the display. Press key to cancel.

**Send MMS.**

**Options** Open menu.

**Send** Select.

## Text options

**Options** Open menu.

Line feed	Start new line.
Save	Save MMS text.
Clear text	Delete the whole text.
Text modules	Insert text module (p. 26).
(For standard functions see p. 13)	

## MMS options

Different functions are available, depending on the context:



Insert line	Extend address field by one line.
Insert from...	Insert number from Phonebook and appointments.
Save	Store MMS in the draft list.
New slide	Insert new page behind current one.
Delete item	Delete element on a page.
Delete slide	Delete page currently displayed.
Preview slide	Playback of complete page.
Slide list	Display pages available for selection.
Prev. message	Playback of complete MMS. Use any key to cancel.

**Attributes** Date:, Size:, Priorität: of the MMS must be shown.

**Extras** Enter other features of MMS and attach Businesscard and Appointment.

(For standard functions see p. 13)

## Receive MMS

  Indicates Receipt/notification of an MMS.



Press the left control key to read the MMS or notification.

Depending on the setting, (p. 50) the

- complete MMS is received
- or the notification is opened. Press **Receiving** to receive the complete MMS.

Press any key to break off function.



## Read MMS

**Play** Automatic presentation of the MMS. Use any key to cancel.



Scroll page by page with the control key.



Call up individual pages directly by number key.

## Attachments

An MMS can contain several attachments.

**Options** Open menu.

### Attachments

Select.



Select attachment.

**Open** The attachment is opened with the available application.

**Save** The attachment is saved under a name.

## Pictures and sounds

You can save pictures and sounds individually, e.g. as a ring tone or wallpaper. Stop the MMS by pressing any key, or alternatively scroll through to the required page.

**Options** Open menu.

**Content** Select. Proceed as for attachments above.

Other functions for editing MMS can be found under **Options**.

## Lists

All MMS messages are saved in four different lists:

### Inbox

**Menu** → → Inbox → MMS

The list of MMS messages and notifications received is displayed. To receive an MMS subsequently, open notification and press **Receiving**.

### Draft

**Menu** → → Draft → MMS

The list of stored drafts is displayed.

### Unsent

**Menu** → → Unsent → MMS

The list of the MMS messages not yet completely transmitted is displayed.


### Sent

**Menu** → → Sent → MMS

The list of sent MMS messages is displayed.

## List options









Different functions are available, depending on the list/context.

<b>View</b>	Show MMS Info.
<b>Play</b>	Read MMS.
<b>Reply</b>	Reply to MMS immediately.
<b>Receive MMS</b>	Start inward transmission of MMS when only notification is highlighted (p. 50).
<b>Receiv.all MMS</b>	Start receipt of all new MMS messages.
<b>Forward</b>	Forward MMS to new recipients.
<b>Mark a.unread</b>	Mark MMS as unread.
<b>Save no. to </b>	Copy phone number/e-mail address into Phonebook.
<b>Attributes</b>	Information on MMS is displayed: <ul style="list-style-type: none"> <li>• Sender</li> <li>• Arrival time</li> <li>• Subject</li> <li>• Size</li> <li>• Priority</li> </ul>
<b>Preview slide</b>	Play back current page.
<b>Slide list</b>	Display pages available for selection.
<b>Attachments</b>	Open list of attachments received.

<b>Content</b>	Selection of page contents to be archived, such as picture or sound.
----------------	--

<b>Save</b>	Store MMS in outbox list.
-------------	---------------------------

(For standard functions see p. 13)

	MMS unread		MMS read and forwarded
	MMS read		MMS read with despatched confirmation
	MMS draft		Notification unread
	MMS sent		Notification read

## MMS profiles

**Menu** →  → Setup → MMS

A number of MMS profiles can be selected. The transmission characteristics of an MMS are defined in these.



Select profile.

**Options** Open menu.

Change sett.

Select.

**Expiry time** Select the period in which the service centre is to try to deliver the message:

Manual, 1 hour, 3 hours, 6 hours, 12 hours, 1 day, 1 week, Maximum\*

\*) Maximum period that the service provider permits.

**Def. priority** Send priority: Medium, High, Low

**Def. duration** Length of display for an MMS page (standard requirement).

**Retrieval** Receive complete MMS or only notification of arrival.

**Automatic**  
Receive complete MMS immediately.

**Auto.homenet**  
Receive complete MMS immediately in home network.

**Manual**  
Receive notification only.

**MMS relaysrv.** MMS relay URL, e.g. <http://www.webpage.com>

**IP settings** **IP address:**  
Enter IP-address.  
**Port:** Enter port number.  
**Port:** Enter port number.  
These settings can be different from those of the WAP browser.

**Conn.profile:** Select or set access profile (p. 69).

### Activate profile



Select profile.

**Activate** Press to activate profile.

# CB services

**Menu** →  → Setup  
→ CB services

Some service providers offer information services (info channels, Cell Broadcast). If reception is activated, your **Topic list** will supply you with messages on the activated topics.

## Receive CB

You can activate and deactivate the CB service. If the CB service is activated, standby time for the phone will be reduced.

## Read new CB

All unread CB messages are displayed.

## Topic list

You can add topics to this personal list from the topic index (**Topic index**). 10 Entries may be entered using the channel number (ID) and, if required, the name itself.

**New topic** Select.

- If no topic index (**Topic index**) is available, enter a topic with its channel number and confirm with **OK**.
- If the topic index has already been transmitted, select a topic and activate with **Options**.

**Channel:** Select


**Options** Open list menu.

If a topic is selected in the list you can view it, activate/ deactivate it, edit it or delete it.

## Auto display

CB messages are displayed in standby mode, longer messages are scrolled automatically. This display can be activated/deactivated for all or only new messages.

For "full page view":

 press, then press **View CB**.

## Topic index

Activate/deactivate transmission of topic index.

## CB languages

Receive Cell Broadcast messages in only one specific language or in all languages.

### Displays



Topic activated/deactivated.



New messages received on the topic.




Messages already read.

# Surf & fun

## Internet browser (WAP)

Get the latest information from the Internet that is specifically adapted to the display options of your phone. In addition, you can download games and applications to your phone. Internet access may require registration with the service provider.

### Note

Depending on your service provider, you may have direct access to its portal instead of the Surf&Fun menu option. Contact your service provider for details of the services offered on the portal. In this case, you will find the **Internet** and **Games & more** menu options in the **Extras**  menu.


## Internet access



**Menu** →  → **Internet**

The browser is activated as soon as you call up the function. (For settings see the **browser menu**, **Setup**, **Start with...**, p. 53).

For example the start menu appears:

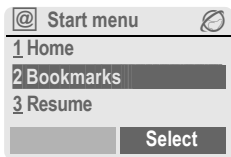

Select required function.

**Select**

Confirm.

## Start menu

**Home** The connection to the provider's portal is set up. This may be defined or pre-set by your service provider.

**Bookmarks** List of URLs stored in the phone for fast access.

**Resume** Call up recently visited pages that are still in the memory.

**Inbox** Inbox for messages from the WAP server (WAP push).

**Profiles** The list of profiles is displayed for activation/setting (p. 54).

**Exit browser** Close browser and clear down connection.

## End connection



Hold **down** to terminate the connection and close the browser.

Your Internet browser is licensed by:



OPENWAVE™



## Browser menu

If the browser is active, the menu can be activated as follows:



Press.

or



Confirm.

Home	The connection to the provider's portal is set up. This may be defined or pre-set by your service provider.
Bookmarks	Up to 50 URLs stored in the phone for fast access.
Resume	Call up most recently visited page still in the memory.
Go to...	Enter URL to access WAP page directly, e.g. <b>wap.siemens-mobile.com</b> Select from list of most recently visited WAP addresses.
Reload	Reload page.
Inbox	Inbox for messages from the WAP server (WAP push).

Disconnect	End connection.
Save bitmap	Save picture(s) on the page shown.
More ...	See below.
Exit browser	Close browser and clear down connection.








## More ... (in menu)

Profiles	The list of profiles is displayed for activation/setting (p. 54).
Setup	<p>Font size</p> <p>Protocol parameters</p> <ul style="list-style-type: none"> <li>• Push</li> <li>• Push can force online</li> <li>• Timeout for unanswered network requests</li> </ul> <p>Security</p> <ul style="list-style-type: none"> <li>• Connection prompt</li> <li>• Secure prompt</li> <li>• Current certificate</li> <li>• CA certificates</li> <li>• Private Key PINs</li> <li>• Encryption</li> </ul> <p>Start with...</p> <ul style="list-style-type: none"> <li>• Start menu</li> <li>• Browser menu</li> <li>• Home</li> <li>• Resume</li> <li>• Bookmarks</li> </ul>

Reset	Restart session and clear cache.
-------	----------------------------------

About Openwave	Display browser version.
----------------	--------------------------

**Additional information**

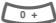	Browser menu.
	Offline.
	Online.
	GPRS Online.
	No network.
	Select special characters, such as @, ~, \, see p. 23.
	Press repeatedly for: . , ? ! ' " 0 - ( ) @ / : _

**WAP profiles**

**Menu** →  → Internet → Profiles

Preparation of the phone for WAP Internet access depends on the current service provider:

- The settings have already been implemented by the provider. You can start immediately.
- Access profiles for a number of providers have already been set. Then select and activate profile.
- The access profile must be set manually.

If necessary, check with your service provider for details.

**Activate WAP profile**

You can change the current profile each time you access the Internet.



Select profile.

**Select**

Activate. The current profile is selected.

**Set WAP profile**

Up to 5 WAP profiles can be configured (may be barred by your provider). The entries may vary depending on the service provider:



Select profile.

**Edit**

Open to make settings.

**Profile name**

Enter/change name.

**WAP param.**

**IP address:** Enter IP address.

**Port:** Enter port number.

**Homepage:** Enter homepage, if not set by the service provider.

**GPRS  
lingertime  
CSD  
lingertime** Time in seconds after which a connection should be ended if no input or data exchange takes place.

**Conn.pro-  
file:** Select or set access profile (p. 69).

**Save**

Save settings.

## Games & more

Download games and other applications. You are advised about relevant applications on the Internet. Once you have selected a game or application you can start to download it immediately. Then you can use the application. Most applications include instructions.

### Additional information

To download applications, the WAP profile (p. 54), HTTP profile (p. 70) and access (p. 69) must be configured.

Depending on your service provider, access and functionality may deviate from the description given here.

Sounds (ringer)/silent alert on/off .....p. 62

Applications and games can be found at:

[wap.siemens-mobile.com](http://wap.siemens-mobile.com)


or on the Internet at:

[www.siemens-mobile.com/city](http://www.siemens-mobile.com/city)

## Games and applications

Applications and links that are already stored on the phone are found under:

**Menu** →  → Games & more

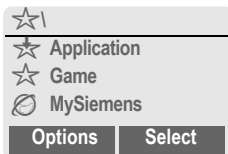

Different functions are available depending on which entry is highlighted:

 **Use game/application offline**

**Select** Runnable application can be started immediately.

 **Load game/application online**

**Select** Only description file; application has still to be loaded.

 **Load link (optional)**

**Internet** The selected Internet page is loaded.




## Receive information

If information required, say, by an application that has already been installed, is received via **SMS**, the ☆ symbol appears in the display. Pressing on the left of the control key starts the relevant application and the information is processed.

### Additional information

The following key control is used for many games (virtual joystick):

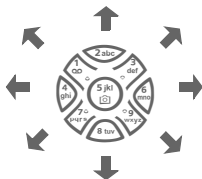

## Games & More options

Edit and manage your applications and folders:

<b>Start</b>	Start application.
<b>Download</b>	An application is downloaded from the Internet and installed.
<b>New folder</b>	Create and name new folder.
<b>Move</b>	Move applications between folders.
<b>HTTP profile</b>	The list of profiles is displayed for activation/setting (p. 69).
<b>Reinstall</b>	Reinstall an application (update).
<b>More info</b>	Download further instructions via Internet (WAP), if available.
<b>Details</b>	Show details of the application/folder (name, version, size, path, producer, date).
<b>Sort</b>	Set sort criteria (alphabetical, time).
(For standard functions see p. 13)	

**Additional information**

You can use WAP to download applications (e.g. ring tones, games, images, animations) from the Internet. Downloading or running applications will not affect or change the software already installed on your Java™-enabled mobile phone. Siemens excludes all warranty and liability claims in respect of or in connection with any applications subsequently installed by the customer and any software not included in the original delivery package. This also applies to functions enabled subsequently at the customer's instigation. The purchaser bears sole risk for the loss of, damage to, and any defects arising in, this device or the applications and for any direct damage or consequential damage of whatever nature resulting from the use of this application.

For technical reasons, such applications and subsequent enabling of certain functions are lost in the event of the device being replaced/re-supplied and may be lost if it is repaired.

In such cases, the buyer is required to download or re-install the application again. Please ensure that your phone has Digital Rights Management (DRM) so that individual applications downloaded via WAP are protected from unauthorised reproduction. These applications are then exclusively intended for your phone and cannot be transferred from this even to create a backup. Siemens does not warranty, guarantee or accept any liability for the customer's ability to download or enable applications again or to do so free of charge. Where technically possible, back up your applications to PC using the Siemens Data Exchange Software (p. 90).

# Setup

## Profiles

Several settings can be stored in a phone profile in order, for example, to adapt the phone to the surrounding level of noise.

- Five standard profiles are provided with default settings. They can be changed however:

Normal envi.

Quiet environ.

Noisy environ.

Car Kit

Headset

- You can set two personal profiles (<Name>).
- The special profile **Aircraft mode** is permanent and cannot be changed.

**Menu** →  → Profiles

## Switch on



Select default profile or personal profile.

**Select**

Switch on profile.

<input type="radio"/>	Normal envi.
<input checked="" type="radio"/>	Quiet environ.
<input type="radio"/>	Noisy environ.
<b>Options</b>	
<b>Select</b>	

## ProfileSetup

Edit a default profile or create a new personal profile:



Select profile.

**Options**

Open menu.

**Change sett.**

Select.

The list of available functions is displayed:

Ringer setting .....	p. 62
Volume .....	p. 62
Silent alert.....	p. 62
Call screening.....	p. 63
Info tones.....	p. 63
Key tones.....	p. 63
Illumination .....	p. 61
Big letters.....	p. 61

When you have finished setting a function, return to the profile menu where you can change a further setting.

### Additional information


- Calling the list in standby mode:



**Press** briefly.



Profile list is displayed.

- The active profile is marked with .

## Profile options

**Options** Open menu.

**Change sett.** Change profile settings.

**Copy from** Copy settings from another profile.

**Rename** Change individual profile (except default profiles).

## Car Kit

If a Siemens original Car Kit (p. 100) is used, the profile is activated automatically as soon as the phone is inserted into the cradle (p. 75).

## Headset

If an original Siemens headset is (p. 99) used, the profile is activated automatically as soon as the headset is in operation.

## Aircraft mode

All alarms (appointments, alarm clock) are deactivated. This profile **cannot be modified**. The phone will switch off if you select this profile.

### Switch on



Scroll to **Aircraft mode**.

### Select

Switch on profile.

A security prompt must be confirmed.

The phone switches itself off automatically.

## Normal mode


When you switch on your phone again, the previously set profile will be reactivated automatically.

## Display

**Menu** →  → Display  
→ Select function.

## Language

Set the language of the display text. When "automatic" is set, the language of your service provider is used. If a language that you do not understand happens to be set, the phone can be reset to the language of your service provider with the following input (in standby mode):

\*#0000# 

## Text input

See also p. 24.

### T9 preferred

Activate/deactivate intelligent text entry.

### Input language

Select language for text entry. Languages with T9 support are marked with the T9 symbol.

## Wallpaper

Set wallpaper graphic for display.

## Logo

Choose picture to be displayed instead of the provider logo.

## Colour scheme

Select colour scheme for the entire user interface.

### Activate colour scheme



Select colour scheme.

**Select** Activate.

### Load colour scheme

Up to three colour schemes can be included in the selection list in places 2 to 4. These can be loaded by WAP, for example.


**Options** Open menu.

**Load** Select colour scheme.

## Screensaver

The screensaver shows a picture in the display when a period set by you has elapsed. The function is ended by an incoming call or by pressing any key.

<b>Enable</b>	Activate/deactivate screensaver.
<b>Style</b>	Digital clock, Analog clock, Bitmap or Energy saving.
<b>Bitmap</b>	Select picture in file system.
<b>Preview</b>	Display screensaver.

<b>Timeout</b>	Set period after which the screensaver starts.
<b>Security</b>	Phone-code protected termination of screensaver.
<b>Auto key lock</b>	The keypad is locked automatically if no key has been pressed for one minute in standby mode. Unlocking: Hold  <b>down</b> .

### Additional information

You can also receive individual logos, screensavers and animations by SMS (p. 38), MMS (p. 45) or WAP (p. 52). See also **My phone** (p. 16).

## Start up anim.

Select animation to be shown when phone is switched on.

## Shutdn anim.

Select animation to be shown when phone is switched off.

## Own greeting

Enter greeting to be displayed instead of animation when phone is switched on.

### Change

Switch on/off.



Delete old message and create new message.

### OK

Confirm changes.

## Big letters

You can choose between two font sizes for the display.

## Illumination

Set display light brighter/darker. The darker the setting the longer the standby time.



Press the control key repeatedly to adjust up or down.

## Contrast

Set display contrast.



Press the control key repeatedly to adjust up or down.

## Audio

**Menu** →  → Audio  
→ Select function.

You can set the tones to match your needs.

### Ringer setting

**On/Off**    Activate/deactivate all tones.

**Beep**      Reduce ring tone to a short signal (beep).

#### Additional information



Switch ringtone on/off.



Display: Beep.



Display: ringer off.

### Silent alert

To avoid the disturbance caused by a ringing phone, you can activate the silent alert function as an alternative. The silent alert can also be activated in addition to the ring tone (e.g. in noisy environments). This function is deactivated when the battery is being charged.

The silent alert is activated if the highest volume is set for the ring tone. This is to remind you **not to hold the phone to your ear when ringing** in order to avoid damaging your hearing.

## Volume

Set different volumes for types of call/functions.



Select:

Incoming calls (see below)

Alarm

Alarm clock

Messages

Cell broadcast

Start melody

End melody

Applications

**Select**

Press. Der Klingelton wird wiedergegeben.




Set volume.

**OK**

Confirm.

### Incoming calls

You can assign different volumes to  **Calls**, **Other calls** and each group in the Phonebook.

#### Additional information

Please make sure you have accepted the call before holding the phone to your ear. This will avoid damage to your hearing from loud ring tones.

If two independent phone numbers are registered on your phone, you can set different volumes for them (p. 73).

**Menu** →  → Audio  
→ Select function.

## Ring tones

Set different ring tones for types of call/functions.



Select:

- New ringtone (p. 85)
- Incoming calls (see below)
- Alarm
- Alarm clock
- Messages
- Cell broadcast
- Start melody
- End melody


**Select** An already assigned ring tone is played back or the list of possible ring tones is displayed.



Select ringtone.

**Select** Confirm.

## Incoming calls

You can assign different volumes to  Calls, **Other calls** and each group in the Phonebook.

### Additional information

Individual ring tones can be sent to you via **SMS/MMS** or you can download them via **WAP** (p. 52). See also **My phone**, (p. 16), **File formats**, (p. 88).

## Call screening



Only calls from numbers that are in the Phonebook or in a predefined group are signalled. Other calls are only displayed. If you do not accept these calls, they are diverted to your mailbox (if set, p. 64).



Screen display in standby mode:  
call screening is activated.

## Key tones

You can set the type of acoustic key tone:

Click or Tone or Silent

## Minute beep

During a call, you will hear a beep after each minute as a reminder of the time elapsed. The recipient does not hear this beep.

## Info tones

Set service and alarm tones:

**On/Off** Activate/deactivate tones.

**Extended** If switched on, a wider range of service tones is available, e.g.: Menüende erreicht, Netzverbindung unterbrochen.




## Keys

**Menu** →  → Keys  
→ Select function.

### Any to answer

Incoming calls can be accepted by pressing any key

(except for ).

### Auto key lock

If activated, the keypad is locked automatically if no key has been pressed for one minute in standby mode. This prevents the phone from being used accidentally. However, you can still be called and you can still make an emergency call.

#### Additional information

The keypad can also be directly locked and unlocked in idle state.

In each case:



Hold **down**.

### Key tones

You can set the type of acoustic key tone:

Click or Tone or Silent

## Phone setup

**Menu** →  → Phone setup  
→ Select function.

### Call waiting

If you are registered for this service, you can check whether it is set and you can activate/deactivate it (see also p. 20).

### Hide ID

When you make a call, your phone number can be displayed on the recipient's display (depending on the service providers).

To suppress this display, you can enable the "Hide ID" mode for all subsequent calls or just for the next call. You may need to register separately with your service provider for these functions.

### Divert

You can specify when calls should be diverted to your mailbox or other numbers.

**Set up call divert (example):**

The most common condition for call divert is, for example:

**Unanswered**

Select **Unanswered**.  
(Includes the conditions **Not reachable**, **No reply**, **Busy**, see below)

**Select**

Press.

**Set**

Select.  
Enter the phone number to which the caller will be diverted (If not already entered)

**Or**

Select this phone number from the Phonebook or via **Mailbox**.

**OK**

Confirm. After a short pause, the setting is confirmed by the network.

**All calls**

All calls are diverted.



Symbol in the top line of the display in standby mode.

**Not reachable**

Divert occurs if phone is switched off or is out of range.

**No reply**

A call is only diverted after a delay that is determined by the network. The period can be set to a maximum of 30 seconds in 5 second intervals.

**Busy**

Divert occurs if a call is in progress. If **Call waiting** is activated (p. 64), you will hear the call waiting tone during a call.

**Receiving fax**

Fax calls are diverted to a number with a fax connection.

**Receiving data**

Data calls are diverted to a phone number with a PC connection.

**Status check**

You can check the current divert status for all conditions.

After a short pause, the current situation is transmitted by the network and displayed.



Condition set.

Not set.



Display if status is unknown (e.g. with a new SIM card).

**Clear all**

All set diverts are cleared.

**Menu**

Phone setup

→ Select function.

**Additional information**

Note that the divert is stored in the network and not in the phone (e. g., when the SIM card is changed).

**Check condition or delete it**

First select the condition.

**Select** Press.

**Check status**

Select.

**Or**

**Delete** Select.

**Reactivate divert**

The last divert has been stored. Proceed as with "Set divert". The stored phone number is displayed. Confirm phone number.

**Edit phone number**

Proceed as with "Set divert". When the stored number is displayed:

**Delete** Press. The phone number is deleted.

Enter new number and confirm.

**Fact. settings**

The phone is reset to the default values (factory setting) (does not apply to SIM card or network settings).

Alternative input in standby mode:

\*#9999#

**Filesystem**

(Phone-code protected)

**Format**

The file system memory (p. 88) is formatted and **all** data that has been saved is deleted, including e.g. ringtones, images, games etc.

**Clean up**

The file system is defragmented.

**Menu** →  → Phone setup  
→ Select function.

## Phone identity

The phone identity number (IMEI) is displayed. This information may be useful for customer service.

Alternative input in standby mode:  
**\*#06#**

### Software version

Display the software version for your phone in standby mode:

**\*#06#**, then press **Info**.

## Auto off

The phone switches off each day at the set time.

### Activate:

**Time** Press.



Enter time  
(24-hour-clock).

**OK** Confirm.

### Deactivate:

**Manual** Press.

**OK** Confirm.

## Clock

**Menu** →  → Clock  
→ Select function.

## Time/date

The clock must be set to the right time once at start-up.

**Change** Press.



First enter the date  
(day/month/year), then  
the time (12 hours,  
including seconds).

### Additional information

If the battery is removed for longer than 30 seconds, the clock must be reset.

Setting date format:

DD: Day (2-digit)

MM: Month (2-digit)

YYYY: Year (4-digit)

## Time zones


Set the time zone for your area.



Select the required time  
zone from list ...

**Set** ... and set.

**Options** Open menu.

<b>Set</b>	Set the timezone.
<b>Rename</b>	Assign a new name to time zone.
<b>DST</b>	Activate/deactivate daylight saving. When daylight saving is activated a sun icon appears on the display.
<b>Auto timezone</b> 	The time zone is switched automatically to local time by the network.
<b>View</b>	Display the selected time zone with name and date.

## Date format

DD.MM.YYYY or MM/DD/YYYY

## Time format

Select 24h or 12h.

## Show clock

Activate/deactivate time display in standby mode.

## Buddhist year

Switch to the Buddhist year (not on all phone models).

## Connectivity

**Menu** →  → **Connectivity**  
→ Select function.

## GPRS



(General Packet Radio Service)

GPRS is a new method for transmitting data faster in the mobile network. Use GPRS and if the network has sufficient capacity, you can be connected to the Internet permanently. Only the actual transmission time is charged by the network operator. Some service providers do not yet support this service.

**Yes / No** Switch GPRS function on/off.

Shown in display:

<b>GPRS</b>	Activated and available.
<b> GPRS </b>	Registered.
<b>GPRS</b>	Connection briefly lost.
<b>GPRS▶</b>	Download.

## GPRS info

Display of information on connection status.

## Authentication

**Change** Activate or deactivate encrypted WAP dial-up (CSD connections only).

**Menu** →  → **Connectivity**  
→ Select function.

## Data services

For the **MMS**, **WAP** and **HTTP** applications at least one connection profile must be set up and activated.

The default for the phone depends on each service provider:

- The settings have already been implemented by the provider. You can start immediately.
- Access profiles have already been created by your provider. Then select and activate profile.
- The access profiles must be configured manually.

If necessary, check with your service provider for details. Current settings for each service provider may be found in the Internet under [www.siemens-mobile.com/customer-care](http://www.siemens-mobile.com/customer-care) in the FAQ section.



Select profile.

**Options** Open menu.

Change sett.

Press, then:

## For CSD (Circuit Switched Data)

### CSD settings

Select.

If it has not been preconfigured, enter the data or enter the required settings (your service provider will supply you with information on this):

**Edit** Press.

Dial-up number	Enter ISP number.
Call type:	Select ISDN/analogue.
Login name:	Enter login name.
Password:	Enter password (shown as a series of asterisks).
DNS1 / DNS 2:	(optional).

**Save** Save settings.

## For GPRS (General Packet Radio Service)

### GPRS settings

Select.

You can activate GPRS for the profile and change the settings here. You can only start to use GPRS once you have activated GPRS on your phone (p. 68).

**Edit** Press.

**APN:** Enter service provider address.

**Login name:** Enter login name.

**Password:** Enter password (shown as a series of asterisks).

**DNS1 / DNS 2:** (optional).

**Save** Save settings.

**Menu** →  → **Connectivity**  
→ Select function.

## HTTP profile



Select profile.

## Fax/data mod.

### Fax/data mode using a PC

With the phone and a connected PC, you can transmit and receive faxes and data. Appropriate software for fax and data communication must be available on your PC and there must be a connection to the phone.

Fax and data services must be enabled by the service provider. There are variations in fax and data reception, depending on the network. Please ask your service provider about this.

**Change** Set the required mode.

### Send vce/fax



Set this function on the phone **before** transmission so that you can switch from voice mode to fax mode.

While the connection is being set up, the following function is available for two seconds:


**Voice/fx** Switch to **Send vce/fax** mode; you may now send a fax.

### Voice/fax rec

(**Only** if no special fax or data number is available).

Start the required communication program on your PC and select the function on the phone **during** the call (the PC will take over the connection).

### End transmission

End transmission with PC software and/or press .

### Rec fax/data



Your service provider has given you a number for telephoning and a fax/data number.

The call is signalled by a special ringtone and the type of call (fax or data) is displayed.

Now start the communication program in your PC to receive the fax/data.

## Security

**Menu** →  → Security  
→ Select function

The phone and SIM card are protected against misuse by several security codes.

### Codes

**PIN control, Change PIN, Change PIN2, Chg.phonocode**, (p. 14).

### Babysitter

(Phone-code protected)

Only **one** phone number can be dialled. To do this hold **down** the right control key (p. 22).

### Only



(PIN2 protected)

Dialling options are restricted to SIM-protected phone numbers in the Phonebook. If only area codes are entered, relevant phone numbers can be added to these manually before dialling.

If the SIM card does not support PIN2 input, the **whole** Phonebook can be protected with the phone code.

### Last 10 only



(Phone-code protected)

Only phone numbers from the call list of "dialled numbers" (p. 33) can be dialled. This list can be filled with phone numbers specifically for this purpose.

First delete the call list, then create "new entries" by dialling phone numbers and cancelling before the connection is established.

### This SIM only



(Phone-code protected)

The phone can be connected to a SIM card when the phone code is entered. Unless the phone code is known the phone will not operate with a **different** SIM card.

If the phone is to be used with a different SIM card, enter the phone code when requested.



**Menu** →  → Security  
→ Select function

## Barrings



Barring restricts the use of your SIM card (this is not supported by all service providers). You need a 4-digit password which your service provider will give you. You may need to be registered separately for each barring.

### All outgoing

All outgoing calls except emergency numbers are barred.

### Outgo internat

(International outgoing)

Only national calls can be made.

### Out.int.x home

(International outgoing without home country)

International calls are not permitted. However you can make calls to your home country when abroad.

### All incoming

The phone is barred for all incoming calls (forwarding of all calls to mailbox provides a similar effect).

## When roaming

You do not receive calls when you are outside your home network. This means that no charges are incurred for incoming calls.

## Status check

The following information can be displayed after a status check:



Barring set.

Barring not set.



Status unknown  
(e.g. new SIM card).

## Clear all

All barrings are deleted. A password which the service provider will give you is needed for this function.

## Network

**Menu** →  → Network  
→ Select function


### Line



This function is only displayed if it is supported by the service provider.  
**Two separate** phone numbers must be registered on the phone.

#### Select line

Select the currently used phone number.

 Display current phone number.

#### Protected

(Phone-code protected)

You may limit usage to one phone number.

#### Additional information

Special settings may be made for each phone number (e.g., ring tones, call divert etc.) To do this, first switch to the required phone number. Change phone number/connection in standby mode:



Press.



Press.

## Network info

The list of GSM networks currently available is displayed.



Indicates forbidden service providers (depending on SIM card).

## Choose network

Network search is restarted. This is useful if you are **not** on your home network or want to register on a **different** network. The network list is rebuilt when **Auto network** is set.

## Auto network

Activate/deactivate, see **Choose network** above. If "Automatic network" is activated, the next network on the list is dialled in ranking order of your "preferred networks". Alternatively select a different network manually from the list of the available GSM networks.

## Pref. network

Enter your preferred service providers here for when you leave your home network (e.g. if there are differences in price).

Your service provider is displayed:

**List** Display list of preferred networks.

Create new entry:

- Select empty line, press **Entry**, then select another entry from the list of service providers and confirm.

Change/delete entry:

- Select entry, press **Change**, then select another entry from the list of service providers and confirm or press **Clear**.

#### Additional information

If you are outside your home network, your phone automatically dials another GSM network.

If the signal strength of the preferred network is inadequate when you switch on the phone, the phone may register in a different network. This can change when the telephone is next switched on or if another network is selected manually.

### Band selection

Select either GSM 900, GSM 1800 or GSM 1900.

### Fast search

When this function is active, network reconnection is speeded up (and standby time is reduced).

**Menu** →  → **Network**  
→ Select function.

### User group

Depending on service provider, you can create groups with this service. These can have access to internal (company) information, for example, or special tariffs apply. The details can be clarified with your service provider.

#### Active

Activate/deactivate function. "User group" must be deactivated for normal phone use (phone code, p. 14).

#### Select group

You can select or add groups other than preferred groups (see below). Code numbers for the groups are obtained from your service provider.

#### Outgo. access

In addition to network control for a user group, it is possible to set whether outgoing calls outside the group are permitted. If the function is deactivated, only calls within the group are permitted.

#### Preferred grp

If activated, only calls within this standard user group can be made (depending on the network configuration).

## Accessories

**Menu** →  → Accessories  
→ Select function.

### Car Kit

Only in combination with an original Siemens handsfree Car Kit (p. 100). The profile is activated automatically as soon as the phone is inserted into the cradle.

#### Auto answer

(Factory default: off)

Calls are accepted automatically after a few seconds. Eavesdropping is possible!



Shown on the display.

#### Auto off

(Factory default: 2 hours)

The phone is powered by the car's power supply. You can adjust the time between switching off the ignition and the automatic switching off of the phone.

#### Car loudspk.

Improves audio quality in certain circumstances.

### Automatic settings:

- Permanent illumination: switched on.
- Key lock: switched off.
- Charging the phone battery.
- Auto. activation of the Car Kit profile when phone is inserted in cradle.

### Headset

Only in conjunction with an original Siemens headset (p. 99). The profile is automatically activated when headset is plugged in.

#### Auto answer

(Factory default: off)

Calls are accepted automatically after a few seconds (except where the ringer is switched off or set to beep). You should therefore be wearing the headset. Eavesdropping is possible!

#### Automatic setting

Accept call with Call key or PTT key (Push To Talk), even when the keylock is activated.

#### Auto answer

If you do not notice that you phone has accepted a call, there is the danger that the caller may eavesdrop.

# My menu

**Menu** Press.

**My menu** Press.

Create your own menu with frequently used functions, phone numbers or WAP pages.

The list of 10 possible entries is preset. You can, however, change it as you want.

## Use



Select the required entry.

**Select**

Confirm.

Or



If the entry selected is a phone number, you can also call it with the Call key.

## Change menu

You can replace each entry (1-10) with another entry from the selection list.



Select the required entry.

**Options**

Open menu.

Change sett.

Select. The selection list is opened.



Select **new** entry from the list.

For a function such as **Calendar**:

**Set**

Confirm. The entry is accepted.

or

**Select**

For **Phonebook** also select the phone number or for **Internet** the bookmark.

If you have selected a phone number as a new entry, this can be called directly from the **My menu**. When selecting a bookmark, the link to that Internet address is established.

## Reset all

**Options**

Open menu.

**Reset all**

Select.

After confirmation and entering the phone code, the default entries are reset.

# Organiser

## Calendar

**Menu** →  → Calendar

You can enter appointments in the calendar. Time and date must be set for the calendar to work correctly (p. 67).

### Monthly overview

Tu	Aug 2003					W32
				1	2	3
4	5	6	7	8	9	10
11	12	13	14	15	16	17
18	19	20	21	22	23	24
25	26	27	28	29	30	
<b>Info</b>			<b>Agenda</b>			



**Press** briefly to page between days, **hold** down to page between months.



Change between weeks.







Change between days.

Calendar days in bold face indicate appointments on this day.

## Agenda

**Agenda**

Call up from the monthly overview.

Tue 05.08.03	
<New entry>	
 20:00 Cinema	
 13:00 Garage	
<b>View</b>	<b>Options</b>

Appointments for each individual day are shown in the agenda in chronological order.

**Options**

See p. 79.

## Alarm

**Menu** →  → Alarm

All appointment entries are displayed in chronological order. If an alarm is missed it appears in the list of missed appointments (p. 80).

### Enter new appointment

**Select**

Press.

**Type:**

**Change**

Press repeatedly to select the required type:

**Memo.**

Text input for description.

**Call.**Enter phone number.  
Shown with alarm.**Meeting.**

Text input for description.

**Birthday**

or

**Anniversary**

Enter name and date.

Then make further entries  
field by field.**Description:**Description of what the appointment  
involves.**Date:**

Date of appointment.

**Time:**

Time of appointment.

**Alarm:****ON**

Activate alarm.

Enter start time of  
the alarm **before** the  
appointment.

Select from:

**Change** Minutes, Hours, Days.**Reoccurrence:**Select a timeframe for  
repeating the appoint-  
ment:**Change** No, Daily, Weekly, Monthly,  
Annual.Enter a parameter for  
repeating:**Change** Forever, Until, Occurrences  
(number)If **Weekly** is selected,  
certain weekdays can be  
highlighted.**Save**Save the appointment.  
The alarm is automatically  
activated.

## Alarm

When the set date and time are reached there is an audible and a visual alarm. If an alarm is missed it appears in the list of missed appointments (p. 80).

Alarm type **Memo/Meeting**: the text is shown in the display.

Alarm type **Call**: The phone number is displayed and can be dialled immediately.

Alarm type **Birthday and Anniversary**: you will be notified one day before the event and on the birthday/ anniversary itself.


**Pause** The alarm stops for 5 minutes.

**Off** The alarm is stopped.

### Additional information

Alarms set are shown in the display as follows:

 Alarm clock.

 Appointments.

An alarm sounds even when the phone is switched off (the phone does not switch to standby mode). To deactivate it press any key.

Set alarm tone .....p. 62

Clock .....p. 67

## Agenda/appointments options

**Options** Open menu.

Different functions are provided, depending on the calendar item selected or the current organiser function:

**Activate/ Deactivate** Switch alarm on/off.

**Filter** Select feature:  
Memo, Call, Meeting, Birthday, All.  
All entries with the selected feature are displayed.

**Delete until** Delete all entries prior to a certain date.

(For standard functions see p. 13)

### Additional information

For additional calendar settings, see below under **Calend. setup** (p. 81).



Appointment with alarm activated.



Appointment with alarm deactivated.



Appointment with repeated alarm activated.




Appointment with repeated alarm deactivated.



## Notes

**Menu** →  → Notes

Use your phone as a notepad.

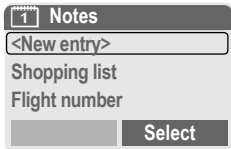

### New entry

**Select** Press.



Enter text, up to 150 characters.

**Options** Open menu.

**Save** Store entry.

### Text entry options

**Options** Open menu.

**Line feed** Enter line break.

**Clear text** Delete note.

(For standard functions see p. 13)

### View entry



Select entry.

**View** Open note.

## Notes list options

**Options** Open menu.

**Confidential** Protect note with phone code (see also "Additional information").

(For standard functions see p. 13)

### Additional information








Protect confidential data using a phone code (p. 71). Please note that it is possible for confidential notes to be read from the phone when connected to a PC.

We recommend that you do not store any passwords (PIN, TAN etc.) as notes.

## Missed appointments

**Menu** →  → Missed alarms

Events with an alarm to which you have not reacted are listed for reading.

Missed alarms			
	03.08	21:15	 
	05.08	12:30	
	05.08	18:00	
<b>View</b>		<b>Options</b>	

### Missed alarms Options

**Options** Open menu.

(For standard functions see p. 13)

## Time zones

Set the time zone for your area.



Select the required time zone from list ...

**Set** ... and set it.

**Options** Open menu.

<b>Set</b>	Set the timezone.
<b>Rename</b>	Assign a new name to time zone.
<b>DST</b>	Activate/deactivate daylight saving. If summertime is activated, a sun is shown on the display.
<b>Auto timezone</b> 	The time zone is switched automatically to local time by the network.
<b>View</b>	Display the selected time zone with name and date.

## Calend. setup

**Menu** →  → Calend. setup

### Begin of week


You can set which weekday is listed first on the left in the monthly and weekly overviews.

# Extras

## Note

Depending on your service provider, the menu **Extras** may also include **Internet** and **Games & more**. See the **Surf & fun** (p. 52) column for further functions.

## Alarm clock

**Menu** →  → Alarm clock

The alarm will ring at the time set by you, even when the phone is switched off.

## Setting

**Change** Display options: Alarm call time and days.

Set the time for the alarm call (hh:mm).




Navigate to the days.

**Change**

Set days for alarm calls.

**OK**

Einstellung bestätigen.

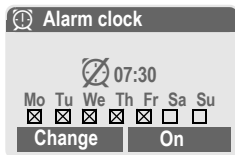

**On / Off** Activate/deactivate the alarm.

## Additional information



Alarm clock activated.



Alarm clock deactivated.



Display in standby mode:  
alarm clock activated.

## Calculator

**Menu** →  → Calculator



Enter number  
(up to 8 digits).



Select calculator function.



Repeat procedure with  
other numbers.



Result is displayed.

## Calculator functions



Press right control key  
repeatedly.



Toggle between "+" and "-".



Convert to percentage.



Save the number displayed.



Retrieve the number saved.



Exponent (max. two digits).

## Special keys:



Set decimal point.



Add (pressdown).

## Currency conv

**Menu** →  → Currency conv

Calculate the exchange rates. You can enter three currencies.


If no currency has yet been entered, press **OK** for the first input.

**Otherwise:**

**Options** Open menu.

**New entry** Select and enter symbols for the currencies.

**OK** Confirm.


 Enter exchange rate.  
Save with

**Convert**

Any combination of calculations can then be carried out between the currencies entered.


 Select a currency combination.


**Select** Confirm and enter amount (up to 12 digits).

 Result is displayed.

**Repeat** Another conversion using different data.

### Calculator functions

 Press right control key repeatedly.

 Retrieve a saved number from the calculator.

## Stopwatch

**Menu** →  → Stopwatch

Two intermediate times can be recorded and saved.

 Start/stop.

 Intermediate time.

**Start** Start stopwatch.

**Reset** Reset.

### Stopwatch Options

**Options** Open menu.

**Save** Save recorded time(s) and assign a name.

**Reset** Reset stopwatch.


**Stopwatch list** Display the stored times.  
**View** Display the stored times and intermediate times.

**Rename** Rename stored entry.

**Delete** Delete entry.

**Delete all** Delete list.

## Countdown

**Menu** →  → Countdown

A set time elapses. The last 3 seconds are indicated by a beep. At the end a special beep sounds.

**Set** Set period of time.

**Start** Start counter.

**Stop** Interrupt counter.

**Change** Change period of time.

**Reset** Reset counter to starting time.

## Voice command

**Menu** →  → Voice command

Functions can be started by a voice command. Up to 20 voice recordings can be saved in the phone for voice dialling or voice commands (not on SIM card!).

### Record

**Menu** →  → Voice command

A list with the functions available is displayed.

 Select a function.


**Record** Press.

**Yes** Confirm selected function.

**Start** Start recording.

A short signal sounds. Now say the command corresponding to the function and **repeat** it when prompted.

### Apply

 Press **down** (in standby mode).

A short signal (beep) sounds and a prompt appears in the display. Now say the function.

#### Additional information

Noisy environments may affect voice recognition.

### Voice command options

**Options** Open menu.

**Playing** Play back the recording belonging to the entry.

**New sample** Start new recording for an entry.

(For standard functions see p. 13)

## New ringtone

**Menu** →  → New ringtone

You can use the phone's microphone to record tones and sounds and then use these as ring tones (p. 63).

**Record** Start recording. The current recording duration and available time remaining are displayed.

**Stop** End recording.

**Save** Enter the name of the new ring tone.

**Save** Save.

After that, you can replay the recording or assign it to **Options** an event.

### Note

If a call is accepted during recording, the recording is aborted.

## SIM services (optional)

**Menu** →  → SIM services

Your service provider may offer special applications such as mobile banking, share prices, etc. via the SIM card.

If you have such a SIM card, the SIM services will appear in the main menu under "Extras" or directly above the control key (on the left).



Symbol for SIM services.

Where there are several applications, these are displayed in a SIM services menu.



With the SIM services menu, your phone is ready to support future additions in your service provider's user package. For further information, please contact your service provider.

## Fast access key

The control key (left) and the number keys 2 to 9 (speed dialling numbers) can each be assigned an important phone number or a function. The phone number can then be dialled or the function started at the touch of a button.

### Additional information

The control key (left) may be preconfigured by the service provider (e.g. access to 'SIM Services' or direct access to the Internet portal). It may not be possible to modify this key assignment.

The control key (left) may also sometimes be replaced automatically by / to access a new message.


Key assignments available:

Internet (WAP) .....	p. 52
Phone number .....	p. 27
Alarm clock .....	p. 82
New SMS .....	p. 38
Illumination .....	p. 61
Hide ID .....	p. 64
Calls missed .....	p. 33
Calls received .....	p. 33
My menu .....	p. 76
Filesystem .....	p. 88

## Control key (left)

Assign a function/phone number to the control key (left) for fast access.

### Change

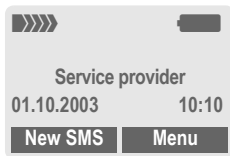

**New SMS** Press **briefly**.

**Change** Scroll to application in the list.

- Assign a new application (e.g., **Internet**) to the control key (left).
- Special case **Phone number**. Pick out a name from the Phonebook (e.g., "Carol") to assign to the control key.

**Select** Confirm setting.

### Apply

The setting "Carol" is used here only as an example.

**Carola** Press **down**.

## Speed dialling keys

Number keys 2 to 9 can be used as speed dialling numbers for fast access. For available key assignments see p. 86. Number key 1 is reserved for the mailbox number (p. 37).

### Change

In standby mode:



Press a number key (2-9).  
If the key is not yet assigned:

**Set**

Press.

**Or**

**New SMS**

Press **briefly** (if **New SMS** is assigned, for example).

**Change**

Scroll to application in the list.

Special case **Phone number**.  
Pick out a name from the Phonebook for assignment to the key.

Special case **Bookmarks**.  
Scroll to a URL in the bookmark list for assignment to the key.

**Select**

Confirm setting.

## Apply

Select a stored phone number or start a stored application (e. g. **New SMS**).

In standby mode:



Press **briefly**.

The assignment of the number key 3 is displayed above the control key (right) e.g.:

**New SMS** Press **down**.

**Or simply**



Hold **down**.

## Menu speed dialling

All menu functions are numbered internally. A function may be selected directly by entering these numbers in sequence.

Example:

**Menu**

Press.



for **Records**



for **Calls missed**



# Filesystem

To organise your files, you can use the file system like a PC file manager. The file system assigns special folders to different data types.



A list of the folders and files is displayed.

Navigate through this list using the control key:



scroll up and down.



Go back from folder.



Open folder or execute file with related application.

or

for unknown file types:



Mark file.

## Index structure

The file system assigns special folders to different data types.

<b>Colour scheme</b>	Colour schemes	*.col
<b>Data inbox</b>	Inbox	**
<b>Internet</b>	Internet files	*.dat
<b>Java</b>	Applications.	*.jad
	Data.	*.jar
<b>Misc</b>	Other files	**
<b>Pictures</b>	Pictures and animations	*.bmx (anim)
	Sub-folder:	*.bmp
	Camera	*.png
	Own photos	*.gif *.jpg
<b>SMSArchive</b>	Sub-folders:	*.smo
	Inbox: Incoming mail	*.smi
	Draft: Drafts	
	Unsent: Unsent SMS	
	Sent: Sent SMS	
<b>Sounds</b>	Ring tones, tones	*.mid
		*.srt
		*.amr
		*.wav
		(Intel DVI)
<b>Text modules</b>	Text modules	*.tmo

Depending on the service provider the file system's structure, content and functionality may vary.

## Filesystem options

**Options** Open menu.

Open	Open folder.
Move	Place marked file or folder in temporary memory.
Copy	Copy marked file into temporary memory.
Paste	Transfer content of temporary memory into current folder.
New folder	Create new folder.
Attributes	Display information on file or folder selected.
Drive info	Display the capacity used and available.
(For standard functions see p. 13)	

# Siemens Data Suite

**Siemens Data Suite** is a software package that extends the functionality of your phone together with a Windows® PC. The telephone and PC are connected by data cable (accessories, p. 99). For error-free data transfer, the telephone must be in standby mode (e.g. no active application, no incoming call).



**Siemens Data Suite** contains the following modules, described briefly. You can download the software from the Internet: [www.siemens-mobile.com/mc60](http://www.siemens-mobile.com/mc60)

## Data Exchange Software

The Data Exchange Software is integrated into Windows® Explorer like a drive and shows the content of the file system (p. 88) of your phone.



You can access the application data on the phone and synchronise it with the PC by simple drag and drop.

### Warning!

When accessing the file system please ensure that no files required for running applications on the phone are deleted.

## Bitmap Editor

You can use the Bitmap Editor to:

- Create an image that is displayed instead of the provider logo (p. 60).
- Create a screensaver (p. 60) on your PC and transfer it to your phone.
- Create an image for a Phonebook entry (p. 28).

## Contacts Management

With Contacts Management, you can organise the contacts from the Addressbook and Phonebook on your phone, and also synchronise them with other phones (including your Gigaset) or Outlook® on your PC.

You can create new entries on your PC, change or delete entries and copy them to your phone. If you don't have Outlook® installed on your PC, you have the option of importing or exporting a text file.

## Messenger

Using the Messenger, you can organise your short messages conveniently from your PC:

- Save SMS messages on your PC to free up memory on your phone.
- You can create messages on your PC and send them from your phone.
- The EMS standard allows you to embed pictures, ring tones or animations in an SMS.

## Ring Tone Editor

With the Ring Tone Editor, you can create your own ring tone melodies (MIDI files).

## GPRS Modem Assistant



With the GPRS Modem Assistant, you can establish GPRS connections from your laptop. This allows you to connect to the Internet while on the road using your laptop and telephone.




# Questions & Answers

If you have any questions on the use of your phone, you can contact us at [www.siemens-mobile.com/customer-care](http://www.siemens-mobile.com/customer-care) around the clock. As further help we have listed below some frequently asked questions and answers.

Problem	Possible causes	Possible solution
Phone cannot be switched on.	On/Off key not pressed long enough.	Press On/Off key for at least two seconds.
	Flat battery.	Charge battery. Check charging indicator in the display.
	Battery contacts dirty.	Clean contacts.
	See also below under "Charging error"	
Too little standby time.	Frequent use of organiser and games.	Restrict use if necessary.
	Fast search activated.	Deactivate fast search (p. 74).
	Display illumination on.	Switch off display illumination (p. 61).
	Unintentional keystrokes (illumination!).	Activate key lock (p. 64).
Charging error (charge icon not displayed).	Battery totally discharged.	1) Plug in charger cable, battery is on charge. 2) Charge icon appears after approx. 2 hours. 3) Charge battery.
	Temperature out of range: +5 °C to +40 °C.	Make sure the ambient temperature is right, wait for a while, then recharge.
	Contact problem.	Check power supply and connection to the phone. Check battery contacts and phone connection socket, clean them if necessary, then insert battery again.
	No mains voltage.	Use different mains power socket, check mains voltage.
	Wrong charger.	Only use original Siemens accessories.
	Battery faulty.	Replace battery.
SIM error.	SIM card not inserted correctly.	Check that the SIM card is inserted correctly (p. 9).
	Dirty SIM card contacts.	Clean SIM card with a dry cloth.
	SIM card with wrong voltage.	Use 3V SIM cards only.
	SIM card damaged (e.g. broken).	Carry out a visual check. Change SIM card at service provider.

Problem	Possible causes	Possible solution
No network connection.	Weak signal. Outside GSM range. Invalid SIM card. New network not authorised. Network call barring is set. Network overloaded.	Move higher, to a window or an open space. Check service provider's coverage area. Complain to the service provider. Try manual selection or select a different network (p. 73). Check network barrings (p. 72). Try again later.
Phone loses network.	Signal too weak.	Reconnection to another service provider is automatic (p. 73). Switching phone off and on again can speed this up.
Calls not possible.	Second line set. New SIM card inserted. Charge limit reached. Credit used up.	Set first line  (p. 73). Check for new barrings. Reset limit with PIN 2 (p. 34). Load credit.
Certain uses of phone not possible.	Call restrictions are in place.	Barrings can be set by service provider. Check barrings (p. 72).
Impossible to make entries in Phonebook.	Phonebook is full.	Delete entries in Phonebook (p. 27).
Voice message not functioning.	Call divert to mailbox not set.	Set call divert to mailbox (p. 64).
SMS (text message)  flashing.	SMS memory is full.	To free up capacity, delete (p. 43) or file (p. 43) messages (SMS).
Function cannot be set.	Not supported by service provider or registration required.	Contact your service provider.
Capacity problems with, for example, Games & More, ringtones, pictures, SMS archive.	Phone memory full.	Delete files in the relevant areas.
No WAP access, downloading not possible.	Profile not activated, profile settings wrong/incomplete.	Activate (p. 54), set (p. 54) WAP profile or set HTTP profile (p. 70). If necessary ask your service provider.

Problem	Possible causes	Possible solution
Text message cannot be sent.	Service provider does not support this service.	Contact your service provider.
	Phone number for service centre not set or incorrect.	Set service centre (p. 44).
	SIM card contract does not support this service.	Contact your service provider.
	Service centre too busy.	Repeat message.
	Recipient does not have a compatible phone.	Check.
EMS pictures & sounds are not displayed on the destination phone	Destination phone does not support the EMS standard.	
No Internet access possible.	Incorrect WAP profile set, or wrong or incomplete settings.	Check settings or contact your service provider.
PIN error/ PIN2 error.	Three wrong entries.	Enter the PUK (MASTER PIN) supplied with the SIM card according to the instructions. If the PUK (MASTER PIN) has been lost, please contact your service provider.
Phone code error.	Three wrong entries.	Contact Siemens Service (p. 95).
Service provider Code error.	No authorisation for this service.	Contact your service provider.
Too few/too many menu entries.	Functions may have been added or deleted by the service provider via the SIM card.	Check with your service provider.
No fax possible.	Wrong settings in the PC.	Check settings (p. 70).
	No authorisation for this service.	Contact your service provider.
Charge meter does not work.	Charge pulse is not transmitted.	Contact your service provider.
<b>Damage</b>		
Severe shock.	Remove battery and SIM and re-insert them. Do not dismantle the phone!	
Phone became wet.	Remove battery and SIM. Dry immediately with a cloth, but do not apply heat. Dry connector contacts thoroughly. Stand mobile upright in an air current. Do not dismantle the phone!	

**Reset all settings to factory default (p. 66): \* # 9 9 9 9 #** 

# Customer Care

We offer fast, individual advice! You have several options:

Our online support on the Internet:

**[www.siemens-mobile.com/  
customercare](http://www.siemens-mobile.com/customercare)**

We can be reached any time, any place. You are given 24 hour support on all aspects of our products. Here you will find an interactive fault-finding system, a compilation of the most frequently asked questions and answers, plus user guides and current software updates to download.

You will also find the most frequently asked questions and answers in the section entitled Questions & Answers in this user guide.

You can also get personal advice about our range of products on our Premium Hotline:

**United Kingdom.....0906 9597500**  
(£0.75 per minute)

Qualified Siemens employees are waiting to offer you expert information about our products and installation.

In some countries repair and replace services are impossible where the products are not sold through our authorised dealers.

When calling customer service, please have ready your receipt and the phone identity number (IMEI, to display press \* # 0 6 #), the software version (to display, press \* # 0 6 #, then info) and if available, your Siemens Service customer number.

If repair work is necessary, please contact one of our service centres:

Abu Dhabi .....	0 26 42 38 00
Argentina .....	0 80 08 88 98 78
Australia .....	13 00 66 53 66
Austria .....	05 17 07 50 04
Bahrain .....	40 42 34
Bangladesh .....	0 17 52 74 47
Belgium .....	0 78 15 22 21
Bolivia .....	0 21 21 41 14
Bosnia Herzegovina .....	0 33 27 66 49
Brazil .....	0 80 07 07 12 48
Brunei .....	02 43 08 01
Bulgaria .....	02 73 94 88
Cambodia .....	12 80 05 00
Canada .....	1 88 87 77 02 11
China .....	0 21 50 31 81 49
Croatia .....	0 16 10 53 81
Czech Republic .....	02 33 03 27 27
Denmark .....	35 25 86 00
Dubai .....	0 43 96 64 33
Egypt .....	0 23 33 41 11
Estonia .....	06 30 47 97
Finland .....	09 22 94 37 00
France .....	01 56 38 42 00
Germany .....	0 18 05 33 32 26
Greece .....	0 80 11 11 11 16
Hong Kong .....	28 61 11 18
Hungary .....	06 14 71 24 44
Iceland .....	5 11 30 00
India .....	22 24 98 70 00 Extn: 70 40
Indonesia .....	0 21 46 82 60 81
Ireland .....	18 50 77 72 77
Italy .....	02 24 36 44 00
Ivory Coast .....	05 02 02 59
Jordan .....	0 64 39 86 42
Kenya .....	2 72 37 17
Kuwait .....	2 45 41 78
Latvia .....	7 50 11 18
Lebanon .....	01 44 30 43
Libya .....	02 13 50 28 82
Lithuania .....	8 52 74 20 10
Luxembourg .....	43 84 33 99
Macedonia .....	02 13 14 84
Malaysia .....	+ 6 03 77 12 43 04
Malta .....	+ 35 32 14 94 06 32
Mauritius .....	2 11 62 13



Mexico .....	01 80 07 11 00 03
Morocco .....	22 66 92 09
Netherlands .....	0 90 03 33 31 00
New Zealand .....	08 00 27 43 63
Nigeria .....	0 14 50 05 00
Norway .....	22 70 84 00
Oman .....	79 10 12
Pakistan .....	02 15 66 22 00
Paraguay .....	8 00 10 20 04
Philippines .....	0 27 57 11 18
Poland .....	08 01 30 00 30
Portugal .....	8 08 20 15 21
Qatar .....	04 32 20 10
Romania .....	02 12 04 60 00
Russia .....	8 80 02 00 10 10
Saudi Arabia .....	0 22 26 00 43
Serbia .....	01 13 07 00 80
Singapore .....	62 27 11 18
Slovak Republic .....	02 59 68 22 66
Slovenia .....	0 14 74 63 36
South Africa .....	08 60 10 11 57
Spain .....	9 02 11 50 61
Sweden .....	0 87 50 99 11
Switzerland .....	08 48 21 20 00
Taiwan .....	02 23 96 10 06
Thailand .....	0 27 22 11 18
Tunisia .....	71 86 19 02
Turkey .....	0 21 65 79 71 00
Ukraine .....	8 80 05 01 00 00
United Arab Emirates .....	0 43 66 03 86
United Kingdom .....	0 87 05 33 44 11
USA .....	1 88 87 77 02 11
Vietnam .....	84 89 30 01 21
Zimbabwe .....	04 36 94 24

## Care and maintenance

Your phone has been designed and manufactured to the highest of standards and should be treated with the greatest of care. The suggestions below will help you to enjoy your phone for many years.

- Protect your phone from moisture and humidity! Precipitation, humidity and liquids contain minerals that will corrode electronic circuits. Nevertheless, should your phone become wet, disconnect it immediately from the power supply and remove the battery!
- Do not use or store the phone in dusty, dirty areas. Its moving parts may become damaged.
- Do not store your phone in hot areas. High temperatures can shorten the life of electronic devices, damage batteries and warp or melt certain plastics.
- Do not store your phone in cold areas. When the phone warms up again (to its normal ambient temperature), moisture can form inside the phone, which may damage electronic circuit boards.
- Do not drop, knock or shake your phone. Rough handling can damage internal circuit boards!
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the phone!

The suggestions given above apply equally to your phone, battery, charger and all accessories. If any of these parts are not working properly, take them to your nearest qualified service outlet. The personnel there will assist you and, if necessary, repair the device.

# Product data

## Declaration of conformity

Siemens Information and Communication mobile hereby declares that the phone described in this user guide is in compliance with the essential requirements and other relevant provisions of European Directive 1999/5/EC (R&TTE). The declaration of conformity (DoC) concerned has been signed.

Please call the company hotline if you require a copy of the original, or: [www.siemens-mobile.com/conformity](http://www.siemens-mobile.com/conformity).

CE 0682

## Technical data

GSM class:	4 (2 watt)
Frequency range:	880-960 MHz
GSM class:	1 (1 watt)
Frequency range:	1,710-1,880 MHz
GSM class:	1 (1 watt)
Frequency range:	1,850-1,990 MHz
Weight:	86 g
Size:	109x46x21 mm (88 ccm)
Li-Ion battery:	700 mAh
Operating temperature:	-10 °C... +55 °C
SIM card:	3.0 V

### Phone ID

You will need the following details if you lose your phone or SIM card:

the number of the SIM card (on the card):

.....

15-digit serial number of the phone (under the battery):

.....

the customer service number of the service provider:

.....

### Lost phone

If you lose your phone or SIM card contact your service provider immediately to prevent misuse.

## Operating time

The operating time depends upon usage: Extreme temperatures considerably reduce the phone's standby time. You should therefore avoid the leaving the phone in the sun or on a radiator.

Talk time: 100 to 300 minutes.

Standby time: 60 to 250 hours.

Action taken	Time (min)	Reduces standby time by
Calling	1	30 - 90 minutes
Light *	1	40 minutes
Network search	1	5 -10 minutes
* Keypad input, games, organiser, etc.		

# Accessories


## Fashion & Carry

### CLIPit™ Covers

Exchangeable front and back covers and keypads are available in specialist shops or from our online shop.

### Carrying Cases

A range of carry cases is available from specialist shops or our online shop:

	Original Siemens Accessories <a href="http://www.siemens-mobile.com/shop">www.siemens-mobile.com/ shop</a>
--	---

## Power

### Li-ion battery (700 mAh) EBA-510

Spare battery.

### Travel Charger

Travel charger ETC-500 (EU)

Travel charger ETC-510 (UK)

Travel charger with an extended input voltage range of 100-240V.

### Car Charger ECC-500

Charger for the cigarette lighter socket in the car.

### Desk Top Charger EDC-510

The desktop charger allows you to conveniently charge the phone and an additional battery.

## Handsfree Portable

### Headset PTT HHS-510

Headset with PTT key for accepting or ending calls.

## Office

### Data Cable DCA-500

For connecting the phone to the serial RS232 port of the PC.

### Data Cable USB DCA-510

For connecting the phone to the USB port of the PC. With load function.

### SyncStation DSC-500

Desktop phone cradle for simultaneous data exchange and phone charging via the power supply unit. Contains a desktop charger, a data cable (serial) and a Y adapter.

## Car Solutions

### Basic Car Pack HKB-500

Allows in-car charging of your mobile phone as well as handsfree talking. Contains a Car Charger, a Headset PTT and a Y adapter.

### Car Kit Portable HKP-500

Handsfree kit with integrated loudspeaker and microphone and auto answer feature. Simply plug into the cigarette lighter socket. Ideal for easy transfer between vehicles.

### Mobile Holder HMH-610

Cradle without antenna port.

### Mobile Holder Antenna HMH-620

Cradle for connecting an outside antenna. Ideal for use with a Headset PTT or Car Kit Portable.

Can also be used as a telephone cradle for upgrading your Car Kit (55 series).

### Car Kit Comfort HKC-600

Handsfree kit with first-class digital call quality and supreme ease of use. Includes all components needed for installation. The antenna set is available separately from specialist shops.

### Car Kit Professional Voice

HKV-600 (German)

HKV-610 (English)

HKV-620 (French)

Handsfree kit with voice recognition, capacity for more than 150 names. Electronics box with connection for fax and e-mail transmission via your notebook. Includes all components needed for installation; the antenna set is available separately from specialist shops.

### Car Kit Upgrade HKO-600

Mobile holder for upgrading your handsfree Car Kit Comfort and Car Kit Voice.

### Car Kit Upgrade HKO-610

Mobile holder for upgrading your handsfree Car Kit Professional Voice II.

### Optional Car Kit accessories

Car Handset HKO-550

VDA Adapter Cable HKO-560

Car Data Adapter HKO-530

Push To Talk Key HKO-520

Products can be obtained in specialist shops or you can visit the Siemens Mobile Store online:

SIEMENS

Original  
Accessories

Original Siemens Accessories

[www.siemens-mobile.com/  
shop](http://www.siemens-mobile.com/shop)

## Battery quality statement

The capacity of your mobile phone battery will reduce each time it is charged/emptied. Storage at too high or low temperatures will also result in a gradual capacity loss. As a result the operating time of your mobile phone may be considerably reduced, even after a full recharge of the battery.

Regardless of this, the battery has been designed and manufactured so that it can be recharged and used for six months after the purchase of your mobile phone. After six months, if the battery is clearly suffering from loss of performance, we recommend that you replace it. Please buy only Siemens original batteries.

## Guarantee certificate (UK)

Without prejudice to any claim the user (customer) may have in relation to the dealer or retailer, the customer shall be granted a manufacturer's Guarantee under the conditions set out below:

- In the case of new devices and their components exhibiting defects resulting from manufacturing and/or material faults within 24 months of purchase, Siemens shall, at its own option and free of charge, either replace the device with another device reflecting the current state of the art, or repair the said device. In respect of parts subject to wear and tear (including but not limited to, batteries, keypads, casing), this warranty shall be valid for six months from the date of purchase.
- This Guarantee shall be invalid if the device defect is attributable to improper treatment and/or failure to comply with information contained in the user manuals.
- This Guarantee shall not apply to or extend to services performed by the authorised dealer or the customer themselves (e.g. installation, configuration, software downloads). User manuals and any software supplied on a separate data medium shall be excluded from the Guarantee.
- The purchase receipt, together with the date of purchase, shall be required as evidence for invoking the Guarantee. Claims under the Guarantee must be submitted within two months of the Guarantee default becoming evident.
- Ownership of devices or components replaced by and returned to Siemens shall vest in Siemens.
- This Guarantee shall apply to new devices purchased in the European Union. For Products sold in the United Kingdom the Guarantee is issued by Siemens plc, Siemens House, Oldbury, Bracknell, Berkshire, RG12 8FZ.
- Any other claims resulting out of or in connection with the device shall be excluded from this Guarantee. Nothing in this Guarantee shall attempt to limit or exclude a Customers Statutory Rights, nor the manufacturer's liability for death or personal injury resulting from its negligence.
- The duration of the Guarantee shall not be extended by services rendered under the terms of the Guarantee.
- Insofar as no Guarantee default exists, Siemens reserves the right to charge the customer for replacement or repair.
- The above provisions does not imply a change in the burden of proof to the detriment of the customer.

To invoke this Guarantee, please contact the Siemens telephone service. The relevant number is to be found in the accompanying user guide.

## Guarantee certificate (IRL)

Without prejudice to any claim the user (customer) may have in relation to the dealer or retailer, the customer shall be granted a manufacturer's Guarantee under the conditions set out below:

- In the case of new devices and their components exhibiting defects resulting from manufacturing and/or material faults within 24 months of purchase, Siemens shall, at its own option and free of charge, either replace the device with another device reflecting the current state of the art, or repair the said device. In respect of parts subject to wear and tear (including but not limited to, batteries, keypads, casing), this warranty shall be valid for six months from the date of purchase.
- This Guarantee shall be invalid if the device defect is attributable to improper care or use and/or failure to comply with information contained in the user manuals. In particular claims under the Guarantee cannot be made if:
  - The device is opened (this is classed as third party intervention)
  - Repairs or other work done by persons not authorised by Siemens.
  - Components on the printed circuit board are manipulated
  - The software is manipulated
  - Defects or damage caused by dropping, breaking, lightning or ingress of moisture. This also applies if defects or damage was caused by mechanical, chemical, radio interference or thermal factors (e.g.: microwave, sauna etc.)
  - Devices fitted with accessories not authorised by Siemens
- This Guarantee shall not apply to or extend to services performed by the authorised dealer or the customer themselves

(e.g. installation, configuration, software downloads). User manuals and any software supplied on a separate data medium shall be excluded from the Guarantee.

- The purchase receipt, together with the date of purchase, shall be required as evidence for invoking the Guarantee. Claims under the Guarantee must be submitted within two months of the Guarantee default becoming evident.
- Ownership of devices or components replaced by and returned to Siemens shall vest in Siemens.
- This Guarantee shall apply to new devices purchased in the European Union. For Products sold in the Republic of Ireland the Guarantee is issued by Siemens Ireland Limited, Ballymoss Road, Sandyford Industrial Estate, Dublin 18 - The Republic of Ireland.
- Any other claims resulting out of or in connection with the device shall be excluded from this Guarantee. Nothing in this Guarantee shall attempt to limit or exclude a Customers Statutory Rights, nor the manufacturer's liability for death or personal injury resulting from its negligence.
- The duration of the Guarantee shall not be extended by services rendered under the terms of the Guarantee.
- Insofar as no Guarantee default exists, Siemens reserves the right to charge the customer for replacement or repair.
- The above provisions does not imply a change in the burden of proof to the detriment of the customer.

To invoke this Guarantee, please contact the Siemens helpdesk on 1850 777 277. This number is also to be found in the accompanying user guide.



## SAR - European Union (RTTE)

### INFORMATION ON RF EXPOSURE / SPECIFIC ABSORPTION RATE (SAR)

THIS MOBILE PHONE MEETS THE LIMITS SET BY THE EU (1999/519/EC) FOR PROTECTION OF THE HEALTH OF THE PUBLIC FROM THE EFFECTS OF EXPOSURE TO ELECTROMAGNETIC FIELDS

These limits are part of comprehensive recommendations for the protection of the public. The recommendations were developed and confirmed by independent scientific organisations through periodic and thorough evaluation of scientific studies\*. The limits include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

Before a radio equipment may be placed on the market, compliance with the European laws and the respective technical limit requirements must be demonstrated. Only then the CE mark may be affixed\*\*. The limit for mobile phones recommended by the Council of the European Union employs a unit of measurement known as the Specific Absorption Rate, or SAR. This SAR limit is 2.0 W/kg\*\*\*. This corresponds with the requirements of the International Commission for Non-ionizing Radiation Protection ICNIRP and was adopted into the European Norm for Mobile Radio Equipment

EN 50360. The SAR of mobile phones is determined in accordance with the European Norm EN 50361. This involves measuring the maximum value in all frequency bands of the mobile phone with the phone transmitting at its highest power level. The actual SAR level of the phone during normal operation may be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a base station, the lower the power output.

The highest SAR value for this model phone when tested for compliance against the norm is

0.67 W/kg\*\*\*\*.

The SAR information can also be found on the Siemens web site at [www.siemens-mobile.com](http://www.siemens-mobile.com)

While there may be differences between the SAR levels of various phones and at various positions, all Siemens products meet the legal requirements.

\* The World Health Organization (WHO, CH-1211 Geneva 27, Switzerland) states that present scientific information does not indicate the need for any special precautions for use of mobile phones.

Further information:

**[www.who.int/peh-emf](http://www.who.int/peh-emf), [www.mmfa.org](http://www.mmfa.org),  
[www.siemens-mobile.com](http://www.siemens-mobile.com)**

\*\* The CE mark confirms that the product is in compliance with the legal requirements of the European Union as a prerequisite for the placing on the market and the free movement of goods within the European internal market.

\*\*\* averaged over 10 g body tissue.

\*\*\*\* SAR values may vary depending on national requirements and frequency bands. SAR information for different regions can be found at **[www.siemens-mobile.com](http://www.siemens-mobile.com)**

## SAR - International (ICNIRP)

### INFORMATION ON RF EXPOSURE / SPECIFIC ABSORPTION RATE (SAR)

THIS MOBILE PHONE MEETS THE LIMITS FOR PROTECTION OF THE HEALTH OF THE PUBLIC FROM THE EFFECTS OF EXPOSURE TO ELECTRO-MAGNETIC FIELDS

Your mobile phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the limits for exposure to radio frequency (RF) energy recommended by international guidelines from the International Commission on Non-Ionizing Radiation Protection (ICNIRP). These limits are part of comprehensive guidelines for the protection of the public and establish permitted levels of RF energy for the population. The guidelines were confirmed by independent scientific organisations through periodic and thorough evaluation of scientific studies\*. The limits include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure limit for mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit stated in the international guidelines is 2.0 W/kg\*\*. Tests for SAR are conducted in all frequency bands using standard operating positions with the phone transmitting at its highest power level. The actual SAR level of

the phone during operation can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a base station, the lower the power output.

The highest SAR value for this model phone when tested for use at the ear is

0.67 W/kg\*\*\*.

SAR information can also be found at [www.siemens-mobile.com](http://www.siemens-mobile.com)

While there may be differences between the SAR levels of various phones and at various positions, they all meet the international guidelines for safe RF exposure.


\* The World Health Organization (WHO, CH-1211 Geneva 27, Switzerland) states that present scientific information does not indicate the need for any special precautions for use of mobile phones.


Further information:  
[www.who.int/peh-erf](http://www.who.int/peh-erf), [www.mmfa.org](http://www.mmfa.org),  
[www.siemens-mobile.com](http://www.siemens-mobile.com)


\*\* averaged over 10g of tissue.


\*\*\* SAR values may vary depending on national requirements and frequency bands. Information for different regions can be found at [www.siemens-mobile.com](http://www.siemens-mobile.com)


# Menu tree

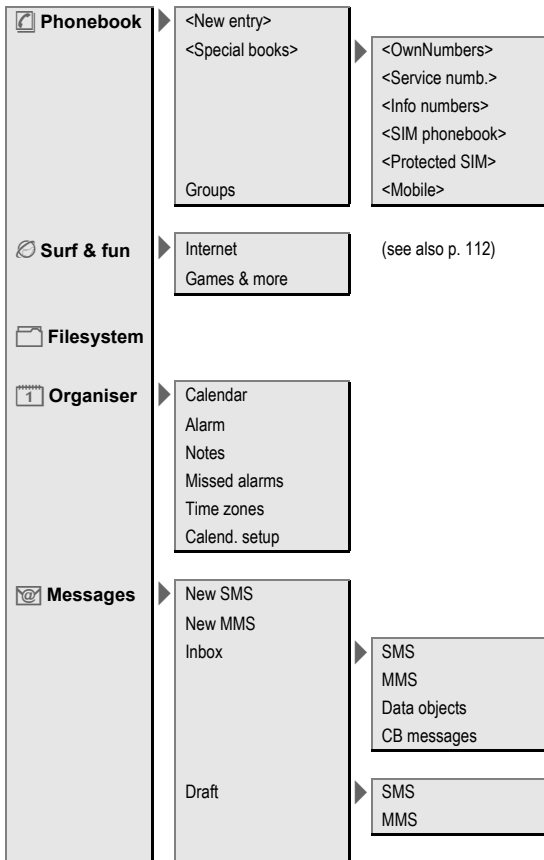

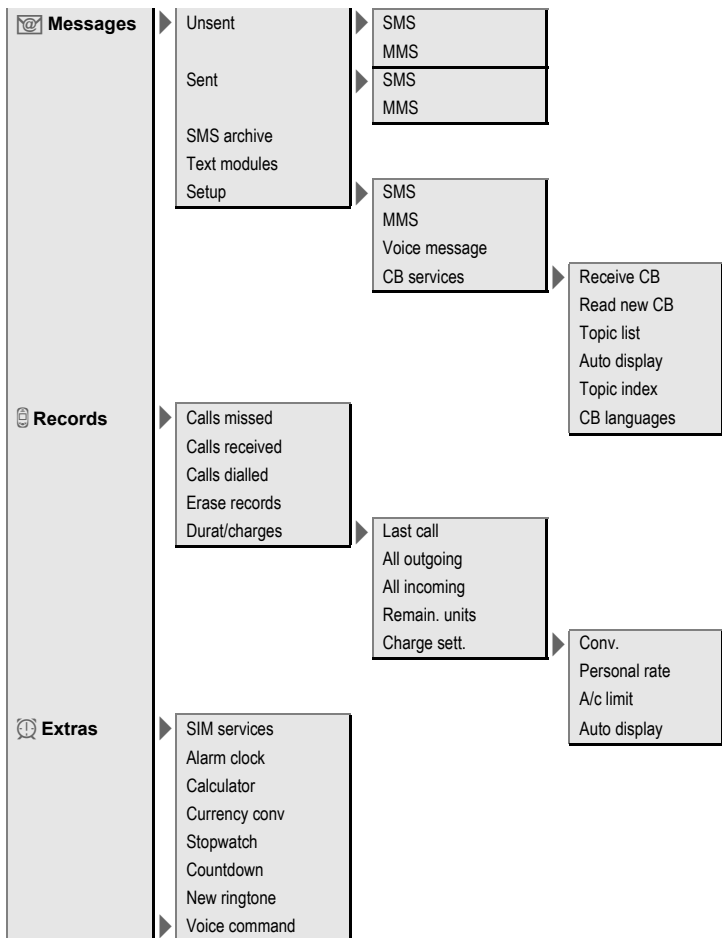


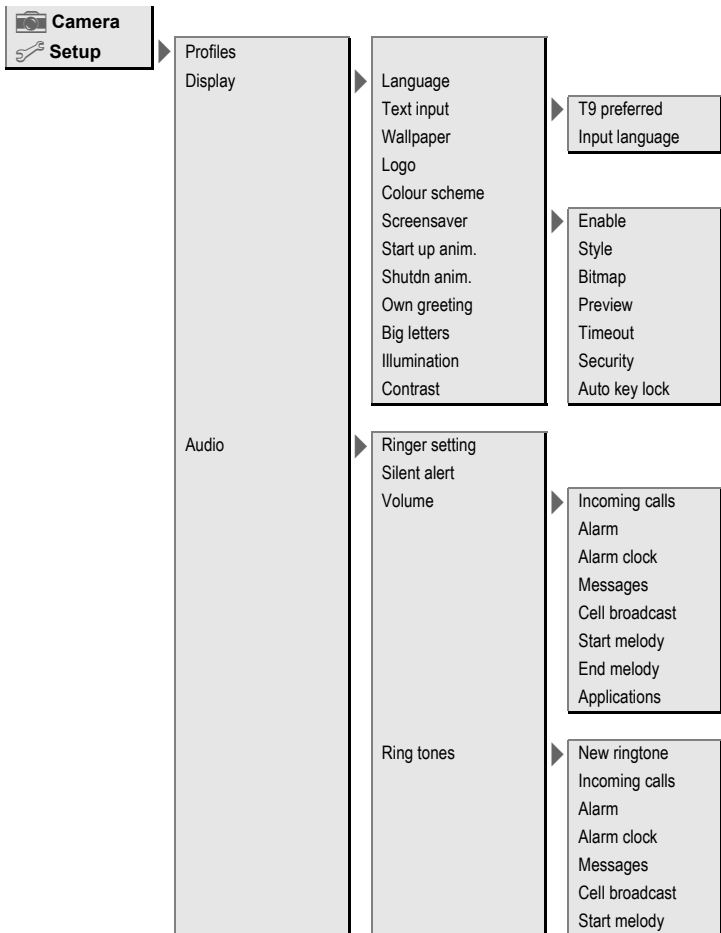

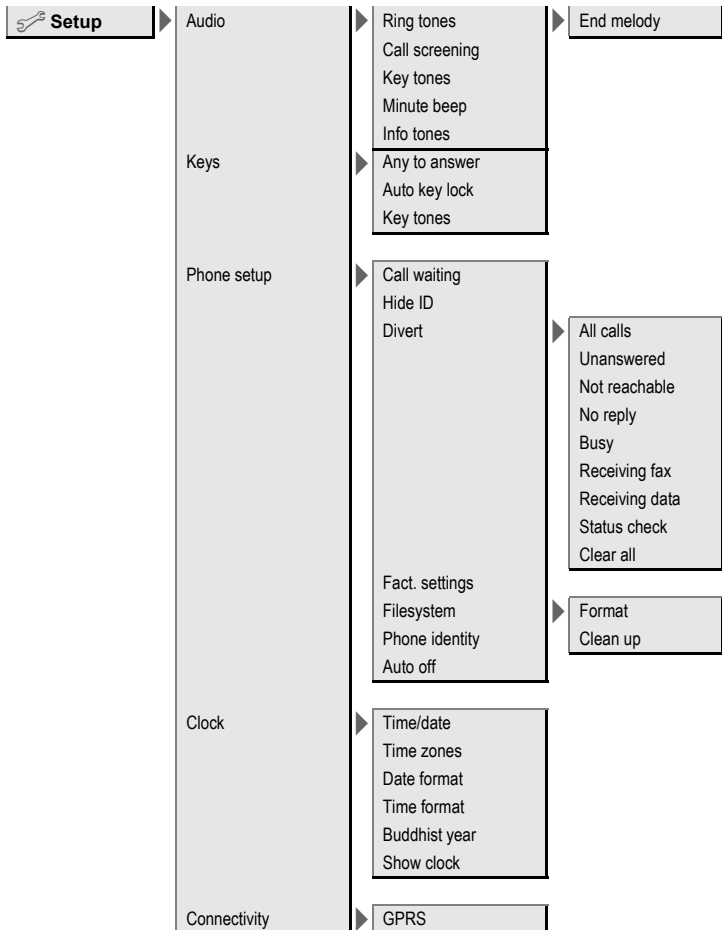

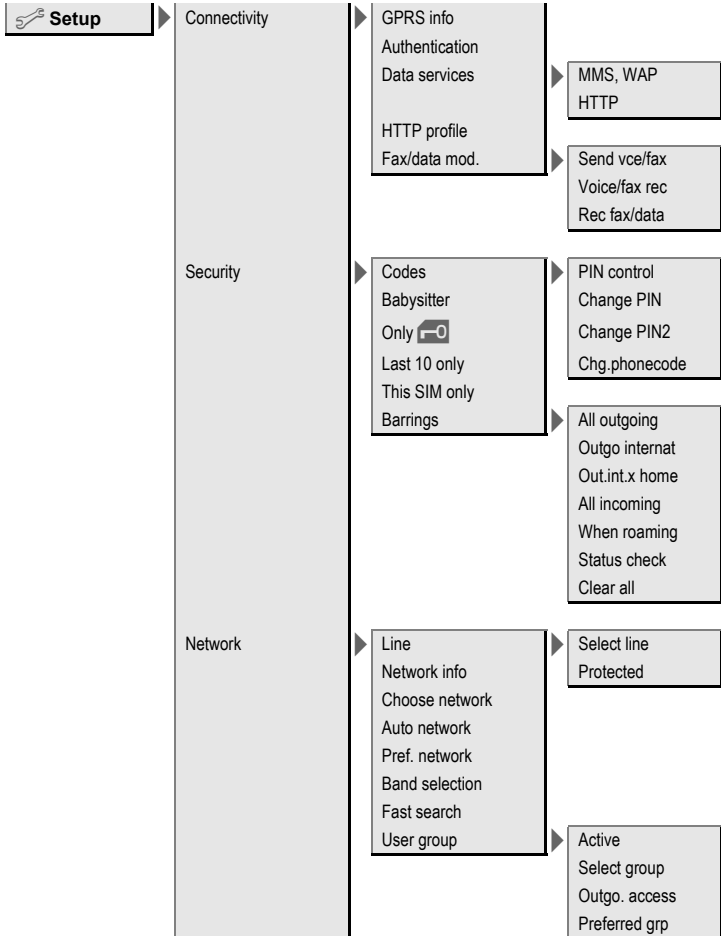

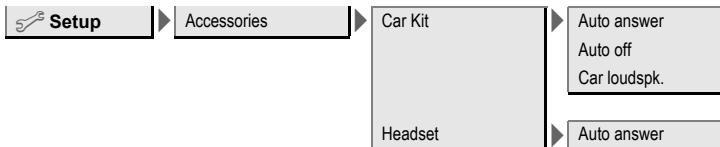


**Note on Surf & fun**

Depending on your service provider, you may have direct access to its portal instead of the Surf & fun menu option. Contact your service provider for details of the services offered on the portal. In this case, you will find the Internet and Games & more menu options in the Extras  menu.

# Index

## A

Accessories.....	99
Account limit.....	34
Agenda .....	77
Alarm	
Alarm clock.....	82
Appointment.....	78
Switch off.....	79
Type .....	79
Alarm clock .....	82
All calls (call time/charge) .....	34
All calls (diversion) .....	65
All incoming (Barrings) .....	72
Answering service (external).....	37
Any key answer (answer call).....	64
Application, download.....	55
Appointments .....	77
Archive (SMS).....	43
Audio .....	62
Authentication .....	70
Auto display	
CB .....	51
Clock .....	68
Duration/charges .....	34
Auto key lock.....	64
Auto time zone.....	68, 81
Auto. redial .....	18

## B

Babysitter .....	22
Band selection .....	74
Battery	
Charge.....	10
Insert.....	9
Operating time .....	98
quality declaration .....	101
Big letters	
(message on display) .....	61
Bitmap Editor .....	90

Bookmarks (WAP).....	52
Browser, WAP .....	53
Busy number.....	18

## C

Calculator .....	82
Calendar .....	77
Call	
Accept/end.....	19
Barring.....	72
Charges.....	34
Conference .....	21
Divert.....	64
End.....	17
Hold.....	20
Menu .....	21
Reject.....	19
Swap (change) .....	20
Call back .....	18
Call divert .....	64
Call transfer .....	21
Call waiting.....	20
Calling .....	17
Calls dialled (call list).....	33
Calls received (call list) .....	33
Camera.....	84
Car accessories.....	100
Car Kit.....	100
Accessories .....	100
Setting .....	75
Car kit accessories.....	100
Care of phone .....	97
CB services.....	51
Cell Broadcast (CB).....	51
Charge rate.....	34
Charges .....	34
Charging the battery .....	10
Clock .....	67
Codes .....	14
Colour schemes .....	60
Command (voice command) .....	84

- Conference..... 21  
 Connection profile..... 69  
 Contacts Management..... 90  
 Contrast (message on display) .... 61  
 Control code (DTMF) ..... 32  
 Countdown ..... 84  
 CSD data ..... 69  
 Currency converter ..... 83  
 Customer care ..... 95
- D**
- Data exchange (settings) ..... 68  
 Data Exchange Software..... 90  
 Date format..... 68  
 Dialling code ..... 17  
 Dialling with number keys ..... 17  
 Dial-up access (connection) ..... 69  
 Display  
   Big letters ..... 61  
   Colour schemes ..... 60  
   Contrast ..... 61  
   Illumination ..... 61  
   Symbols..... 7  
 Display (settings)..... 60  
 Divert ..... 64  
 DTMF codes (control codes)..... 32  
 Duration/charges ..... 34
- E**
- Emergency number ..... 11  
 EMS ..... 40  
 Entry no. (phonebook)..... 27  
 Extras..... 82, 97
- F**
- Factory settings ..... 66  
 Fast access ..... 86  
 Fast network search..... 74  
 Fax/data mode..... 70  
 File system ..... 88  
 Filter ..... 63  
 Folder (file system)..... 89  
 Forwarding (call) ..... 21
- G**
- Games & More ..... 55  
 Games (download) ..... 55  
 Getting started..... 8  
 GPRS  
   Modem Assistant..... 91  
   Switch on/off..... 68  
 Group ..... 31  
   SMS to group ..... 40  
 Guarantee certificate ..... 102
- H**
- Handset volume..... 17  
 Handsfree talking..... 19  
 Headset ..... 99  
   Setting ..... 75  
 Hide ID ..... 64  
 Highlighting mode ..... 13  
 Hold call ..... 20  
 Home network..... 73  
 Hotline ..... 95  
 HTTP-Profile ..... 70
- I**
- Identity number (IMEI) ..... 67  
 Illumination (display) ..... 61  
 Image in Phonebook ..... 28  
 IMEI number ..... 67  
 Inbox  
   MMS ..... 48  
   SMS ..... 42  
 Index (file system) ..... 7  
 Info tones ..... 63  
 Information services (CB) ..... 51  
 Input language (T9) ..... 24  
 International dialling code..... 18  
 Internet ..... 52
- K**
- Key tones..... 64  
 Keypad (settings)..... 64

**L**

Last 10 only.....	71
Limit (call time/charge).....	34
Logo, provider logo.....	60
Loss of phone, SIM card.....	98

**M**

Mailbox.....	37
Maintenance of phone.....	97

**Menu**

My menu.....	76
Speed dialling.....	14
Steuerung.....	12
Menu tree.....	107

**Message**

CB.....	51
MMS.....	45
SMS.....	38, 41

Message memory.....	42
---------------------	----

Messenger.....	91
----------------	----

Microphone on/off.....	21
------------------------	----

Minute beep.....	63
------------------	----

Missed appointments.....	80
--------------------------	----

Missed calls (call list).....	33
-------------------------------	----

**MMS**

Lists.....	48
Profile.....	50
Receive.....	47
Write.....	45

Muting (microphone).....	21
--------------------------	----

My menu.....	76
--------------	----

My phone.....	16
---------------	----

**N****Network**

Barring.....	72
Line.....	73
Settings.....	73

New folder (file system).....	89
-------------------------------	----

Notes.....	80
------------	----

**O**

Only  .....	71
--	----

Only this SIM.....	71
--------------------	----

Operating times (battery).....	98
--------------------------------	----

Organiser.....	77
----------------	----

Own (phone) numbers.....	29
--------------------------	----

Own greeting.....	61
-------------------	----

**P**

Phone (settings).....	64
-----------------------	----

Phone barring.....	71
--------------------	----

Phone code.....	14
-----------------	----

Phone data.....	98
-----------------	----

Phone identity number (IMEI).....	67
-----------------------------------	----

**Phone number transmission**

on/off.....	64
-------------	----

Phonebook.....	27
----------------	----

Photo album.....	36
------------------	----

Pictures & sounds (SMS).....	39
------------------------------	----

**PIN**

Change.....	14
-------------	----

Control.....	14
--------------	----

Enter.....	11
------------	----

Error.....	94
------------	----

PIN2.....	14
-----------	----

**Preventing accidental**

activation.....	15
-----------------	----

Product data.....	98
-------------------	----

**Profiles**

HTTP.....	70
-----------	----

MMS.....	50
----------	----

Phone.....	58
------------	----

SMS.....	44
----------	----

WAP.....	54
----------	----

Prompt.....	18
-------------	----

Provider logo.....	60
--------------------	----

PUK, PUK2.....	14
----------------	----

**Q**

Questions & Answers.....	92
--------------------------	----

- R**
- Records ..... 33, 87
  - redial..... 17
  - Reminder ..... 18
  - Ring Tone Editor ..... 91
  - Ring tones ..... 63
  - Ringer setting ..... 62
- S**
- Safety precautions ..... 3
  - Screensaver ..... 60
  - Second phone number ..... 73
  - Security ..... 14, 71
  - Service centre (SMS)..... 44
  - Service provider portal..... 16
  - Service tones ..... 63
  - Set time/date ..... 67
  - Settings
    - Accessories ..... 75
    - Audio ..... 62
    - Clock ..... 67
    - Data connection ..... 68
    - Display ..... 60
    - Divert ..... 64
    - Keys ..... 64
    - Network ..... 73
    - Phone ..... 64
    - Profiles ..... 58
    - Security ..... 71
  - Short message (SMS)..... 38
  - Shown in the display ..... 7
  - Shut down animation ..... 61
  - Siemens City Portal..... 16
  - Siemens Data Suite..... 90
  - Signal strength ..... 11
  - Silent alert..... 62
  - SIM card
    - Clear barring ..... 15
    - Insert..... 9
    - Problems ..... 92
  - SIM services (optional) ..... 85
  - SMS
    - Archive ..... 43
    - Lists ..... 42
    - Pictures & Sounds..... 39
    - Profile ..... 44
    - Read ..... 41
    - T9 input ..... 24
    - To group ..... 40
    - Write..... 38
  - SOS ..... 11
  - Special characters ..... 23
  - Speech time (battery) ..... 98
  - Speed dialling keys..... 87
  - Standard values ..... 66
  - Standby mode ..... 12
  - Standby time: ..... 98
  - Start animation ..... 61
  - Start menu (WAP) ..... 52
  - Start up animation ..... 61
  - Stopwatch ..... 83
  - Surf & fun ..... 52
  - Swap ..... 20
  - Switch off phone
    - Automatic ..... 67
    - Manual ..... 11
  - Switch on ..... 11
  - Symbols..... 7
- T**
- T9
    - Text entry ..... 24
    - Word suggestions..... 25
  - Technical data..... 98
  - Text entry with T9 ..... 24
  - Text entry without T9 ..... 23
  - Text module ..... 26
  - Time zones ..... 11, 67

**U**

Unanswered .....	65
Upper and lowercase letters.....	23
User group .....	74

**V**

Validity period	
MMS.....	50
SMS.....	44
Voice command.....	84
Voice dialling.....	30
Voice message (mailbox) .....	37
Volume	
Handset volume.....	17
Profiles .....	58
Ringer.....	62

**W**

Wallpaper .....	60
WAP	
Browser .....	53
Parameters .....	54