

Issued by
Information and Communication mobile
Haidenauplatz 1
D-81667 Munich

© Siemens AG 2004
All rights reserved. Subject to availability.
Rights of modification reserved.

Siemens Aktiengesellschaft
www.siemens-mobile.com



S65

Safety precautions	3	Phonebook	35
Telephone list	5	New entry	35
Display symbols	8	Call (search for an entry)	36
Getting started	10	Change entry	36
Inserting the SIM		<Special books>	37
card/battery	10	Call records	38
Charging the battery	11	Durat./charge	39
Switching phone on and		Camera	40
off/entering PIN	12	Photo mode	41
Enter PIN	12	Video mode	41
Emergency number (SOS)	12	Inbox	43
General instructions	13	SMS	44
Standby mode	13	Write/send	44
Signal strength	13	Read	46
Digital Rights Mgmt. (DRM)	13	Setting	48
Main menu	13	MMS	50
Standard functions	15	Create	50
Highlighting mode	16	Templates	52
Menu speed dialling	16	Sending an MMS	53
Security	17	Receiving an MMS	54
Codes	17	Reading an MMS	55
Preventing accidental		Setting	56
activation	18	E-mail	58
Text entry	19	Write	58
My phone	23	Receive/read	59
Calling	24	Setting	60
Default book	30	Voice message/mailbox	61
Addressbook	31	Inst. message	62
New entry	31	Start menu	62
Change entry	33	Login	63
Dialling an entry	33	Contact lists	63
Groups	34	Starting to Inst. Message	66

See also Index at the end of this User Guide

Msg. history	67	Extras	106
Setting	67	SIM services (optional)	106
CB services	69	Alarm clock	106
Text zoom	70	Sound recorder	107
Surf & fun	71	Calculator	108
Internet	71	Unit converter	108
Bookmarks	73	Stopwatch	109
Games and Applications	74	Countdown	110
Downl. assist.	74	Remote synchronisation	110
Setup	76	Media player	112
Profiles	76	My stuff	113
Themes	78	Mobile Phone Manager	115
Display	79	Questions & Answers	118
Ringtones	81	Customer Care	121
Call setup	83	Care and maintenance	123
Phone setup	85	Product data	124
Clock	87	Accessories	125
Connectivity	88	Quality	127
Security	91	Battery quality statement	127
Network	93	Display quality declaration	127
Accessories	95	Guarantee certificate	
ProSlide	96	(UK)	128
My menu	97	Guarantee certificate	
Fast access key	98	(IRL)	129
Organiser	100	SAR – European Union	
Calendar	100	(RTTE)	130
Appointments	101	SAR – International	
Tasks	102	(ICNIRP)	132
Notes	103	Menu tree	133
Missed appts.	103	Index	139
Dictat.machine	104		
Time zones	105		

See also Index at the end of this User Guide

Safety precautions

Information for parents

Please read the operating instructions and safety precautions carefully before use. Explain the content and the hazards associated with using the phone to your children.



Remember to comply with legal requirements and local restrictions when using the phone. For example in aeroplanes, petrol stations, hospitals or while driving.



Only use original Siemens batteries (100 % mercury-free) and charging devices. Otherwise you risk serious damage to health and property. The battery could explode, for instance.



Mobile phones can interfere with the functioning of medical devices such as hearing aids or pacemakers. Keep at least 20 cm/9 inches between phone and pacemaker. When using the mobile phone hold it to the ear which is further away from the pacemaker. For more information consult your doctor.



Small parts such as the SIM card, sealing stop, lens ring and lens cap can be dismantled and swallowed by small children. The phone must therefore be stored out of the reach of small children.



The ringtone (p. 81), info tones (p. 85) and handsfree talking are reproduced through the loudspeaker. Do not hold the phone to your ear when it rings or when you have switched on the handsfree function (p. 26). Otherwise you risk serious permanent damage to your hearing.



The mains voltage specified on the power supply unit (V) must not be exceeded. Otherwise the charging device may be destroyed.



You may only open the phone to replace the battery (100 % mercury-free) or SIM card. You must not open the battery under any circumstances. All other changes to this device are strictly prohibited and will invalidate the guarantee.



Do not use an optical magnifier to look at the activated infrared interface [Class 1 LED product (classification as per IEC 60825-1)].

Important



Please dispose of unwanted batteries and phones as permitted by the laws in your country.



The phone may cause interference in the vicinity of TV sets, radios and PCs.



Use only Siemens original accessories. This will avoid potential risks to health or property and ensure compliance with all relevant regulations.

Improper use will invalidate the guarantee!
These safety instructions also apply to Siemens original accessories.

Telephone list


① Call key

Dial phone number/name displayed/highlighted, take calls. Show last phone numbers dialed in standby mode.






② On/Off/End key

- Switched off: Press and **hold** to switch on.
- During a conversation or in an application: press **briefly** to finish.
- In menus: **Press** briefly to go back a level.
Press and **hold** to go back to standby mode.
- In standby mode: Press and **hold** to switch off phone if the keypad is closed.
- Keylock in standby mode, keypad closed: Press **briefly** to lock keypad. Press **briefly** and confirm with **OK** to unlock the keypad.



③ Joystick

-  Press the joystick down vertically to start an application or function. The actual function is shown between the soft keys (p. 14).



In standby mode:

-  Open main menu.
-  Open user profiles.
-  Open phonebook/addressbook.
-  Open Inbox
-  Start the camera.


In lists, messages and menus:

-  Scroll up and down.
-  Back one level.

During a call:

-  Set volume.
-  Call options.

④ Soft keys

The current functions of this key are shown in the bottom line of the display as **Text/symbol** (e.g. ).

⑤ Internet access



① **Loudspeaker**② **+/- Plus/minus sidekey**

- During a call: volume loud-quiet.
- In menus, lists and internet pages: scroll up and down.
- In standby mode press side key:

Briefly at top: plays last memo.

Press and **hold** at bottom: starts camera application.

③ **Dictation key** (in standby mode)

- Press and **hold**: record.
Press **briefly**: play back.

④ **Display**⑤ **Infrared interface (IrDA)**⑥ **Ringtone**

- Press and **hold** in standby mode: Switch all audible signals on/off (except alarm).
- Press and **hold** on incoming call: Switch off ringtone for this call only.

⑦ **Key lock**

Press and **hold** in standby mode: Switch key lock on/off.

⑧ **Connection socket**

For charger, headset, flash, etc.

⑨ **Car Kit support**⑩ **Integrated antenna**

Do not obstruct the phone above the battery cover unnecessarily. This reduces the signal quality.


⑪ **Camera**⑫ **Mirror for self portrait**

Open keypad completely:

- Light on.
- Keypad unlocked.
- Opening melody on (if set).
- The call is accepted.
- Alarm sound off (appointment, alarm).

Close keypad completely:

- Prompt to decide whether application should be continued or returned to standby status.
- Light off.
- Keypad locked (if set).
- Closing melody on (if set).
- The call is ended.
- The call is rejected.
- Alarm sound off (appointment, alarm).

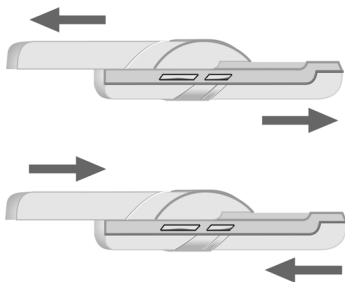

Display symbols

Display symbols (selection)

	Signal strength
	Charging
	Battery charge level, e.g. 50 %
	Phonebook
	Records
	Surf & fun Service supplier portal
	Organiser
	Messages
	Camera
	Extras
	File management
	Settings
	All calls are diverted
	Ringing tone off
	Short ring (beep) only
	Ringer only if the caller is stored in the Phonebook.
	Alarm set

	Keypad locked
	Auto answer feature on
T9Abc	Text input with T9
	Activated and available
	Registered
	Temporarily interrupted
	Internet Offline
	Internet online
	Internet via GPRS online
	Internet no network
	IrDA activated
	IrDA transmission
Events (selection)	
	SIM memory full
	MMS memory full
	Phone memory full
	No network access
	Missed call
	Memory assistant

Message symbols (selection)

Unread



Read



Draft



Sent



MMS not sent



MMS received



MMS read

MMS with DRM contents
(p. 13)

E-mail forwarded



E-mail with attachment



Voice mail received

Camera symbols

Photo mode



Video mode



Brightness



Zoom factor



White balance



Flash connected

Getting started


Inserting the SIM card/battery

The service provider supplies you with a SIM card on which all the important data for your line is stored. If the SIM card has been delivered in credit-card size, snap the smaller segment out and remove any rough edges.




Your phone's display is delivered with a protective film. Remove this film before getting started.

- Press the latch ① and simultaneously push the cover towards the front the direction indicated by the arrow ②.

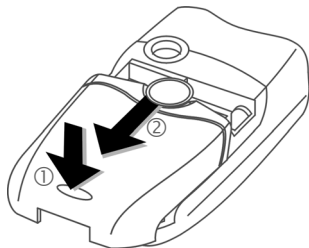


- Place the SIM card in front of the slot with the contact surface facing **downwards**. Then press the SIM card slightly to push it in ③

(ensure that the chamfered corner is in the correct position).

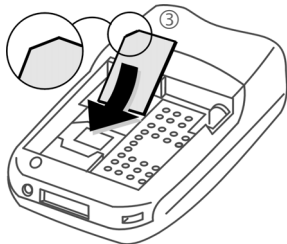

- Insert the battery into the phone ④, then press it downwards ⑤ until it engages.

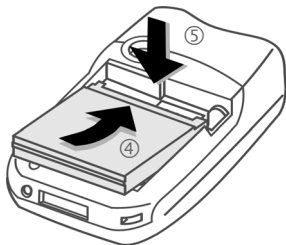

- To remove, press the retaining tab on the side of the battery, then lift the battery out.
- Place the cover in position and push it towards the front until it latches into place.

Additional information


Please switch off your phone before removing the battery!

Only 3 V SIM cards are supported.

Charging the battery

Charging the battery

The battery is not fully charged when delivered. Plug charger cable into the bottom of the phone, plug power supply unit into a mains power socket and charge for at least **two hours**.

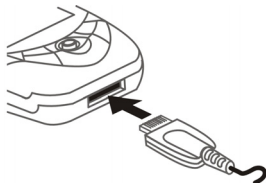

Display during charging.

Charging time

An empty battery is fully charged after about 2 hours. Charging is only possible within a temperature range of +5 °C to 45 °C. If the temperature rises/falls 5 °C above/below this, the charge symbol flashes a warning. The mains voltage specified on the power supply unit must not be exceeded.

Operating time

The operating time depends upon the respective conditions of use. Extreme temperatures considerably reduce the phone's standby time. Avoid placing the phone in the sun or on a heater.

Call time: 100 to 270 minutes

Stand-by time: 60 to 290 hours.

Charge icon not visible

If the battery has been discharged fully, the charge icon is not immediately visible when the power supply is plugged in. It will appear after up to two hours. In this case the battery is fully charged after 3 to 4 hours.

Only use the plug-in power supply included in delivery!

Display while in service

Charge level display during operation (empty–full):



A beep sounds when the battery is nearly empty. The charge level of the battery is only displayed correctly after an uninterrupted charging/discharging cycle. You should therefore **not remove the battery unnecessarily** and where possible **not finish the charging process prematurely**.

Additional information

The power supply unit heats up when used for long periods. This is normal and not dangerous.

If the battery is removed for longer than 30 seconds, the clock must be reset.

Switching phone on and off/entering PIN

Switching phone on and off




Press and hold.

Enter PIN

The SIM card can be protected with a 4 to 8-digit PIN.



Open keypad. Enter the PIN using the number keys. The characters **** appear to ensure nobody can read your PIN on the display. Correction with .



Confirm by pressing the joystick. Logging on to the network will take a few seconds.

Emergency number (SOS)

Only to be used in real emergencies!

By pressing the soft key **SOS** you can make an emergency call on any network **without** a SIM card and without entering a PIN (not available in all countries).

Switching on your phone for the first time

Time/date

During commissioning, set the clock so that it displays the correct time. You will not have to make this setting again.



Press this key, then select **Change**.



Open keypad. First enter the date (day/month/year), then the time (24 hours, including seconds).



Press this key. The time and date are updated.

Time zones

Set the time zone for your area.



Select the city in the desired time zone



and specify this firmly.

Copying SIM addresses

The first time the SIM card is inserted, the entries on it can be copied to the Addressbook. Please **do not interrupt this procedure**. During this time, **do not accept incoming calls**. Follow the instructions in the display.

You can also copy data from the SIM card at a later time (p. 36).

General instructions

Standby mode

The phone is in **standby mode** and is **ready for use** when the name of the service provider appears on the display. If you now close the keypad, the phone remains in standby mode.



Press and **hold** the On/Off/End key to return to standby mode from any situation.

Signal strength



Strong receive signal.



A weak signal reduces the call quality and may lead to loss of the connection. Change your location.

Digital Rights Mgmt. (DRM)

Remember that your telephone has digital rights management. The use of downloaded pictures, sounds or applications can be restricted by the suppliers, e.g. copy protection, use for a limited period of time only, number of times it can be used etc. (see also p. 75).

Main menu

The main menu is displayed graphically with symbols:



Call up from standby mode.



Select the application symbols.



Start an application.

Main menu options

Options Open menu.

Different functions are available depending on the context:

Big letters	Selection between two font sizes.
Illumination	Set display light brighter/darker.
Help	Display of a help text.





User guide

Menu controls

The steps needed to reach a function are shown in a **condensed form** in the user guide, e. g. to display call list for missed calls in condensed form:

 


This comprises the following steps:

-  Open the main menu.
-  Select , then function **Calls missed**.
-  Confirm.

Symbols

The following symbols are used to explain operation:



Enter numbers or letters.



On/Off/End key.



Call key



Soft keys



Displays a soft-key function.



Press the joystick vertically, e.g., to call up the menu.



Press the joystick in the direction indicated.



Function dependent on service provider, may require special registration.

Press joystick

The symbol in the centre of the lower line of the display shows the current function when the joystick is pressed down vertically.



Display menu



Take photos



Zoom



Cancel



Select, Change, OK




Call, accept call

Standard functions

Option menus

Functions which appear repeatedly in the options menu are listed here.

Options	Open menu.
Edit	Open the entry to edit.
View	Display entry.
Delete/ Delete all	Delete entry/delete all entries after confirmation.
New entry	Create new entry.
Send...	Select transmission service and medium for sending.
Reply/ Reply to all	The sender becomes the recipient, "Re." is placed in front of the subject matter and the received text is transferred into the new message.
Save	Store entry.
Save to 	Save recipients in the current address directory.
Sort	Set sort criteria (alphabetical, type, time).

Text input (p. 19)	T9 preferred: Activate/deactivate T9 input. Input language: Select language for text.
Rename	Rename selected entry.
Capacity	Display memory capacity.
Attributes	Display properties of the highlighted object.
Drive info	Display name, free memory and size of actual drive.
Help	Display help text.

Highlighting mode

With some applications (e.g. Phonebook/Addressbook) one or more entries in a list can be highlighted to carry out a function jointly.

Options Open menu.

Mark Activate highlighting mode.

If a **non-highlighted** entry is selected, this can be highlighted:

Mark The current entry is highlighted.

If a **highlighted** entry is selected, the highlighting can be deleted:

Unmark Dehighlight the current entry.

Additional highlighting functions:

Mark all	Highlight all entries.
Unmark all	Delete highlighting on all marked entries.
Delete marked	All selected entries are deleted.

Additional information

In lists use also the **Dictation key** to mark/unmark entries.

Menu speed dialling

All menu functions are numbered internally. A function may be selected directly by entering these numbers in sequence.

E.g., write new SMS (from standby mode):



Press this key to display the main menu.



Press this key for **Messages**.



Press this key to **Create new**.



Press this key for **SMS text**.


Security

The phone and SIM card are protected against misuse by several security codes.

Keep these confidential numbers in a safe place where you can access them again if required.

Codes

PIN	Protects your SIM card (personal identification number).
PIN2	This is needed to set the charge detail display and to access additional functions on special SIM cards.
PUK PUK2	Key code. Used to unlock SIM cards after the wrong PIN has been entered repeatedly.
Phone code	Protects your phone. Must be entered at the first security setting.

 

PIN control

The PIN is usually requested each time the phone is switched on. You can deactivate this feature but you risk unauthorised use of the phone. Some service providers do not permit deactivation of the controls.

Select Press this key.



Enter PIN.



Confirm input.

Change Press this key.



Confirm.

Change PIN

You can change the PIN to any 4 to 8-digit number you find easier to remember.



Enter **current** PIN.



Press this key.



Enter new PIN.



Re-enter new PIN.



→  → Security → Codes
→ Select function.

Change PIN2

(Display only if PIN 2 is available).
Proceed as with **Change PIN**.

Chg.phonecode

(Change phone code)
You define the phone code (4–8 digits) when you call up a phone-code protected function for the first time (e.g. **Direct call**, p. 29). It is then valid for all phone-code protected functions.

Following the third unsuccessful attempt, access to the phone code and the functions that use it is denied. Contact the Siemens Service (p. 121).

Clearing SIM card barring

If the PIN is entered incorrectly three times, the SIM card is barred. Enter the PUK (MASTER PIN) provided by your service provider with the SIM card in accordance with the instructions. If the PUK (MASTER PIN) has been lost, please contact your service provider.

Preventing accidental activation

Even if PIN use is deactivated (p. 17) confirmation is required to switch on the phone.

This prevents accidental activation of the phone, e.g. when you are carrying it in a bag or when you are travelling in an aircraft.



Press **down**.



Press. The phone switches on.



Press or take no action. The phone does not switch on.

Text entry

Text entry without T9

Press number key repeatedly until the required letter appears. After a brief interval the cursor will advance. Example:



Press **once briefly** to type the letter **a**, twice to type **b** etc.

Press and **hold** to write the number.

Ä, ä, 1-9

Umlauts and numbers are displayed after the relevant letters.



Press briefly to delete the letter before the cursor, press and **hold** to erase the whole word.



Move the cursor (forwards/back).



Press briefly: Swap between **abc**, **Abc**, **T9abc**, **T9Abc**, **T9ABC**, **123**. Status shown in top line of display.

Press and **hold:** All input-variants are displayed.



Press briefly: Special characters are shown.

Press and **hold:** Open input menu.



Press once/repeatedly:

.,?!'""0+-()@/:_

Press and **hold:** Writes 0.



Writes blank. Press twice = jumps a line.

Special characters



Press **briefly**. The symbols chart is displayed

1)	ı	i	_	;	!	?	,	.
+	-	"	'	:	()	/	*
¤	¥	\$	£	€	&	#	\	@
[]	{	}	%	~	<	=	>
	^	§	Γ	Δ	Θ	Λ	Ξ	Π
Σ	Φ	Ψ	Ω					

1) Line break



Navigate to characters.



Confirm.

Input menu

With text input:



Press **down**: The input menu is displayed:

Text format (SMS only)

Input language

Mark text

Copy/Paste

Text entry with T9

"T9" deduces the correct word from the individual key entries by making comparisons with an extensive dictionary.

Activate, deactivate T9

Options Open text menu.

Text input Select.

T9 preferred
Select.

Change Activate T9.

Select input language

Select the language in which you want to compose your message.

Options Open text menu.

Text input Select.

Input language
Select.

Select Confirm, the new language is set. Languages with T9 support are marked with the T9 symbol.

Writing with T9

Since the display changes as you proceed,

it is best if you finish a word without looking at the display.

Simply press the keys **once only** where the relevant letter is located. For "hotel", for example:



Press briefly for T9Abc then



A blank ends a word.


Do not use special characters such as Ä but rather use the standard characters, e.g. A; T9 will do the rest for you.


T9® Text Input is licensed under one or more of the following:
 U.S. Pat. Nos. 5,818,437, 5,953,541, 5,187,480, 5,945,928 and 6,011,554;
 Canadian Pat. No. 1,331,057;
 United Kingdom Pat. No. 2238414B;
 Hong Kong Standard Pat. No. HK0940329;
 Republic of Singapore Pat. No. 51383;
 Euro.Pat. No. 0 842 463 (96927260.8)
 DE/DK, FI, FR, IT, NL, PT, ES, SE, GB;
 and additional patents are pending worldwide.

T9 word suggestions

If several options are found in the dictionary for a key sequence (a word), the most probable is displayed first. If the word you want has not been recognised, the next suggestion from T9 may be correct.

The word must be shown **highlighted**. Then press

 again. The displayed word is replaced with a different word. If this word is also incorrect, press

 Press until the correct word is displayed.


If the word you want is not in the dictionary, it can also be written without T9.


To add a word to the dictionary:


Spell Select.

The last suggestion is deleted and the word may now be entered without T9 support. Press **Save** to add it automatically to the dictionary.

Correct a word

 
 Move left or right, word by word, until the required word is **highlighted**.

 Scroll through the T9 word suggestions again.


 Deletes the character to the left of the cursor **and** displays a new possible word!


Additional information

Within a "T9-word", individual letters may not be edited without first removing the T9-status. In most cases it is better to re-write the complete word.


 Set a full stop. The word is concluded if it is followed by a space. Within a word, a full stop represents an apostrophe or hyphen:

e.g. **provider.s** = provider's.

 Moving the cursor to the right ends the word.

 **Press briefly:** Switch between: **abc, Abc, T9abc, T9Abc, 123**. Status shown in top line of display.

Press and **hold**: All input modes are displayed.

 **Press briefly:** Select special characters (p. 19).

Press and **hold**: Open input menu (p. 20).

Text modules

Text modules can be stored in the phone for adding to your messages (SMS, MMS, e-mail).

Write text modules



Text modules

Options

Select New text.



Write text module.

Options

Open menu and select **Save**. Accept the specified name or allocate a new one.



Save.

Use text modules



Write message (SMS, MMS, e-mail).

Options

Open text menu.

Insert

Select.



Select Text modules.



Select text module from the list.

Select

Confirm. The text module is displayed.



Confirm. The text module is inserted in the message to the right of the cursor.

My phone

Adjust your phone according to your own wishes in the following ways to give it a personal touch:

Ringtones (p. 81)

Assign individual ringtones to caller groups or special dates.

Pictures (p. 113)

Assign individual pictures or photos to your Addressbook entries.

Animations (p. 80)

Choose a start-up and closing animation as well as a personal greeting.

Themes (p. 78)

Load a completely new graphical layout for the display.

Screensaver (p. 79)

Choose an analogue or digital clock, or a personal picture.

(Operator) Logo (p. 79)

Choose an individual picture (to be displayed in standby mode).

Wallpaper (p. 79)

Choose your own permanent background image.

Colour scheme (p. 79)

Select a colour scheme for the user interface.

Applications (p. 74)

Download your own applications from the Internet.

Where do I get what?

You can purchase additional ringtones, logos, animations and Java applications from your service provider or directly from Siemens.

Service supplier portal

Depending on your service provider, you will find direct access to his portal on your telephone via menu items or bookmarks. Please contact your service provider for more information on these services.

Siemens Mobile Portal

You will find additional ringtones, logos, animations and screensavers as well as more application, games and services in the Internet at this address:

www.siemens-mobile.com

Or you can download them directly via internet.

wap.siemens-mobile.com

You will also find a service for saving data here as well as a list of the countries in which these services are available.

My menu

Create your own menu with frequently (p. 97) used functions, phone numbers or internet pages.


Calling

Dialling with number keys

The phone must be switched on (standby mode) and the keypad must be open.



Enter the number (always with prefix/international dialling code).

 A **short** press clears the last digit, a **long** press clears the entire phone number.



Press the Call key. The displayed phone number is dialled.

End call



Press the End key **briefly**. Press this key even if the person on the other end of the line has hung up first.

Or Close keypad.

Set volume



Regulate the volume (only possible during a call).

Or



Using the plus/minus side key (press top/bottom).

If a Car Kit is used, its volume setting will not affect the usual setting on the phone.

Redial previous numbers

To redial the phone number **last** called:



Press the Call key **twice**.

To redial other numbers that were dialled previously:



Press the Call key **once**.



Pick out the phone number from the list.



Press this key to select the phone number.


If the number is busy

If the called number is busy or cannot be reached because of network problems several options are available (depending on the service provider). An incoming call or any other use of the phone interrupts these functions.

Either

Auto redial

Auto dial The phone number is automatically dialled ten times at increasing time intervals. End with:

 End key.

Or

Call back




Call back Your phone rings when the busy number is free. Press the Call key to dial the number.

Reminder


Prompt A beep reminds you to redial the displayed phone number after 15 minutes.

Additional information

 
 Store phone number in the Addressbook/Phonebook.

Handsfr. Handsfree switch on (playback from loudspeaker).

Always switch off "handsfree talking" before holding the phone to your ear! Otherwise, you will damage your hearing!

 Press and **hold** to switch microphone off.

International dialling codes

 Press and **hold** until a "+" is displayed.

Country Press and select country.

Phone number memo

You can enter a phone number during the call. The person to whom you are speaking can hear these entries. When the connection has ended you can save or dial the phone number.

Slider

Placing and accepting a call function only with opened slider (exception: use of headset).

Accept call

The phone must be switched on. An incoming call will interrupt any other use of the phone.



Press.

Or



Press.

Or

Open slider

A phone number and the name of the caller transmitted by the network will be displayed if the number is saved in the Phonebook/Addressbook. A picture of the caller may also be displayed (p. 32).

If the keypad is closed, press the soft key **Mute** to disable the ringer for the current call.

Reject call

Reject Press.

Or



Press **briefly**.

Or

Close keypad.

Warning!

Please make sure you have accepted the call before holding the phone to your ear. This will avoid damage to your hearing from loud ringtones.

Additional information



Press and **hold** to switch off the ringing tone and vibration temporarily.



Missed call display.

Handsfree

You can put the phone aside during a call. You can then hear the caller via the loudspeaker.

Handsfr. Activate handsfree talking.



Switch on.



Use the joystick to adjust the volume.

Handsfr. Deactivate.

Warning!

Always switch off "handsfree talking" before holding the phone to your ear! Otherwise, you will damage your hearing!

Swapping between 2 calls

Establish a second connection

You can call another number during a call.

Options Open call menu.

Hold The current call is put on hold.



Now dial the new phone number or

Options, select the Phonebook, Addressbook, or phone number.

When the new connection is established:

Swap Swapping between calls.

Incoming calls during a call

You may need to register for this service with your service provider and set your phone accordingly (p. 83). During a call, you may be advised that there is another call waiting. You will hear a special tone during the call. You have the following options:

Accept the waiting call in addition to the first

Swap Accept the waiting call, putting the current call on hold to do so.

Always proceed as above to swap between the two calls.

Reject the waiting call

Reject Press.

Or

Divert The waiting call is diverted, for example, to the mailbox.

Accept the waiting call and end the current call



End the current call.



Accept new call.

Ending call(s)



Press the End key.

Or Close keypad.

After the **Return to held call?** display, you have the following selection:

Yes You accept the call on hold.

No You end the 2nd call.

Conference

Call up to 5 parties one by one and link them together in a multiparty call. Some of the functions described may not be supported by your service provider or may have to be enabled specially.

A connection has already been established:

Options Open menu and select **Hold**. The current connection is maintained.



Now dial a new number. When the new connection is established ...

Options ... open menu and select **Conference**. The held call is joined.

Repeat procedure until all participants are linked together (up to 5 participants).

End




All calls in the multiparty conversation are ended when the End key is pressed.

Or Close keypad.


Call options

The following functions are only available during a call:

Options Open menu.

Hold	Maintain current call.
Microphone on	If switched off, the person on the other end of the line cannot hear you (muting). Also:  Press and hold .
Handsfree	Call via the loudspeaker.
Volume	Adjust handset volume.
Default book	Phonebook/Addressbook.
Conference	(p. 27)
Time/charge	Display duration of call up to now and (if set) the charges incurred while the call is in progress.

Send DTMF Enter tone sequences (numbers) for remote inquiries to an answering machine.

Call transfer  Connect current call to a second call. For you, both calls are now ended.

Main menu Access to the main menu.


Call status List all held and active calls (e.g. participants in a conference).


Direct call

If this is active, only **one** number can be dialled.


Switch on




 Confirm selection.

 Enter phone code.

When first prompted you define and enter the phone code (4–8 digits).

 Confirm selection.

Please do not forget this code (p. 17)!

 Select phone number from the Phonebook/Addressbook or enter it.


 Confirm.

Apply

Carol To dial the phone number (e.g. Carol's phone number), press and **hold** the right display key.

Switch off

 Press **down**:

 Enter phone code.

 Confirm input.

Tone sequences (DTMF)


You can, for example, enter control codes (numbers) for remote access to an automatic answering machine **while another connection exists**. These entries are transmitted directly as DTMF codes (control codes).

 
Options Open menu.


Send DTMF Select.


Using the Phonebook/Addressbook


Store phone numbers **and** control codes (DTMF codes) in the Phonebook/Addressbook in the same way as a normal entry.

 Enter phone number.

 Press until a "+" appears in the display (wait for the connection to be established).

  Enter DTMF codes (numbers).

 If necessary, wait again for three seconds at a time for the receiver to process the entries safely.

 Enter a name.

Save Store entry.

You may also store just the DTMF codes (numbers) and then send them during the call.

Default book



→ → Select function.

Show entries

The entries in the standard directory (Addressbook or Phonebook) are shown.



Select a name with the first letter and/or scroll.

New entry

Create new entry.

Addressbook (see also p. 31)

Phonebook (see also p. 35)

Default book

You can set a particular directory as your preferred one to use.

The selected standard book is opened in standby mode with the joystick.



Open Phonebook or Addressbook.

Addressbook

In the Addressbook, a lot of data can be recorded for each entry and additional functions such as pictures, birthdays, chat can be used.

Phonebook

The Phonebook is located on the SIM card. Only one phone number can be entered per entry. The Phonebook on the SIM card can easily be transferred into a different telephone.

Business card

Create your own business card to sent to a different GSM-phone. If no business card has been created yet, you will be asked for your input.



Move from field to field to enter your details.

Save

Press.

Additional information

The content of the business card corresponds to international standards (vCard).



Copy numbers from Addressbook/Phonebook.

Groups

See p. 34.

<Info numbers>

See p. 37.

Addressbook

The Addressbook can store up to 1000 entries, each with a variety of telephone and fax numbers as well as additional address details. These entries are managed separately from those in the Phonebook in the phone memory. However, you can exchange data between the Addressbook and the Phonebook on the SIM card.

New entry

The address book is set as standard:



Open Addressbook (in standby mode).



Display input fields.



Select required input fields.



Fill in input fields. The maximum number of characters available is shown at the top of the display.

At least one name must be entered. Always enter phone number with prefix.

Possible input fields

Last name:	URL:
First name:	Inst. message >>
Phone number:	Group:
Phone no./office:	Company:
Phone no./mobile:	Address: >>
Fax:	Birthday: >>
Fax 2:	Picture:
E-mail address:	
E-mail 2:	All fields

Additional information

Group: Allocation to a group (p. 34).

Address: Extension to enter the complete address:

Street:, Post code:, City:, Country:

Com. services

Information if the entry is being used as a chat contact (p. 62):

Nickname:, WV user ID:, ICQ number:, AIM screen name:

Birthday: After activation, the date of birth is entered.

Reminder: The telephone reminds you one day before the birthday at the time entered.

Picture: Assign a picture to the entry:

From camera, From 'M.stuff', No picture

It is displayed if you are called by the corresponding phone number.

All fields/Reduced fields

Display of number of input fields.

Save

Save the entry.

Additional information



Temporary switch to Phonebook.

Synchronisation

Siemens's MPM (Mobile Phone Manager, p. 115) supports Addressbook management by Windows® PCs.

Using **Remote syncr.** you can synchronise your mobile with an organiser stored on the Internet (see also p. 110).

Display/find entry



Open Addressbook (in standby mode).



Select required entry.



Display.








Display options

Options




The options menu only ever offers the functions for the currently selected input field.

Move to ...	Allocate current or highlighted entries to a group.
View	Display an allocated picture.
Copy to SIM	Copies name and one phone number to the SIM card (Phonebook).
New SMS, New MMS, New e-mail	Create a message with the selected entry.
Browser	Start internet browser and visit URL.
Inst. message	Begin chat p. 62.
(For standard functions see p. 15)	



Change entry

-  Open Addressbook (in standby mode).
-  Select required entry.
-  Press.
-  Select input field.
-  Open entry.
-  Make changes.
-  Save.

Dialling an entry

-  Open Addressbook (in standby mode).
-  Select a name with the first letter and/or scroll.
-  The number is dialled.

If there are several numbers in the address book entry, these are offered for selection.

-  Select phone number.
-  The number is dialled.

Address book options



Depending on the actual situation, different functions will be offered. These functions can be applied to the entry currently selected as well as to multiple selected entries:

Options Open menu.

Move to ...	Allocate current or highlighted entries to a group.
Copy to SIM	Copies name and number to the SIM card (Phonebook).
Filter	Only those entries which match the filter criteria are displayed.
Import	Set up readiness to receive for a Phonebook entry via IrDA (p. 88) or SMS (p. 44).
Sort	Specify sorting criteria for output of the Addressbook entries.
Search	Enter search term.
(For standard functions see p. 15)	

Groups

Nine groups are specified in your phone to enable you to arrange your Addressbook entries clearly. You can rename seven groups.

-  Open Addressbook (in standby mode).
- <Groups> Select (the number of entries is listed behind the group name).
-  Select group.

Groups menu

Options Open menu.

Rename group	Change name of group.
Group symbol	Assign a symbol to a group. The symbol must then appear in the display when one of the group members calls.







Additional information

No group: Contains all Addressbook entries that do not belong to a group (name cannot be changed).

Received: Contains Addressbook entries received by IrDA (p. 88) or SMS (p. 44) (name cannot be changed).

Ringing tone for group

Assign a ringtone to a group that plays when one of its members calls you.






-  →  → Ringtones
→ Group calls
-  Select group.
-  Confirm. If a ringtone has already been set, it will be played. Otherwise, the ringtone list will be displayed and you can select one.
-  If necessary, select a ringtone.
-  Confirm.

Phonebook

Entries in the Phonebook (on the SIM card) are managed separately from those in the Addressbook. You can, however, exchange data between the Phonebook and the Addressbook.

New entry

If the Phonebook has been selected as standard:

-  Open Phonebook (in standby mode).
-  Select <New entry>.
-  Display input fields.
-  Select input field.
-  Fill in input fields. The maximum number of characters available is shown at the top of the display.

Phone number:

Always enter phone number with prefix. An entry is not saved without a phone number.

Name:

Enter first and/or last names.

Group:

Default: **No group**

Important phone numbers are combined together in a group (VIP).

Note that group VIP is different from same group in Addressbook.

Location:

Default **SIM**

Special SIM cards can save phone numbers in a protected area (**Protected SIM**) (PIN2 required).

Record number:

Each entry is automatically assigned a record number. You can also dial using the record number.

Save

Press to store the new entry.

Additional information



Temporary switch to Addressbook.

Country International dialling code..p. 25

Funktionen zur Text entryp. 19

Siemens's MPM (Mobile Phone Manager, p. 115) supports Addressbook management by Windows® PCs.

Call (search for an entry)



Open Phonebook.



Select a name with the first letter and/or scroll.



Number is dialled.

Call using record no.

A record number is automatically assigned to every new entry in Phonebook.



Enter record number.



Press.



Press.

Change entry



Select entry in Phonebook.



Press and select **Edit**.



Select desired input field.



Make changes.



Press.

Phonebook options

The following functions are available, depending on the current situation.

Options Open menu.

Copy into	Copy all highlighted entries to the Addressbook.
Copy all to	Copy all entries to the Addressbook.
Delete all	The entire Phonebook is deleted. PIN-protected
Import	Set up readiness to receive for a Phonebook entry via IrDA (p. 88) or SMS (p. 44).

(For standard functions see p. 15)

<Special books>



Open Addressbook
(in standby mode).

<Special books>

Select.

<Own numbers>

Enter "own" phone numbers in Phonebook (e.g., fax) for information. These numbers can be changed, deleted and also sent as an SMS message.

<VIP numbers>

Display the phone numbers saved in the VIP group.

<SIM phonebook>

Entries stored in the Phonebook on the SIM card can also be used on other GSM phones.

<Protected SIM>



On special SIM cards, phone numbers can be stored in a protected location. PIN2 is required for editing.

<Service nos.>/<Info numbers>

There might be phone numbers saved in your Phonebook that have been provided by your service provider. They may be used to call local or national information services or to use services offered by your service provider.

Phone number extensions in the Phonebook

Digits may be replaced by a "?" when phone numbers are entered in the Phonebook/Addressbook:



Press **down**:

These wildcards must be replaced with numbers before dialling (e.g., with the extension numbers in a phone system).

To make a call, select the phone number from the Phonebook/Addressbook.



Press.



Replace "?" with numbers.



Number is dialled.

Call records

The phone number of a caller is displayed if

- the caller has switched off the **Incognito** function and
- the network supports the "Caller Identity" function.

Alternatively, a caller's name is displayed if it is stored in the Phone-book/Addressbook.

Your phone stores the phone numbers of calls for convenient redialling.



Select call list.

Open call list.

Select phone number.

Dial phone number.

Or

View Display information on the phone number.

Up to 500 entries are stored in the records:

Calls missed



The phone numbers of calls that you have received but not answered are stored for call back purposes.



Icon for missed call (in standby mode). Press the display key beneath the symbol to call up the **Inbox** (p. 43).

Calls received

Accepted calls are listed.

Calls dialled

Access to the last numbers dialled by you.



Fast access in standby mode.

Delete records

The records are deleted.

Call list menu

The records menu can be called up if an entry is highlighted.

Options Open menu.

Copy into  / **Copy to SIM**

Copy the currently selected phone number into the preferred directory.

(For standard functions see p. 15)

Durat./charge

You can display the charges and duration during a call. You can set a unit limitation for outgoing calls.

 →  → Durat./charge

 Select.


Last call

All outg. calls

All incoming


Remain. units

Charge sett.

 Open report or settings.

Reset Reset the selected report.

Charge sett.

 Open menu.

Currency

Edit your currency.

Personal rate

(PIN 2 prompt)


Enter the currency as well as the charge per unit and time.

Account limit


(PIN2 prompt)

Special SIM cards allow you or the service provider to define a credit or a period after which the phone is barred for outgoing calls.

Edit Press.

 Enter PIN2.

Charge limit Switch on.

 Enter number of units.

OK Confirm.

Then confirm the credit or reset the counter. The status display for pre-paid cards may vary depending on the service provider.

Auto display

Call duration and charges are automatically displayed.

Camera

You can view photos/videos recorded on the integrated camera immediately,

- use the photo as a background image, logo, a switch on/off animation or a screensaver.
- send the photo/video via MMS or e-mail.

Switch on



Or



Starts camera in standby mode.



Switch to photo mode.



Switch to video mode.

The current (preview) image is displayed. You will see the following in the first line from left to right:



Brightness



Zoom factor



White balance



Flash connected

In the top right-hand corner of the preview image, the number of photos which can still be taken in the selected resolution is displayed. This number varies considerably from motif to motif (storage space required). Beneath the preview image, you will find a reference to the selected resolution. In video mode, the recording time already used and the maximum time for the current clip is shown here.

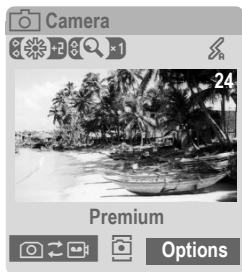


Photo mode



Takes a photo.



Displays the preview image of the next photo.

The photo is saved with a name, the date and the time. To enter the name, see **Setup** in the options menu.

Settings prior to taking a photo:



Setting the brightness.



Sets the zoom factor.

Image resolution

Four settings can be made for the quality of the image regardless of the preview image resolution. The maximum resolution is 640 x 480 Pixel.

To produce an own wallpaper use the resolution **Wallpaper**.

The resolution may decrease depending on the selected digital zoom.

Video mode

Two resolutions can be made for the quality of the video. The standard mode is equivalent to the preview image resolution.



Start the video recording.



Terminate the video recording.

A red point appears in the top right in the display while the video recording is being made.



Plays the video recording.

Flash (Accessories)

If the flash is active, this is shown by a symbol in the display. The flash is constantly loaded while phone in camera mode. This reduces the stand-by time.



This symbol appears when the flash is being loaded.

Settings, see options menu.

Camera options

The following functions are available, depending on the current situation.

Options Open menu.

Settings	<ul style="list-style-type: none"> • Name for photos/recordings • Image resolution
Pictures	Displays list of photos.
Other videos	Display list of video.
Microphone on	Switches the microphone on or off.
Flash	Choose between: Automatic, Off, Red eye red.
Self timer	The photo is taken approx. 15 seconds after triggering. For the last 5 seconds, you will hear a signal tone each second.
White balance	Choose between: Automatic, Indoor, Outdoor

(For standard functions see p. 15)

Additional information



Insufficient memory available. Start the memory assistant to delete specific data (p. 85).

A mirror can be attached to the rearside of the telephone depending on the telephone variant. This makes it easier to make self portraits.

Siemens's MPM (Mobile Phone Manager, p. 115) supports copying picture to Windows® PCs.

Inbox

The central input folder offers immediate access to the messages currently received. This means that you no longer have to look through all input folders for the various message types. The entries are marked with a symbol to indicate their type and status. You will find a list of the symbols on p. 8.

To call up the central input folder, e.g. if a new SMS has been received:



Press the display key beneath the symbol.

Or



In standby mode:

In the central input folder, you will find the following message types:

SMS, MMS, E-mail

System messages:

Message about MMS, Missed alarm, Missed appts., Calls missed, WAP push, Voice message

Data objects:

Ringtones, Pictures and Video, calendar entries, Notes and Business card.



When you open an entry, the relevant application also starts.

After a set time span, entries which have already been read and opened are only displayed in the message-related incoming lists (see **Setup** in the options menu).

Inbox options

Options Open menu.

Receive e-mail	Select set access and send all e-mails.
Setup	If entries have been read, remove them from the Inbox: Daily, Never, Immediately If Daily has been selected, specify the time.

(For standard functions see p. 15)

SMS

You can transmit and receive very long messages (up to 760 characters) on your phone. They are automatically composed of several "normal" SMS messages (note higher charges).

Additionally you can insert pictures and sounds in an SMS.

Write/send



→ → Create new
→ SMS text



Enter text.

You will find information on writing texts with and without T9 in the chapter "Text entry" (p. 19).

The following is displayed in the top display line: Text entry status, number of SMS required, number of characters still available.



Start sending procedure.



Select phone number from the Phonebook/Addressbook or enter it.

Group If necessary, select a group.



Confirm. The SMS is transmitted to the service centre to be sent and saved in the **Sent** list.

Text options

Options Open menu.

Save	Save composed text in draft list.
Picture&sound	Add pictures, animations and sounds into message (see following text).
Insert	Insert text module (p. 22).
Format	Font size: Small font, Medium font, Large font Underline Alignment: Default alignm., Left, Centre, Right Mark (highlight text with the joystick)
Delete text	Delete the whole text.
Send with...	Select SMS profile so the SMS can be sent.

(For standard functions see p. 15)

Picture&sound

Send the pictures and tones with or without accompanying text.

Remember that these may be protected (DRM, p. 13).

The text input field is open:

Options

Open menu.



Select **Picture&sound**.

The menu contains:

Fix animations

Fix sounds

Own animat.

Own pictures

Own sounds



Select area.



Confirm. The first entry of the selected section is displayed.



Scroll to entry required.

For **Fix animations/Fix sounds**:



The selection is added to the SMS.

For **Own animat./Own pictures/Own sounds**:



The selection is displayed/played back.



The selection is added to the SMS.

The pictures which have been added are displayed, sounds are displayed in the form of "wildcards".

SMS to group

You can send an SMS message as a "circular" to a recipient group.

Options

Open menu.

Send

Select.

Group

The list of groups is displayed.



Select group.



Open group and highlight all/individual entries.



A safety inquiry is made and then sending is started.

Additional Information

Siemens's MPM (Mobile Phone Manager, p. 115) supports SMS management by Windows® PCs.

Read




Arrival of a new SMS announced in the display. Open it with the display key beneath Inbox (p. 43).



Reading the SMS.



Scroll through message line by line.

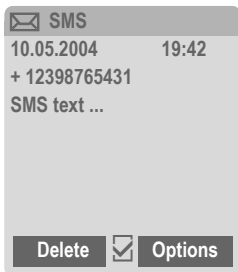

Reply

You can answer the SMS now open immediately. The new additional text is placed above the received text.



Functions for a direct reply.

Reply options



Open reply menu.

Write message	Create a new reply text.
Edit	Edit received SMS or add new text.
Answer is YES	Add Answer is YES to the SMS.
Answer is NO	Add Answer is NO to the SMS.
Call back, Delay, Thanks	Add a standard text as a reply to the SMS.

Read options

Options Open reply menu.

Reply	See "Reply options" above.
Picture&sound	Save picture/sound contained in the SMS.
Text zoom	Enlarge/reduce text display.
Archive	Move SMS message to archive.
(For standard functions see p. 15)	

Lists

All SMS messages are archived in different lists, according to their status. (List of message symbols, see p. 8):

Inbox



The list of received SMS messages is displayed.

Draft



The list of not yet transmitted SMS messages is displayed.

Unsent



The list of concatenated SMS messages not yet completely sent is displayed. Transmission can be restarted.

Sent



The list of sent SMS messages is displayed.

SMS archive



The list of SMS messages stored in the phone is displayed.

List options

Different functions are offered depending on the list.

Options Open menu.

Send	Send or forward entry.
Send with...	Select an SMS profile for transmission.
Archive	Move SMS message to archive.
(For standard functions see p. 15)	

Setting

SMS signature



You can enter a "signature" with a maximum of 16 characters. This signature will then be attached to each SMS except **Reply** and when changes are made to an existing SMS.

SMS profiles

 


Up to 5 SMS profiles can be set. The transmission characteristics of an SMS are defined in these. The pre-setting depends on the SIM card inserted.

Activate profile



Set profile



Service centre Enter the phone numbers for the service centre as provided by the service provider.

Recipient Enter a standard recipient for the profile.

Message type

- **Manual:** Inquiry for all messages.
- **Standard text:** Normal SMS message.
- **Fax:** Transmission via SMS.
- **E-mail:** Transmission via SMS.
- **New:** You may need to obtain the required code number from your service provider.

Validity period Period in which the service centre is to try to deliver the message:

Manual, 1 hour, 3 hours, 6 hours, 1 day, 1 week, Maximum*

* Maximum period that the service provider permits.

Status report Receive confirmation of successful/failed transmission of a message. This service may be subject to a charge.

Direct reply If activated, the reply to your SMS message is handled via your service centre (for information, please contact your service provider).

SMS via GPRS Sent SMS automatically via GPRS (p. 88).

Save aft. send Sent SMS messages are saved in the **Sent** list.


More information on SMS

SMS status report


If the message cannot be transmitted to the service centre you are offered the chance to repeat the transmission. If this also fails, contact your service provider. The **Message sent!** message only indicates transmission to the service centre. This will then attempt to relay the message within a certain period.

See also **Validity period** (p. 48).

Phone number in SMS

Phone numbers displayed in the **highlighted** text can be dialled () or saved in the Phonebook/Addressbook.

Downloading ringtones and logos

You can receive links for downloading ringtones, logos, screensavers, animations and information about applications with an SMS. Please highlight this link and, by pressing the Call key , start the download. Please check that the dial-in access (p. 89) is configured.

Remember that these may be protected (DRM, p. 13).

SIM memory full

If the message icon flashes the SIM memory is full. **No** more SMS messages can be received. Messages must be deleted or archived.

MMS

The **M**ultimedia **M**essaging **S**ervice enables you to send texts, pictures/videos and sounds in a combined message to another mobile phone or to an e-mail address. All elements of an MMS message are merged to form a "slide show".

Depending on your phone's settings, you will receive either the complete message automatically or notification that an MMS has been saved in the network, giving sender and size details. You may then download it to your phone to read it.

Ask your service provider whether this service is available. You may need to register for this service separately.

Create

 →  → Create new → MMS

An MMS consists of the address header and the content.

An MMS may consist of a series of pages. Each page may contain a text, a picture/video and a sound. Remember that pictures and sounds may be protected (DRM, p. 13).

Write **texts** with the help of T9 (p. 19).

Pictures and **videos** can be recorded with the integrated camera and/or loaded from **My stuff** (p. 113).

You can record Sounds with the sound recorder and/or load them from **My stuff** (p. 113).

First select an object for processing to be added to the first page of the MMS:

Pictures/videos

Limits on picture size can be set in the user settings.

<Picture> Select.



Display picture/video functions:

Insert picture

Open list to select a picture.

Insert video

Open list to select a video.

Camera

Activate the camera to take a photo or record a video for the MMS (p. 40).



Also possible.

Open

Display picture.

Delete

Delete inserted picture/video.

Save

Save picture/video for use later on.

Msg. details

Display properties, incl. any user right restrictions (p. 13).

Sounds

<Sound> Select.



Display sound functions:

Insert sound

Open list to select a tone.

Record

Activate tone recording in order to record tones (p. 107).



Also possible.

Open

Play back the tone.

Delete

Delete inserted tone.

Save

Save tone for use later on.

Msg. details

Display properties, incl. any user right restrictions (p. 13).


Text

<Text> Select and write the text.



The text functions are displayed (see also p. 19):

Insert...

Choose any of the following for insertion: **Text modules**, **Bookmark**, **Insert from** 

Delete text

Delete text on current page.

Save

Save text on the page as text module.

Text input

T9 settings:

T9 preferred, **Input language**

Mark

Text processing together with **Copy** and **Insert**.

Generation options

Options	Open menu.
Send MMS	Send MMS.
Play	Play entire MMS on the display.
Picture...	See above.
Sound...	See above.
Text...	See above.
Page	<p>Add page: Insert new page behind current one.</p> <p>Delete page: Delete current page.</p> <p>Page list: Display available pages.</p> <p>Timing: Set the temporal sequence of the MMS presentation:</p> <ul style="list-style-type: none"> • Page duration: Automatic or Manual • Show page: Only if Manual is set in front of it. Enter the lifespan of a page.
Msg. details	Enter sending parameters (see next chapter).

Save as templ. After creating MMS, save it as a template. See also below:

Layout Select one of four possible layouts:
Text above, beneath, beside (on left or right) of picture.

Colours Select the colours for:

- Message
- Page
- Bitmap
- Text backg.
- Text colour

(For standard functions see p. 15)

Templates



MMS templates

MMS templates are saved MMS with not address. They can be sent as new MMS or used as part of a new MMS. A maximum of 10 templates can be saved.

Create templates by writing a new MMS or using an MMS which you have already received.


Options Open menu and select **Save as templ.**

Sending an MMS


The page(s) of the new MMS is (are) already created and the MMS is displayed.



Open address entry.

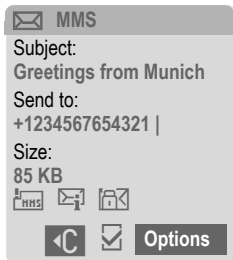

Subject: Enter a brief description.

Send to: Enter one or more phone number(s)/e-mail address(es).
 Insert from Addressbook.

Size: Display the size of the current MMS in KB.



Start sending procedure.



The MMS is sent after confirmation.

Expanded address fields



Scroll downwards.

More: Provide additional address fields.

Cc: Address(es) of copy recipient(s).

Bcc: Address(es) of copy recipient(s) who are not visible to the other recipients.

Attachments: Insert attachments.

Date: Creation date.

Use delivery time: Use specified send time.
 If **Yes**:

Delivery date:

Send date.

Delivery time:

Send time.

Icons for status information



Priority



Send report.



Contains DRM (p. 13).

Sending options

Options Open menu.

Send MMS	Send MMS.
Play	Play entire MMS on the display.
Edit	Object selection to change an object.
Add recipient	Add recipient from the current address directory.
Delete recip.	Delete individual recipient.
Add attachm.	Add attachment: <ul style="list-style-type: none"> • File • Business card • Appointment
Page list	Display MMS pages for viewing and/or changing.
Save as templ.	After creating MMS, save it as a template.
(For standard functions see p. 15)	

Receiving an MMS

Depending on the setting, an MMS can (p. 56) be received in two ways:

Complete transmission

The complete MMS is sent to your telephone. This can take quite long if the MMS is large.



Shown in the display.



Start reception. The MMS is sent.

Preliminary notification

You are notified that an MMS is awaiting reception.



Shown in the display.



Read the notification. Display the size of the MMS in KB.

Receive The complete MMS is sent.

OK Display in Inbox.

Additional Information

Siemens's MPM (Mobile Phone Manager, p. 115) supports MMS management by Windows® PCs.

Reading an MMS

An MMS has been fully received.



Select the MMS.



Start automatic playing of the MMS.

Key functions for playback:



To the next page.



Press briefly once to return to the start of the current page; press briefly twice to return to the start of the previous page.



Set volume.



Terminate.

When the MMS is complete, the message details are displayed.

Subject: Description of the MMS.

From: Information about the sender.

Size: Size of the MMS in KB.

Expanded address fields



Scroll downwards.

More: Additional input fields.

Cc: Copy recipient.

Attachments:

Save attachments.

Date: Reception date.

Symbols for status information (see p. 53)

Lists

All MMS are saved in four different lists (list of message icons, see p. 8):

Inbox



The list of MMS messages and notifications received is displayed. To receive an MMS subsequently, open notification and press **Receive**.

Draft



The list of stored drafts is displayed.

Unsent



The list of the MMS messages not yet completely transmitted is displayed.

Sent



The list of sent MMS messages is displayed.

List options

Different functions are offered depending on the list/situation.

Options Open menu.

Play	Play MMS on the display.
Edit	Display MMS for processing.
View	Display MMS for viewing only (write-protected).
Send MMS	Send MMS.
Reply MMS	Reply to MMS immediately.
Forward MMS	Enter recipient(s) for forwarding.
Msg. details	Display message parameters.
Receiv.all MMS	Send all new MMS immediately.
(For standard functions see p. 15)	

Setting

 →  → Message setup → MMS
→ Select function.

MMS profile:

6 MMS profiles can be set (5 in the telephone memory, one on the SIM card). The send properties can be specified in them. In most cases, the setting has already been made. If necessary, check with your service provider for details.

Activate profile



Select profile.

Options Open menu and select **Activate**.

Set profile




Select profile.

Options Open menu and select **Change sett..**

User settings

Set the MMS dispatch to suit your requirements:

Delivery report:	Request delivery confirmation for sent messages.
Read reply:	Request confirmation that the MMS has been read.
Default priority:	Send priority: Normal, High, Low
Validity:	Select the period in which the service centre is to try to deliver the message: Manual, 1 hour, 3 hours, 6 hours, 1 day, 1 week, Maximum* * Maximum period that the service provider permits.
Earliest deliv. time:	Transmission from the service centre to the recipient: Immediate, Tomorrow
Default duration:	Length of display for an MMS page (standard requirement).

Retrieval:	Receive complete MMS or only notification of arrival. Immediate Receive complete MMS immediately. Auto.homenet Receive complete MMS immediately in home network Manual Only receive the notification.
Spam filter:	Settings for receipt of promotional MMS.
Size indication: 	Set max. message size and message handling.

E-mail

Your phone has an e-mail program (client). You can use it to create and receive e-mails.

Write



→ → Create new → E-mail

Enter the address data for the e-mail:

Send to: Enter one or more E-mail address(es).
 → Insert them from the Addressbook.

Subject: Enter e-mail heading (up to 255 characters).

Content Enter text.

To send:

Options Open menu.

Send e-mail

Select.

Or

All fields Opens additional input fields.

Cc: Address(es) of copy recipient(s).

Bcc: Address(es) of copy recipient(s) who are not visible to the other recipients.

Attachments:

Add attachments such as images and sounds.

Options

Different functions are offered depending on the position of the cursor.

Options Open menu.

Send e-mail	Send e-mail.
Send later	Transfer e-mail into the Unsent list.
Save	Save e-mail in the Draft list.
Add recipient	Add recipient from the current address directory.
Delete line	Delete current line.
Insert...	Text modules Bookmark → Insert them from the Addressbook.
Add attachm.	Open My stuff to make a selection. Remember that pictures and sounds may be protected (DRM, p. 13).
Delete text	Delete the whole text.
Text input	<ul style="list-style-type: none"> • T9 preferred • Input language

Receive/read

 →  → **Inbox**
→ Select function.

Before an e-mail can be read, it must be retrieved from the server. You have two options:

Retr. e-mail

Only the message header in **Inbox** (p. 43) is sent. You can then decide if you also want to receive the contents:

Options Open menu and select **Retrieve body**.

or want to delete the e-mail on the server:

Options Open menu and select **Del. on server**.

Send/rec. mail

The set access is selected and all e-mails transferred into **Inbox** (p. 43). At the same time, completed e-mails are transferred from the **Unsent** list.

Attachments

Contains the e-mail attachments, these can be saved in **My stuff** (p. 113).

Options Open menu and select **Save attach..**

Lists

All e-mails are saved in different lists depending on their status (list of message icons, see p. 8):

Inbox

 →  → **Inbox** → **E-mail**

The list of received e-mails is displayed.

Draft

 →  → **Draft** → **E-mail**

The list of e-mails not yet transmitted is displayed.

Unsent



The list of e-mails not yet transmitted is displayed.

Sent



The list of transmitted e-mails is displayed.

List options

Different functions are offered depending on the list.

Options Open menu.

Retr. e-mail	Only transfer the message header into Inbox (p. 43).
Retrieve body	Fetch the contents from the server if only the message header was received.
Del. on server	Delete the contents on the server if only the message header was received.

(For standard functions see p. 15)

Setting



Before using this service, you must set the server access and your e-mail options. Most of this data has already been entered. If not, you can obtain this from your service provider. See also on the Internet at:

www.siemens-mobile.com/sl65

Accounts



Select account.



Open.

Activating access



Select access.



Activates access.

Set access



Select access or <Empty>.



Start the processing and fill in the data fields as specified by the service provider.

General sett.

Enter an e-mail address to which a **Bcc** (blind carbon copy) is **always** sent.

Voice message/mailbox



Most service providers provide a mailbox in which a caller can leave a voice mail for you if

- if your phone is switched off or not ready to receive,
- if you do not want to answer,
- if you are making a phone call (and if **Call waiting** (p. 83) is not activated).

If the voice mail service is not part of your service provider's standard package, you will need to register for it, and possibly make the settings manually. The following sequence may vary from service provider to service provider.

Setup



The service provider supplies you with two phone numbers:

Save mailbox number

You call this phone number to listen to the voice mails left for you.



Select number from Phonebook/Addressbook or enter/change it.


OK

Confirm.

Save call divert number

Calls are diverted to this phone number.



→  → **Phone setup** → **Divert**
→ e. g. **Unanswered** → **Set**



Enter phone number.

OK

Registration with the network is confirmed a few seconds later.

Listening to message



A new voice message can be announced as follows, depending on the service provider:



Icon plus beep.

Or



Notification via SMS.

Or

You receive a call with an automatic announcement.

Call your mailbox and play the message(s) back.



Press and **hold** (if necessary enter mailbox number once only). Confirm with **OK** and **Mailbox** depending on your service provider.

Inst. message



With this function you can receive text, audioclips, pictures and files and send them to one or more end devices (mobile telephone, PC). This function is not offered by all service providers (functionality could be deactivated). Please ask your service provider about this.

Your dialogue partners are entered in contact lists. When a connection has been established, these lists show who is available, whether they want to be disturbed and what mood they are in.

GPRS must be switched on.

 →  → Inst. Message

Start menu

Login Select the access via which the dialogue runs

or

Account: select (p. 67).

Msg. history Read the messages from the last meeting.

Setup Settings for your representation, the applications and servers.

Quit Terminate application.

To the Chat immediately

Select the access (p. 67)

 →  → Inst. message → Login

The current contact list or the list is displayed (if necessary, set access first, p. 67)

Specify your own status (p. 68)

Options Open menu.

My settings

Select and make entries.



Return to contact list.

Enter new contact (p. 63)

Options Open menu.

Manage Press, then:

Add contact

select and enter the user ID at least.



Return to contact list.

Inst. Message with new contact (p. 66)



Select the contact.



Start Inst. Message.



Open editor.



Write text



Send text.

... etc.

Login



→ Inst. message → Login

Select the last access to be used (see also **Automatic login**: p. 68).

Contact lists

When the connection has been established, the contact list or the list of the contact lists is shown for selection.

In the contact list, you will find a list of the most recently used contacts. The first time you log in, an "empty" contact list will be generated by the server if necessary.

Displays in the list:

-Conversation

Displays of the online contacts for the messages are available.

-Online

Online contacts with whom no conversation is being held at the moment.

-Group



Groups for Inst. Message with several contacts.

-Offline

Contacts which are not online at present.

Managing the contacts



Select a contact.

Options

Open menu.

Manage

Select.

Contacts

Different functions are offered depending on the selection:

Add contact	User ID: Enter a non-ambiguous user (login) name. Nickname: Enter your own nickname for the contact. Friend: The contact receives the status Friend: and access to personal information (p. 68).
Search contact	Search for contact.
Delete contact	Delete contact from the list.
Block contact	No more messages are received from the contact and the contact receives no status information from you. This function works for all your lists.

Managing the groups



Select one of the groups you set up yourself.

Options Open menu.

Manage Select.

Manage group

Different functions are offered depending on the selection:

Add member	Add a new group member, see also Add contact .
Search memb.	Search for group member.
Invite	Invitation to the contacts in your own group to Inst. Message.
Delete member	Delete contact from the group member list.
Add group	Add new group.
Search group	Search for group on the server (no longer in the "administered groups" list).

Create group **Group ID:**
Enter a non-ambiguous group name.

Name:
Name of group.

Topic:
Topic of group.

Searchable:
Other people can look for the group.

Welcome note:
Enter welcome text.

Delete group Delete group.

Creating a new contact list

The current contact list is displayed.

Options Open menu.

Contact lists

Available contact lists are displayed.

Options Open menu.

Create Select.

Contact list ID:

Give the contact list its own, specific name.


Name: Allocate self-explanatory names.



Confirm.

Contact list options

Options Open menu.

Details 	Additional information about the contact or the group.
My settings	Information on your current personal status (p. 68).
Manage	Functions for managing a contact or a group.
Contact lists	Display contact lists for selection.
Block list	Display all blocked contacts. Can be unblocked.
Appl. settings	Set the application (p. 68).
Suspend	Terminate the application, the server remains connected.
Logout	Log off from the server and return to start menu.
Help	Display help text.

Starting to Inst. Message

A contact list must be displayed.



Select a contact or a group.



Start communication with the contact.

The page with the Inst. Message is displayed. During Inst. Message with a group, the name of the sender is placed in front of each contribution.



Open editor.



Write text.



Send text. The text is displayed in the Inst. Message room almost immediately.

Naturally, you can also receive messages from contacts whom you do not know. This will be pointed out to you in the display, and you can either switch to Inst. Message or ignore/block the contact.

Options (individual contact)

Options Open menu.

Send sound	Select and send a melody/tone from the list (DRM p. 13).
Send picture	Select and send a picture from the list (DRM p. 13).
Send any	Send any file.
Details	Information about the contact (if this is authorised by him).
Clear all	Delete all texts in the current Inst. Message.
Block contact	No more messages are received from the contact and the contact receives no status information from you. This function works for all your lists.

Options (group contact)



Options Open menu.

Leave group Exit group.

Details Information about the group:
Group ID:, Name:, Topic:, Owner:

Clear all Delete all texts in the current Inst. Message.

Receiving objects



If sounds or pictures are sent to you during a Inst. Message, you will be informed of such in the display.

Receive Accept object.

Or

Reject Reject object.



Msg. history

 →  → Inst. message
→ Msg. history

The messages from the last meeting are displayed. You can read and delete the contributions.



Requirement: The server must be disconnected, see **Suspend** (p. 65) and **Automatic login**: (p. 68).

Setting

 →  → Inst. message → Setup
→ Select function.

Account

The list of available accesses is displayed.

 /  Select an access to establish a connection.

Or

<New entry>/Account sett. 

Set up an access or change the settings as specified by the service provider. Depending on the service provider, the settings may not be changeable.

Name:	Name of the access.
URL:	Enter URL, e.g. http://www.abc.com
User ID:	Enter a non-ambiguous user (login) name.
Password:	Enter password (shown as a series of asterisks).

My settings

Information on your current personal status:

Alias:	Your own alias at which you can be found on the server.
AIM screen name:	Name to be displayed in the group.
Mood:	Information about your own mood, e.g. Happy, Sad, Sleepy, etc.
Status text:	Random text information, e.g. "am at home".
Availability:	Availability: Available, Not available, Discreet
Mobile:	Enter the phone number with internal extension code.

Options For **each** setting, specify who is allowed to view your personal information:

Public

All contacts.

Private

Contacts designated as Friend: (p. 63).

Hidden

Nobody.

Appl. settings

Settings for the application used:

Automatic login:	Auto-reconnect to the last access to be used.
Timeout:	Time without action after which the application is terminated. However, the server remains connected.
Message info:/Online info:	Signal the receipt of messages: Yes/No Signal given as: <ul style="list-style-type: none"> • Sound • Silent alert • Pop-up Popup windows authorised: Yes/No

CB services



→  → Setup → CB services

Some service providers offer information services (info channels, **Cell Broadcast**). If reception is activated, your **Topic list** will supply you with messages on the activated topics.

CB messages are displayed in standby mode, longer messages are scrolled automatically.

Receive CB

You can activate and deactivate the CB service. If the CB service is activated, standby time for the phone will be reduced.

Read new CB

All unread CB messages are displayed.

Topic list

You can add any topics to this personal list from the topic index. You can preset 10 entries with their channel numbers (ID) and, if applicable, with their names.

New topic Select.

- If no topic index is available, enter a topic with its channel number and confirm with **OK**.
- If the topic index has already been transmitted, select a topic and activate it with **Options**.

Topic Select

Options Open list menu.

If a topic is selected in the list you can view it, activate/ deactivate it, edit it or delete it.

Auto display

CB messages are displayed in standby mode, longer messages are scrolled automatically. This display can be activated/deactivated for all or only new messages.

For "full page view":



Press, then press **View CB**.

Topic index



The list of topics is displayed for you to choose from. If nothing is displayed, you must enter the channel numbers (ID) manually (**Topic list**). Please contact your service provider for details.

CB languages

Receive Cell Broadcast messages in only one specific language or in all languages.

Text zoom

The display texts for all messages may be set to any of three sizes:

Standard Medium font size

Zoom + Large font

Zoom - Small font

Displays



Topic activated/deactivated.



New messages received on the topic.



Messages already read.

Surf & fun

Get the latest information from the Internet that is specifically adapted to the display options of your phone. In addition, you can download games and applications to your phone. Internet access may require registration with the service provider.

Access to the service provider

Direct call-up of the browser with the URL from your service provider.

Internet



The browser is activated with the pre-set option as soon as you call up the function (Browser settings, p. 72; may be specified/pre-assigned by service provider).

Browser menu

Options Open menu.

Homepage	Call the pre-set homepage for the current profile.
Bookmarks	List bookmarks Display list of bookmarks stored in the phone. Bookmark site The current page is saved as a bookmark.
Go to...	Enter URL for direct dial to an Internet address, e.g. wap.siemens-mobile.com
Reload	Reload current page.
Show URL	Display the URL of the page currently loaded for sending via SMS/MMS/e-mail.
History	Display last Internet sites to be visited.
Disconnect	Disconnect the Internet.
File	Save object on the current page or save the complete page; display saved pages.
Setup	Set or reset browser (p. 72).
Exit browser	Close the browser.

Ending the connection



Press and **hold** to clear down the connection and close the browser.

Navigation in the browser



- Select a link.
- Settings, status on/off.



- Press **briefly**: back a page.



- One input field/link forward/back.
- Scroll one line.

Display symbols in the browser



Enter special characters



Select important special characters.

Browser settings



→ → Internet

Options Open menu.

Setup Select.

Browser	Set start option as well as handling of pictures and sounds plus send options.
Profiles	The list of profiles is displayed for activation/setting. For more information, contact your service provider.
Protocol parameters	Set protocol parameters, push messages and abort time as well as handling of cookies.
Security	Set encryption.
Context	Reset session; delete cache, history and cookies.

Your Internet browser is licensed by:



OPENWAVE™



Profiles

Preparation of the phone for Internet access depends on the service provider concerned:

Profile pre-set

In most cases, access profiles have already been created for one or more service provider(s).



Select profile.



Activate profile.

Set profile manually

If necessary, contact your service provider.

Options Open menu.

Edit Start processing. For the Internet-specific settings below, please contact your service provider.

Delete Delete selected profile.

Bookmarks



Display URL/call up page

List bookmarks

Display list of bookmarks stored in the phone.



Select bookmark.



Call up URL.

Save

Bookmark site

The current page is saved in the phone as a bookmark.

Bookmark options

Options Open menu.

Here you will find functions for changing and managing bookmarks and their folders. This includes editing individual entries with the corresponding URLs as well as deleting and moving them to other folders.

Additional Information

Siemens's MPM (Mobile Phone Manager, p. 115) supports setting bookmarks by Windows® PCs.

Games and Applications

Games and applications are offered on the Internet. Once downloaded, these are available to you via the telephone. Most applications include instructions. Some applications and games are already pre-installed on your telephone. You will find these listed here:

www.siemens-mobile.com/sl65

Requirements

Profile (p. 73) and the access (p. 89) must be configured.

Download

Select the correct access depending on whether you are loading games or applications:

 →  → Games

or

 →  → Applications

In addition to URLs and service providers for the download, any available applications/games and folders will be displayed.

Download new



Select a service provider or URL.



Start internet browser and visit URL.

Only description file



The description file is loaded for information purposes only. The application/game itself must be loaded separately.

or complete download



The application/game is completely loaded.

Apply

Remember that applications/games may be protected (DRM, p. 13).



The executable application is saved on the telephone and can be started immediately.


Downl. assist.

 →  → Downl. assist.

You will not be left on your own during the download!

Additional information

Normally use the joystick for playing games. Alternatively following key control is possible for many games (virtual joystick):

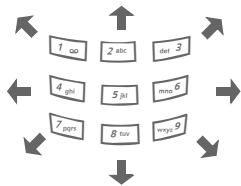

Games&More options

Processing and administering your applications and folders:

Move	Move applications between folders.
New folder	Create and name new folder.
HTTP profile	Display profile list for activation/setting .
Reinstall	Reinstall an application (update) eg. in case of corrupted document.
Security	Select a safety level.
Attributes	Show details of the application/folder (name, version, size, path, producer, date).

(For standard functions see p. 15)

Additional information

You can use internet to download applications (e.g. ringtones, games, images, animations) from the Internet. Downloading or running applications will not affect or change the software already installed on your Java™-enabled mobile phone. Siemens excludes all warranty and liability claims in respect of or in connection with any applications subsequently installed by the customer and any software not included in the original delivery package. This also applies to functions enabled subsequently at the customer's instigation. The purchaser bears sole risk for the loss of, damage to, and any defects arising in, this device or the applications and for any direct damage or consequential damage of whatever nature resulting from the use of this application.

For technical reasons, such applications and subsequent enabling of certain functions are lost in the event of the device being replaced/re-supplied and may be lost if it is repaired.

In such cases, the buyer is required to download or release the application again. Please ensure that your phone has Digital Rights Management (DRM) so that individual applications downloaded via internet are protected from unauthorised reproduction. These applications are then exclusively intended for your phone and cannot be transferred from this even to create a backup. Siemens does not warranty, guarantee or accept any liability for the customer's ability to download or enable applications again or to do so free of charge. If technically possible, secure your applications on the PC with the MPM (Mobile Phone Manager, p. 115).

Setup

Profiles



Several settings can be stored in a phone profile in order, for example, to adapt the phone to the surrounding level of noise.

- Five standard profiles are provided with default settings. They can be changed however:

Normal environment

Quiet environment


Noisy environment

Car Kit

Headset

- You can set two personal profiles (<Name>).
- The special profile **Aircraft mode** is fixed and cannot be changed.

Switching on a profile

 Select default profile or personal profile.

 Switch on profile.

Profile settings

Edit a default profile or create a new personal profile:

 Select profile.



Options Open menu.

Change sett.
Select.

The list of available functions is displayed.

When you have finished setting a function, you return to the profile menu where you can change a further setting.

Additional information

- Calling up the list in standby mode:
 -  Profile list is displayed.
 - The active profile is marked with .

Profile options

Options Open menu.

Activate Activate selected profile.

Change sett. Change profile settings.

Copy from Copy settings from another profile.

Rename Change personal profile (except default profiles).

Car Kit

If an original Siemens Car Kit is used, the profile is switched on automatically as soon as the phone is inserted into the cradle (see also p. 126).

Headset

The profile is only switched on automatically if an original Siemens headset is used (see also p. 125).

Aircraft mode

Tone and vibration of all alarms (appointments, alarm clock) are deactivated only, alarm display still occurs. This profile **cannot be modified**.

Switch on



Scroll to **Aircraft mode**.



Confirm selection.



Confirm safety inquiry again in order to activate the profile. The phone switches itself off automatically.

Normal mode

When you switch on your phone again, the previously set profile will be reactivated automatically.

Themes



Load a completely new user interface in your telephone. With the press of a key, various functions are re-organised on a topic basis, e.g. switch on/off animation, background image, screensaver, switch on/off melody, additional animations.

Topic files are compressed to save memory space. After a download (p. 74) or a call from **My stuff**, these are automatically unzipped when activated.

Activate new topic



Select topic.




Display topic preview.



Activate new topic.

Display




→  → Display
→ Select function.

Language

Set the language of the display text. When "automatic" is set, the language of your home service provider is used.

If a language that you do not understand happens to be set, the phone can be reset to the language of your home service provider with the following input (in standby mode):

*#0000# 

Text input

T9 preferred

Activate/deactivate intelligent text entry.

Input language

Select language for text entry. Languages with T9 support are marked with the T9 symbol.

Wallpaper

Set wallpaper graphic for display.

Logo

Choose graphic to be displayed instead of the provider logo.

Colour skin

Select colour scheme, incl. background image for the entire user interface

Screensaver

The screensaver shows a picture in the display when a period set by you has elapsed. An incoming call and pressing any key will end the function except if the safety function is activated.

Preview

Display the screensaver.

Style

Select **Analogue clock**, **Digital clock**, **Picture**, **Energy saving**

Picture

Select image in the **My stuff**.

Timeout

Set period after which the screen-saver starts.

Security

To terminate the screensaver, the telephone code is requested.

Auto key lock

Automatic keypad locking if no key has been pressed for one minute in standby mode.

Unlocking:



Press **down**.

Note

The **Picture (animated)** and **Digital clock** screensavers reduce the stand-by time of your telephone considerably.

Start up anim.

Select animation to be shown when phone is switched on.

Shutdn anim.

Select animation to be shown when phone is switched off.

Own greeting

Enter greeting to be displayed instead of animation when phone is switched on.

Big letters

You can choose between two font sizes for the display.

Illumination

Set display light brighter/darker. The darker the setting the longer the standby time.



Press the joystick repeatedly at the top/bottom to adjust up or down.

Ringtones



Set the tones on the telephone to suit your requirements.

 
Ringer setting

On/off Activate/deactivate all tones.

Beep Reduce ringtone to a short signal (beep).

Silent alert

To avoid the disturbance caused by a ringing phone, you can activate the silent alert function as an alternative. The silent alert can also be activated in addition to the ringtone (e.g. in noisy environments). This function is deactivated when the battery is being loaded and accessories are connected (except the headset).



Volume

Set different volumes for types of call/functions.



Select

Incoming call

Messages

Alarm clock

Organiser

System

Applications



The ringtone is sounded again.



Set volume.



Confirm setting.

Additional information

Please make sure you have accepted the call before holding the phone to your ear. This will avoid damage to your hearing from loud ringtones.

Siemens's MPM (Mobile Phone Manager, p. 115) supports ringtone and sound management by Windows® PCs.

Allocating a ringtone

A ringtone which has already been selected will be played or the list of possible ringtones will be displayed for selection.

Calls

Allocate a single ringtone to all phone numbers in the Addressbook.

Group calls

Allocate a different ringtone to each group.

Other calls

Allocate one ringtone to the remaining callers.

More melodies

Allocate further ringtones for:

Messages

Alarm clock

Organiser

Startup melody

Shutdown mel.

Open ProSlide

Close ProSlide

or record new ones with:

Sound recorder (p. 107)

Call setup



Hide ID

When you make a call, your phone number can be displayed on the recipient's display (depending on the service providers).

To suppress this display, you can enable the "Hide ID" mode for all subsequent calls or just for the next call. You may need to register separately with your service provider for these functions.

Call waiting

If you are registered for this service, you can check whether it is set and you can activate/deactivate it.

Divert

You can specify the conditions under which calls should be diverted to your mailbox or other numbers.

Status check

You can check the current divert status for all conditions. After a short pause, the current situation is transmitted by the network and displayed.



Condition set.



Not set.



Display if status is unknown (e.g. with a new SIM card).

Clear all

All set diversions are cleared.

Set up call divert (example)

The most common condition for call divert is, for example:

Unanswered



Select **Unanswered**. (Includes the conditions **Not reachable**, **No reply**, **Busy**, see below)



Confirm.

Set

Select.



Confirm.



Select or enter the phone number to which the calls are to be diverted.

Mailbox Use existing mailbox phonenumbers, or enter them if necessary.



Confirm. After a short pause, the setting is confirmed by the network.

All calls

All calls are diverted.



Icon in the top line of the display in standby mode.

Not reachable

Divert occurs if phone is switched off or is out of range.

No reply

A call is only diverted after a delay that is determined by the network. The period can be set to a maximum of 30 seconds in 5 second intervals.

Busy

Divert occurs if a call is in progress. If **Call waiting** is activated (p. 25), you will hear the call waiting tone during a call.

Receiving fax

Fax calls are diverted to a number with a fax connection.

Receiving data

Data calls are diverted to a phone number with a PC connection.

Call screening

Only calls from phone numbers that are in the Phonebook/Addressbook or in a group are signalled. Other calls are only displayed.

Any key answ.

Incoming calls can be accepted by pressing any key (except for).

Minute beep

During the call, you will hear a beep after each minute as a reminder of the time elapsed. The recipient does not hear this beep.

Additional information

Note that the divert is stored in the network and not in the phone (e.g., when the SIM card is changed).

Reactivate divert

The last divert has been stored. Proceed as with "Set divert". The stored phone number is displayed. Confirm number.

Phone setup



- → Phone setup
- Select function.

Key tones

Set the type of acoustic key acknowledgement.

Info tones

Set service and alarm tones:

On/off Activate/deactivate tones.

Extended If switched on, a wider range of service tones is available, e.g.: end of menu reached, network connection interrupted.

Automatic switch off

The phone switches off each day at the set time.

Activate



Press.



Enter time (24-hour clock).



Confirm.

Deactivate



Press.



Confirm.

Phone identity

The phone identity number (IMEI) is displayed. This information may be useful for customer service.

Alternatively enter in standby mode:
***#06#**



Display further information about the appliance.

Device check

After the last information page, a self-test as well as individual test are offered. If you select **Selftest**, all individual test are carried out.

Software version

Display the software version for your phone in standby mode:

***#06#**, then press **Info**.

Memory assis.

The memory assistant will help you if there is insufficient phone memory. If necessary, it is automatically started by applications.

After the capacity has been checked, all files and folders are displayed with their size and you can view, open or delete them as necessary.

File system

Format

(Phone-code protected)

The telephone memory is formatted and **all** saved data such as ringtones, pictures, games, etc. is deleted. The formatting process may last longer than one minute.

Clean up

Creating more memory by deleting temporary, non-require files.

Master reset

Reset phone to default values (factory setting). This does not affect the SIM card or the network settings.

Alternatively enter in standby mode:

***#9999#**



Clock



- → Clock
- Select function.

Time/date

The clock must be set correctly once at start-up.

Change Press.



First enter the date (day/month/year), then the time (hours/minutes/seconds).

Additional information

If the battery is removed for longer than 30 seconds, the clock must be reset.

Time zones

The time zone can be selected in the world map or a city list:

World map



Select the desired time zone.

City list



Select a city in the selected time zone.

Options Open menu.

Set	Set time zone.
Auto time zone	Have the time zone automatically set by the network.
Search city	Search for a city.
Help	Operating instructions.

Date format

Select the display format for the date.

Time format

Select 24h or 12h.

Buddhist year

Switch to the Buddhist year (not on all phone models).

Show clock


Activate/deactivate time display in standby mode.

Auto time zone

The time setting is made automatically in the GSM network.

Connectivity



-  → Connectivity
- Select function.

GPRS



Switch GPRS on/off



GPRS is a new method for transmitting data faster in the mobile network. Use GPRS and if the network has sufficient capacity, you can be connected to the Internet permanently. Only the actual transmission time is charged by the network operator. Some service providers do not yet support this service.

Shown in the display



Activated and available.



Registered.



Temporarily interrupted.

Additional information

Siemens's MPM (Mobile Phone Manager, p. 115) establishes GPRS internet connection for your Windows® PC or laptop.

GPRS info

Display of information on connection status.

IrDA

Your phone has an infrared interface (SIR (Serial Irda) up to 115,2kbps). With this interface, you can exchange data such as pictures, ringtones, Addressbook entries, business cards or organiser data with other appliances which also have an infrared interface.

The infrared interface is on the right side of the phone. The distance between the two devices must not exceed 30 cm. The infrared windows in both appliances must be aligned as accurately as possible with each other.

Shown on the display:



IrDA activated.



During transmission.

Data services

Basic setting and activation of the connection profiles for data transmission such as **MMS**, **WAP**.

The phone default setting varies from service provider to service provider.

- The settings have already been implemented by the provider. You can start immediately.
- Access profiles have already been created by your provider. Then select and activate profile.
- The access profiles must be configured manually.

If necessary, check with your service provider for details. You will find the current settings for the service provider in the Internet at this address: www.siemens-mobile.com/customer-care in the FAQ section.

Select profile



Select the profile.



Confirm selection.

Set profile



Select the profile.



Options Open menu.



Edit Open the selection.



Select **CSD settings**, and/or **GPRS settings**.



Edit Make the settings as specified by your service provider.

HTTP profile

The phone default setting varies from service provider to service provider.

- The settings have already been implemented by the provider. You can start immediately.
- Access profiles have already been created by your provider. Then select and activate profile.
- The access profiles must be configured manually.

If necessary, check with your service provider for details. You will find the current settings for the service provider in the Internet at this address: www.siemens-mobile.com/customer-care in the FAQ section.



Make the settings.

Authentication

Activate or deactivate encrypted internet dial-up (CSD connections only).

Fax/data

Fax/data mode using a PC

With the phone and a connected PC, you can transmit and receive faxes and data. Appropriate software for fax and data communication must be available on your PC and there must be a connection to the phone.

Fax and data services must be enabled by the service provider. There are variations in fax and data reception, depending on the network. Please ask your service provider about this.

Send voice/fax



Set this function on the phone **before** transmission so that you can switch from voice mode to fax mode.


Rec. voice/fax



(**Only** if no special fax or data number is available).

Start the required communication program on your PC and select the function on the phone **during** the call (the PC will take over the connection).

End transmission

End transmission with PC-software and/or press .

Rec fax/data



Your service provider has given you a number for telephoning and a fax/data number.

The call is signalled by a special ringing tone and the type of call (fax or data) is displayed. Now start the communication program in your PC to receive the fax/data.

Security



-  → Security
→ Select function.

Auto key lock

If activated, the keypad is locked automatically if no key has been pressed for one minute in standby mode. This prevents the phone from being used accidentally. However, you can still be called and you can still make an emergency call.

ProSlide lock

Enable/disable automatic keylock when closing keypad. The keys are always unlocked automatically when opening the keypad.

Additional information

The keypad can also be directly locked and unlocked in idle state.

In each case:



Press and **hold**.

Direct call

(Phone-code protected)

Only **one** phone number can be dialled (see also p. 29).

Only



(PIN 2 or phone code protected)

Dialling options are restricted to SIM-protected phone numbers in the Phonebook. If only area codes are entered, relevant phone numbers can be added to these manually before dialling.

If the SIM card does not support PIN 2 input, the **whole** Phonebook can be protected with the phone code.

This SIM only



(Phone-code protected)

The phone can be connected to a SIM card when the phone code is entered. Unless the phone code is known the phone will not operate with a **different** SIM card.

If the phone is to be used with a different SIM card, enter the phone code when requested.

Codes

Description, see p. 17:

PIN control, Change PIN, Change PIN2, Chg.phonecode

Barrings



Barring restricts the use of your SIM card (not supported by all service providers). You need a 4-digit network password for network barring. Your service provider will give you this password. You may need to be registered separately for each barring.

All outgoing

All outgoing calls except emergency numbers are barred.

Outgoing intl.

(International outgoing)

Only national calls can be made.

Out.int.x.home

(International outgoing without home country)

International calls are not permitted. However you can make calls to your home country when abroad.

All incoming

The phone is barred for all incoming calls (forwarding of all calls to mailbox provides a similar effect).

When roaming

You do not receive calls when you are outside your home network. This means that no charges are incurred for incoming calls.

Status check

The following information can be displayed after a status check:



Barring set.



Barring not set.



Status unknown
(e. g. new SIM card).

Clear all

All barrings are deleted. A password which the service provider will give you is necessary for this function.

Network



-  → Network
→ Select function.

Line



This function is only displayed if it is supported by the service provider.

Two separate phone numbers must be registered on the phone.

Select line

Select the currently used phone number.



Display current phone number.

Protected

(Phone-code protected)

You may limit usage to one phone number.

Additional information

Special settings may be made for each phone number (e.g., melody, call divert etc.) To do this, first switch to the required phone number.

Switch from phone number/connection in standby mode:



Press.



Press.

Network info

The list of GSM networks currently available is displayed.



Indicates non-authorized service providers (depending on SIM card).

Choose network

Network search is restarted. This is useful if you are **not** on your home network or want to register on a **different** network. The network list is rebuilt when **Auto network** is set.

Auto network

Activate/deactivate, see also "**Choose network**" above. If "Automatic network" is activated, the next network on the list is dialled in ranking order of your "preferred networks". Otherwise a different network can be selected manually from the list of the available GSM networks.

Pref. network

Enter your preferred service providers here for when you leave your home network (e.g. if there are differences in price).

Your service provider is displayed:

List Display list of preferred networks.

Create/change entry:

<Empty> or select an existing entry, then select a new service provider in the list and confirm.

Record new service provider (last entry in the list):

Furth.network

Select, enter the provider data and save it.

Additional information

If you are outside your home network, your phone automatically dials another GSM network.

If the signal strength of the preferred network is inadequate when you switch on the phone, the phone may register in a different network. This can change when the telephone is next switched on or if another network is selected manually.

Band selection



Select either GSM 900, GSM 1800 or GSM 1900.

Fast search

When this function is active, network reconnection is speeded up (standby time is reduced).

User group



Depending on service provider, you can create groups with this service. These can have access to internal (company) information, for example, or special tariffs apply. The details can be clarified with your service provider.

Active

Activate/deactivate function. "User group" must be deactivated for normal phone use.

Select group

You can select or add groups other than preferred groups (see below). Code numbers for the groups are obtained from your service provider.

All outgoing


In addition to network control for a user group, it is possible to set whether outgoing calls outside the group are permitted. If the function is deactivated, only calls within the group are permitted.

Pref. group

If activated, calls may only be made within this standard user group (depending on the network configuration).

Accessories



-  → Accessories
→ Select function.

Car Kit

Only in combination with an original Siemens handsfree Car kit (see p. 126). The car kit profile is activated automatically as soon as the phone is inserted into the cradle.

Auto answer

(factory default: off)

Calls are accepted automatically after a few seconds. Eavesdropping is possible!



Shown on the display:

Auto off

(factory default: 2 hours)

The phone is powered by the car's power supply. You can adjust the time between switching off the ignition and the automatic switching off of the phone.

Car loudspk.

Improves playback in certain circumstances.

Automatic settings

- Permanent illumination: switched on.
- Key lock: switched off.
- Charging the phone battery.
- Auto. activation of the Car Kit profile when phone is inserted in cradle.

Headset

Only in conjunction with an original Siemens headset (see p. 125). If an original Siemens Headset is used the profile is automatically activated when the headset is plugged in.

Auto answer

(factory default: off)

Calls are accepted automatically after a few seconds (except where the ringer is switched off or set to beep). You should therefore be wearing the headset.

Automatic setting

Accept call with Call key or PTT key (Push To Talk), even when the auto key lock is activated.

Auto answer

If you do not notice that you phone has accepted a call, there is the danger that the caller may eavesdrop.

ProSlide



→ ProSlide

→ Select function.

ProSlide lock

Enable/disable automatic keylock when closing keypad. The keys are always unlocked automatically when opening the keypad.

Opening melody

Set the music to be played when the keypad is opened.

Closing melody

Set the music to be played when the keypad is closed.

Swit. off Switch off melody.

Change Set new melody (p. 81).

My menu



Press.

My menu Press.

Create your own menu with frequently used functions, phone numbers or internet pages.

The list of 10 entries is preset. You can, however, change it as you want.

Use



Select the required entry.



Confirm.

Or



If the entry selected is a phone number, you can also call it with the Call key.

Change menu

You can replace each entry (1–10) with another entry from the selection list.



Select the required entry.

Change

The function list is opened for selection.



Select the **new** entry from the list.



Confirm. The entry is saved.

If **Phonebook** is selected, the phone number must also be selected; if **Internet** is selected, the bookmark must also be selected.

Reset all


(Telephone code required)

Reset all

Select. After a safety query, the pre-assignment is reset.



Fast access key

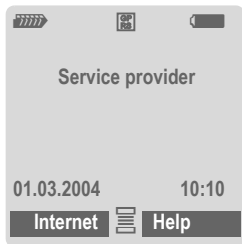You can assign one important phone number of a function to each one of the two soft keys and number keys 2 to 9 (speed-dial numbers). The phone number can then be dialled or the function can be started at the touch of a button.



Additional information

The service provider may have already assigned functions to a soft key (e.g access to "SIM services" or direct call-up of the Internet portal). It may not be possible to modify this key assignment.

The left soft key may sometimes be replaced automatically by   to access a new message for example.

Soft keys

Change

For example, the **Internet** function is assigned to the soft key. To change this (in standby mode):

- Internet** Press **briefly**.
- Change** Scroll to new assignment in the list.



Confirm.

- Special case **Phone number**. Pick out a name from the Phone-book/Addressbook for assignment to the key.
- Special case **Bookmark**. Scroll to a URL in the bookmark list for assignment to the key.

Apply

In standby mode:

Application

The "Internet" is just used as an example here.

- Internet** Press and **hold**, the application is started.

Phone number:

The setting "Carol" is used here only as an example.

- Carol** Press and **hold**, the phone number is dialled.

Speed keys

Number keys 2 to 9 can be used as speed dialling numbers for fast access. Number key 1 is reserved for the mailbox phone number (p. 61) and number key 0 is reserved for switching over two connections during use (p. 93).

Change

In standby mode:



number key **briefly** press (e.g. 3).

This number is still free:



Press.

Select a new function from the list and confirm with **OK**.

Or

An assignment has already been made to this key (assignment displayed above the right soft key):



Press **briefly**.



Scroll to application in the list.



Confirm.

- Special case **Phone number**. Pick out a name from the Phone-book/Addressbook for assignment to the key.
- Special case **Bookmark**. Scroll to a URL in the bookmark list for assignment to the key.

Apply

Select a stored phone number or start a stored application (e. g. **Internet**).

In standby mode:



Press **briefly**.

The assignment of the number key 3 is displayed above the right soft key e.g.:



Press **down**.

Or simply



Press and **hold**.

Organiser

Calendar



You can enter appointments in the calendar. Time and date must be set for the Calendar to work correctly.




The calendar offers you three views:

Monthly view

Special colour coding:

Day with entries for appointments, day-long appointments, weekend.

Navigation:



-  One day forward/back.
-  One week forward/back.
-  Daily view open.

Weekly view

Special displays:

Appointments are shown as a vertical colour bar on the horizontal hour division.

Navigation:



-  One day forward/back.
-  Forward/backward by the hour through the day.

Daily view

Special displays:

Description of appointment.

Navigation:

-  One day forward/back.
-  To the start/end of the day or next/last entry.

Additional information

You can use the plus/minus side key on the phone to scroll between the months or weeks depending on the current overview.

Calendar setup



Start of day:

Hour when the working day begins.

Start of week:

Weekday on which the monthly and weekly view on the left starts

Set weekend

Set the days for the weekend.

Show birthdays:

Yes or No.

Synchronising with Microsoft Outlook®

With MPM (Mobile Phone Manager, p. 115), you can synchronize your phone contacts, appointments, tasks and memos with Outlook®.

Appointments



→ → Appointments

Appointments are displayed in chronological order in a list.

Enter new appointment

<New entry>

Select.

Types:



Memo

Text input for description



Voice memo

Enter voice memo. Shown with alarm.



Call

Enter phone number to be displayed with the alarm.



Meeting

Text input for description



Holiday

Enter start and end date.



Birthday

Enter name and date.

Different input/selection fields are displayed depending on the type. The number of fields can be restricted, see **Standard** at the end of the list.

Description:

Description of appointment.

Phone number:

Enter a phone number or select one from the Addressbook.

Voice memo:

Enter a voice recording, see **Dic-tat.machine**, p. 104.

Location:

Location of appointment.

Whole day:

All-day appointment: Yes/No

Start date:

Date when appointment starts.

Start time:

Time when appointment starts.

End date:

Date when appointment ends.

End time:

Time when appointment ends.

Alarm time:

On/off or Silent alert.



Enter the timespan **before** the appointment and select the time unit:

Minutes, Hours, Days.

Reoccurrence:

Select a timeframe for repeating the appointment:

No, Daily, Weekly, Monthly, Yearly.

Enter a parameter for repeating:

Forever, Until, Occurrences (number)

If **Weekly** is selected, certain weekdays can be highlighted.

Standard

In the list, select those fields which are to be offered for future entries.

Additional information

Display above set alarms:



Alarm clock.



Appointment.

An alarm sounds even when the phone is switched off (except in **Aircraft mode**, p. 77). The phone does not go to standby mode. To deactivate it press any key or close and open the keypad to disable it.

Information on the alarm

When the set date and time are reached there is an audio and a visual alarm. If an alarm is missed it appears in the list of missed appointments (p. 103).

Alarm type **Memo**:

Meeting: the text is shown in the display.

Alarm type **Call**: The phone number is displayed and can be dialled immediately.

Alarm type **Birthday**: You can send special birthday greetings by SMS, MMS, e-mail or a call via **Options**.

With **Snooze** you can set a repetition of the alarm.

Tasks

→ Tasks

A task is displayed like an appointment in the agenda of the selected day. However, unlike an appointment it does not require a time. When no time is entered the task appears at the top of the list every day until it is marked as completed.

The entries are made in the same way as **Appointments** (see "Appointments").

Status:

Choose between: **Done** or **Outstanding**

Priority:

Selection in 5 levels from **Lowest** to **Highest**.

Use date

If activated with **Yes**, the following time-input option is offered.

Due date:/Expiry time:

Enter the date and time by when the task is to be completed.

Alarm: and **Standard** as for **Appointments**.

Notes



Write and administer brief text memos.

Enter a new memo

<New entry>

Select.



Enter text The first line is displayed as "Title" in the memo list. Total length: max. 160 characters.

Options

Open menu.

Save

Save memo. When **Confidential** is selected, a memo is protected with the telephone code.

Missed appts.



Events with an alarm (**Appointments**, **Tasks**) to which you have not reacted are listed for reading.

Organiser options

Depending on the application used (**Calendar**, **Appointments**, **Tasks**, **Notes**) and the current situation, different functions are offered.

Options Open menu.

Delete	Delete entry.
Delete until	Delete all entries prior to a certain date.
Delete all	Delete all entries after confirmation.
Delete done	Delete all completed tasks.
Activate/Deactivate	Switch alarm on/off.
Filter	Display all entries with the selected feature.
Confidential	Protect note with phone code. We recommend that you do not store any passwords (PIN, TAN etc.) as notes.
(For standard functions see p. 15)	

Dictat.machine



Use the dictating machine to record short voice memos.

- Use your phone as a dictating machine when on the move.
- Record a memo as a reminder or as a note for others.
- Add a voice memo to an appointment in the Calendar.
- Record a call – useful for remembering numbers or addresses.

Warning!

The use of this feature may be subject to restrictions under criminal law.

Please inform the other party to the conversation in advance if you want to record the conversation and please keep such recordings confidential.

You may only use this feature if the other party to the conversation agrees.

New recording

<New entry>

Select.

The remaining time available as well as the recording time are shown in the display.



A brief tone sounds when the recording starts. Now say the text.



Pause/recording alternately.



End recording.

The recording is automatically saved with a time stamp. **Rename** with

Options.

Playback



Select the desired recording.



Playback/pause, alternately.



Press and **hold** rapid rewind and fast forward.

Dictating machine options

Options Open menu.

Loudspeaker Playback via the built-in loudspeaker.

(For standard functions see p. 15)

Control using the side key


(standby mode)

① No function.

② Dictation key

Press and **hold**: record.

Press **briefly**: play back

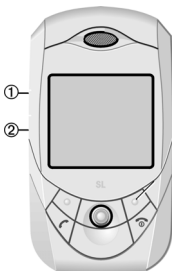


Time zones


 →  → Time zones

The time zone can be selected in the world map or a city list:

World map


 Select the desired recording.

City list

 Select a city in the selected time zone.

Time zone options

Options Open menu.

Set	Specify the time zone.
Auto time zone 	The time zone is switched automatically to local time by the network.
Search city	Search for a city.
Help	Operating instructions.

Extras

SIM services (optional)



→ SIM services

Your service provider may offer special applications such as mobile banking, share prices, etc. via the SIM card.

If you have such a SIM card, the SIM services will appear in the main menu under "Extras" or directly above the soft key (on the left).



Symbol for SIM services.

Where there are several applications, these are displayed in a SIM services menu. With the SIM services menu, your phone can support future additions in your service provider's user package. For further information, please contact your service provider.

Alarm clock



→ Alarm clock

The alarm will ring at the time set by you, even when the phone is switched off.



Activate/deactivate the alarm.



Switch to time setting.



Set alarm call time (hh:mm).



Switch to the week days.



Navigate to the various days.



Display options: alarm call time and days.



Set days for alarm calls. Press again to delete the highlighting.

Press and **hold** to highlight/unhighlight all the days.



Confirm setting.

Additional information



Screen display in standby mode: alarm clock activated.

With **Snooze** you can set the alarm to repeat.

Sound recorder

Use the sound recorder to record noises and tones for use as ring tones. The tone recording is normally started by other applications/ functions such as "assign ring tone".

New recording

Start from main menu

 


<New entry>

Select. The remaining time available as well as the recording time are shown in the display.

Start it from another application as follows

The recording display appears:



A brief tone sounds when the recording starts.



Pause/record alternately.



End recording.

The recording is saved with a timestamp in the folder **Sounds**. Rename with **Options**.

Insert

Transfer recording into the application.

Playback



Select the desired recording.



Playback/pause, alternately.



Press and **hold** rapid rewind and fast forward.

Options

Open menu.

Loudspeaker	Playback via the built-in loudspeaker.
Set as...	Set the recording as a ringtone.

(For standard functions see p. 15)

Calculator



→ Calculator

The calculator can be used in a basic version and with an advanced range of functions. The input line and two calculation lines (including the matrix with the calculation functions) are located in the top display half.



Enter number(s).



Navigate functions.



Use function. The result is calculated and displayed immediately.

Basic functions:

+ , - , * , /	Basic calculation types.
=	Result.
1/x	Conversion.
%	Convert to percentage.
.	Decimal point.
±	Sign change "+" / "-"

Options

Expansion of the range of functions:

\sqrt{x}	Square root.
x^2	Square.
e	Exponent.
MS	Save displayed number.
MR	Call up saved number.
M+	Insert number from memory.

Calculator options

Options Open menu.

Convert	Call up the unit converter with the current result.
Clear all	Delete all units.
Extended mode/Basic mode	Convert calculation functions.
(For standard functions see p. 15)	

Unit converter



You can convert various measurement units into other measurement units.






The following types are offered with various units:

Velocity
Energy
Mass
Pressure
Time
Volume
Area
Length
Power
Temperature
Currency

Example of type Velocity units:



Type	Units
Velocity	Kilometres/h, Miles/h, Metres/sec, Miles/sec, Knots, Mach

Convert

-  Select the source unit/
currency.
-  Switch to the input field.
-  Enter the quantity to be
converted.
-  Switch to the selection
field.
-  Select the target meas-
urement unit / currency
The result is displayed.



You can use both input fields alter-
nately.

Special key functions:

-  Set decimal point.
-  Change prefix.

Currency

When you call up the function, you
must enter a basic currency into
which the conversions are to be
made.

-  Enter currency
(e. g. euro)
-  Store entry.

Now enter the name and exchange
rate of the currency to be converted.



Options Open menu.

Add currency	Enter new currency and exchange rate.
Set as base	Use entered currency as basic currency.
Edit rate	Change the exchange rate of the basic currency.
Calc.	Start calculator.
(For standard functions see p. 15)	

Stopwatch

 →  → Stopwatch

Two intermediate times can be re-
corded and saved.

-  Start/stop.
-  Save intermediate time.

After a stop:

-  Reset to zero.

Stopwatch options

Options Open menu.

Stopwatch list	Display saved entries.
-------------------	------------------------

 
(For standard functions see p. 15)

Countdown



A set time elapses. The last 3 seconds are indicated by a beep. At the end a special beep sounds.

If no time has been entered:



Open input window.



Set period of time.



Confirm.

If a countdown time is specified:



Start countdown.

While the time is elapsing:



Interrupt counter.



Let counter continue running.

Reset Reset counter to starting time.

Remote synchronisation



You can use this function remotely to access externally filed data (addresses, calendar, etc.) and synchronise these with the data on your phone. The data can, for example, be saved on a company computer or in the Internet.

www.siemens-mobile.com/syncml

Synchronise

Sync The computer is selected and synchronisation started. When completed, the actions which have been performed are displayed.

Next Scroll through the various displays.

Sync. setting

The following settings can be made prior to synchronisation:

Sync. profile

You can choose between 5 profiles.



Select profile.



Activate profile.

Or

Edit Set profile.

Server sett.

Providers	Display the current service provider.
Homepage:	e.g. www.siemens-mobile.com/sl65syncml
Port:	Enter port number, e.g. 80.
Login:	Enter user name (Login name).
Password:	Enter password (shown as a series of asterisks).
Calendar path	e.g., events
Contacts path	e.g., contacts
Notes path	e.g., notes
Task path	e.g., tasks
HTTP authentication:	Confirmation required; Yes/No (if No, the input fields are not visible).
HTTP name:	Enter name.
HTTP password:	Enter password.

Last sync:

Time of the last synchronisation.

Sync. mode

- **Sync data:** Modified data or All data
- **Sync direction:** Two-way, Mobile update or Server update

Sync items:

Highlight database areas to be synchronised:

Calendar

Addressbook

Notes


Tasks




Save settings.

Media player


When you are viewing a picture/video or listening to a melody, the application starts a media playback.


 Scroll to the next media file.


 Switch on display lighting.

Pictures

The following functions can be applied to a displayed picture:

 Zoom function if the displayed picture has a higher resolution than the display. The two soft keys (+/-) enlarge/reduce the picture. The joystick moves the picture detail.

 Centre the picture.


 Switch to full-picture mode and back again.

Or Press **briefly** the **Dictation key** (p. 6).

Send e.g. send via EMS, MMS or e-mail.

Melodies/video

The media playback offers the following functions for melody and video playback:


 Play or pause, depending on the situation.

 Set volume.

Or Using the plus/minus side key (press top/bottom).

 Mute.

Stop Stop function.

 End playback.

Options



Options Open menu.

Different functions are offered depending on the starting situation and the object.

Volume	Set the volume with the joystick.
Set as...	Set picture as Wallpaper , Logo for example, and sounds for Incoming call , Group calls , for example.
Slideshow	Automatic run-through in full-picture mode. Individual picture connection with joystick.
Edit	Access to picture editing.
(For standard functions see p. 15)	

My stuff

To organise your files, you can use the file system like a PC file manager. There are some folders in **My stuff** for the various data types for this purpose.



The list of the folders and files is displayed.

Navigation



Select file/folder in lists.



The cursor can be moved freely in the preview.



Open folder or start file with related application

Take new pic./Rec. new video/Rec.new sound

The application for the folder currently selected is loaded.

Download new

Show a list of links or start the browser, and display the download page.

Own file options

Options Open menu.

Move	Place highlighted file(s) or folder in temporary memory.
Copy	Place highlighted file(s) or folder in temporary memory.
Paste	Transfer content of temporary memory into current folder.
New folder	Create a new folder and name it.
Thumbn. view / List view	Toggle between miniature view and list view.
Attributes	Display information on file or folder selected.

(For standard functions see p. 15)

Index structure

Some folders have already been created for different data types in **My stuff**. These folders cannot be changed.

Folder	Description	Format
Pictures	Pictures	bmp bmx jpg/jpeg png gif
Videos	Videos	3gp
Animations	Switch on/off animations	bmx gif
Sounds	Melodies	mid amr wav
Themes	Loaded theme (zipped)	sdt
	Theme configuration (unzipped)	stc
Skins	Loaded user interfaces.	scs
Games	Java archive	jar
	Download info	jad
Applications	Applications.	*
Misc.	Text modules	tmo
	Voice recordings	vmo

Depending on the service provider, the structure, content and functionality of **My stuff** may vary.

Mobile Phone Manager

MPM is a Windows®-PC program which enables you to use enhanced mobile phone functions with any PC. This includes the convenient maintenance of your contacts, as well as reading, writing and handling SMS and MMS messages. You can also synchronise your phone data with Microsoft Outlook®. Your mobile phone and the PC must be connected with a data cable, p. 125.



You can download the MPM software from:

www.siemens-mobile.com

Contacts management



With MPM you can manage all your personal contacts in your phone, including adding, deleting, editing and creating new contacts. You can also use your PC to copy or move contacts between your phone, Microsoft Outlook® and other Siemens phones, e.g. DECT phones like Gigaset.

SMS and MMS management



You will be able to read, write and design your SMS and MMS messages conveniently. Take advantage of all the options that your PC offers to create SMS and MMS easily using the mouse, keyboard and PC screen and your sounds and pictures. MMS and SMS can be read, forwarded, printed, deleted and archived as well.

Synchronisation (SmartSync)



With a single keystroke you can synchronise the contacts, appointments, notes and tasks that are in your mobile phone with Microsoft Outlook®. If you have changed data such as a contact on your mobile or in Microsoft Outlook®, synchronising guarantees that both databases stay updated, so you no longer need to worry about data consistency.

Backup and restore



Backup lets you regularly save a copy of all your phone data to any PC. You can then restore all your data quickly and easily from your PC should you lose your phone data or phone, or buy a new phone.

Bookmarks management



Browse the Internet with your PC and select your preferred Internet pages. Save the locations as bookmarks on your mobile for quick access.

Phone explorer



You can read your phone's file system with the phone explorer. Files such as pictures and sounds etc. can be easily copied between phone and PC using the drag&drop function. Files can also be deleted, created and moved.

GPRS modem



Just one key stroke on your PC or laptop opens a GPRS internet connection with your mobile phone, wherever you are. GPRS configurations are available for almost all providers, so you don't have to worry about parameters or settings any more.

Image and photo processing



The image/photo processing function allows the user to create, process and manage images and photos easily. Filters and effects are available to create colourful and attractive graphics or improve your photos. The intuitive user interface allows you to transfer images/photos from and to your mobile easily. Further you can define wallpapers and other graphic configuration.

Ringtone management







The sound module allows the user to easily manage nearly all sound formats and to save them on the phone.

This phone does not support MP3 functionality.

Questions & Answers

If you have any questions on the use of your phone, you can contact us at www.siemens-mobile.com/customer-care around the clock. As further help we have listed below some frequently asked questions and answers.

Problem	Possible causes	Possible solution
Phone cannot be switched on.	On/Off key not pressed long enough.	Press On/Off key for at least two seconds.
	Flat battery.	Charge battery. Check charging indicator in the display.
	Battery contacts dirty.	Clean contacts.
	See also below under "Charging error"	
Too little standby time.	Frequent use of organiser and games.	Restrict use if necessary.
	Fast search activated.	Deactivate speed search (p. 94).
	Display illumination on.	Switch off display illumination (p. 80).
	Unintentional keystrokes (illumination!).	Activate key lock (p. 91).
Charging error (charge icon not displayed).	Battery totally discharged.	1) Plug in charger cable, battery is on charge. 2) Charge icon appears after approx. 2 hours. 3) Charge battery.
	Temperature out of range: +5 °C to +40 °C.	Make sure the ambient temperature is right, wait for a while, then recharge.
	Contact problem.	Check power supply and connection to the phone. Check battery contacts and telephone connection socket, clean them if necessary, then insert battery again.
	No mains voltage.	Use different mains power socket, check mains voltage.
	Wrong charger. Battery faulty.	Only use original Siemens accessories. Replace battery.
SIM error.	SIM card not inserted correctly.	Check that the SIM card is inserted correctly (p. 10).
	Dirty SIM card contacts.	Clean SIM card with a dry cloth.
	SIM card with wrong voltage.	Use 3V SIM cards only.
	SIM card damaged (e.g. broken).	Carry out a visual check. Change SIM card at service provider.

Problem	Possible causes	Possible solution
No network connection.	Weak signal. Outside GSM range. Invalid SIM card. New network not authorised. Network call barring is set. Network overloaded.	Move higher, to a window or an open space. Check service provider's coverage area. Complain to the service provider. Try manual selection or select a different network (p. 93). Check network barrings (p. 92). Try again later.
Phone loses network.	Signal too weak.	Reconnection to another service provider is automatic (p. 93). Switching phone off and on again can speed this up.
Calls not possible.	Second line set. New SIM card inserted. Charge limit reached. Credit used up.	Set first line  (p. 94). Check for new barrings. Reset limit with PIN 2 (p. 39). Load credit.
Certain uses of phone not possible.	Call restrictions are in place.	Barrings can be set by service provider. Check barrings (p. 92).
Impossible to make entries in Phonebook/Addressbook.	Phonebook/Addressbook is full.	Delete entries in Phonebook /Addressbook (p. 15).
Voice message not functioning.	Call divert to mailbox not set.	Set call divert to mailbox (p. 61).
 flashes to indicate an SMS.	SMS memory is full.	Delete or file SMS (p. 15).
 flashes to indicate an MMS.	MMS memory full.	Delete MMS (p. 15).
 flashes to indicate an MMS.	Phone memory full.	Delete messages, pictures, videos, games or applications.
Function cannot be set.	Not supported by service provider or registration required.	Contact your service provider.
Capacity problems with, for example, Games & More, ringtones, pictures, videos, SMS archive.	Phone memory full.	Delete files in the relevant areas. You can use the memory assistant to delete specific files (p. 85).
No internet access, downloading not possible.	Profile not activated, profile settings wrong/incomplete.	Activate or set internet profile (p. 73). If necessary ask your service provider.

Problem	Possible causes	Possible solution
Text message cannot be sent.	Service provider does not support this service.	Contact your service provider.
	Phone number for service centre not set or incorrectly set.	Set service centre (p. 48).
	SIM card contract does not support this service.	Contact your service provider.
	Service centre too busy.	Repeat message.
	Recipient does not have a compatible phone.	Check.
EMS pictures & sounds are not displayed at the destination phone	Destination phone does not support the EMS standard.	
No Internet access possible.	Incorrect internet profile set, or wrong or incomplete settings.	Check internet settings; (p. 73) contact your service provider if necessary.
PIN error/ PIN2 error.	Three wrong entries.	Enter the PUK (MASTER PIN) supplied with the SIM card according to the instructions. If the PUK (MASTER PIN) has been lost, please contact your service provider.
Phone code error.	Three wrong entries.	Contact Siemens Service (p. 121).
Service provider Code error.	No authorisation for this service.	Contact your service provider.
Too few/too many menu entries.	Functions may have been added or deleted by the service provider via the SIM card.	Check with your service provider.
No fax possible.	Wrong settings in the PC.	Check settings (p. 90).
	No authorisation for this service.	Contact your service provider.
Charge meter does not work.	Charge pulse is not transmitted.	Contact your service provider.
Damage		
Severe shock.	Remove battery and SIM and re-insert them. Do not dismantle the phone!	
Phone became wet.	Remove battery and SIM. Dry immediately with a cloth, but do not apply heat. Dry connector contacts thoroughly. Stand mobile upright in an air current. Do not dismantle the phone!	

Reset all settings to factory default (see also p. 86): * # 9 9 9 9 # 

Customer Care

We offer fast, individual advice! You have several options:

Our online support on the Internet:

**[www.siemens-mobile.com/
customercare](http://www.siemens-mobile.com/customercare)**

We can be reached any time, any place. You are given 24 hour support on all aspects of our products. Here you will find an interactive fault-finding system, a compilation of the most frequently asked questions and answers, plus user guides and current software updates to download.

You will also find the most frequently asked questions and answers in the section entitled "Questions & Answers" (p. 118) in this user guide.

You can also get personal advice about our range of products on our Premium Hotline:

United Kingdom 0906 9597500
(0.75 £ per minute)

Qualified Siemens employees are waiting to offer you expert information about our products and installation.

In some countries repair and replace services are impossible where the products are not sold through our authorised dealers.

When calling customer service, please have ready your receipt and the phone identity number (IMEI, to display press *#06#), the software version (to display, press *#06#, then info) and if available, your Siemens Service customer number.

If repair work is necessary, please contact one of our service centres:

Abu Dhabi	0 26 42 38 00
Argentina	0 80 08 88 98 78
Australia	13 00 66 53 66
Austria	05 17 07 50 04
Bahrain	40 42 34
Bangladesh	0 17 52 74 47
Belgium	0 78 15 22 21
Bolivia	0 21 21 41 14
Bosnia Herzegovina	0 33 27 66 49
Brazil	0 80 07 07 12 48
Brunei	02 43 08 01
Bulgaria	02 73 94 88
Cambodia	12 80 05 00
Canada	1 88 87 77 02 11
China	0 21 38 98 47 77
Croatia	0 16 10 53 81
Czech Republic	2 33 03 27 27
Denmark	35 25 86 00
Dubai	0 43 96 64 33
Egypt	0 23 33 41 11
Estonia	06 30 47 97
Finland	09 22 94 37 00
France	01 56 38 42 00
Germany	0 18 05 33 32 26
Greece	0 80 11 11 11 16
Hong Kong	28 61 11 18
Hungary	06 14 71 24 44
Iceland	5 11 30 00
India	22 24 98 70 00 Extn: 70 40
Indonesia	0 21 46 82 60 81
Ireland	18 50 77 72 77
Italy	02 24 36 44 00
Ivory Coast	05 02 02 59
Jordan	0 64 39 86 42
Kenya	2 72 37 17
Kuwait	2 45 41 78
Latvia	7 50 11 18
Lebanon	01 44 30 43
Libya	02 13 50 28 82
Lithuania	8 52 74 20 10
Luxembourg	43 84 33 99
Macedonia	02 13 14 84

Malaysia.....	+ 6 03 77 12 43 04
Malta	+ 35 32 14 94 06 32
Mauritius	2 11 62 13
Mexico	01 80 07 11 00 03
Morocco	22 66 92 09
Netherlands	0 90 03 33 31 00
New Zealand.....	08 00 27 43 63
Nigeria	0 14 50 05 00
Norway.....	22 70 84 00
Oman.....	79 10 12
Pakistan	02 15 66 22 00
Paraguay	8 00 10 20 04
Philippines	0 27 57 11 18
Poland.....	08 01 30 00 30
Portugal	8 08 20 15 21
Qatar.....	04 32 20 10
Romania	02 12 04 60 00
Russia.....	8 80 02 00 10 10
Saudi Arabia	0 22 26 00 43
Serbia	01 13 80 95 50
Singapore	62 27 11 18
Slovak Republic	02 59 68 22 66
Slovenia	0 14 74 63 36
South Africa	08 60 10 11 57
Spain.....	9 02 11 50 61
Sweden.....	0 87 50 99 11
Switzerland	08 48 21 20 00
Taiwan	02 23 96 10 06
Thailand.....	0 27 22 11 18
Tunisia	71 86 19 02
Turkey.....	0 21 65 79 71 00
Ukraine	8 80 05 01 00 00
United Arab Emirates.....	0 43 66 03 86
United Kingdom	0 87 05 33 44 11
USA	1 88 87 77 02 11
Vietnam.....	84 89 30 01 21
Zimbabwe	04 36 94 24

Care and maintenance

Your phone has been designed and manufactured to the highest of standards and should be treated with great care. The suggestions below will help you to enjoy your phone for many years.

- Protect your phone from moisture and humidity! Precipitation, humidity and liquids contain minerals that will corrode electronic circuits. Should your phone nonetheless become wet, disconnect it immediately from any power supply, remove the battery and leave the open phone to dry at room temperature!
- Do not use or store the phone in dusty, dirty areas. Its moving parts may become damaged.
- Do not store your phone in hot areas. High temperatures can shorten the life of electronic devices, damage batteries and warp or melt certain plastics.
- Do not store your phone in cold areas. When the phone warms up again (to its normal ambient temperature), moisture can form inside the phone, which may damage electronic circuit boards.

- Do not drop, knock or shake your phone. Rough handling can damage internal circuit boards!
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the phone!

The suggestions given above apply equally to your phone, battery, charger and all accessories. If any of these parts are not working properly, take them to your nearest qualified service outlet. The personnel there will assist you and, if necessary, repair the device.

Product data

Declaration of conformity

Siemens Information and Communication mobile hereby declares that the phone described in this user guide is in compliance with the essential requirements and other relevant provisions of European Directive 1999/5/EC (R&TTE). The declaration of conformity (DoC) concerned has been signed. Please call the company hotline if you require a copy of the original, or go to:

www.siemens-mobile.com/conformity

CE 0168

Technical data

GSM class:	4 (2 watt)
Frequency range:	880–960 MHz
GSM class:	1 (1 watt)
Frequency range:	1,710–1,880 MHz
GSM class:	1 (1 watt)
Frequency range:	1,850–1,990 MHz
Weight:	99 g
Size:	90x48x21 mm (78 ccm)
Li-Ion battery:	700 mAh
Operating temperature:	-10 °C–+55 °C
SIM card:	3.0 V

Phone ID

You will need the following details if you lose your phone or SIM card:

the number of the SIM card (on the card):

.....

15 digit serial number of the phone
(under the battery):

.....

the customer service number of the service
provider:

.....

Lost phone

If you lose your phone or SIM card contact your service provider immediately to prevent misuse.

Operating time

The operating time depends upon the respective conditions of use and the network. Extreme temperatures considerably reduce the phone's standby time. Avoid placing the phone in the sun or on a heater.

Call time: 100 to 270 minutes

Standby time: 60 to 290 hours

Action taken	Time (min)	Reduction of stand-by time by
Calling	1	30–90 minutes
Light *	1	40 minutes
Network search	1	5–10 minutes

* Key input, games, organiser etc.

Accessories

Fashion & Carry

Textile Case FCT600

Energy

Li-Ion Battery (700 mAh) EBA-650

Spare battery.

Travel Charger

Travel Charger ETC-500 (EU)

Travel Charger ETC-510 (UK)

Travel charger with an extended input voltage range of 100–240 V.

Car Charger Plus ECC-600

Charger for the cigarette lighter socket in the car. It is possible to make telephone calls during charging.

Handsfree Portable

Headset PTT HHS-510

Headset PTT HHS-610

Headset with PTT key to accept and end calls.

Office

Data Cable DCA-500

For connecting the phone to the serial RS232 port of the PC.

Data Cable USB DCA-540

For connecting the phone to the USB port of the PC. With load function.

SyncStation DSC-600

Table support for the telephone to facilitate simultaneous data exchange and telephone charging. Contains a desktop stand and a data cable USB.

Multitainment

Plug-in Flash IFL-600

Plug-in flash module for taking photos in areas with low ambient light.

Car Solutions

Mobile Holder HMM-650

Cradle without antenna port.

Mobile Holder Antenna HMM-655

The cradle for connecting an external antenna. Ideal for use with headset PTT or car kit portable.

Can also be used as cradle for retrofitting your handsfree car kit (series 55).

Car Kit Comfort HKC-650

Handsfree kit with first-class digital call quality and supreme ease of use. Includes all components needed for installation. The individual antenna solution is available in specialist shops.

Car Kit Easy HKP-620

Facilitates convenient handsfree talking with high call quality. With the integrated, rotating cradle and the flexible microphone positioning, the telephone can be optimally adjusted to suit any vehicle interior. The power is supplied via the cigarette lighter socket.

Upgrade Kit HKO-620

The exchangeable holder of the Car Kit Easy allows the usage with different phones.

Optional Car Kit accessories

Car Data Adapter HKO-690

Phone-in adapter HKO-570

Products can be obtained in specialist shops or you can visit the Siemens Mobile Store online:

 The logo consists of a square with 'SIEMENS' in a bold, sans-serif font at the top. Below it, the word 'Original' is written in a larger, stylized font, and 'Accessories' is written in a smaller font at the bottom.	<p>® Original Siemens Accessories</p> <p>www.siemens-mobile.com/ shop</p>
---	--

Quality

Battery quality statement

The capacity of your mobile phone battery will reduce each time it is charged/emptied. Storage at too high or low temperatures will also result in a gradual capacity loss. As a result the operating time of your mobile phone may be considerably reduced, even after a full recharge of the battery.

Regardless of this, the battery has been designed and manufactured so that it can be recharged and used for six months after the purchase of your mobile phone. After six months, if the battery is clearly suffering from loss of performance, we recommend that you replace it. Please buy only Siemens original batteries.

Display quality declaration

For technological reasons, a few small dots with different colours may appear in the display in exceptional cases.

Just remember that the appearance of brighter or darker dots generally does not mean that a fault has occurred.

Guarantee certificate (UK)

Without prejudice to any claim the user (customer) may have in relation to the dealer or retailer, the customer shall be granted a manufacturer's Guarantee under the conditions set out below:

- In the case of new devices and their components exhibiting defects resulting from manufacturing and/or material faults within 24 months of purchase, Siemens shall, at its own option and free of charge, either replace the device with another device reflecting the current state of the art, or repair the said device. In respect of parts subject to wear and tear (including but not limited to, batteries, keypads, casings, small parts on casings, protective coverings where included in the scope of delivery), this warranty shall be valid for six months from the date of purchase.
- This Guarantee shall be invalid if the device defect is attributable to improper treatment and/or failure to comply with information contained in the user manuals.
- This Guarantee shall not apply to or extend to services performed by the authorised dealer or the customer themselves (e.g. installation, configuration, software downloads). User manuals and any software supplied on a separate data medium shall be excluded from the Guarantee.
- The purchase receipt, together with the date of purchase, shall be required as evidence for invoking the Guarantee. Claims under the Guarantee must be submitted within two months of the Guarantee default becoming evident.
- Ownership of devices or components replaced by and returned to Siemens shall vest in Siemens.

- This Guarantee shall apply to new devices purchased in the European Union. For Products sold in the United Kingdom the Guarantee is issued by Siemens plc, Siemens House, Oldbury, Bracknell, Berkshire, RG12 8FZ.
- Any other claims resulting out of or in connection with the device shall be excluded from this Guarantee. Nothing in this Guarantee shall attempt to limit or exclude a Customer's Statutory Rights, nor the manufacturer's liability for death or personal injury resulting from its negligence.
- The duration of the Guarantee shall not be extended by services rendered under the terms of the Guarantee.
- Insofar as no Guarantee default exists, Siemens reserves the right to charge the customer for replacement or repair.
- The above provisions does not imply a change in the burden of proof to the detriment of the customer.

To invoke this Guarantee, please contact the Siemens telephone service. The relevant number is to be found in the accompanying user guide.

Guarantee certificate (IRL)

Without prejudice to any claim the user (customer) may have in relation to the dealer or retailer, the customer shall be granted a manufacturer's Guarantee under the conditions set out below:

- In the case of new devices and their components exhibiting defects resulting from manufacturing and/or material faults within 24 months of purchase, Siemens shall, at its own option and free of charge, either replace the device with another device reflecting the current state of the art, or repair the said device. In respect of parts subject to wear and tear (including but not limited to, batteries, keypads, casings, small parts on casings, protective coverings where included in the scope of delivery), this warranty shall be valid for six months from the date of purchase.
- This Guarantee shall be invalid if the device defect is attributable to improper care or use and/or failure to comply with information contained in the user manuals. In particular claims under the Guarantee cannot be made if:
 - The device is opened (this is classed as third party intervention)
 - Repairs or other work done by persons not authorised by Siemens.
 - Components on the printed circuit board are manipulated
 - The software is manipulated
 - Defects or damage caused by dropping, breaking, lightning or ingress of moisture. This also applies if defects or damage was caused by mechanical, chemical, radio interference or thermal factors (e.g.: microwave, sauna etc.)
- Devices fitted with accessories not authorised by Siemens
- This Guarantee shall not apply to or extend to services performed by the authorised dealer or the customer themselves (e.g. installation, configuration, software downloads). User manuals and any software supplied on a separate data medium shall be excluded from the Guarantee.
- The purchase receipt, together with the date of purchase, shall be required as evidence for invoking the Guarantee. Claims under the Guarantee must be submitted within two months of the Guarantee default becoming evident.
- Ownership of devices or components replaced by and returned to Siemens shall vest in Siemens.
- This Guarantee shall apply to new devices purchased in the European Union. For Products sold in the Republic of Ireland the Guarantee is issued by Siemens Ireland Limited, Ballymoss Road, Sandyford Industrial Estate, Dublin 18 - The Republic of Ireland.
- Any other claims resulting out of or in connection with the device shall be excluded from this Guarantee. Nothing in this Guarantee shall attempt to limit or exclude a Customers Statutory Rights, nor the manufacturer's liability for death or personal injury resulting from its negligence.
- The duration of the Guarantee shall not be extended by services rendered under the terms of the Guarantee.
- Insofar as no Guarantee default exists, Siemens reserves the right to charge the customer for replacement or repair.
- The above provisions does not imply a change in the burden of proof to the detriment of the customer.

To invoke this Guarantee, please contact the Siemens helpdesk on 1850 777 277. This number is also to be found in the accompanying user guide.

SAR – European Union (RTTE)

INFORMATION ON RF EXPOSURE/SPECIFIC ABSORPTION RATE (SAR)

THIS MOBILE PHONE MEETS THE LIMITS SET BY THE EU (1999/519/EC) FOR PROTECTION OF THE HEALTH OF THE PUBLIC FROM THE EFFECTS OF EXPOSURE TO ELECTROMAGNETIC FIELDS

These limits are part of comprehensive recommendations for the protection of the public. The recommendations were developed and confirmed by independent scientific organisations through periodic and thorough evaluation of scientific studies*. The limits include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

Before a radio equipment may be placed on the market, compliance with the European laws and the respective technical limit requirements must be demonstrated. Only then the CE mark may be affixed**. The limit for mobile phones recommended by the Council of the European Union employs a unit of measurement known as the Specific Absorption Rate, or SAR. This SAR limit is 2.0 W/kg***. This corresponds with the requirements of the International Commission for Non-ionizing Radiation Protection ICNIRP and was adopted into the European Norm for Mobile Radio Equipment

EN 50360. The SAR of mobile phones is determined in accordance with the European Norm EN 50361. This involves measuring the maximum value in all frequency bands of the mobile phone with the phone transmitting at its highest power level. The actual SAR level of the phone during normal operation may be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a base station, the lower the power output.

The highest SAR value for this model phone when tested for compliance against the norm is

0,58 W/kg****

The SAR information can also be found on the Siemens web site at www.siemens-mobile.com

While there may be differences between the SAR levels of various phones and at various positions, all Siemens products meet the legal requirements.

* The World Health Organization (WHO, CH-1211 Geneva 27, Switzerland) states that present scientific information does not indicate the need for any special precautions for use of mobile phones.

Further information:

www.who.int/peh-emf

www.mmfa.org

www.siemens-mobile.com

** The CE mark confirms that the product is in compliance with the legal requirements of the European Union as a prerequisite for the placing on the market and the free movement of goods within the European internal market.

*** averaged over 10 g body tissue.

**** SAR values may vary depending on national requirements and frequency bands.

SAR information for different regions can be found at

www.siemens-mobile.com

SAR – International (ICNIRP)

INFORMATION ON RF EXPOSURE/ SPECIFIC ABSORPTION RATE (SAR)

THIS MOBILE PHONE MEETS THE LIMITS FOR PROTECTION OF THE HEALTH OF THE PUBLIC FROM THE EFFECTS OF EXPOSURE TO ELECTROMAGNETIC FIELDS

Your mobile phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the limits for exposure to radio frequency (RF) energy recommended by international guidelines from the International Commission on Non-ionizing Radiation Protection (ICNIRP). These limits are part of comprehensive guidelines for the protection of the public and establish permitted levels of RF energy for the population. The guidelines were confirmed by independent scientific organisations through periodic and thorough evaluation of scientific studies*. The limits include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure limit for mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit stated in the international guidelines is 2.0 W/kg**. Tests for SAR are conducted in all frequency bands using standard operating positions with the phone transmitting at its highest

power level. The actual SAR level of the phone during operation can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a base station, the lower the power output.

The highest SAR value for this model phone when tested for use at the ear is

0,58 W/kg***

SAR information can also be found at www.siemens-mobile.com

While there may be differences between the SAR levels of various phones and at various positions, they all meet the international guidelines for safe RF exposure.

* The World Health Organization (WHO, CH-1211 Geneva 27, Switzerland) states that present scientific information does not indicate the need for any special precautions for use of mobile phones.

Further information:

www.who.int/peh-emf

www.mmfa.org


www.siemens-mobile.com


** averaged over 10 g of tissue.


*** SAR values may vary depending on national requirements and frequency bands. Information for different regions can be found at


www.siemens-mobile.com


Menu tree

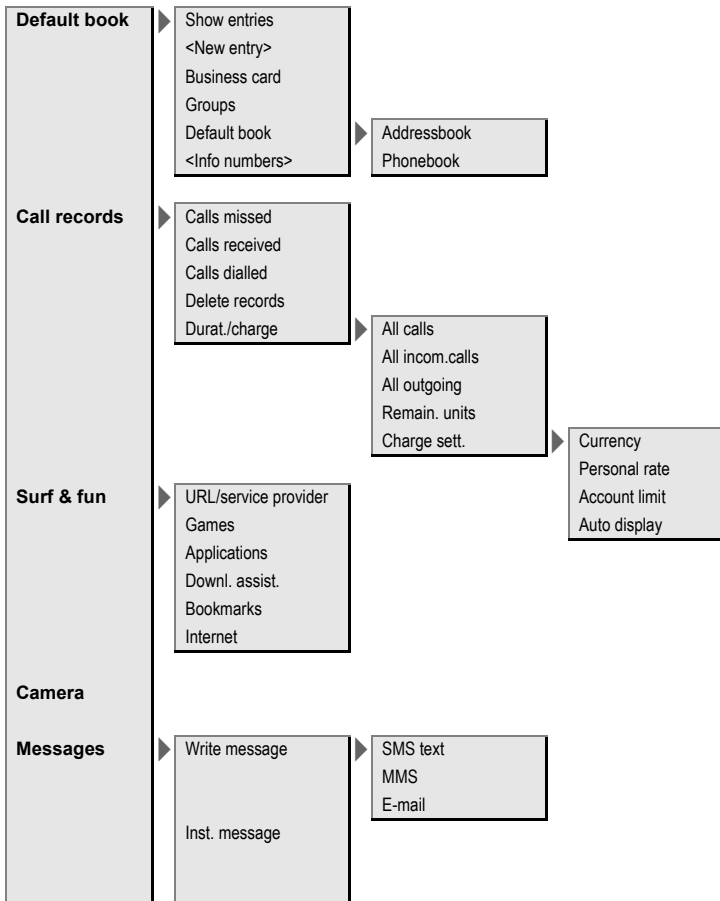


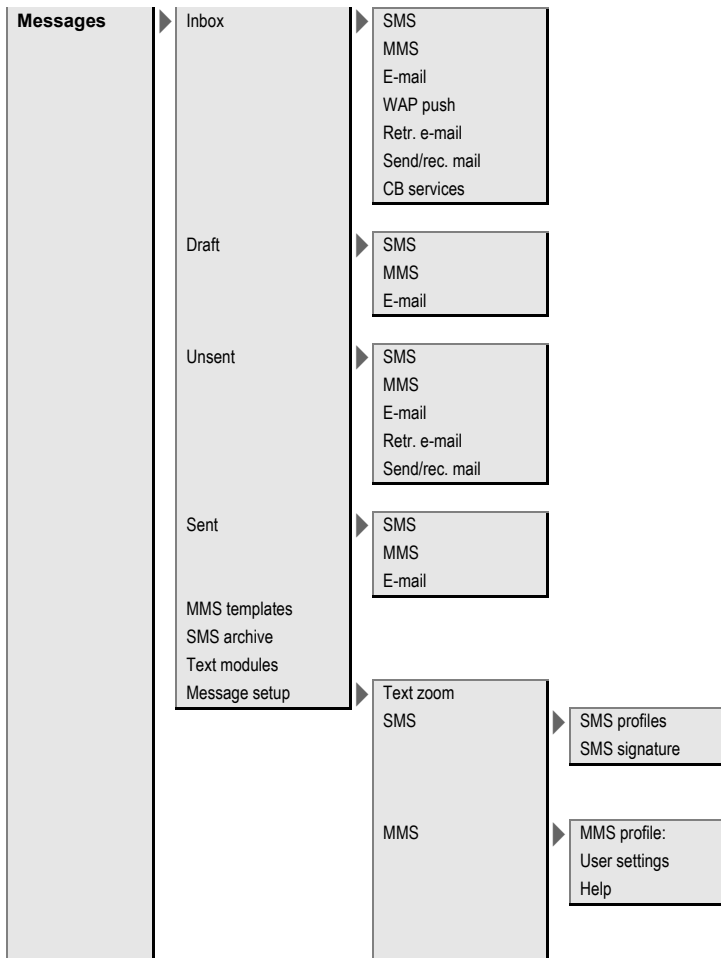

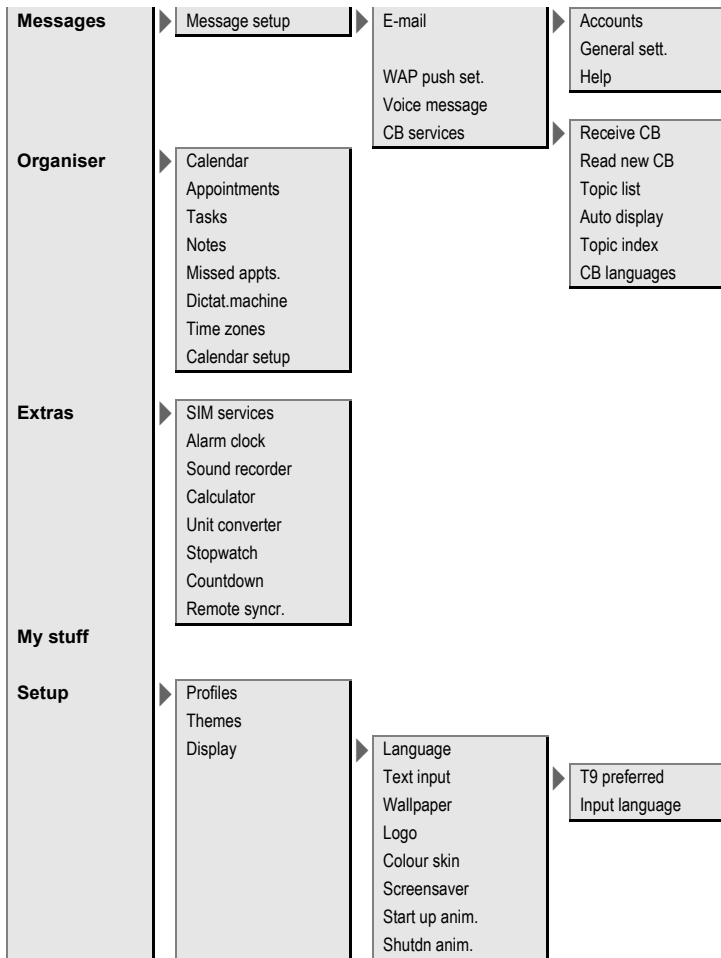

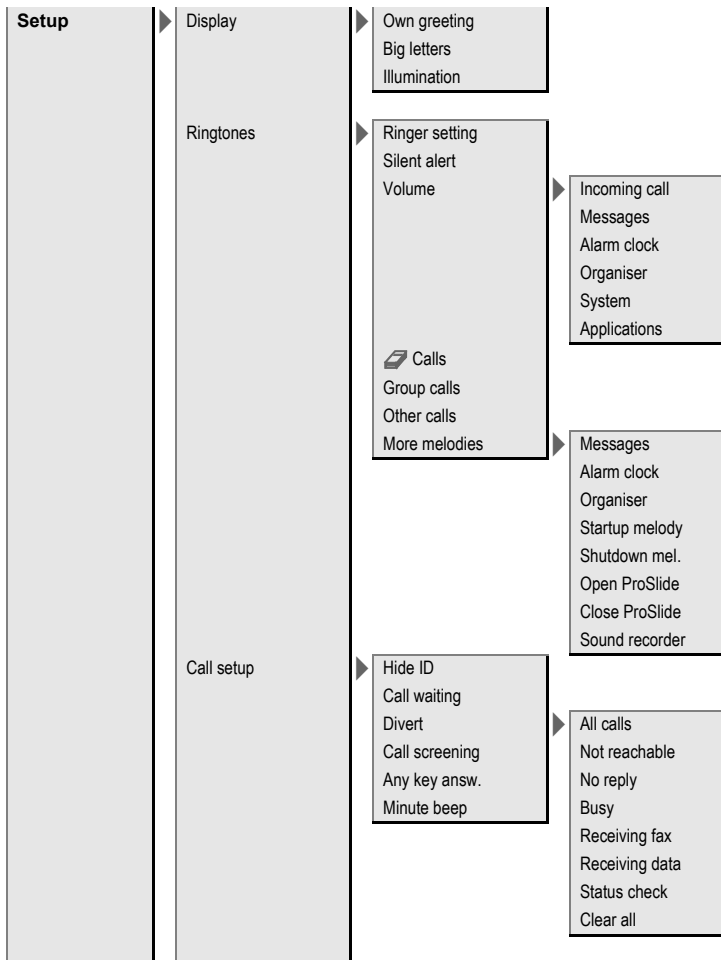

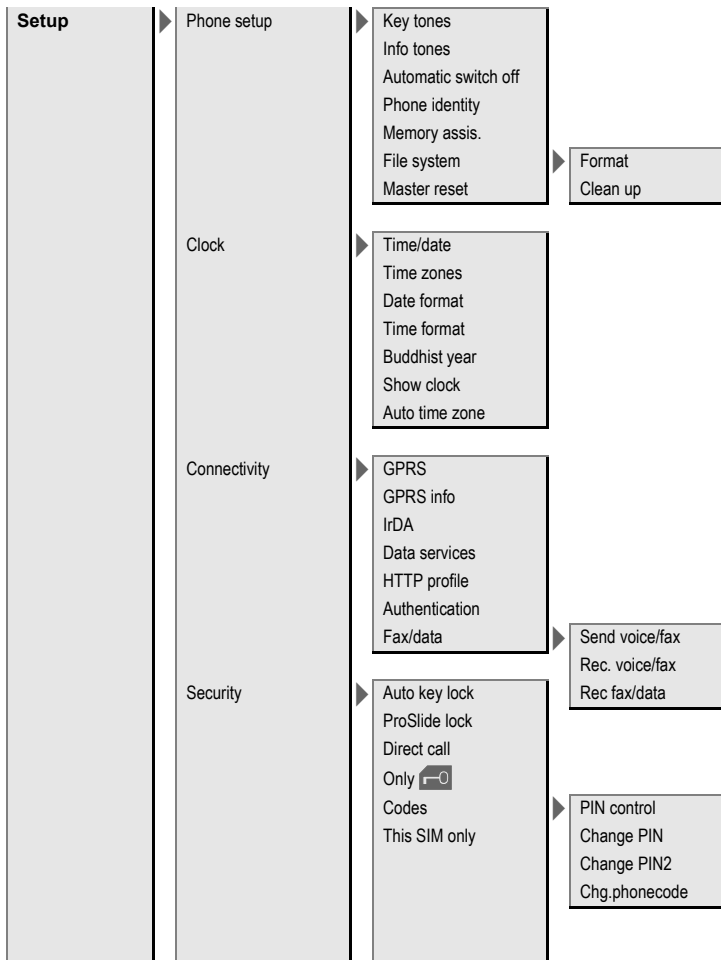

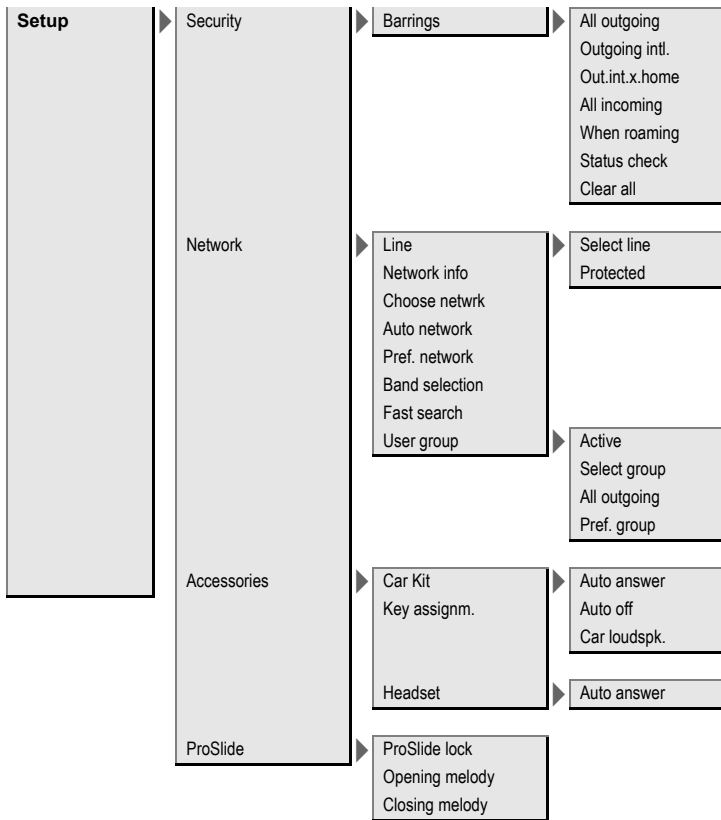


Index

- A**
- Accessories..... 125
 - Additional books..... 37
 - Addressbook
 - Dial entry..... 33
 - Groups 34
 - New entry..... 31
 - Read entry 33
 - Aircraft mode 77
 - Alarm
 - Alarm clock..... 106
 - Type 102
 - Alarm clock 106
 - All calls (call time/charge) 39
 - All calls (diversion) 84
 - All incoming (barrings) 92
 - Answering service (external)..... 61
 - Any to answer 84
 - Appointments 101
 - Authentication 90
 - Auto display
 - Clock 87
 - Duration/charges 39
 - Auto key lock..... 91
 - Auto time zone..... 87, 105
 - Auto. Network selection 93
 - Auto. redial 25
 - Automobile accessories 126
- B**
- Band selection..... 94
 - Battery
 - Charge..... 11
 - Insert..... 10
 - Operating time 11, 124
 - Quality declaration..... 127
 - Big letters..... 80
 - Bookmarks (Internet)..... 71, 73
 - Browser 72
 - Buddh. Date..... 87
 - Business card 30
 - Busy number..... 25
- C**
- Calculator 108
 - Calendar 100
 - Call
 - Accept/end..... 26
 - Barring..... 92
 - Charges..... 39
 - Conference 27
 - Divert..... 83
 - End 24
 - Hold..... 26
 - Menu 28
 - Reject..... 26
 - Swap (change) 26
 - Call back 25
 - Call divert 83
 - Call transfer 28
 - Call waiting..... 27, 83
 - Calling 24
 - Calls dialled (call list)..... 38
 - Calls received (call list)..... 38
 - Camera 40
 - Car Kit
 - Setting 95
 - Car Solutions 126
 - Care of phone 123
 - Cell Broadcast (CB)..... 69
 - Central input..... 43
 - Charge rate..... 39
 - Charges 39
 - Charging the battery 11
 - Clock 87
 - Codes 17

- Colour scheme 79
Conference..... 27
Connection profiles 89
Contact list 63
Control code (DTMF) 29
Countdown 110
Credit limit 39
CSD settings 89
Customer care 121
- D**
- Data connection 88
Date format..... 87
Default book 30
Dialling code 24
Dialling with number keys 24
Dictating machine 104
Digital rights management 13
Direct call 29
Direct reply (SMS)..... 48
Display
 Illumination 80
 Language 79
 Symbols..... 8
Divert 83
Download 74
DTMF tones
(tone sequences)..... 29
Duration/charges 39
- E**
- E-mail
 Lists..... 59
 Receive/read 59
 Settings 60
 Write 58
Emergency number 12
Extras 106, 123
- F**
- Factory settings 86
Fast access..... 98
Fast search..... 94
Fax/data mode 90
Filter 84
Formatting (SMS text)..... 44
Formatting
(telephone memory)..... 86
Forwarding (call)..... 28
Frequency range 94
- G**
- Games and applications 74
GPRS..... 88
Groups..... 34
- H**
- Handset volume..... 24
Handsfree talking..... 26
Headset
 Accessories 125
 Setting 95
Hide ID 83
Highlighting mode 16
Hold call 26, 28
Home network..... 93
Hotline 121
- I**
- Identity number (IMEI) 85
IMEI number 85
Info tones 85
Information services (CB) 69
Infrared (IrDA) 88
Input language (T9) 20
Inst. Message..... 62
International dialling code..... 25
Internet 71

- K**
Key tones 85
- L**
Language 79
Limit (call time/charge) 39
Logo..... 79
Loss of phone, SIM card 124
- M**
Mailbox 61
Maintenance of phone..... 123
Media Player 112
Menu
 Controls..... 14
 My menu 97
 Speed dialling 16
Menu speed dialling 16
Menu tree 133
Message
 CB 69
 E-mail..... 58
 MMS..... 50
 SMS..... 44, 46
Message memory full. 49
Message type 48
Microphone on/off..... 28, 42
Minute beep..... 84
Missed appointments 103
Missed calls (call list) 38
MMS
 Lists..... 55
 Receive 54
 Send..... 53
 Write 50
Mobile Phone Manager 115
Muting (microphone) 28, 42
My menu..... 97
My phone..... 23
- N**
Network
 Barring..... 92
 Connection 93
 Settings 93
Notes..... 103
- O**
Only  91
Only this SIM 91
Operating times (battery).... 11, 124
Organiser..... 100
Own (phone) numbers..... 37
Own greeting..... 80
- P**
Phone (settings)..... 85
Phone code..... 17
Phone data 124
Phone identity number (IMEI)..... 85
Phone number transmission
on/off 83
Phonebook
 Additional books 37
 Call an entry..... 36
 New entry 35
 Protected SIM..... 37
 VIP numbers..... 37
Pictures & sounds (SMS)..... 45
PIN
 Change 17
 Control..... 17
 Enter..... 12
 Error 120
PIN2 17
Preferred network 93
Press..... 12
Preventing accidental
activation..... 18
Product data 124

- Profiles
 Internet 73
 MMS 56
 Phone 76
 SMS 48
Prompt 25
Provider logo 79
PUK, PUK2 17
- Q**
Questions & Answers 118
- R**
Records 38
Redial 24
Reminder 25
Remote synchronisation 110
Ringtone setting 81
Ringtones 34, 81
- S**
Safety precautions 3
Screensaver 79
Second phone number 93
Security 17
Service centre (SMS) 48
Service supplier portal 23
Service tones 85
Set time/date 87
Settings 76
Short message (SMS) 44
Shown in the display 8
Shut down animation 80
Siemens City Portal 23
Signal strength 13
Silent alert 81
SIM card
 Clear barring 18
 Insert 10
 Problems 118
SIM services (optional) 106
- SMS
 Archive 47
 Lists 47
 Profiles 48
 Read 46
 Settings 48
 Signature 48
 T9 input 20
 To group 45
 Write 44
SMS push 43
SOS 12
Sound recorder 107
Special characters 19
Speech time (battery) 124
Speed dialling keys 99
Standard functions 15
Standby mode 14
Standby time 11, 124
Start up animation 80
Stopwatch 109
Storage location (Phonebook) 35
Surf & fun 71
Swap 26
Switch off phone
 Automatic 85
 Manually 12
Switch on phone 12
Symbols 8
Synchronisation 110
- T**
T9 text entry 20
Tasks 102
Technical data 124
Text entry
 With T9 20
 Without T9 19
Text module 20
Time zones 12, 87, 105
Topics 78

U

Unanswered	83
Unit converter	108
Upper and lowercase letters.....	19
User group	94

V

Validity, SMS	48
Voice message (mailbox)	61
Volume	
Handset volume.....	24
Profiles	76
Ringtone.....	81

W

Wallpaper (display).....	79
--------------------------	----