

BenQ DC C520 Digital Camera
User's Manual

Welcome

Copyright

Copyright 2005 by BenQ Corporation. All rights reserved. No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system or translated into any language or computer language, in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual or otherwise, without the prior written permission of this company.

Disclaimer

BenQ Corporation makes no representations or warranties, either expressed or implied, with respect to the contents hereof and specifically disclaims any warranties, merchantability or fitness for any particular purpose. Further, BenQ Corporation reserves the right to revise this publication and to make changes from time to time in the contents hereof without obligation of this company to notify any person of such revision or changes.

Taking care of your camera

- Do not use your camera in the following environmental range: temperature below 0°C or above 40°C.
- Do not use or store your camera in the environments listed below:
 - Direct sunlight
 - High and dusty places
 - Next to an air conditioner, electric heater or other heat sources
 - In a closed car that is in direct sunlight
 - Unstable locations
- If your camera becomes wet, wipe it with a dry cloth as soon as possible.
- Salt or seawater may cause severe camera damage.
- Do not use solvents, such as alcohol, to clean your camera.
- If the lens is dirty, use a lens brush or soft cloth to clean the lens. Do not touch the lens with your fingers.
- To prevent electric shock, do not attempt to disassemble or repair your camera by yourself.
- Water may cause a fire or electric shock. Therefore, store your camera in a dry place.
- Do not use your camera outdoors when it is raining or snowing.
- Do not use your camera in or near water.
- If a foreign substance or water gets in your camera, please turn the power off immediately and remove the batteries. Remove the foreign substance or water, and send it to the maintenance center.
- Transfer the data to the computer as soon as possible to avoid losing your images and / or video clips.

Table of Contents


1. Touring your DC C520	1
1.1 Checking the package contents	1
1.2 DC C520 components	1
1.2.1 Front view	1
1.2.2 Rear view.....	2
1.2.3 LED indicators	2
2. Preparing Your DC C520 for Use	3
2.1 Installing the batteries	3
2.2 Inserting and removing an SD memory card	3
3. Using the DC C520	4
3.1 Mode dial.....	4
3.2 LCD monitor information (camera mode).....	5
3.3 Getting started.....	6
3.3.1 Turning the power on / off	6
3.3.2 Choosing the screen language	6
3.3.3 Setting the date and time	6
3.3.4 Using the flash.....	7
3.3.5 Using the self-timer	7
3.3.6 Using the zoom function	8
3.3.7 Burst.....	9
3.3.8 Auto exposure bracketing (AEB)	9
3.4 Menu options.....	10
3.4.1 Camera menu	10
3.4.2 Video mode	12
3.4.2.1 LCD monitor information (video mode).....	12
3.4.2.2 Recording video clips	12
3.4.2.3 Video menu	13
3.4.3 Playback mode	13
3.4.3.1 LCD monitor information (image playback).....	13

3.4.3.2 LCD monitor information (video playback).....	13
3.4.3.3 Playback mode - the basics.....	13
3.4.3.4 Playback menu.....	15
3.4.4 Setup mode.....	17
3.4.4.1 Setup menu.....	17
4. PC DEPENDENT FEATURES.....	19
4.1 Bundled software.....	19
4.2 Transferring files to your computer	19
4.2.1 Step 1: Connect the digital camera to your computer	20
4.2.2 Step 2: Download images or video clips	20
4.3 Connecting to a PictBridge compliant printer (optional feature).....	21
5. Troubleshooting	22
6. Specifications	24
7. Service Information.....	25

1 TOURING YOUR DC C520

1.1 Checking the package contents


Carefully unpack your kit box and ensure that you have the following items.

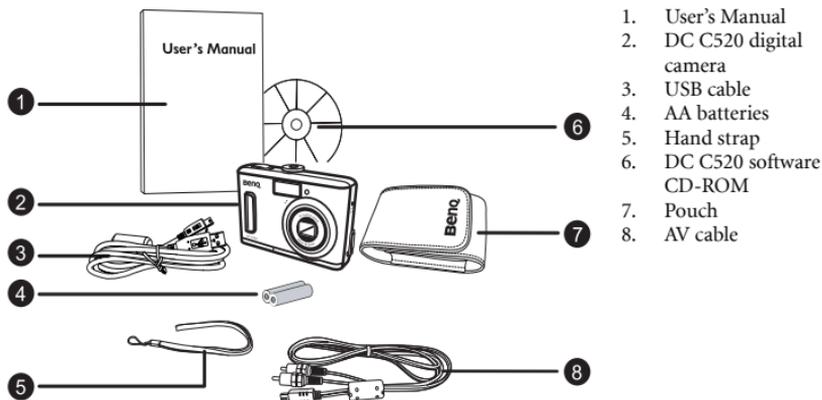

If any of the items are missing or appear to be damaged, contact your dealer. Save the packaging in case you need to ship your camera for service.


1.2 DC C520 components

1.2.1 Front view

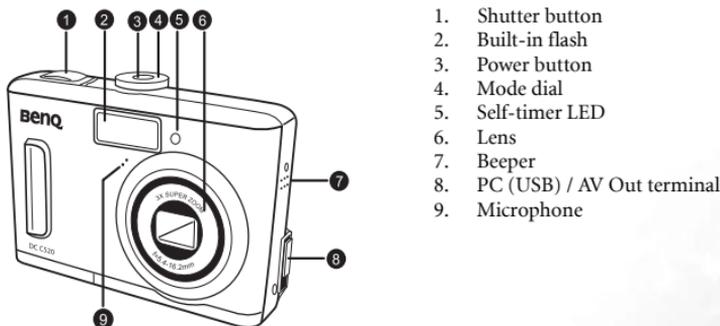

1.2.2 Rear view

1. **W**
[] Thumbnail button
- [] Zoom out button
2. **T**
[] Zoom in button
3. Strap eyelet
4. [] Rec-play button
5. [] Menu button
6. [] Delete button
7. [] Arrow button (Up)
8. [] Arrow button (Right)
[] Self-timer button
9. [] Arrow button (Down)
10. [] Arrow button (Left)
[] Flash button
11. Battery / SD memory card cover
12. **OK** button
DISP button
13. Tripod socket
14. LCD monitor
15. Status LED

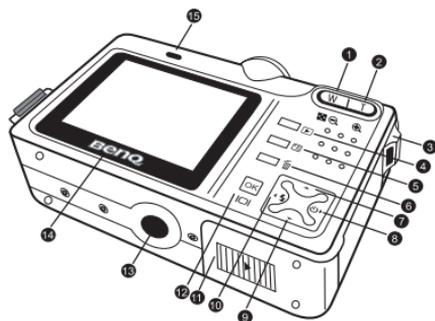

1.2.3 LED indicators

Indicator	State	Description
Status LED	Solid red	• The digital camera is powering up.
	Solid green	• The digital camera is ready to capture images or record video clips.
	Blinking green	• The USB communication / transfer is in progress.
	Blinking red	• The flash is charging.
Self-timer LED	Blinking red	• The self-timer function is activated.

-  • The LCD on the digital camera is manufactured with sophisticated technology; however, the display may have some light spots or show unusual colors. This is normal and does not indicate display malfunction, nor will this affect the pictures you take with the camera.


2 PREPARING YOUR DC C520 FOR USE

2.1 Installing the batteries

You can use two AA batteries to power up the camera. Make sure that the power of the digital camera is off before inserting or removing the batteries.

To insert the batteries:

1. Make sure the camera is turned off.
2. Open the battery cover.
3. Insert the batteries in the correct orientation as shown in the illustration.
4. Close the battery cover.

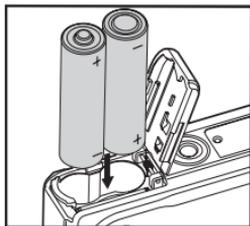


To remove the batteries:

1. Make sure the camera is turned off.
2. Hold the camera with the battery cover facing upward, and then open the battery cover.
3. Remove the batteries.

2.2 Inserting and removing an SD memory card

The DC C520 is equipped with 16 MB internal memory, allowing you to record video clips and capture images. You can also expand the memory capacity by using an optional SD (Secure Digital) memory card to store more files.


1. Always make sure the camera is turned off before inserting or removing a memory card.
2. Insert an SD memory card in the correct orientation as shown in the illustration.
3. Close the battery / SD memory card cover.

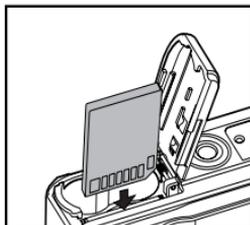

To remove the SD memory card, make sure the camera is turned off. Press lightly on the edge of the memory card and it will eject.




- **Be sure to format the SD memory card with this camera before the initial use.**
- **To prevent valuable data from being accidentally erased from an SD memory card, you can slide the write-protect tab (on the side of the SD memory card) to "LOCK".**
- **To save, edit, or erase data on an SD memory card, you must unlock the card.**
- **SD memory card in the following sizes are supported: 8 MB, 16 MB, 32 MB, 64 MB, 128 MB, 256 MB, 512 MB, and 1 GB. The DC C520 is compatible with SD memory cards manufactured by Panasonic, Toshiba, and Sandisk. Please contact your local dealer for purchase information.**

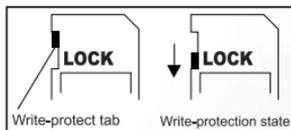

3 USING THE DC C520


3.1 Mode dial

You can select from seven shooting modes and setup mode according to shooting conditions to achieve the desired effect.

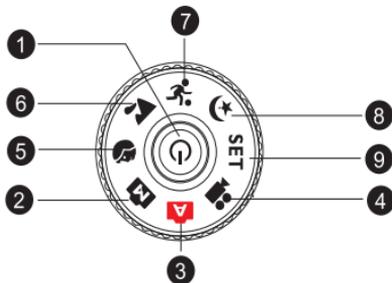

No.	Icon	Mode	Description
1	[]	Power button	Press to turn on / off the power.
2	[]	Manual	Select this mode to access advanced features.
3	[]	Auto	Select this mode to adjust point-and-shoot action automatically.
4	[]	Video	Select this mode to record video clips.
5	[]	Portrait	Select this mode to make people stand out with the background out-of-focus.
6	[]	Landscape	Select this mode to take photographs of distant scenery or landscapes.
7	[]	Sports	Select this mode to capture fast-moving subjects.
8	[]	Night	Select this mode to take photographs of people against a dusk or night-time background.
9	[]	Setup	Select this mode to adjust the camera settings.

3.2 LCD monitor information (camera mode)

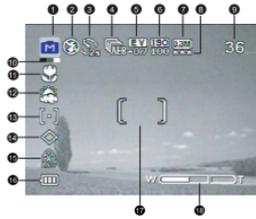

1. Mode indicator
 - [**A**] Auto Mode
 - [**SET**] Setup Mode
 - [] Video Mode
 - [] Landscape Mode
 - [**M**] Manual Mode
 - [] Sports Mode
 - [] Portrait Mode
 - [] Night Mode
2. Flash mode
 - [] Auto Flash (Default)
 - [] Red Eye
 - [] Forced Flash
 - [] No Flash
3. Self-timer mode
 - [] OFF
 - [] 2 sec. delay
 - [] 10 sec. delay
 - [] 10+2 sec. delay
4. Capture mode indicator
 - [] Single
 - [] Burst
 - [] AEB
5. EV (Exposure Value)
 - 0.3, -0.7, -1.0, -1.3,
 - 1.7, -2.0, +0.3, +0.7, +1.0,
 - +1.3, +1.7, +2.0
6. ISO
 - [] ISO Auto
 - [] ISO 50
 - [] ISO 100
 - [] ISO 200
7. Resolution
 - [] 2560 x 1920
 - [] 2048 x 1536
 - [] 1280 x 960
 - [] 640 x 480
8. Image Quality
 - [] Quality Fine
 - [] Quality Normal
 - [] Quality Economy
9. Possible number of shots
10. Effect
 - [] Effect Normal
 - [] B & W
 - [] Sepia
11. Focus indicator
 - [] Focus Auto
 - [] Macro
 - [] Infinity
12. White balance
 - [] Auto WB
13. Metering
 - [] Center Average
 - [] Spot
14. Sharpness
 - [] Sharpness - Low
 - [] Sharpness - Medium
 - [] Sharpness - High
15. Saturation
 - [] Saturation - Low
 - [] Saturation - Medium
 - [] Saturation - High
16. Remaining battery status
 - [] Full battery power
 - [] Medium battery power
 - [] Low battery power
 - [] No battery power
17. AF area
18. Zoom status

3.3 Getting started

3.3.1 Turning the power on / off

- Press the [] button until the digital camera turns on.
- To turn the power off, press the [] button again.

3.3.2 Choosing the screen language

When the camera is turned on for the first time, a language-selection screen will be displayed on the LCD monitor. Follow the steps below to choose the desired language.

1. Rotate the mode dial to **[SET]** mode, and then press the [] button to turn on your camera.
2. Press [] or [] to scroll to [Language] menu.
3. Press [] or [] to select the desired language.
4. Press the **OK** button to confirm.

3.3.3 Setting the date and time

Follow the steps below to set the current date and time.

1. Rotate the mode dial to **[SET]** mode, and then press the [] button to turn on your camera.
2. Press [] or [] to scroll to [Date/Time] menu.
3. Press [] or [] to move to Year, Month, Day and Time fields.
 - Move to the field that you would like to change, and then press the **OK** button.
 - To increase a value of a field, press [].
 - To decrease a value, press [].
 - The time is displayed in 24 hour format.
4. Press the **OK** button after all fields are set.

-  • If you would like to change the date display style, press [] or [] to scroll to [Date Format] menu in Setup Mode, and then select your preferred setting.

3.3.4 Using the flash

The flash is designed to function automatically when lighting conditions warrant the use of flash. You can capture an image using a flash mode suitable to your circumstances.

1. Rotate the mode dial to [A], [M], [📷], [📷], [📷] or [🌙], and then press the [🔘] button to turn on your camera.
2. Toggle [⏪] / [⚡] until the desired flash mode appears on the LCD monitor.
3. Compose your scene and press the shutter button.

The camera has four flash modes: Auto Flash (default), Red Eye, Forced Flash and No Flash. The table below will help you choose the appropriate flash mode.

Icon	Flash mode	Description
[📷]	Auto flash	The flash fires automatically according to the photographic conditions.
[👁️]	Red eye	This mode can reduce the red-eye phenomenon when you want to capture natural-looking images of people and animals in low-light conditions. When capturing images, the red-eye phenomenon can be reduced by asking the subject (person) to look at the camera lens or get as close to the camera as possible.
[⚡]	Forced flash	The flash will always fire regardless of the surrounding brightness. Select this mode for capturing images with high contrast (backlighting) and deep shadows.
[🚫]	No flash	The flash will not fire. Select this mode in a place where flash photography is prohibited, or when the distance to the subject is beyond the effective range of the flash.

👉 • The flash cannot be used in Video Mode.

3.3.5 Using the self-timer


The self-timer can be used in situations such as group shots. When using this option, you should either mount the camera on a tripod (recommended) or rest it on a flat surface.

1. Secure the camera to a tripod or place it on a stable surface.
2. Rotate the mode dial to [A], [M], [📷], [📷], [📷] or [🌙], and then press the [🔘] button to turn on your camera.
3. Toggle [▶] / [🕒] until the desired self-timer mode appears on the LCD monitor.

OFF → 2 → 10 → 10+2

↑ [No Indication]

- Compose your image and press the shutter button.
 - The self-timer function is activated.
 - The image is then captured after the preset time.
 - To cancel the self-timer at any time, press the shutter or [] button, switch the mode dial to another mode or press [] to disrupt the sequence.

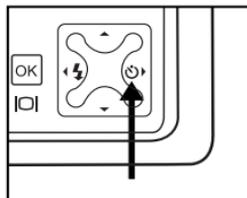

- **After one shot is taken, the self-timer mode is turned off.**
- **If you wish to capture another image using the self-timer, repeat these steps.**

3.3.6 Using the zoom function

The camera is equipped with 3X optical zoom. The lens moves during the optical zoom photography, allowing you to capture telephoto and wide-angle shots. By using the optical zoom function, images appear closer by pressing **T** button, or smaller away by pressing the **W** button.

Moreover, you can further enlarge the subjects with 4X digital zoom by pressing the **T** button continuously. It is activated after your camera reaches its maximum optical zoom factor (3X). A useful feature as it is, however, the more the image is magnified, the grainier the image may become.

To capture a zoomed image, perform the following steps.

- Press the [] button to turn on your camera.
- Adjust the magnification ratio by using the **T** / **W** buttons.
 - To access the optical zoom function, press the **T** button as far as it can go. Press it again to activate the digital zoom.
 - To exit the zoom photography, press the **W** button continuously.
 - The status of digital magnification is displayed on the LCD monitor.
- Compose your image and press the shutter button.

- **The digital magnification ranges from 1.0X to 4.0X.**
- **The zoom function cannot be used while a video clip is being recorded. Set the zoom before you start recording.**

3.3.7 Burst

This mode is used for continuous shooting. Pictures are taken continuously while the shutter button is pressed.

1. Rotate the mode dial to [A], [M], [S], [A], [P] or [C], and then press the [P] button to turn on your camera.
2. Press [M], and then press [▲] or [▼] to scroll to [Capture Mode] menu.
3. Press [◀] or [▶] to select [Burst], and then press the **OK** button.
4. To exit from the menu, press the [M] button.



The [M] indicator is displayed on the LCD monitor.

5. Press the shutter button halfway to lock the focus.
 6. Press the shutter button all the way down to shoot.
- Shooting will stop when the shutter button is released.

☞ • **In Burst mode, the flash mode will be set to OFF automatically.**

3.3.8 Auto exposure bracketing (AEB)

In this mode, the camera automatically changes the exposure within a set range to take three shots after you press the shutter button once. AEB settings can be combined with exposure compensation settings to extend the adjustment range.

1. Rotate the mode dial to [A], [M], [S], [A], [P] or [C], and then press the [P] button to turn on your camera.
2. Press [M], and then press [▲] or [▼] to scroll to [Capture Mode] menu.
3. Press [◀] or [▶] to select [AEB], and then press the **OK** button.
4. To exit from the menu, press the [M] button.



The [M] indicator is displayed on the LCD monitor.

5. Press the shutter button to shoot.

☞ • **In AEB mode, the flash mode will be set to OFF automatically.**

3.4 Menu options

3.4.1 Camera menu

This menu is for the basic settings to be used when capturing still images.

1. Rotate the mode dial to [A], [M], [👁️], [🏔️], [🏃] or [🌙], and then press the [🔴] button to turn on your camera.
2. Press [☰], and then press [▲] or [▼] to scroll to the desired menu.
3. Press [◀] or [▶] to select the desired setting, and then press the **OK** button.
4. To exit from the menu, press the [☰] button.



In [A] mode:

Item	Functional Description
Resolution [📷]	This option sets the size of the image that will be captured. <ul style="list-style-type: none"> - [5M] 2560 x 1920 - [3M] 2048 x 1536 - [1.2M] 1280 x 960 - [0.3M] 640 x 480
Image Quality [📷]	This option sets the quality (compression rate) at which the image will be captured. <ul style="list-style-type: none"> - [★★★] Quality Fine - [★★] Quality Normal - [★] Quality Economy
Focus [📷]	This option allows you to capture images with the distance to the subject set by auto focus, macro or infinity. <ul style="list-style-type: none"> - [AUTO] Focus Auto - [👁️] Macro - [∞] Infinity
Capture Mode [📷]	This option sets the capturing method at the time of taking pictures. <ul style="list-style-type: none"> - [1] Single - [📷] Burst - [AEB] AEB

In [P], [S], [A], [M] or [★] mode:


Item	Functional Description
Resolution []	Refer to the "In [A] mode:" on page 10.
Image Quality []	Refer to the "In [A] mode:" on page 10.
Sharpness []	This option sets the level of image sharpness. <ul style="list-style-type: none"> - [] Sharpness - Low - [] Sharpness - Medium - [] Sharpness - High
Effect []	This option sets the color of the image that will be captured. <ul style="list-style-type: none"> - [] Effect Normal - [] B & W - [] Sepia
Saturation []	To capture an image, your camera offers you three different degrees of color to match with your preference. Your images will demonstrate different impression by selecting different degrees of color. This is called "Saturation". <ul style="list-style-type: none"> - [] Saturation - Low - [] Saturation - Medium - [] Saturation - High
Focus []	Refer to the "In [A] mode:" on page 10.
Capture Mode []	Refer to the "In [A] mode:" on page 10.
Metering []	You can select the metering mode that sets which part of the subject to measure to determine the exposure. <ul style="list-style-type: none"> - [] Center Average - [] Spot
EV Bias []	This option sets to obtain the correct exposure when the subject is much brighter or darker than the background. The EV compensation value can be set in the range from -2.0 EV to +2.0 EV.

White Balance 	<p>This option sets the white balance photographing under a variety of lighting conditions and permits photographs to be taken that approach the conditions that are seen by human eye.</p> <ul style="list-style-type: none"> -  Auto WB -  Sunny -  Cloudy -  Sunset -  Tungsten -  Fluorescent
ISO 	<p>This option sets the sensitivity for capturing images. When the sensitivity is raised (and the ISO figure is increased), photography will become possible even in dark locations, but the more pixilated (grainer) the image will appear.</p> <ul style="list-style-type: none"> -  ISO Auto -  ISO 50 -  ISO 100 -  ISO 200

3.4.2 Video mode

3.4.2.1 LCD monitor information (video mode)

1. Video mode
2. Recordable movie time available
3. Battery power indicator
4. Focus area
5. Effect

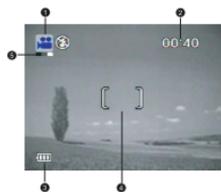

3.4.2.2 Recording video clips

This mode allows you to record video clips with sound via built-in microphone.

1. Rotate the mode dial to  mode, and then press the  button to turn on your camera.
2. To start recording, press the shutter button.
3. To stop recording, press the shutter button again.



• The zoom function of optical zoom (3X) can be activated before you start to record video clips.

• Pressing the  switches the LCD monitor display

mode. Press the  button once to set the indicators OFF. Press the  button again to set the indicators ON.

3.4.2.3 Video menu

This menu is for the basic settings to be used when recording video clips.

1. Rotate the mode dial to [] mode, and then press the [] button to turn on your camera.
2. Press the [] button to access Video Mode Menu.
3. Press [] or [] to select the desired setting, and then press the **OK** button.
4. To exit from the Playback menu, press the [] button.



Item	Functional Description
Effect []	Refer to "In [P], [], [], [] or [] mode on page 11.

3.4.3 Playback mode

3.4.3.1 LCD monitor information (image playback)

1. Playback mode (image)
2. Resolution
3. Image Quality
4. Available number of files
5. Battery power indicator
6. Date



3.4.3.2 LCD monitor information (video playback)

1. Playback mode (video)
2. Available number of files
3. Playback navigator
4. Date
5. Battery power indicator



3.4.3.3 Playback mode - the basics

3.4.3.3.1 Viewing images

You can display the still images you have just captured at a time.

1. Press the [] button to turn on your camera.
2. Press the [] button.
The last captured image appears on the LCD monitor.
3. Use [] / [] to select the desired images.
 - To view the previous image, press the [] button.
 - To view the next image, press the [] button.

- ☞ If there is no image stored in the internal memory or on the memory card, [No Image] message will appear on the monitor.

3.4.3.3.2 Magnifying images

While reviewing your images, you may enlarge a selected portion of an image. This magnification allows you to view fine details. The zoom factor displayed on the screen shows the current magnification ratio.

- Press the [▶] button.
 - The last captured image appears on the LCD monitor.
 - To view the previous image, press the [◀] button.
 - To view the next image, press the [▶] button.
- Adjust the zoom ratio by using the Zoom [W] / [T] button.
 - To enlarge the selected image, press the [T] button.
 - To return to the normal image, press the [W] button.
 - The magnification factor is displayed on the LCD monitor.
- To view different portion of the images, press the [▲] / [▼] / [◀] / [▶] button to adjust the display area.



- ☞ The magnification factors range from 1x to 4x (within 7 stages: 1.0x, 1.5x, 2.0x, 2.5x, 3.0x, 3.5x and 4.0x).

3.4.3.3.3 Thumbnail display

This function allows you to view 9 thumbnail images on the LCD monitor simultaneously so you may search for a particular image.

- Press the [▶] button.
The last captured image appears on the LCD monitor.
- Press the [W] / [📄] button once.
 - Nine thumbnail images are displayed simultaneously.
 - For recorded video clips, the [📹] video mode icon will be displayed.
- Use the [▲] / [▼] / [◀] / [▶] button to select the image to be displayed at regular size.
- Press the **OK** button to display the selected image on full screen.



3.4.3.3.4 Slideshow display

The slide show function enables you to play your images back automatically in sequential order. This is very useful and entertaining feature for reviewing captured images and for presentations.

1. Press the [▶] button.
The last captured image appears on the LCD monitor.
2. Press the [☰] button, and then press [▲] or [▼] to scroll to [Slideshow] menu.
3. Press [◀] or [▶] to select the playback interval, and then press the **OK** button.
 - The slide show starts.
 - The video clips are displayed from the first frame image, and not played back.
 - To stop slide show, press the **OK** button.



☞ • You can adjust the slide show display interval within the range of 3 sec., 5 sec., 10 sec.

3.4.3.3.5 Resizing an image

You can change the resolution of a captured image to one of the following sizes: 2048 x 1536 pixels, 1280 x 960 pixels and 640 x 480 pixels.

1. Press the [▶] button.
The last captured image appears on the LCD monitor.
2. In [▶] mode, use [◀] or [▶] to select the desired images.
 - To view the previous image, press the [◀] button.
 - To view the next image, press the [▶] button.
3. Press [☰] to access Playback menus, and then use [▲] or [▼] to scroll to [Resize] menu.
4. Use [◀] or [▶] to select the desired setting, and then press the **OK** button to confirm.



3.4.3.4 Playback menu

In the [▶] menu, set which settings are to be used for playback.

1. Press the [▶] button.
The last captured image appears on the LCD monitor.
2. Press the [☰] button, and then use [▲] or [▼] to scroll to the desired menu.
3. Use [◀] or [▶] to select the desired setting, and then press the **OK** button to confirm.



4. To exit from the Playback menu, press the [] button.

Item	Functional Description
Delete 	This option allows you to delete one or all images you captured. <ul style="list-style-type: none"> -  Delete One -  Delete All
Slideshow 	You can play back captured images sequentially with a selected interval time. This function is useful for checking your images or for presentations. Refer to 3.4.3.3.4 "Slideshow display" on page 15 for further details. <ul style="list-style-type: none"> -  Slideshow 3S -  Slideshow 5S -  Slideshow 10S
Protect 	This option sets the data to read-only to prevent images from being erased by mistake. <ul style="list-style-type: none"> -  Protect One -  Protect All
Quality Reduce 	This option reduces the quality (compression rate) for the selected image. <ul style="list-style-type: none"> -  Quality Normal -  Quality Economy
Resize 	This option changes the size of a captured image. <ul style="list-style-type: none"> -  Resize to 3M -  Resize to 1M -  Resize to VGA
DPOF 	This option allows you to select the desired pictures to be printed and set the number of prints and date displayed in DPOF format. You can print images easily just by inserting the memory card to a DPOF compliant printer or a print shop. <ul style="list-style-type: none"> -  DPOF-One -  DPOF-All -  Reset DPOF
COPY TO CARD 	This option allows you to copy your files from the digital camera's internal memory to a memory card. This action can be performed only if you have a memory card installed and some files in the internal memory. <ul style="list-style-type: none"> -  YES -  NO

3.4.4 Setup mode

3.4.4.1 Setup menu

This feature allows you to set up the default settings by preference for using your camera.

1. Rotate the mode dial to **[SET]** mode, and then press the **[⏻]** button to turn on your camera.
Setup Mode menu is displayed on the LCD monitor.
2. Press **[▲]** or **[▼]** to scroll to the desired menu.
3. Use **[◀]** or **[▶]** to select the desired setting, and then press the **OK** button.
4. To exit from the setup menu, rotate the mode dial to other desired mode again.



Item	Functional Description
System Sound [🔊]	This option sets whether the startup sound and the camera sound will be muted every time when you press the camera buttons. <ul style="list-style-type: none"> - [🔊] Louder - [🔇] Soft - [🔇] Off
Power Save [🔋]	If no operation is performed for a specific period of time, the power to the camera is automatically turned off. This feature is useful to reduce battery wear. <ul style="list-style-type: none"> - [2min] 2 min. - [3min] 3 min. - [5min] 5 min. - [OFF] OFF
Digital Zoom [🔍]	This option sets whether the digital zoom will be activated at the time of photography. <ul style="list-style-type: none"> - [ON] ON - [OFF] OFF
Reset to Default [🔄]	This option returns all basic settings to the digital camera's default settings. The time setting will not be reset. <ul style="list-style-type: none"> - [YES] YES - [NO] NO
File no. Reset [📁]	This option sets whether the file number when you take photographs will be reset. This creates a new folder. The captured images are recorded to the newly created folder from number 0001. If you want to reset the file number, be sure that no images are recorded in the internal memory or the SD memory card. <ul style="list-style-type: none"> - [YES] YES - [NO] NO

<p>Date Stamp</p> 	<p>This option allows the date of recording to be printed directly on the still images. This function must be activated before the image is captured.</p> <ul style="list-style-type: none"> -  ON -  OFF
<p>Format Inner</p> 	<p>This option erases all the images stored in the internal memory.</p> <ul style="list-style-type: none"> -  YES -  NO
<p>Format SD</p> 	<p>This option reformats the SD memory card loaded in your camera. Protected images are also erased. The SD memory card cannot be formatted if its write-protect tab is slid to "LOCK".</p> <ul style="list-style-type: none"> -  YES -  NO
<p>Quick View</p> 	<p>This option allows you to display a photographed image on the LCD monitor immediately after you have taken a shot.</p> <ul style="list-style-type: none"> -  ON -  OFF
<p>Date/Time</p> 	<p>This option sets the date and time. Refer to 3.3.3 "Setting the date and time" on page 6 for further details.</p> <ul style="list-style-type: none"> -  Year / Month / Date -  Date / Month / Year -  Month / Date / Year
<p>Video Out</p> 	<p>This option sets the video output system of the video equipment that you are going to connect to the camera.</p> <ul style="list-style-type: none"> -  NTSC -  PAL
<p>Language</p> 	<p>This option sets the language that is displayed on the LCD monitor. Refer to 3.3.2 "Choosing the screen language" on page 6 for further details.</p> <p>English / French / Germany / Spanish / Italian / Traditional Chinese / Simplified Chinese / Portuguese / Russian</p>
<p>LCD Brightness</p> 	<p>This option sets the brightness of the LCD monitor. The adjustment range is from -5 to +5.</p>
<p>USB</p> 	<p>This option allows you to choose one of the following modes for further settings.</p> <ul style="list-style-type: none"> -  PC -  Printer

4 PC DEPENDENT FEATURES

4.1 Bundled software

The DC C520 is supplied with the following software. To install the software, refer to the information supplied with respective CDs.

Ulead Photo Express

Ulead® Photo Express™ 5.0 SE is a complete photo project software for digital images. Acquire photos effortlessly from digital cameras or scanners. Edit and enhance images using easy-to-use editing tools and cool photographic filters and effects. Assemble creative photo projects and share results via e-mail and multiple print options.

Ulead Photo Explorer

Ulead® Photo Explorer™ 8.0 SE Basic provides an efficient way to transfer, browse, modify and distribute digital media. It is an all-in-one tool for owners of digital cameras, webcams, DV camcorders, scanners, or for anyone who strives to effectively handle digital media.


4.2 Transferring files to your computer

After using USB cable to establish a USB connection between the camera and your computer, you can use your computer to share captured images or recorded video clips with your family or friends via e-mail or post them on the Web. Note that before you begin to install the software, you need to check your system according to the table as shown below.

	System Requirements (Windows)
CPU	Pentium III 600 MHz processor or higher
Operating System	Windows ME / 2000 / XP
RAM	32 MB (64 MB RAM recommended)
Hard Disk Space	128 MB hard disk space
Required Devices	A CD-ROM drive An available USB port
Display	Color Monitor (800 x 600, 24-bit or higher recommended)

4.2.1 Step 1: Connect the digital camera to your computer

1. Rotate the mode dial to [SET], and then press the [] button to turn on your camera.
2. Press [] or [] to scroll to [USB] menu.
3. Use [] or [] to select [PC], and then press the **OK** button.
4. Connect the end of the smaller plug of the USB cable to your camera.
5. Connect the other end of the USB cable to an available USB port on your computer.
6. There will be a new “Removable Disk” icon detected in “My Computer”, which contains your captured images or recorded video clips.

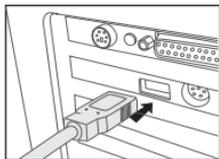

4.2.2 Step 2: Download images or video clips

When the digital camera is turned on and connected to your computer, it is considered to be a disk drive, just like a floppy disk or CD. You can download (transfer) images by copying them from the “Removable disk” (“untitled” or “unlabeled” disk on a Macintosh) to your computer hard drive.

Windows

Open the “removable disk” and double click on the DCIM / DSCIM folder to open it to find more folders. Your images are inside these folder(s). Select the desired still images or video clips, and then choose “Copy” from the “Edit” menu. Open the destination location (folder) and choose “Paste” from the “Edit” menu. You may also drag and drop image files from the digital camera to a desired location.

Macintosh

Open the “untitled” disk icon, and the destination location on your hard disk. Drag and drop from the digital camera to the desired destination.



- **Memory card users may prefer to use a memory card reader (highly recommended).**
- **Video playback application is not included with the package. Make sure that video playback application has been installed in your computer.**

4.3 Connecting to a PictBridge compliant printer (optional feature)

Even if you do not have a computer, you can connect the camera directly to a printer that supports PictBridge to perform image selection and printing by using the camera monitor screen and controls.

Connecting the camera to the printer

1. Rotate the mode dial to **[SET]**, and then press the **[]** button to turn on your camera.
2. Press **[▲]** or **[▼]** to scroll to **[USB]** menu.
3. Use **[◀]** or **[▶]** to select **[Printer]**, and then press the **OK** button.
4. Connect your camera and the printer via a supplied USB cable.

The screen turns off automatically and the setting screen will appear on the monitor after seconds of time.

5. When the connection is established, you will be asked to select **[Print Images]** or **[Print DPOF]**.
6. Select the desired option, and then press the **OK** button



Print Images

1. If you select **[Print Images]**, you will be prompted with a screen that allows you to set **[Size]** and **[Borderless]** options.
2. Press **[▲]** or **[▼]** to access the option you would like to change, and then press **[◀]** or **[▶]** to select your preferred setting.
3. Press the **OK** button to continue.
4. **[More]**, **[Print]**, and **[Exit]** options will be displayed on the bottom of the LCD monitor.
 - You may press **[◀]** or **[▶]** to switch other preferred images.
 - The **[More]** option allows you to set **[Copies]**, **[Date]**, and **[File Name]**.
 - The **[Print]** option allows you to proceed with the printing directly.
 - The **[Exit]** option allows you to cancel the action.

 • The functions described above may differ due to the design of the printer you connect to.

5 TROUBLESHOOTING

Refer to the symptoms and solutions listed below before shipping your camera for service. If the problem persists, contact your local reseller or service center.

Symptom	Cause	Solution
The camera cannot be powered up.	There is no battery or the battery is not inserted correctly.	Insert the battery correctly.
	The battery has no power.	Recharge your batteries or replace with new batteries.
The battery power is draining quickly.	The external temperature is extremely low.	—
	Many shots are being captured in dark places, requiring a flash.	—
	The battery was not fully charged. The battery has not been used for an extended period of time after being charged.	Fully charge the battery and discharge it for at least one complete cycle before use.
The battery or camera is warm.	The camera or flash was used continuously over a long period of time.	—
The flash does not fire. The flash does not recharge.	The camera flash is turned off.	Set the flash to Auto Flash.
	The light source is sufficient.	—
Even though the flash fired, the image is dark.	The distance to the subject is greater than the flash's effective range.	Get closer to the subject and shoot.
The image is too bright or too dark.	The exposure is excessive or inadequate.	Reset exposure compensation.
I cannot format a memory card.	The memory card is write-protected.	Remove the write protection.
	End of the memory card life.	Insert a new memory card.
I cannot download images.	The free space on the hard disk of your computer is insufficient.	Ensure that the hard disk has enough space for running Windows and that the drive for loading image files has free space equal to or greater than the memory card in the camera.
	There is no power being supplied to the camera.	Recharge your batteries or replace with new batteries if necessary.

Symptom	Cause	Solution
The camera does not shoot even when pressing the shutter button.	The battery is running low.	Recharge your batteries or replace with new batteries.
	The camera is not in Shooting Mode.	Switch to Shooting Mode.
	The shutter button was not pressed all the way down.	Press the shutter button all the way down.
	The internal memory or memory card does not have any free space.	Load a new card or delete unwanted files.
	The flash is recharging.	Wait until the flash mode icon, indicated on the screen, stops flashing.
	The camera does not recognize the memory card.	Format the memory card before the initial use or before using with another camera.

6 SPECIFICATIONS

Item	Description
Image sensor	CCD
Effective pixels	5.0 Mega pixels
Image size	Still image: 2560 x 1920, 2048 x 1536, 1280 x 960, 640 x 480 Video clip: 320 x 240
Image quality	Still image: Fine, Normal, Economy
Recording media	12 MB internal memory SD memory card
File format	Motion JPEG (AVI)
Lens	F-no.: Wide: 2.8 / Tele: 4.8 Focal length: 5.4mm-16.2mm (Equivalent to 35mm Camera: 32~96 mm)
Focus range	Normal: 50 cm-infinity Wide: 6 cm-infinity Tele: 35 cm-infinity
LCD monitor	2.0 LTPS color LCD High-resolution 130K pixels display
Self-timer	10 sec delay, 2 sec delay, 10+2 sec delay
Exposure compensation	-2.0EV~ +2.0EV (in 0.3EV increments)
White balance	Auto, Sunny, Cloudy, Sunset, Tungsten, Fluorescent
ISO	Auto, 50, 100, 200
Interface	USB connector, A / V terminal
Power	2 x AA Alkaline batteries
Dimension	Approx. 91 x 61 x 27 mm
Weight	Approx. 130g (without batteries and the SD memory card)

* Design and specifications are subject to change without notice.

SERVICE INFORMATION

Technical Support

If you have any problem or question regarding the DC C520, you can visit the following web site for further assistance:

<http://support.BenQ.com>

For free driver updates, product information and news releases, visit the following web site:

<http://www.BenQ.com>

