

**DOUBLEFEATURE™**



Omnivision VHS

**Panasonic®**

**DVD/VCR DECK  
Operating Instructions  
Model No. PV-D4762**



Connections and Initial Setup Procedures are on pages 12 to 17.



Ability to play back may depend on recording conditions



As an **ENERGY STAR®** Partner, Matsushita Electric Corporation of America has determined that this product or product model meets the **ENERGY STAR®** guidelines for energy efficiency.

Please read these instructions carefully before attempting to connect, operate or adjust this product. Please save this manual.

Spanish Quick Use Guide is included.

(Guía para rápida consulta en español está incluida.)

LSQT0525B

For assistance, please call : 1-800-211-PANA(7262) or send e-mail to : [consumerproducts@panasonic.com](mailto:consumerproducts@panasonic.com)

Initial Setup  
(Connection)

Basic  
Operation

VCR  
Operation

DVD  
Operation

For Your  
Information

# Important Safeguards and Precautions

**FOR YOUR SAFETY, READ AND RETAIN ALL SAFETY AND OPERATING INSTRUCTIONS. HEED ALL WARNINGS IN THE MANUAL AND ON THE UNIT**

## INSTALLATION

### 1 POWER SOURCE CAUTION

Operate only from a power source indicated on the unit or in this manual. If necessary, have your Electric Utility Service Company or Video Products Dealer verify the power source in your home.

### 2 POLARIZED OR GROUNDING PLUG

As a safety feature, this product comes with either a polarized power cord plug (one blade is wider than the other), or a three-wire grounding type plug.

#### POLARIZED PLUG CAUTION:

This plug will only fit into an outlet one way. If you cannot fully insert the plug, try reversing it. If it still will not fit, have an electrician install the proper wall outlet. Do not defeat the safety feature by tampering with the plug.

#### GROUNDING PLUG CAUTION:

This plug will only fit into a three-hole grounding outlet. If necessary, have an electrician install the proper outlet. Do not defeat the safety feature by tampering with the plug.

### 3 POWER CORD

Make sure power cords are routed so that they are not likely to have anything rest on them, roll over them, or be in the way of walking traffic. If an extension cord is used, make sure it also has either a polarized or grounded plug and that the cords can be securely connected. Frayed cords, damaged plugs, and damaged or cracked wire insulation are hazardous and should be replaced by a qualified service technician. Overloaded outlets and extension cords are fire hazards and should be avoided.

### 4 DO NOT BLOCK VENTILATION HOLES

Ventilation openings in the cabinet release heat generated during operation. If they are blocked, heat build-up inside the unit can cause failures that may result in a fire hazard or heat damage to cassettes or discs.

For protection, follow these rules:

- Never cover ventilation slots or the unit while in use, or operate the unit when placed on a bed, sofa, rug, or other soft surface.
- Avoid built-in installation, such as a book case or rack, unless proper ventilation is provided.

### 5 PLACEMENT: AVOID EXTREMELY HOT LOCATIONS OR SUDDEN TEMPERATURE CHANGES

Do not place the unit over or near heater or radiator, in direct sunlight, inside closed vehicles, in high temperature [over 104°F (40°C)], or in over 75% humidity. If the unit is suddenly moved from a cold place to a warm one, moisture may condense in the unit and on the tape causing damage. Never subject the unit to vibration, impact, or place it so that the surface is tilted as internal parts may be seriously damaged.

### 6 TO AVOID PERSONAL INJURY

- Do not place unsecured equipment on a sloping surface.
- Do not place this unit on any support that is not firm, level, and adequately strong. The unit could fall causing serious injury to a child or adult and damage to the unit.
- An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.
- Carefully follow all operating instructions and use the manufacturer's recommended accessories when operating this unit or connecting it to any other equipment.




2

## OUTDOOR ANTENNA INSTALLATION

### 1 SAFE ANTENNA AND CABLE CONNECTION

If an outside antenna or cable system is connected to the equipment, be sure the antenna or cable system is grounded so as to provide some protection against built up static charges and voltage surges.

Section 810 of the National Electrical Code, ANSI/NFPA 70 (in Canada, part 1 of the Canadian Electrical Code) provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna discharge unit, connection to grounding electrodes and requirements for the grounding electrode.

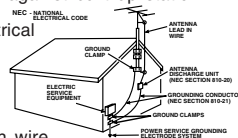

### 2 KEEP ANTENNA CLEAR OF HIGH VOLTAGE POWER LINES OR CIRCUITS

An outside antenna system should be located well away from power lines, electric light or power circuits and where it will never come into contact with these power sources if it should happen to fall. When installing an outside antenna, extreme care should be taken to avoid touching power lines, circuits or other power sources as this could be fatal. Because of the hazards involved, antenna installation should be left to a professional.

## USING THE UNIT

If the unit has been in storage or moved to a new location, refer first to the INSTALLATION section of these safeguards.

### 1 KEEP THE UNIT AWAY FROM WATER OR MOISTURE OF ANY KIND.

**2 IF EQUIPMENT IS EXPOSED TO RAIN, MOISTURE, OR STRONG IMPACT**, unplug the unit and have it inspected by a qualified service technician before use.

### 3 DURING AN ELECTRICAL STORM

During a lightning storm, whether indoors or outdoors, or before leaving the unit unused for extended periods of time, disconnect all equipment from the power source as well as the antenna and cable system.

### 4 WHEN THE UNIT IS PLUGGED IN

- Never expose the unit to rain or water. **DO NOT OPERATE** if liquid has been spilled into the unit. Immediately unplug the unit, and have it inspected by a service technician. Fire and shock hazards can result from electrical shorts caused by liquid contact inside.
- Never drop or push any object through openings in the unit. Some internal parts carry hazardous voltages and contact can cause electric shock or fire hazard. Do not put any foreign object on the disc tray.
- Avoid placing the unit directly above or below your TV set as this may cause electrical interference. Keep all magnets away from electronic equipment.

### 5 USING ACCESSORIES

Use only accessories recommended by the manufacturer to avoid risk of fire, shock, or other hazards.

### 6 CLEANING THE UNIT

Unplug the unit. Then, use a clean, dry, chemically untreated cloth to gently remove dust or debris. **DO NOT USE** cleaning fluids, aerosols, or forced air that could over-spray, or seep into the unit and cause electrical shock. Any substance such as wax, adhesive tape, etc. may mar the cabinet surface. Exposure to greasy, humid, or dusty areas may adversely affect internal parts.

## SERVICE

### 1 DO NOT SERVICE THIS PRODUCT YOURSELF

If, after carefully following the detailed operating instructions, this product does not operate properly, do not attempt to open or remove covers, or make any adjustments not described in the manual. Unplug the unit and contact a qualified service technician.

### 2 IF REPLACEMENT PARTS ARE REQUIRED

Make sure the service technician uses only parts specified by the manufacturer, or those having the same safety characteristics as the original parts. The use of unauthorized substitutes may result in fire, electric shock, or other hazards.

### 3 HAVE THE SERVICE TECHNICIAN PERFORM A SAFETY CHECK

After any service or repairs to the unit, request the service technician to conduct a thorough safety check as described in the manufacturer's service literature to ensure that the unit is in safe operating condition.


## Safety Precautions/Mesures de sécurité

**WARNING:** To prevent fire or shock hazard, do not expose this equipment to rain or moisture.

**CAUTION:** To prevent electric shock, match wide blade of plug to wide slot, fully insert.

**Avertissement:** Afin de prévenir tout risque d'incendie ou de chocs électriques, ne pas exposer cet appareil à la pluie ou à une humidité excessive.

**Attention:** Pour éviter les chocs électriques, introduire la lame la plus large de la fiche dans la borne correspondante de la prise et pousser jusqu'au fond.

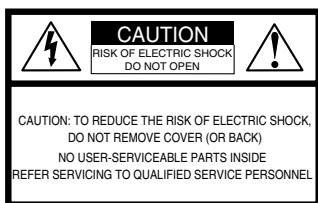

This symbol warns the user that uninsulated voltage within the unit may have sufficient magnitude to cause electric shock. Therefore, it is dangerous to make any kind of contact with any inside part of this unit.



This symbol alerts the user that important literature concerning the operation and maintenance of this unit has been included. Therefore, it should be read carefully in order to avoid any problems.

### CAUTION:

UNIT IS A CLASS I LASER PRODUCT. HOWEVER THIS UNIT USES A VISIBLE LASER BEAM WHICH COULD CAUSE HAZARDOUS RADIATION EXPOSURE IF DIRECTED. BE SURE TO OPERATE THE UNIT CORRECTLY INSTRUCTED.

WHEN THIS UNIT IS PLUGGED TO THE WALL OUTLET, DO NOT PLACE YOUR EYES CLOSE TO THE OPENING OF THE DISC TRAY AND OTHER OPENINGS TO LOOK INTO THE INSIDE OF THIS UNIT.

USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

DO NOT OPEN COVERS AND DO NOT ATTEMPT TO REPAIR THE UNIT YOURSELF. REFER SERVICING TO QUALIFIED PERSONNEL.

### CAUTION:

LASER RADIATION WHEN OPEN DO NOT STARE INTO BEAM.

### ATTENTION:

RAYONNEMENT LASER EN CAS D'OUVERTURE. NE PAS REGARDER DANS LE FAISCEAU.

(Inside of product)

### FCC NOTE:

This equipment has been tested and found to comply with part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when operated in a residential environment. If this equipment does cause interference to radio or television reception, which can be determined by turning the equipment off and on, use the equipment in another location and/or utilize an electrical outlet different from that used by the receiver.

If necessary, consult the dealer or an experienced radio/TV technician for help. The user may find the booklet, "Something About Interference" available from FCC local regional offices helpful.

### FCC Caution:

To assure continued compliance, (example- use only shielded interface cables when connecting to other devices.) Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

Apparatus Claims of U.S. Patent Nos. 4,631,603, 4,577,216, and 4,819,098, licensed for limited viewing uses only.

**FCC Warning:** Any unauthorized changes or modifications to this equipment would void the user's authority to operate.

### Region Management Information:

This DECK is designed and manufactured to respond to the Region Management Information that is recorded on a DVD disc. If the Region number described on the DVD disc does not correspond to the Region number of this DECK, this DECK cannot play this disc.

The Region number for this DECK is 1.



3

# Before Using

 
## Congratulations

on your purchase of one of the most sophisticated and reliable products on the market today. Used properly, it will bring you years of enjoyment. Please fill in the information below. The serial number is on the tag located on the back of your DECK.

- Date of Purchase \_\_\_\_\_
- Dealer Purchased From \_\_\_\_\_
- Dealer Address \_\_\_\_\_
- Dealer Phone No. \_\_\_\_\_
- Model No. **PV-D4762**
- Serial No. \_\_\_\_\_

## Accessories

- Remote Control LSSQ0334
- Batteries 2 "AA"



- RF Coaxial Cable VJAS0196



To order accessories, call toll free 1-800-332-5368.

## Loading the Batteries

- 1) Open cover.
- 2) Insert batteries as marked.
- 3) Close cover.

### Battery replacement caution

- Do not mix old and new batteries.
- Do not mix alkaline with manganese batteries.

## Disc formats supported by this DECK

DECK can play back discs bearing any of the following marks:



**DVD**  
3" (8 cm) disc / 5" (12 cm) disc



**Video CD**  
3" (8 cm) disc / 5" (12 cm) disc



**CD**  
3" (8 cm) disc / 5" (12 cm) disc

### Discs which cannot be played

- DVD with Region No. other than "1" or "ALL"
- DVD of PAL system
- DVD-ROM
- CDV
- DVD-R/DVD-RAM
- CD-ROM
- CD-G

### Do not try to play Photo CD.



is a registered trademark.


## Disc Handling

### Handling precautions

- Only hold disc by edges as shown below. Fingerprints, dirt and scratches can cause skipping and distortion.
- Do not write on label side of disc.
- Never use record cleaning sprays, benzene, thinner, static electricity prevention liquids, or any other solvent.
- Be careful not to drop or bend disc.




- Do not place more than 1 disc on disc tray.
- Do not try to close disc tray when disc is not properly placed.
- Always store discs in their proper cases when not in use.

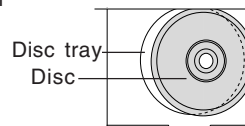

### To clean disc surface

 With a soft, damp (water only) cloth, gently wipe from the center hole to the outer edge as shown below. (Wiping in a circular pattern will scratch the surface.)



### If disc is brought from a cold to a warm environment, moisture may form on the disc

Wipe away moisture with a soft, dry, lint-free cloth before using disc. (See above.)

### Improper disc storage

- Discs could be damaged if stored or left in areas:
  - exposed to direct sunlight.
  - that are humid or dusty.
  - near heat (i.e. heater, radiator, etc.).

# Table of Contents

<b>DVD / VCR</b>	
Important Safeguards and Precautions .....	2, 3
Before Using .....	4
DECK & Cassette Information .....	6, 7
Location of Controls .....	8 ~ 10
Displays (On Screen Displays and Multi Function Display) .....	11
Connections .....	12 ~ 15
Initial Setup for Basic Connections (Ready to Play) .....	16, 17
<hr/>	
<b>VCR</b>	
Reset Language, Channels, Clock, VCR's Output Channel ...	18, 19
Playback/ Record on a Tape .....	20, 21
<b>DVD</b>	
Basic DVD Operation .....	22, 23
<hr/>	
Timer Recording .....	24, 25
MTS Broadcast/ VHS Hi-Fi Stereo System .....	26, 27
Multi-Brand Control Feature .....	28, 29
Tape Operation (COMMERCIAL▶▶ <b>ADVANCE</b> ® and MOVIE▶▶ <b>ADVANCE</b> ®) ...	30 ~ 36
Special VCR Features .....	37, 38
Copying Your Tapes (Dubbing) .....	39
<hr/>	
Disc Operation .....	40 ~ 44
DVD Operation using On-Screen Displays .....	45 ~ 46
MP3 Playback Operation .....	47
DVD Lock Feature .....	48
Settings for DVD Operation .....	49 ~ 51
Language Code List .....	52
<hr/>	
<b>DVD / VCR</b>	
Warning and Instruction Displays .....	53
Before Requesting Service .....	54, 55
Limited Warranty .....	56, 57
Customer Services Directory .....	57
Spanish (Español) Quick Use Guide .....	58 ~ 63
Index .....	Back Cover

Initial Setup  
(Connection)

Basic  
Operation

VCR  
Operation

DVD  
Operation

For Your  
Information

# DECK & Cassette Information

## Head Cleaning

Playing older or damaged tapes may eventually cause video heads to become clogged.

### Video Head Clog Sensor

During playback, this screen appears if clogging is detected. To remove screen, press PLAY on the remote or DECK.

VIDEO HEADS MAY  
NEED CLEANING  
PLEASE INSERT HEAD  
CLEANING CASSETTE  
OR REFER TO MANUAL  
END :PLAY

- Use "dry" type head cleaning cassette only. (Part No. NV-TCL30PT is recommended.)
- Follow cleaning tape instructions carefully. Excessive use of tape can shorten head life.
- If head clog symptoms persist, contact your nearest Factory Servicer or authorized Servicer (see p. 56).

## Built-in Head Cleaner

 
A clean video head helps produce a clear picture.

So, we have equipped your DECK with a built-in, non-chemical head cleaning system that helps prevent clogging of the video heads. Cleaning is performed each time you load or unload a video cassette.

- This feature is preventative only. If your video heads are seriously clogged, consider the use of a chemical non-abrasive head cleaning kit or take your DECK to a Servicer.


## Prevent Accidental Tape Erasure

Break off the tab to prevent recording.



To record again

Cover the hole with cellophane tape.

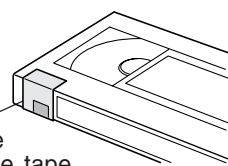

## Record/ Playback Time

Only use tapes with the **VHS** mark in this DECK.

Tape Speed Setting	Type of Video Cassette		
	T60	T120	T160
SP (Standard Play)	1 Hour	2 Hours	2 Hours 40 Minutes
LP (Long Play)	2 Hours	4 Hours	5 Hours 20 Minutes
SLP (SuperLong Play)	3 Hours	6 Hours	8 Hours

## Cleaning DECK

Use a soft cloth or dusting attachment of a vacuum cleaner to remove dust from the ventilation holes on the back sides and bottom of the cabinet. Plastic surfaces are easily scratched and can be marred by alcohol and various solvents. Avoid excessive use of oil-based furniture polishes since the materials used in the cabinet will accumulate more dust. We recommend using a non-abrasive, antistatic cleaner and polisher.

## Features for a Quality Picture (VCR)

### Digital Auto Picture

Automatically controls the video output signal for less noise depending on the tape condition.

### Digital Auto Tracking

 
Continuously analyzes the signal and adjusts for optimum picture quality.

### Manual Tracking Control (to reduce picture noise)

Use during Playback and Slow Motion mode to reduce picture noise.

Press CH (TRACKING) ▲/▼ on the remote control or on DECK until the picture clears up.

To return to Auto Tracking, press POWER off, then on again a few seconds later.



### V-Lock Control (to reduce picture jitter)

In Still mode, CH (TRACKING) ▲/▼ operate as a V-Lock control.

## Specifications

<b>Power Source:</b>	120 V AC, 60 Hz
<b>Power Consumption:</b>	<u>Power On:</u> Approx. 32 watts, <u>Power Off:</u> Approx. 4 watts
<b>Video Signal:</b>	EIA Standard NTSC color
<b>Video Recording System:</b>	4 rotary heads helical scanning system
<b>Audio Track:</b>	1 track (Normal), 2 channel (Hi-Fi Audio Sound)
<b>Tuner:</b>	
<b>Broadcast Channels:</b>	VHF 2 ~ 13, UHF 14 ~ 69
<b>CABLE Channels:</b>	Midband A through I (14 ~ 22), Superband J through W (23 ~ 36) Hyperband AA ~ EEE (37 ~ 64), Lowband A-5 ~ A-1 (95 ~ 99) Special CABLE channel 5A (01), Ultraband 65 ~ 94, 100 ~ 125
<b>Input/Output Terminal:</b>	Audio/Video Line Input/Output, RF Input/Output
<b>Input Terminal:</b>	Audio/Video Line Input (Front)
<b>Output Terminal:</b>	S-Video Output (DVD only), Component Video Output (DVD only) Audio Output 2 (L), (R)
<b>Operating Temperature:</b>	5 °C ~ 40 °C (41 °F ~ 104 °F)
<b>Operating Humidity:</b>	10 % ~ 75 %
<b>Weight:</b>	6.9 kg (15.2 lbs).
<b>Dimensions:</b>	430 (W) x 118 (H) x 364 (D) mm 16-15/16" (W) x 4-5/8" (H) x 14-5/16" (D) inch
<b>Discs Played</b>	
<b>(1) DVD-VIDEO Disc</b>	5" (12 cm) single-sided single-layer 5" (12 cm) single-sided double-layer 5" (12 cm) double-sided double-layer (one layer per side) 3" (8 cm) single-sided single-layer 3" (8 cm) single-sided double-layer 3" (8 cm) double-sided double-layer (one layer per side)
<b>(2) Compact Disc</b> (CD-DA, VIDEO CD)	5" (12 cm) disc 3" (8 cm) disc
<b>Digital Audio Output:</b>	Digital Optical Connector
<b>Pickup:</b>	Wavelength: 655 nm (DVD), 790 nm (Video CD/CD) Laser power: CLASS II

Note: • Designs and specifications are subject to change without notice.

## Definition of Terms (DVD)

<b>Angle:</b>	Some DVD discs feature scenes simultaneously shot from different angles. The ANGLE button can be used to view the scene from different angles. (ANGLE Indicator lights on DECK when a scene recorded at different angles is detected.)
<b>Chapter Number:</b>	Titles are subdivided into numbered sections. You can quickly search for a favorite scene using these numbers.
<b>DVD:</b>	A high-density optical disc on which high-quality pictures and sound have been digitally recorded. DVD incorporates new video compression technology (MPEG II) and high-density recording technology which allow entire movies to be recorded with incredible playback quality.
<b>Playback Control:</b>	With Video CD (version 2.0), scenes or information may be selected for viewing or listening from an interactive menu that appears on the TV screen.
<b>Subtitles:</b>	Written dialogue which appears at the bottom of the screen.
<b>Time Number:</b>	The elapsed play time from the start of a disc or title. Use to quickly find scenes. (May not work with some discs.)
<b>Title Number:</b>	For DVD discs with two or more titles, the title is numbered as title 1, title 2, etc.
<b>Track Number:</b>	Numbers assigned to tracks on Video CDs and CDs to allow specific tracks to be quickly located.
<b>Video CD:</b>	CD containing picture and sound with same quality level as video tape. This DECK also supports Video CDs with playback control (version 2.0).

This product incorporates copyright protection technology that is protected by method claims of certain U.S. Patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

Initial Setup  
(Connection)


7

# Location of Controls

## Remote Control

**Bold:** VCR Function  
**Bold Italic:** VCR and DVD Functions

*Italic:* DVD Function  
Normal: Others

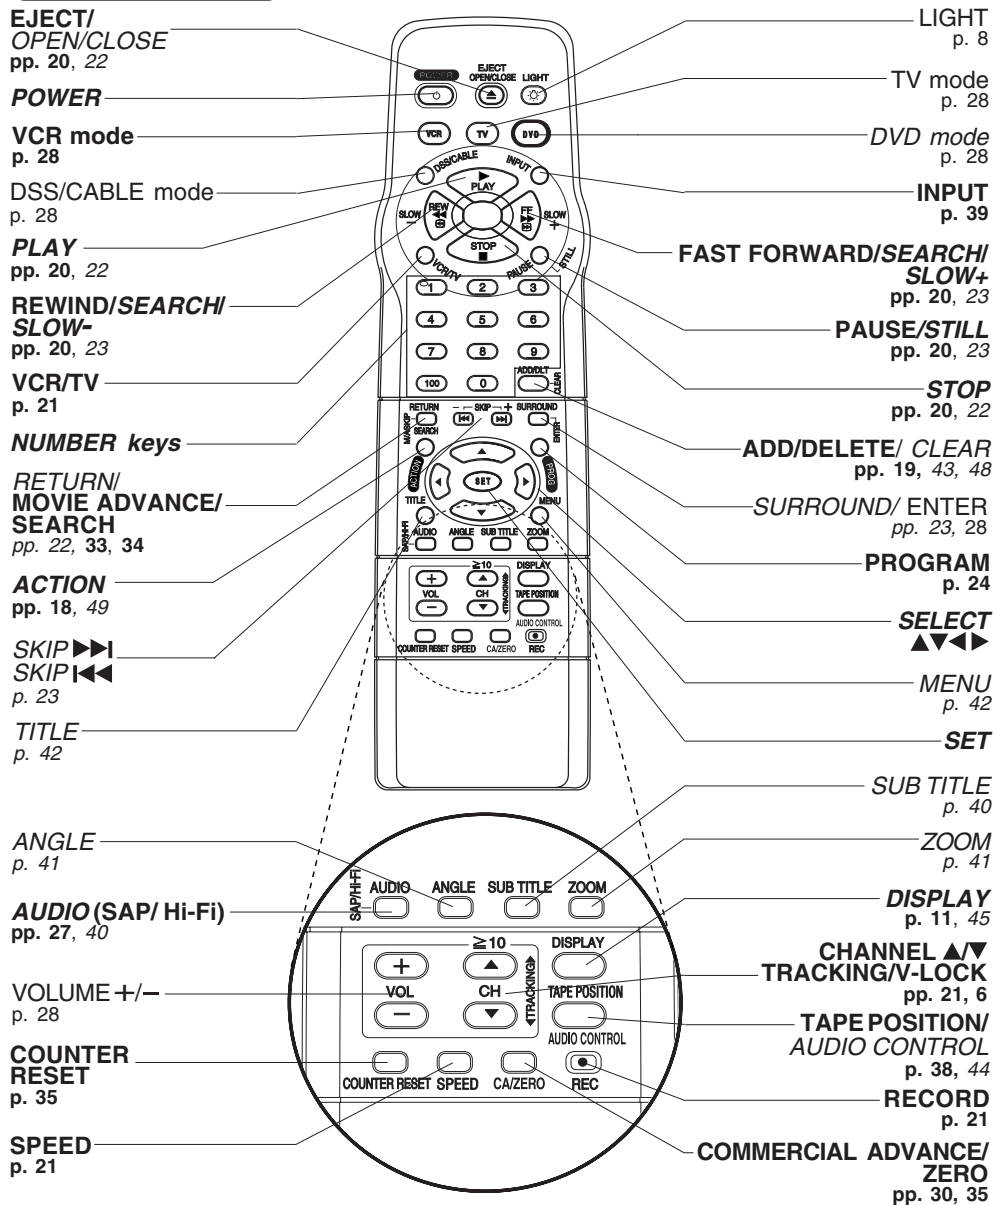

### Light Tower Universal Remote Control

**Light button:** When Light button is pressed, (DVD, TV, VCR, PLAY, STOP, REW, FF) buttons will light up for 5 seconds for easy button location.

**EJECT button:** When this button is pressed in VCR mode, the tape is ejected. This button is inoperative if pressed during recording. If pressed in DVD mode, the disc tray opens or closes.




c: DVD Function  
mal: Others

**Front View of DECK**

**Bold:** VCR Function  
*Italic:* DVD Function  
**Bold Italic:** VCR and DVD Functions  
Normal: Others

**If the disc cannot be removed...**  
First, unplug DECK. Then, prepare a rigid wire (e.g. an extended paper clip) and, applying moderate force, insert it straight into the hole at the base of the tray. The tray will eject a little. Now, pull the tray all the way out and remove the disc.

**Initial Setup  
(Connection)**

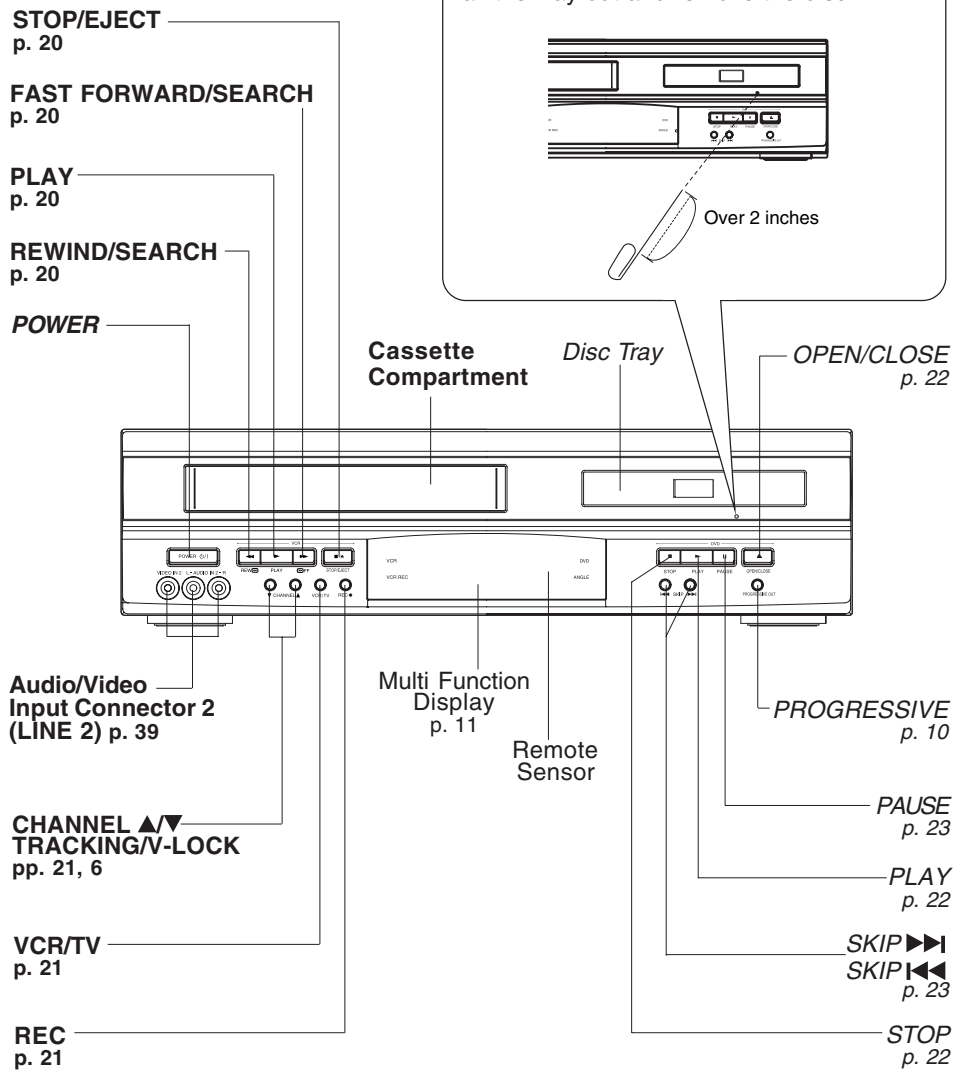


# Location of Controls (continued)

## Rear View of DECK

**Bold:** VCR Function *Italic:* DVD Function  
**Bold Italic:** VCR and DVD Functions

### AC Power Plug

- While plugged into an AC outlet, this DECK consumes 4 W of electrical power in off mode.

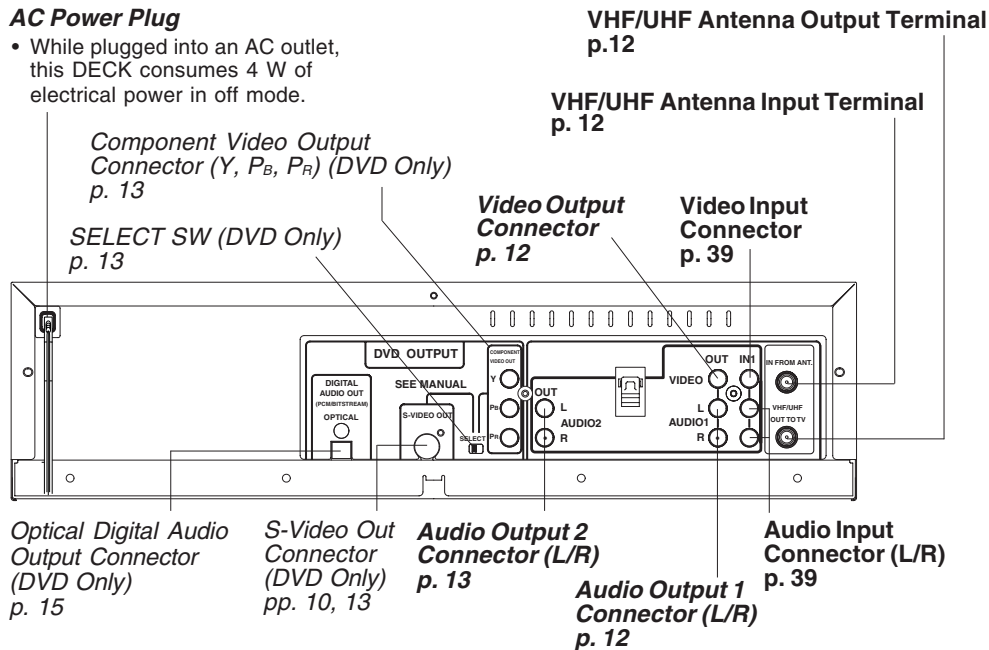

The following table shows the status of the output jacks when in VCR or DVD mode.

	<b>Video Output Audio Out 1 Audio Out 2</b>	<i>Component Video Output</i>	<i>S-VIDEO OUT</i>
<b>VCR</b>	YES	N/A	N/A
<b>DVD</b>	YES	YES ← <i>SELECT SW</i> (Switchable) → YES	

- Note** • PROG functions on the remote are not available when using Component Video Output and S-VIDEO OUT. Please set TV to either RF INPUT or VIDEO INPUT, and then press PROG.

### To enjoy PROGRESSIVE SCAN video

- Connect *Component Video Output* to the component video input terminals of a television. (See p. 13.)
- Set the "COMPONENT VIDEO OUT"/"S-VIDEO OUT" *SELECT SWITCH*, in the back of the DECK, to "COMPONENT VIDEO OUT." (See above.)
- When the PROGRESSIVE button is pressed, the ON lamp lights up (see p. 9) and the PROGRESSIVE SCAN signal is output from the *Component Video Output Connector*.


#### Note

- The PROGRESSIVE button can be operated when the DECK is in DVD function mode.
- The screen may shift off-center when using progressive output. Please adjust the screen position if this occurs. (Refer to your TV manual.)
- The unit does not output video signals from the "VIDEO OUT" or "S-VIDEO OUT" terminals when the ON lamp is lit.

# Displays (On Screen & Multi Function)

## On Screen Displays (VCR)

### Function & Channel Displays

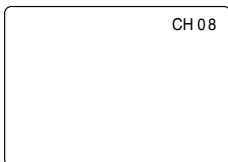

When a function button is pressed, e.g. PLAY, or you change channels, a 5-second display appears.

### Blank Tape/ No Video Signal Indications


Whenever a blank section of a tape comes up in Play mode, or when the selected channel has no broadcast signal with Weak Signal Display Feature (p. 37) set to OFF, the TV screen will turn solid blue.

Initial Setup  
(Connection)

### VCR Status & Clock Displays

To display or remove overlay at right,

→ press DISPLAY.

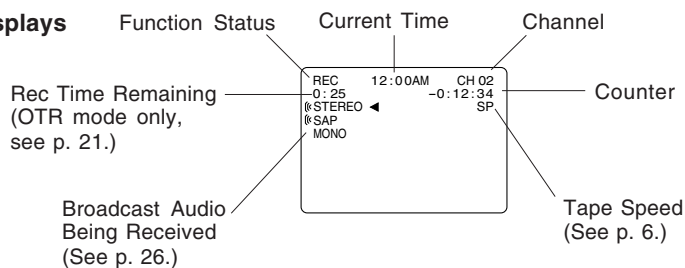

## Multi Function Display

### VCR Indicator

Lights up when the VCR/TV selector is set to VCR.

### Power Indicator

Lights up when power is on.

### VCR mode Indicator

Lights up when DECK is VCR mode.

### VCR REC Indicator

Lights up during recording.

### Hi-Fi Indicator

Lights up when Hi-Fi audio is monitored in Play mode.

### Timer Indicator

Lights up when DECK is set for Timer Recording, or when One Touch Recording (OTR) is used. Flashes when Timer Recording is set, but a tape has not been inserted into DECK and when a power interruption occurs during Timer Programming.

### DVD mode Indicator

Lights up when DECK is DVD mode.

### Clock/ Status/ Channel/ Speed Display

Displays the current time. Briefly displays VCR status when a function button is pressed. Briefly displays the channel number, or "L1" or "L2" when a channel or line input is selected. Briefly displays the recording speed when SPEED is pressed.

### AM

Lights up before noon. PM is not displayed.

### ANGLE Indicator

Lights up when a scene recorded at different angles is detected. See p. 41. (DVD only).




# Connections

## Basic Connections

- If your TV has AUDIO and VIDEO IN terminals, connect them to DECK for higher quality picture and sound.
- You can enjoy stereo sound even if your TV is not stereo by connecting a stereo amplifier to DECK.
- Connect DECK and TV with an RF Coaxial Cable (a) (supplied) or an AV Cable (b) (not supplied) as shown in the figure below.

■ DSS Receiver → DECK → TV    ■ DECK → TV    ■ Cable Box → DECK → TV

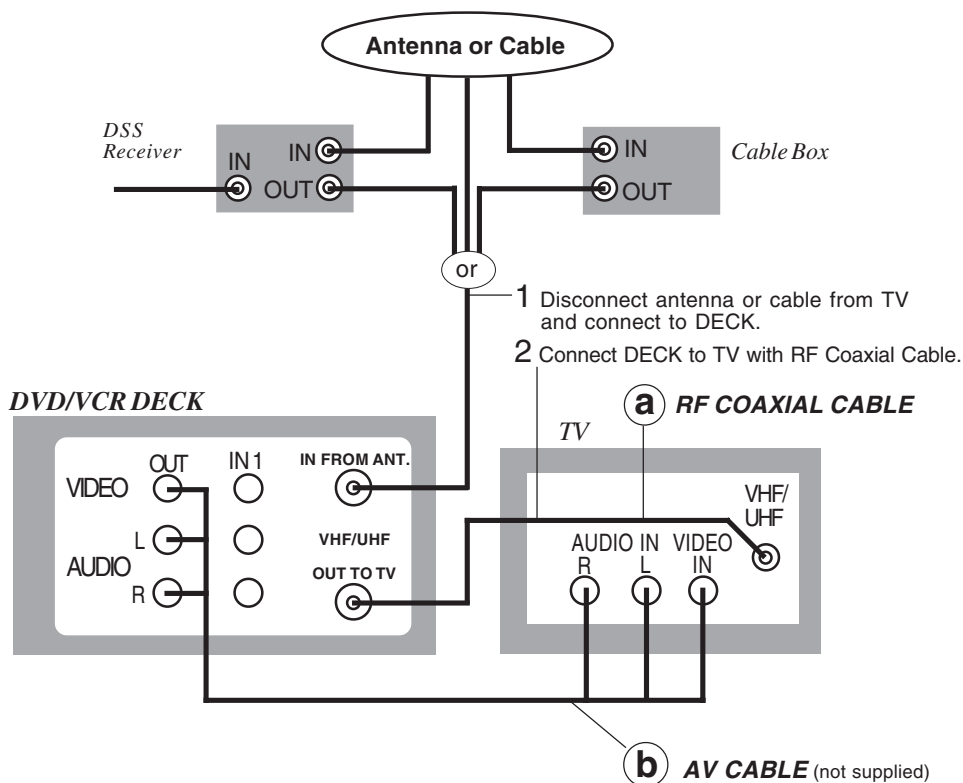


**WARNING**  
When using "Nut type" RF coaxial cables, tighten with fingers only. Overtightening may damage terminals.


**Note to CABLE system installer**  
This reminder is provided to call the CABLE system installer's attention to Article 820-40 of the NEC in USA (and to the Canadian Electrical Code in Canada) that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

## Other Connections

### With a Cable Box (DECK → Cable Box → TV)

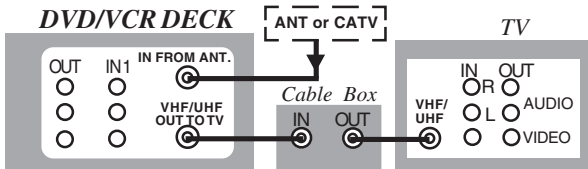

### Connect With Two Cable Boxes

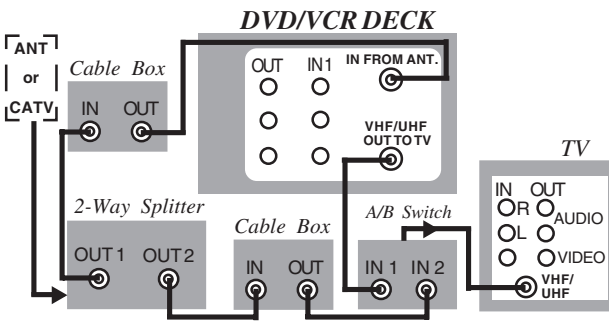

#### You Can

- view any (including scrambled) channel.
- use Remote Control to select channels without using Multi-brand control feature.

#### You Cannot

- record scrambled channels.

#### You Can

- record and view both scrambled and unscrambled channels if additional equipment is added. This connection requires: two converter boxes, an A/B switch, and a 2-way splitter.

#### You Cannot

- view channel other than the one selected for any type of recording.
- do a Timer recording of a channel unless you select it on the Cable Box.

Initial Setup  
(Connection)

## Connections For DVD Only

① Connect AUDIO OUT2 (L, R) to the AUDIO IN (L, R) of the TV. (audio input for COMPONENT or S-VIDEO mode).

② If your TV has COMPONENT VIDEO INPUT, set SELECT SW to COMPONENT VIDEO OUT. If your TV does not have COMPONENT VIDEO INPUT but has S-VIDEO INPUT, set SELECT SW to S-VIDEO OUT.


**Note** • The picture will not be displayed if the SELECT SW is not set to the correct video output.

③ When in DVD mode, set your TV to either COMPONENT VIDEO IN or S-VIDEO IN.

**Notes** • You can watch DVDs through the S-VIDEO or COMPONENT VIDEO, VHF/UHF OUT TO TV, and VIDEO OUT connections to your TV. The VCR and TUNER pictures are available only from the VIDEO OUT and VHF/UHF OUT TO TV connections to your TV.

• PROG functions on the remote are not available when using S-VIDEO OUT and COMPONENT Video Output. Please set TV to either RF INPUT or VIDEO INPUT, and then press PROG.

• TV must have capability to accept and display a progressive scan signal to use PROGRESSIVE mode. Consult your TV operating instructions.

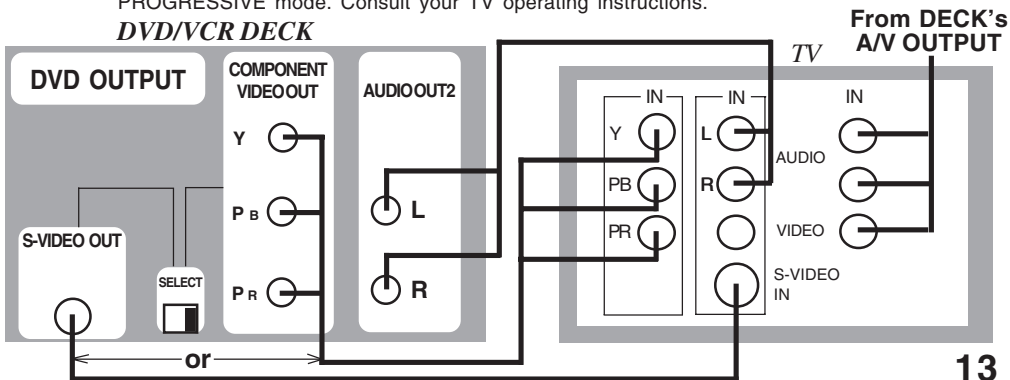

13


# Connections (continued)

## Audio Connections

### ✓ Ready Checklist

- Turn down the volume, then turn DECK, as well as other equipment to be connected, off before proceeding with connection.
- Do not block ventilation holes of any of the equipment and arrange them so that air can circulate freely.
- Read through the instructions before connecting other equipment.
- Ensure that you observe the color coding when connecting audio and video cables.

### ■ DECK → Amplifier → Speaker

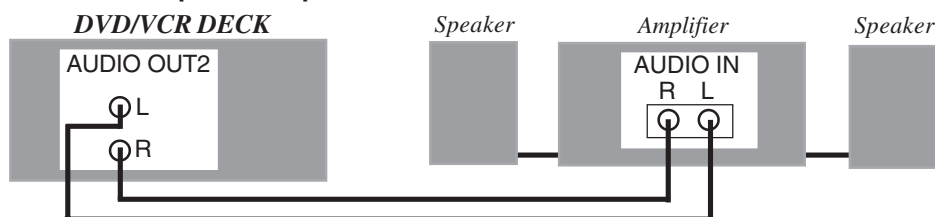

### Enjoying digital audio output from the digital audio output connector

#### Notes on audio output from the optical digital audio output connector

Disc	Sound recording format	Optical digital audio output from connector
DVD	Dolby Digital	Dolby Digital bitstream (1-5.1 ch) or OFF (no output)*1
	Linear PCM (48/96 kHz 16/20/24bit)	Linear PCM (2ch) (48 kHz sampling/16 bit only)*2 or no output*1
	dts	Bitstream or no output*1
Video CD	MPEG 1	PCM (44.1 kHz sampling)
CD	Linear PCM	Linear PCM (44.1 kHz sampling)
MP3	MP3	Linear PCM (It depends on the MP3 file)

\*1 The type of audio output from the connector can be selected by the Settings for DVD Operation. (See p. 50.)

\*2 Sound having 96 kHz sampling is converted into 48 kHz sampling when it is output from the DECK's optical digital audio output connector.

#### For your reference:


- Dolby Digital is a digital sound compression technique developed by the Dolby Laboratories Licensing Corporation. Supporting 5.1-channel surround sound, as well as stereo (2-channel) sound, this technique enables a large quantity of sound data to be efficiently recorded on a disc.
- Linear PCM is a signal recording format used in CDs. While CDs are recorded in 44.1 kHz/16 bit, DVDs are recorded in 48 kHz/16 bit up to 96 kHz/24 bit.
- If you have a Dolby Pro Logic Surround decoder, you will obtain the full benefit of Pro Logic from the same DVD movies that provide full 5.1 channel Dolby Digital soundtracks, as well as from titles with the Dolby Surround mark. For information on Panasonic or Technics Dolby Pro Logic Surround Sound Decoders please contact your local dealer.

Manufactured under license from Dolby Laboratories.  
 "Dolby," "Pro Logic" and the double-D symbol are trademarks of Dolby Laboratories.  
 Confidential Unpublished Works. © 1992-1997 Dolby Laboratories, Inc. All rights reserved.

■ DECK → Dolby Digital Decoder → Amplifier → Speaker  
or

DECK → dts (digital theater systems) Decoder → Amplifier → Speaker

When DVDs recorded in Dolby Digital or dts are played, Dolby Digital bitstream or dts bitstream is output from the DECK OPTICAL digital audio output connector. When DECK is connected to a Dolby Digital decoder or dts decoder, you can enjoy theater-quality audio in your home. [An optical digital audio cable (optional) is required when an optional Dolby Digital decoder or dts decoder is used.]

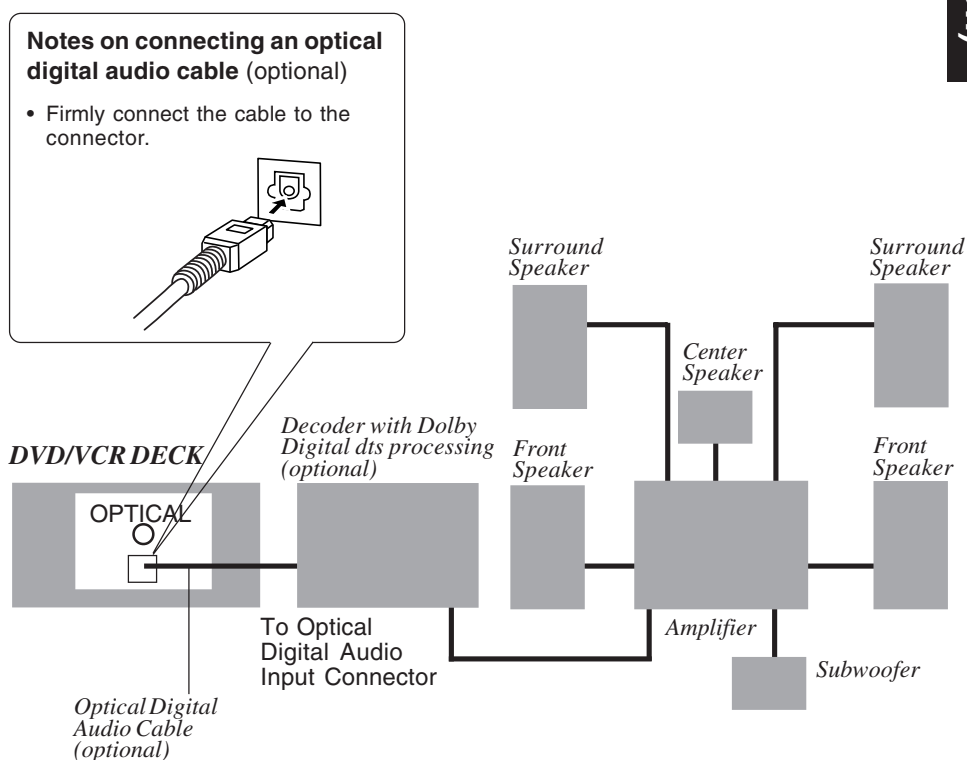

**Caution for optical digital audio output connector:**

- When connecting an amplifier (with an optical digital input connector) which does not contain the Dolby Digital or dts decoder, be sure to select "OFF" at "Dolby Digital" and "OFF" at "dts" of the Settings for DVD Operation "AUDIO OUTPUT" (see p. 50). Otherwise, any attempt to play DVDs may cause such a high level of noise that it may be harmful to your ears and damage your speakers.
  - When a dts decoder is connected, please select "Bitstream" at "dts" of the Settings for DVD Operation "AUDIO OUTPUT". If "OFF" is selected, there will be no sound. (See p. 50).
  - Video CDs and CDs can be played as usual.
- Note:**
- Some dts decoders which do not support DVD-dts interface may not work properly with DECK.


# Initial Setup for Basic Connections (Ready to Play)

## Before doing Initial Setup



- 1 Turn TV on.
- 2 See connections (a) RF Coaxial Cable Connection and (b) AV Cable Connection on p. 12.  
<RF Coaxial Cable Connection>  
Set TV to **channel 3**.  
<AV Cable Connection>  
Set TV to **VIDEO**.
- 3 [DECK → TV]
  - Go to “Doing Initial Setup (Ready to Play).” (See below.)[Cable Box → DECK → TV], [DSS → DECK → TV]
  - Turn on Cable Box and set it to your Public Broadcasting Station (PBS) channel in your time zone.
  - If you use a DSS Receiver, it must be turned off.

## Doing Initial Setup (Ready to Play)

- 1 Press VCR on remote for VCR mode.
- 2 Plug DECK Power Cord into AC wall outlet. DECK comes on and auto channel and clock set starts.
  - If screen below does not appear, check DECK - TV connection and, if TV is tuned to channel 3, try switching it to channel 4.
  - To change VCR's output channel, please refer to “VCR's Output Channel” on p. 19.

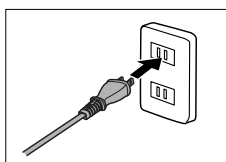

 Plugging the AC Power Plug into an AC outlet

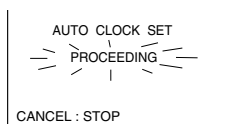


*Continued on next page...*




**\*Important:** If a remote control button does not work when pressed, press the VCR button on the remote and try the button again.


**3** Settings are made automatically. When setup is done, this screen appears.

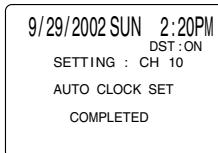

If "AUTO CLOCK SET IS INCOMPLETE" appears, manually set clock. See below.

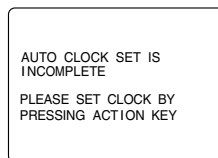


**Initial Setup (Connection)**

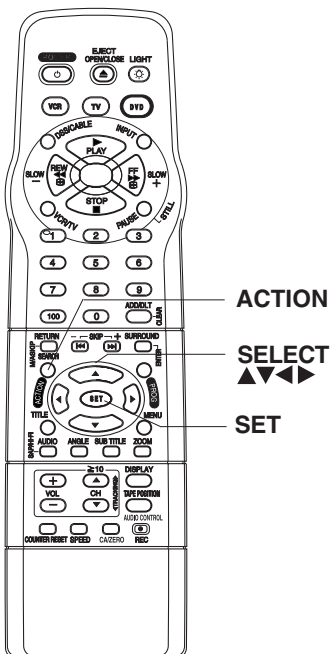


**Manual Clock Set**

If Auto Clock Set was incomplete.

**1** Press ACTION\* on remote to display CLOCK screen.

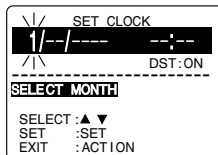

**2** Press ▲▼ to select the month and SET to set. In the same manner, select and set the date, year, time, and DST (Daylight Saving Time).

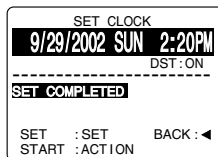


**3** Press ACTION to start clock and exit.

# Reset Language, Channels, Clock

# VCR's

## 1

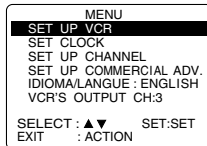


Press **ACTION\*** to display MENU.

- PROGRAM functions are not available when using COMPONENT Video Output and S-VIDEO OUT. Please set TV to either RF INPUT or VIDEO INPUT, and then press PROGRAM.


## 2

### Language


- Press **▲▼** to select language item.

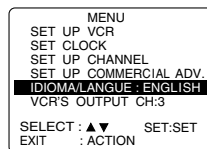


- Press **SET** repeatedly.

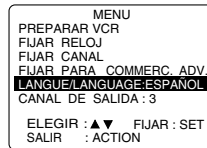

For Spanish

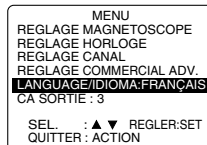

For French

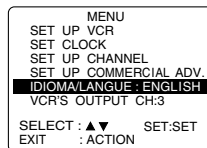


For English


- Press **ACTION** to exit.

### Channels

- Press **▲▼** to select "SET UP CHANNEL," and press **SET**.

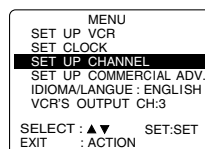


- Press **▲▼** to select "ANTENNA," then press **SET** to set your antenna system ("TV" or "CABLE.")

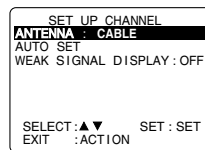

- Press **▲▼** to select "AUTO SET," then press **SET**.


- If you use a Cable Box, set it to the PBS channel in your time zone.

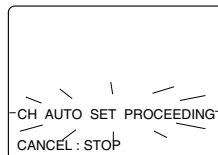


- After Channel Auto Set is finished, Auto Clock Set will be performed.

### Clock


- Press **▲▼** to select "SET CLOCK," and press **SET**.

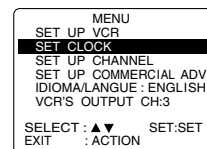

- Press **▲▼** to select "MANUAL," and press **SET**. (For Auto Clock Set, select "AUTO CLOCK SET.")

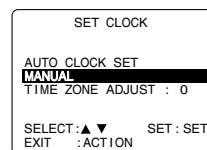

("TIME ZONE ADJUST" appears only when auto clock is set.)

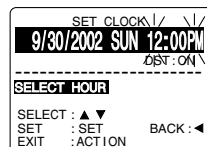

- Press **▲▼** and **◀** to select, then set the date, time, and DST (Daylight Saving Time).

- Press **ACTION** to start Clock and exit this mode.

18

For assistance, please call : 1-800-211-PANA(7262) or send e-mail to : [consumerproducts@panasonic.com](mailto:consumerproducts@panasonic.com)


# VCR's Output Channel

**\*Important:** If a remote control button does not work when pressed, press the VCR button on the remote and try the button again.


## Time Zone Adjust

(Only when Auto Clock is set.)

- 1) Press **▲▼** to select "SET CLOCK," and press **SET**.

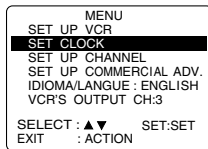

- 2) Press **▲▼** to select "TIME ZONE ADJUST,"

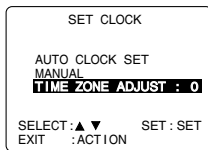


and press **SET** to subtract or add hour(s) as necessary.


- 3) Press **ACTION** twice.
  - "TIME ZONE ADJUST" returns to "0" if clock is set manually.

## VCR's Output Channel


- 1) Press **▲▼** to select "VCR'S OUTPUT CH.," and press **SET**.

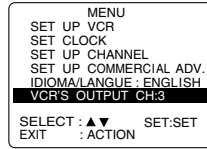

 
- 2) Press **SET**.



 
- 3) Press **ACTION**.



↓ After 3 seconds

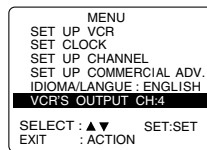


- To Make Corrections, repeat steps 1) ~ 3).

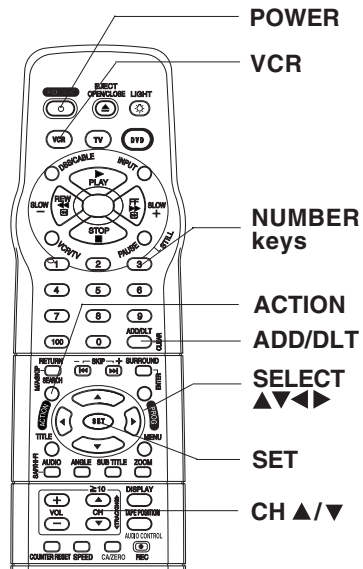


Basic Operation

## Add or Delete a Channel

 To add channel:  
Select channel with **NUMBER keys** and press **ADD/DLT**.



 To delete channel:  
Select channel with **CH ▲/▼** or **NUMBER keys** and press **ADD/DLT**.



## DST (Daylight Saving Time)

DECK auto adjusts clock for DST. (p. 17.)

**Spring (First Sunday in April)**  
DST:ON → Sets clock ahead one hour.

**Autumn (Last Sunday in October)**  
DST:ON → Turns clock back one hour.

- If your area does not observe Daylight Saving Time, select DST:OFF.
- Keep these time changes in mind when programming DECK for timer recordings.

# Playback/ Record on a Tape

## ✓ Ready Checklist

- All connections has been made (pp. 12 ~ 15).
- TV and DECK are plugged in.
- TV is on and tuned to CH 3, 4, or VIDEO.
- Remote is in VCR mode. (Press VCR.)

### Playback a Tape

#### 1 Insert a tape.

- DECK power comes on.  
The VCR mode and "VCR" indicator light up on Multi Function Display.

#### 2 Press PLAY\* to play a tape.

- If tape has no rec. tab (p. 6), auto play begins.

### Special Features During Play

#### ■ Forward/Reverse Scene Search

- Press FF/SLOW+ or REW/SLOW-.
- Press PLAY to release.

After search has begun, each additional press of FF or REW changes speed as shown below.

[SLP] : Approx. 21X ↔ Approx. 9X

[LP] : Approx. 9X ↔ Approx. 7X

[SP] : Approx. 7X ↔ Approx. 3X

If at 21X, 9X, or 7X speed the picture is interrupted, change speed to 9X, 7X, or 3X.

#### Notes

- Picture interruption may occur with some TVs.
- FF and REW search speed may vary depending on current tape position.

#### ■ Still (Freeze) Picture

- Press PAUSE/STILL.
- Press PLAY to release.

#### ■ Frame by Frame Picture

- Press PAUSE/STILL in Still mode.
- Press PLAY to release.


#### ■ Slow Motion Picture

- Press FF/SLOW+ (increase speed) or REW/SLOW- (decrease speed) in Still mode.
- Press PLAY to release.

#### 3 Press STOP to stop a tape.

- Press REW/SLOW- or FF/SLOW+ in Stop mode to rewind or fast forward a tape.

- Press EJECT on remote, or STOP/EJECT on DECK to eject a tape.

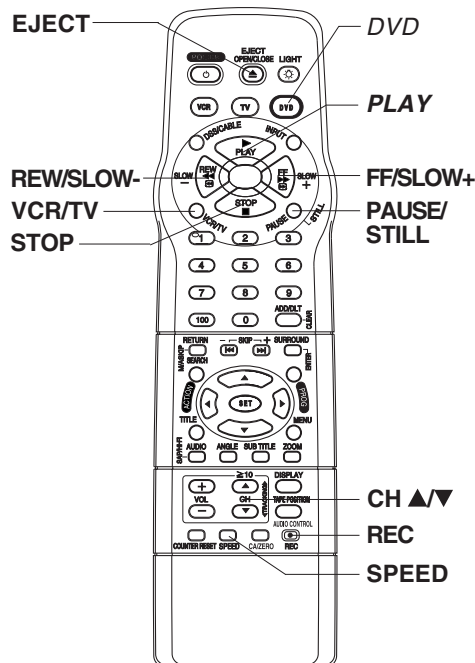


#### Notes

- These features work best in SP or SLP mode.
- The sound will be muted.
- To reduce picture noise, see "Manual Tracking Control" on p. 6.
- After DECK is in Still or Slow mode for 3 minutes, it will switch to Stop mode automatically to protect the tape and the video head.

### Playback using DECK buttons

 - 2 Press PLAY. 1 Insert a tape.



Multi Function Display

- Press STOP/EJECT to stop and/ or eject a tape.


**\*Important:** If a remote control button does not work when pressed, press the VCR button on the remote and try the button again.

### Record on a Tape

- 1 Insert a tape with a record tab (p. 6).**
  - DECK power comes on.
  - The VCR mode and "VCR" indicator light up on Multi Function Display.
- 2 Press CH ▲▼, or NUMBER keys** to select the channel.
  - For "LINE" input, see p. 39.
  - If channel is over 100, press 100 key then press the remaining 2 digits.
- 3 Press SPEED** to select the record speed (p. 6).
  - SP = Standard Play      LP = Long Play
  - SLP = Super Long Play
  - Speed appears on-screen and on Multi Function Display.
- 4 Press REC** to start recording.
  - (The VCR REC indicator lights up on Multi Function Display),
  - To edit out unwanted scenes, press PAUSE/STILL to pause, and again to resume recording.
  - You cannot view another channel during recording.
- 5 Press STOP** to stop recording.


This video recorder, equipped with HQ (High Quality) system, is compatible with existing VHS equipment. Only use tapes with the **VHS** mark. Only tapes tested and inspected for use in 2, 4, 6, and 8 hour machines are recommended.

**Note**  
Remove loose or peeling labels from tapes to prevent tape jam.

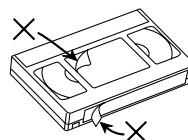

Basic Operation

 
- **One Touch Recording** (recording in progress),
  - Press REC repeatedly to set the recording length (30 min. ~ 4 hours).
  - DECK shuts off after the preset record length.
- **Record one station, watch another,**
  - press VCR/TV ("VCR" goes out on Multi Function Display),
  - select channels at TV (recording continues).
- **Select Channels at DECK** (In STOP or REC. PAUSE mode),
  - press VCR/TV ("VCR" lights up on Multi Function Display),
  - select channels at DECK.
- **Play a disc while recording a tape.**
  - insert a disc during recording,
  - press DVD, and then press PLAY.



### Notes

- It is not possible to record from DVD/ Video CD/ CD to VHS tape using DECK.
- Watching one channel and recording another is not possible when using Cable Box or DSS Receiver.
- After 5 minutes in Pause mode, DECK stops to protect a tape and video heads.



### Record using DECK buttons

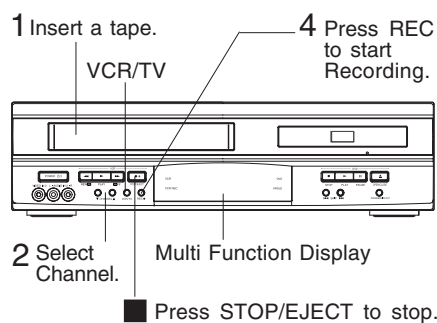

# Basic DVD Operation

## ✓ Ready Checklist

- All connections are made. (pp. 12 ~ 15)
- DECK is plugged in.
- If DECK is connected to an audio amplifier, turn the stereo system's power on.

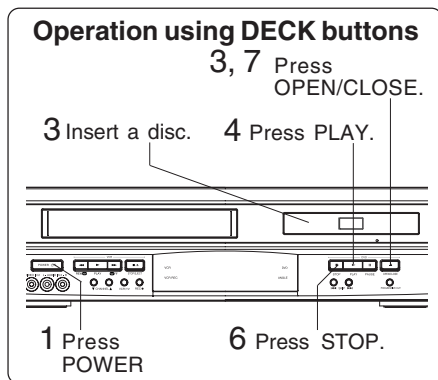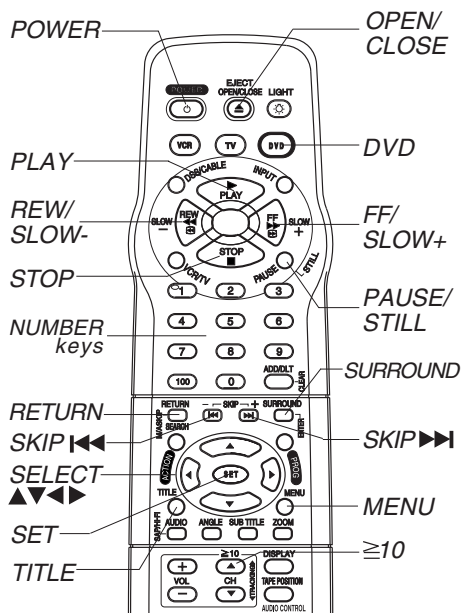


- \*1 Interactive DVD...  
May include multiple camera angles, stories, etc.
- \*2 Video CD with playback control...  
Particular scenes or information can be interactively selected from a menu that appears on the screen.

**1** Press **POWER\*** on the remote or DECK.


**2** Press **DVD** to select DVD mode.  
• If a disc is already inserted, go to step 4. (Depending on the disc, playback may start automatically.)

**3** Press **OPEN/CLOSE**, and then place a disc into the disc tray.

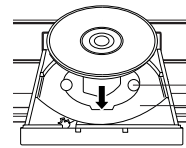


- Hold disc by its edges only (p. 4) with printed side up and use guides to place into tray.
- Use **1** 3" (8 cm) or **2** 5" (12 cm) disc.

 **4** Press **PLAY** to start playing. Disc tray closes automatically.




- You may also close tray by pressing **OPEN/CLOSE**.
- Data reading time differs with each disc.

<Example>

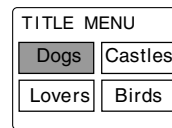

If an interactive DVD\*1 or a Video CD with playback control\*2 is used and TITLE MENU appears, go to step 5.

**5** Press **▲▼◀▶** or **NUMBER keys** (see below) to select title, and press **SET** to play.

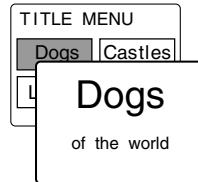

<Example>

Using **NUMBER keys** starts playing automatically.

<Example> 1 digit number 1...1  
2 digit number 12...≥10 1 2  
3 digit number 123...100 1 2 3

Press **SKIP ▶▶** or **◀◀** to go to next or previous menu screen.

- SKIP function not available with all discs.
- Please refer to disc jacket for operation information.

To return to menu (play stops)

Press **TITLE**, **MENU**, or **RETURN**. (DVD)  
Press **RETURN**. (Video CD)

**6** Press **STOP** to stop playing.

**7** Press **OPEN/CLOSE** to eject the disc.

22

For assistance, please call : 1-800-211-PANA(7262) or send e-mail to : [consumerproducts@panasonic.com](mailto:consumerproducts@panasonic.com)

**\*Important:** If a remote control button does not work when pressed, press the DVD button on the remote and try the button again.

### ■ Forward/Reverse Scene Search

Press **FF/SLOW+** or **REW/SLOW-** during play.


Press **PLAY** to release.

- Starting forward/reverse search during play started from menu on Video CDs may recall menu.
- Search speed, slow at first, increases with each additional press of the button up to 5 levels.

### ■ Forward/Reverse Chapter/Track Skip

Press **SKIP ►►** or **◄◄ SKIP** during play. Each press skips a chapter (DVD) or track (Video CD/CD).

- Pressing **◄◄ SKIP** once midway through a chapter/track returns to the start of that chapter/track. Each additional press skips back one chapter/track.
- Pressing **SKIP ►►** or **◄◄ SKIP** during play started from menu on Video CDs may recall menu.

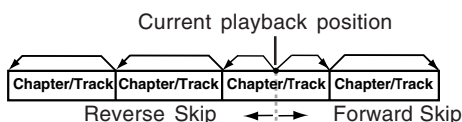

### ■ Still Picture or Pause

Press **PAUSE/STILL** during play.

Press **PLAY** to release.

- **DVD/Video CD** : DECK will enter still picture mode.
- **CD** : DECK will enter pause mode.

### ■ Frame by Frame Picture

(DVD/Video CD)

Press **PAUSE/STILL** in still mode.


Press **PLAY** to release.

- Each press advances picture one frame.
- Hold button down for consecutive frame advance.
- Whether pictures are advanced by "FRAME" or "FIELD" is selected automatically. (See p. 51)


### ■ Slow Motion Picture (DVD/Video CD)

Press **FF/SLOW+** or **REW/SLOW-** in still mode.

Press **PLAY** to release.

- Slow motion speed, slow at first, is increased with each additional press of the button up to 5 levels.
- Reverse slow motion is not available for Video CDs.
- When  appears on the screen while a button is being operated, it means that the corresponding operation is prohibited by DECK or the disc.

### Surround Sound System

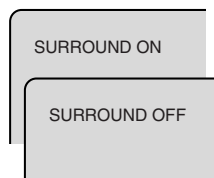

Press **SURROUND** to set Surround sound.

To cancel, press **SURROUND**.

#### Note

- Surround sound effects is available in DVD mode only.

### Resume Function

DECK memorizes the point where STOP is pressed (▶ flashes on screen).

Press **PLAY** to resume play from this point. Pressing **STOP** again or opening the tray cancels RESUME, however, RESUME is not canceled when power is turned off and on.

- RESUME works only with discs for which elapsed play time is displayed during play.

### Auto-Power Off Function

Power turns off after DECK has been in Stop mode (DVD) for about 5 minutes.

### Enjoy Video CDs featuring playback control without using menus (Video CDs only)

1. Do steps 1-4 (previous page). When menu appears, press **STOP**.
2. Press **NUMBER keys** to select desired track (play begins).
  - Check disc for track numbers.
  - Press "1" to start at beginning of disc.

To Resume Menu use,

Press **STOP** and press **PLAY**, then the menu will be displayed.

Now, go to step 5 (previous page).

#### Notes


- Please read the disc jacket for operation information.
- If a single sided disc is placed in upside down, "PLEASE CHECK THE DISC, AND FOR STAINS OR SCRATCHES ON DISC" is displayed.
- Remove disc and press DECK POWER off when not in use.
- Disc continues to rotate with menu displayed even after play is done. Press **STOP** to clear menu display when finished with menu.

# Timer Recording


## ✓ Ready Checklist

- All connections are made (pp. 12 ~ 15).
- TV and DECK are plugged in.
- Clock set correctly.
- Tape has rec.tab. (p. 6)
- Remote is in VCR mode. (Press VCR.)
- Sufficient tape remaining for rec time.

### 1 Press PROG\* to display Program.

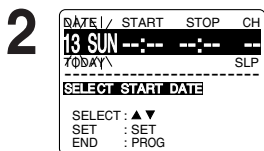

#### Example Today


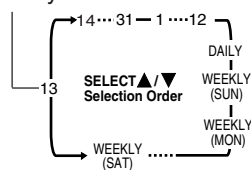


1) To set record DATE, press ▲▼ to select: 1~31= one time, or DAILY= MON~ FRI, or WEEKLY= same time each week and press SET.

• See selection order left.


2) To set remaining items, press ▲▼ to select and press SET to set START/ STOP times, CH(channel) or LINE input (p. 39), and tape speed (SP, LP, SLP).

Press PROG to end programming.

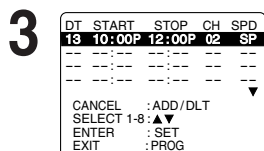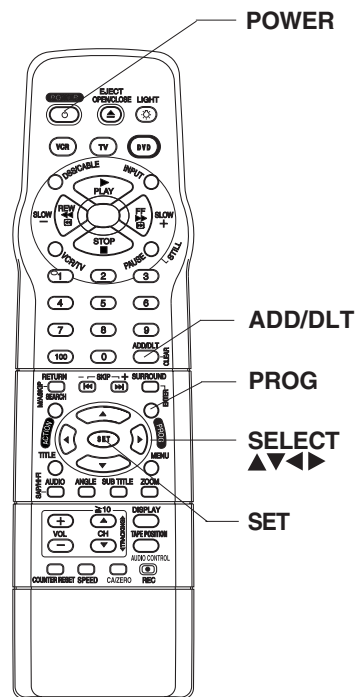

3 To Enter More Programs, press ▲▼ to select and press SET to set an unused program number, and then repeat step 2.

Or Press PROG to exit.

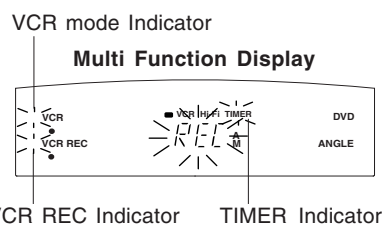

- The "Timer" Indicator lights up on DECK.
- You can do Timer Recording with the power on or off.
- "TIMER REC WILL START SOON" appears on-screen for 2 minutes before Timer Recording starts. If DECK is in DVD mode, no message appears, but the VCR REC Indicator, the VCR mode indicator and "REC" will flash on Multi function Display.




**\*Important:** If a remote control button does not work when pressed, press the VCR button on the remote and try the button again.

## Review, Replace or Clear Program Contents:

(Recording is not in progress)

**1** Press **PROG**  
to display Program List.

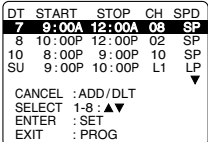**2**  Press **▲▼**  
to select number and  
press **SET**  
to display.


### To cancel a Timer Recording in progress...

Hold down **STOP** on VCR mode for a few seconds to cancel the Timer Recording.

(The "TIMER" Indicator goes out on Multi Function Display.)


- Any future daily or weekly recording will be performed as programmed.

**3** To Replace program...

 Repeat Step 2 (p. 24)  
to set new programs.

or

To Clear program...

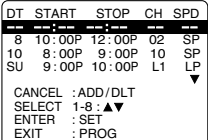 Press **ADD/DLT**.

**4** Press **PROG**  
to end the programming.

### Notes

- If you are using a Cable Box, the VCR's channel for Timer Recording must be set to the Cable Box input channel and Cable Box must be manually set to the desired channel. Cable Box power must be left on.
- 2 minutes before Timer Recording is performed, "PLEASE PREPARE FOR TIMER REC" appears and Timer Indicator flashes.  
Be sure a cassette with record tab is loaded and DECK is in Stop mode.
- If a power interruption occurs while programming the timer, the timer program(s) may be canceled. If "TIMER PROGRAMS WERE LOST DUE TO POWER INTERRUPTION" appears on-screen, please re-enter the timer programs.
- If the start time for Timer Recording comes up during recording and playing back, Timer Recording will not be performed.

### Important notes when using DSS Receiver

- When recording programs via DSS Receiver, DSS Receiver must be left on.
- When recording programs via an antenna or cable, DSS Receiver must be turned off.

VCR  
Operation

# MTS Broadcast/ VHS Hi-Fi Stereo System

## Connection

Make the Audio/Video Connection as shown on pp. 12 ~ 15.

- You can use TV connected to a Stereo amplifier and speakers instead of Stereo TV.

## Receivable Broadcast Types

The following are possible audio broadcast types and on-screen displays.

The signal being received is indicated with an “Ⓒ” mark while the selected audio mode is indicated with an arrow.

To display the broadcast signal being received,

→ press **DISPLAY\***.

### MTS Stereo and SAP broadcast

Multi-channel Television Sound Stereo (main language) and Secondary Audio Program (sub language) broadcasts are being received simultaneously. Select STEREO or SAP audio mode.

```

STOP 12:00AM CH 02
Ⓒ STEREO ◀ 0:00:00 SP
Ⓒ SAP
MONO
    
```

### MTS Stereo broadcast

Multi-channel Television Sound Stereo broadcast. Select STEREO audio mode.

- If stereo broadcast is weak and display flickers, select MONO audio mode for possible better results.

```

STOP 12:00AM CH 02
Ⓒ STEREO ◀ 0:00:00 SP
SAP
MONO
    
```

### SAP broadcast

Secondary Audio Program (sub language) broadcast. Select SAP audio mode for the sub language.

```


STOP 12:00AM CH 02
STEREO
Ⓒ SAP ◀ 0:00:00 SP
MONO
    
```

### MONO broadcast

Normal monaural sound broadcast.

```

STOP 12:00AM CH 02
STEREO
SAP
MONO ◀ 0:00:00 SP
    
```

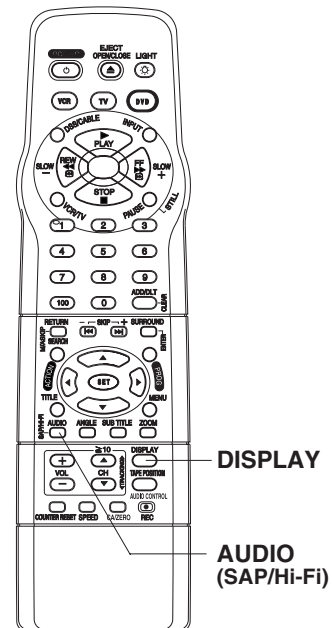

Equipped with **dbx**<sup>®</sup>-TV Noise Reduction for true MTS reproduction. **dbx**<sup>®</sup>-TV Noise Reduction is required for good stereo separation and audio fidelity. **dbx**<sup>®</sup> is a registered trademark, and is licensed by **dbx**<sup>®</sup> Technology Licensing.


**\*Important:** If a remote control button does not work when pressed, press the VCR button on the remote and try the button again.

## Audio Mode for Recording

**1** Press **AUDIO (SAP/Hi-Fi)** to display audio mode.

(Display disappears after 5 seconds.)

**2**

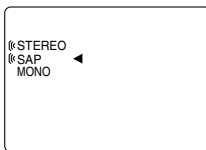

Press **AUDIO (SAP/Hi-Fi)** repeatedly to select desired mode.

- Refer to “Receivable Broadcast Types” on p. 26.
- Arrow indicates selection.


**3** Do a recording.  
See p. 21.

## Audio Mode for Playback

**1** Start playback.  
See p. 20.

**2** Press **AUDIO (SAP/Hi-Fi)** to display audio mode.

**3**

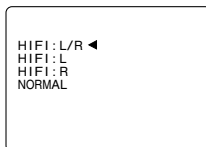

Press **AUDIO (SAP/Hi-Fi)** repeatedly to select desired mode.

- Select “HI-FI (L/R)” or “HI-FI (L)” or “HI-FI (R)” to listen to stereo recordings in stereo sound.  
Select “NORMAL” for monaural sound.
- Display disappears after 5 seconds.
- Arrow indicates selection.

### Notes

- Only tapes recorded in Hi-Fi stereo will playback with true stereo sound. Standard stereo tapes will playback in monaural sound.
- To listen to Hi-Fi stereo playback, the DECK AUDIO (L/R) jacks must be connected to a stereo TV or an external stereo amplifier and speakers. (See pp. 12, 14, 15.)
- If tracking is adjusted during playback, Hi-Fi audio may revert to normal audio.
- Hi-Fi and normal audio playback volume level may differ.

# Multi-Brand Control Feature

## Multi-Brand Control Setup

The Remote Control can be set to control some TV and Cable Box/DSS functions.

### 1 Find your TV and Cable Box/DSS Receiver Brand Code Number on the following page.

- 2**
- **Setup for TV control,**
    - hold down TV button,
    - enter code with NUMBER keys.

- **Setup for Cable or DSS control,**
  - hold down DSS/CABLE button,
  - enter code with NUMBER keys.
  - If code number is 100 or greater,
    - e.g., press 1 - 0 - 2 for 102.

- 3 Confirm code entry,**
- press POWER to turn selected unit on or off.
  - See table below for controllable functions in each mode.

- Notes**
- Repeat setup after remote battery replacement.
  - Remote will not control every TV, Cable Box, or DSS made by the manufacturer listed. If you get no response, your particular unit cannot be controlled. There are NO additional codes for the products listed. If your product is not listed, then the remote is not compatible with that product.

## Using Multi-Brand Control

After remote is set up, you can select VCR, DVD, TV, or DSS/CABLE for the desired function.

Press **VCR**, **DVD**, **TV**, or **DSS/CABLE** on the remote. (Table below shows available remote buttons for each mode.)

Unit Mode	DVD/VCR	TV	CABLE/ DSS
DVD/VCR	All	VOL +/-	_____
TV	<b>EJECT/OPEN/CLOSE*</b> , <b>DISPLAY, PLAY, STOP,</b> <b>FF/SLOW+, REW/SLOW-</b> , <b>VCR/TV, PAUSE/STILL, SKIP,</b> <b>AUDIO, CA/ZERO,</b>	POWER, INPUT, NUMBER keys, ENTER, CH ▲/▼, VOL +/-	_____
CABLE/ DSS	<b>TAPE POSITION,</b> <b>COUNTER RESET , SPEED,</b> <b>REC</b>	VOL +/-	POWER, ENTER, NUMBER keys (except 100key), CH ▲/▼

\* **Bold: VCR Function**  
*Italic: DVD Function*


**Bold Italic: VCR and DVD Functions**  
Normal: TV, Cable Box or DSS Receiver

### Notes

- Not all functions listed may be controllable.
- In TV or DSS/CABLE mode, it may be necessary to press ENTER after pressing NUMBER keys for channel selection.

**28**

For assistance, please call : 1-800-211-PANA(7262) or send e-mail to : [consumerproducts@panasonic.com](mailto:consumerproducts@panasonic.com)

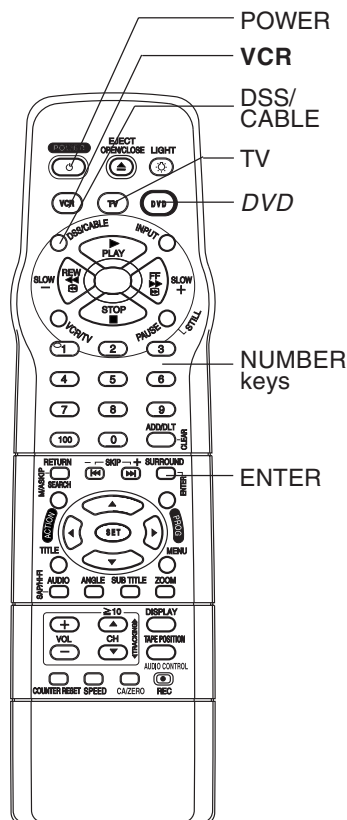

### TV Brand Code Numbers

Panasonic .....	01, 02	Sylvania .....	05	JVC .....	11
Quasar .....	01, 02	Sharp .....	06, 07	Hitachi .....	12
RCA .....	03	Sony .....	08	Mitsubishi .....	07, 13
GE .....	03	Toshiba .....	09	Samsung .....	14
Zenith .....	04	Sanyo .....	10	Gold Star .....	15, 16, 17
Magnavox .....	05	Fisher .....	10		

### Cable Box Brand Code Numbers

Archer .....	44, 06, 01, 120, 05, 63, 126	Oak Sigma .....	46, 11, 129, 101
Cableview .....	29, 09, 01, 63, 120, 44, 42, 30 52, 04, 124, 126	Panasonic .....	17, 16, 08, 87, 109
Citizen .....	44, 52, 30, 63, 42, 04, 124, 126	Philips .....	23, 24, 20, 13, 07, 50, 128, 129
Curtis .....	08, 09, 25, 61, 53, 87	Pioneer .....	06, 05, 12
Century .....	44, 51, 75, 59, 126	Pulsar .....	04, 42, 63, 44, 30, 52, 124, 126
Cabletenna .....	29, 09, 01, 63, 120, 44, 126	Quest .....	06, 05, 12
Cable Cinema .....	29, 09, 01, 63, 120, 44, 126	Radio Shack .....	44, 51, 75, 59, 126
Diamond .....	29, 09, 01, 63, 120, 44, 126	RCA .....	17, 16, 08, 87, 109
Eagle .....	62, 40, 22, 13, 58, 20, 26, 107	Realistic .....	44, 51, 75, 59, 126
Eastern .....	28, 29, 130	Recoton .....	44, 51, 75, 59, 126
Explorer .....	08, 09, 25, 61, 53, 87	Regal .....	41, 14, 15, 28, 102, 104, 103, 130
Gemini .....	30, 04, 124	Regency .....	28, 29, 130
General Electric .....	01, 57, 120	Rembrandt .....	44, 42, 63, 29, 01, 32, 39, 120, 126
General Instruments .	01, 84, 83, 34, 03, 02, 04, 55 65, 66, 67, 68, 120, 106, 121, 122, 115, 117, 118, 124	Samsung .....	42, 06, 32, 05, 40
Gerrard .....	44, 51, 75, 59	Scientific Atlanta .....	08, 09, 25, 61, 53, 87
GC Electronics .....	44, 42, 63, 29, 30, 52, 04 124, 126	Sheritech .....	27
Hamlin .....	41, 14, 15, 28, 102, 104, 103, 130	Signal .....	26, 112
Hitachi .....	31	SL Marx .....	42, 06, 32, 40, 43, 44, 52, 63, 126
Jerrold .....	01, 84, 83, 34, 03, 02, 04, 55, 65, 66 67, 68, 120, 106, 121, 122, 115, 117, 118, 124	Sprucer .....	17, 16, 08, 87, 109
Jasco .....	30, 04, 124	Standard Components .....	32, 39, 42, 44, 126
Macom .....	31	Stargate .....	04, 42, 32, 40, 63, 44, 30, 52, 06 124, 126
Magnavox .....	26, 112	Sylvania .....	19, 18
Matsushita .....	17, 16, 08, 87, 109	Teknika .....	74, 35
Movietime .....	32, 39, 42, 44, 126, 38, 40	Telecaption .....	77, 127
Maestro .....	74, 35	Televue .....	40, 19, 38, 32, 42, 06
NEC .....	40, 19, 38, 32	Texscan .....	19, 18
NSC .....	40, 19, 38, 32	Tocom .....	34, 33, 01, 42, 66, 120
Novavision .....	08, 09, 25, 61, 53, 87	Toshiba .....	36
Next Level .....	01, 84, 83, 34, 03, 02, 04, 55, 65 66, 67, 68, 120, 106, 121, 122	Unika .....	44, 42, 63, 29, 01, 126, 120
Oak .....	46, 11, 129, 101	Universal .....	52, 43, 44, 63, 42, 126
		Viewstar .....	62, 40, 22, 13, 58, 20, 26, 107
		Videoway .....	07, 23, 50, 129
		Vidtek .....	64
		Zenith .....	07, 23, 50, 129

### DSS Brand Code Numbers

Toshiba .....	90	Optimus .....	94, 95
Hitachi/ Hughes .....	91, 99	Panasonic .....	96
Primestar .....	92	ProScan .....	97
Drake .....	93	RCA .....	97
Magnavox .....	94, 95	SONY .....	98, 105
Uniden .....	94, 95		

### Important Notes

- Due to changes in infra-red commands used by manufacturers, some brands have several codes. If your unit does not respond to the first code, please try the next one.
- Some TV, Cable Box and DSS Receiver brands require you to turn on the power manually.

# Tape Operation

## COMMERCIAL ▶▶ ADVANCE®

COMMERCIAL ▶▶ ADVANCE® detects and marks the beginning and end points of commercials on your tape for recordings over 15 minutes in length. When COMMERCIAL ▶▶ ADVANCE® marked tape is played back, the VCR automatically advances through the commercial segments at high speed. You can also set this feature to Manual so as to have more control over the advance process. The effectiveness of this system can vary due to differences in the way television stations broadcast. See page 32 for answers to the most commonly asked questions about this feature.

## COMMERCIAL ▶▶ ADVANCE® Marking

When C/A RECORD: ON, VCR automatically rewinds the tape after a recording has been made and marks the beginning and end of any detected commercial blocks. After marking is done, the tape is returned to the end of recording. Commercials are not erased from the tape.

**1** Press **ACTION\*** to display MENU.

**2**

MENU
SET UP VCR
SET CLOCK
SET UP CHANNEL
SET UP COMMERCIAL ADV.
IDIOMA/LANGUE : ENGLISH
VCR'S OUTPUT CH:3
SELECT : ▲▼      SET : SET
EXIT            : ACTION

Press ▲▼ to select "SET UP COMMERCIAL ADV.," and press **SET** to display.


**3**

SET UP COMMERCIAL ADV.
C/A RECORD : ON
C/A PLAYBACK : AUTO
SELECT : ▲▼      SET : SET
EXIT            : ACTION

Press ▲▼ to select "C/A RECORD," and press **SET** to set "ON" or "OFF".

## ✓ Ready Checklist

- All connections are made.
- One time Setup completed.
- VCR is plugged in.
- TV is turned on and set to CH3, 4 or Video on TV.

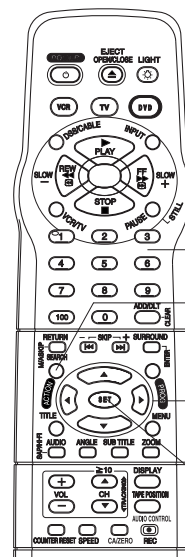

NUMBER keys

ACTION

SELECT

SET

### Note

- When using the timer to record two adjacent shows on the same channel, better accuracy can be obtained by programming each show separately.

**ON** Timer Recording and One Touch recordings are marked automatically.

THE VCR IS WAITING TO MARK COMMERCIALS IN THE PROGRAM YOU RECORDED.
MARKING
NOW            : PRESS 1
LATER         : PRESS 2
CANCEL        : PRESS ACTION

When STOP is pressed during normal recording, Select One of a) or b) or c).

- a) Press 1 key to mark the recording now. "NOW MARKING COMMERCIALS" appears.
- b) Press 2 key to mark the recording later (after the power has been turned off).
- c) Press ACTION to cancel the marking of this recording.

**OFF** The VCR will not mark commercials.

When you are editing or dubbing a tape, or when you do not wish to use this feature, OFF should be selected.

**4** Press **ACTION** twice to return to normal screen.


**30** For assistance, please call : 1-800-211-PANA(7262) or send e-mail to : [consumerproducts@panasonic.com](mailto:consumerproducts@panasonic.com)

**\*Important:** If a remote control button does not work when pressed, press the VCR button on the remote and try the button again.


## COMMERCIAL▶▶**ADVANCE**® Playback

When playing back recording which have been marked using **COMMERCIAL▶▶ADVANCE**® feature, you can either set VCR to automatically advance through marked commercial blocks, or set it so that commercials are only skipped on your command.

**1** Press **ACTION** to display MENU.

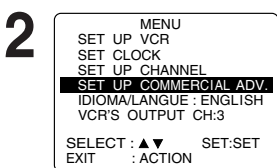

Press ▲▼ to select "SET UP COMMERCIAL ADV.," and press **SET** to display.

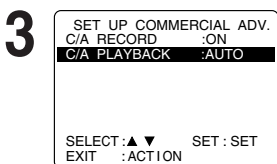

Press ▲▼ to select "C/A PLAYBACK," and press **SET** to set "AUTO" or "MANUAL".



**AUTO** : VCR will automatically advance through marked commercial blocks recorded on the tape and then resume playback.

**MANUAL** : VCR will advance through commercials only when CA/ZERO is pressed. Playback will resume when the end mark of a commercial block is found, or a new recording or blank portion is detected, or after 8 minutes.

**4** Press **ACTION** twice to return to normal screen.

### Notes

- The selection mode in step 3 remains set unless there is a power outage in which case the original factory setting will be restored.
- If playback is started in the middle of a commercial, only a single commercial is shown, or an individual commercial is longer than 1 minute, a commercial may not be skipped. Press FF to quickly advance through the commercial.
- Part of a recorded program may be skipped over if the program portion between commercials is less than 1 minute or there are frequent dark and quiet scenes during the program. To view the portion of tape being incorrectly skipped, press PLAY while the VCR is skipping, reverse the tape to a point just prior to where the skipping began and press PLAY again. This time the group will not be automatically skipped. Automatic skipping will be re-enabled when the end of the marked group is detected.

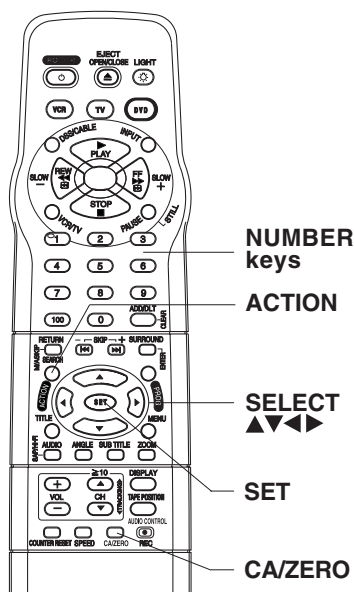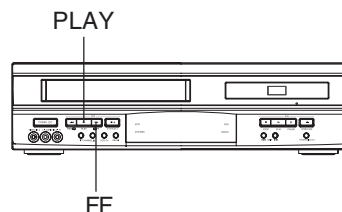

**VCR**  
Operation

**COMMERCIAL▶▶ADVANCE**® and **MOVIE▶▶ADVANCE**® are registered trademarks of SRT, Inc. A Jerry Iggulden invention licensed in association with Arthur D. Little Enterprises, Inc.  
U.S.Pat. No. 5,333,091;  
5,692,093; 5,696,866  
other patents pending

## Tape Operation (continued)

The most commonly asked questions about **COMMERCIAL**↔**ADVANCE**® are answered below.

Question	Answer
How fast does the VCR advance through commercials?	The VCR advances through a 3-minute commercial block in about 8 to 12 seconds if the tape speed is SLP. In SP, it takes about 25 to 35 seconds.
Are commercials advanced through only when I playback a recording?	Yes. The commercials are not marked until after the recording is finished.
Are commercials still recorded on the tape in case I choose to view them sometime?	Yes. By setting the C/A PLAYBACK to MANUAL (see page 31), you can view or advance through commercials as desired.
Does <b>COMMERCIAL</b> ↔ <b>ADVANCE</b> ® work in all recording speeds?	Yes. <b>COMMERCIAL</b> ↔ <b>ADVANCE</b> ® works in SP, LP, and SLP.
Does the VCR advance through commercials each time I playback tapes which were recorded using <b>COMMERCIAL</b> ↔ <b>ADVANCE</b> ®?	Yes. As long as C/A PLAYBACK is set to AUTO (see page 31), the VCR should advance through commercials each time the tape is played back.
After marking commercials, does the VCR stop at the end of the tape, or rewind to the beginning?	The tape stops at the end of the recording so that any additional timer recordings can be performed.
Can I play my <b>COMMERCIAL</b> ↔ <b>ADVANCE</b> ® recordings in non- <b>COMMERCIAL</b> ↔ <b>ADVANCE</b> ® VCRs?	Yes. <b>COMMERCIAL</b> ↔ <b>ADVANCE</b> ® marked recordings will play in non- <b>COMMERCIAL</b> ↔ <b>ADVANCE</b> ® VCRs, but commercials will not be advanced through.
Does the marking process interfere with other programmed recordings?	No. If the interval between 2 or more timer programs is not sufficient to mark the recording, marking will be done after all recordings are complete and the power goes off.
What happens if I cancel the marking in progress so I can use the VCR?	Marking will be resumed when the VCR's power is turned off as long as the tape has not been ejected.
What if part of my program is advanced through along with the commercials?	Please see the 3rd note on page 31.
Additional Notes: <ul style="list-style-type: none"> <li>• Because of the various ways in which commercials are broadcast, the VCR may not be able to recognize all commercials.</li> <li>• If a timer recording is scheduled for the middle of the night, please be aware that the VCR will make some noise as it rewinds and fast forwards the tape while marking commercials.</li> </ul>	

**COMMERCIAL**↔**ADVANCE**® and **MOVIE**↔**ADVANCE**® are registered trademarks of SRT, Inc. A Jerry Iggulden invention licensed in association with Arthur D. Little Enterprises, Inc.

U.S.Pat. No. 5,333,091;  
5,692,093; 5,696,866  
other patents pending



**\*Important:** If a remote control button does not work when pressed, press the VCR button on the remote and try the button again.

## MOVIE **▶▶** ADVANCE®


MOVIE **▶▶** ADVANCE® helps you locate certain parts of prerecorded movies (rented or purchased). The feature works in two ways.

- You can go to the beginning of the movie.
- You can skip from one preview to the next.

MOVIE **▶▶** ADVANCE® works only on tapes recorded in SP speed with the record tab removed.

### 1 Insert a tape without record tab.

### 2 Press SEARCH/ M/A SKIP\* three times to display MOVIE ADVANCE.

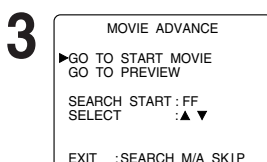


Press **▲▼** to select "GO TO START MOVIE" or "GO TO PREVIEW."

Select "GO TO START MOVIE," if you want to advance directly to beginning of the movie.

→ continue with step 4.

Select "GO TO PREVIEW," if you want to view the first (next) preview.


→ see "To Search for Preview" at right.

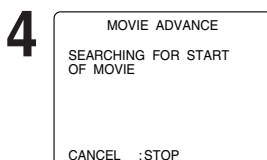

Press **FF** to start searching.

- To cancel, press **STOP**.

### When the movie is found...

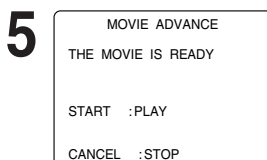


Press **PLAY** to start playback.

- To cancel, press **STOP**.

### ✓ Ready Checklist

- All connections are made.
- One time Setup completed.
- VCR is plugged in.
- TV is turned on and set to CH3, 4 or Video on TV.

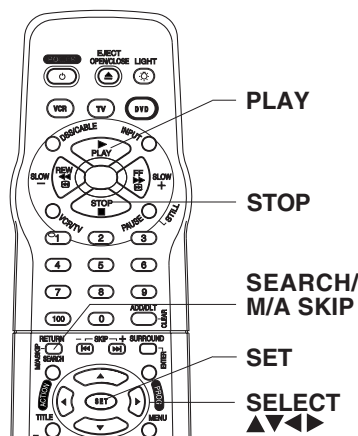

### To Search for Preview.

You can override the operation of MOVIE **▶▶** ADVANCE® SEARCH FOR PREVIEWS mode by pressing SEARCH/ M/A SKIP during tape searching.

MOVIE **▶▶** ADVANCE® works by searching the tape past each preview and then reversing back to the start of the detected preview.

While the tape is reversing back, if SEARCH/ M/A SKIP is pressed, MOVIE **▶▶** ADVANCE® will begin searching for the next preview.

While searching for the next preview, if you see the start of a preview which you wish to watch, press SEARCH/ M/A SKIP and MOVIE **▶▶** ADVANCE® will immediately reverse back to the start of that preview, instead of searching further past the preview start point.

Once the VCR is playing a preview, press SEARCH/ M/A SKIP to advance to the next preview, long commercial or the start of the movie (whichever is next).

### 1 Start preview searching.

1) In step 3 at left, select "GO TO PREVIEW."

2) Press **FF**.

- If you want to playback, press **PLAY**.

When a preview is detected, VCR will start playback.

### 2 Start next preview searching.

Press **SEARCH/ M/A SKIP**.

- To cancel, press **STOP**.

VCR  
Operation

# Tape Operation

## Search System

For each recording, an invisible index mark is placed on the tape. A program index and information are also included for timer recordings. These marks are used to access or scan recordings.

### Index Search

1

```

INDEX SEARCH
ENTER INDEX NUMBER :1
USING 1- 9 KEYS

FORWARD SEARCH :FF
REVERSE SEARCH :REW
NEXT :SEARCH/M/A
EXIT :STOP
    
```

Press **SEARCH/M/A SKIP\*** to display SEARCH in Stop or Play mode, and then press **NUMBER keys** to select recording number.

- To calculate number, see below.

Press **FF/SLOW+** or **REW/SLOW-** on the remote to start search.

2

```

INDEX SEARCH

FORWARD SEARCH :FF
REVERSE SEARCH :REW
    
```

Play begins at search end. To search forward or back 1 index, press **FF/SLOW+** or **REW/SLOW-** on the remote while screen left is displayed (10 sec.).

- To cancel, press **PLAY** or **STOP**.

### To Calculate Index Number

 
#### Example 1:

To go to rec. 2 from rec. 4, enter 3 and press REW.



#### Example 2:

To go to rec. 6 from rec. 2, enter 4 and press FF.



NOTE: ↓ indicates start points of each recording.

#### Note

- If Index Search is started very close to an index mark, that index mark may not be counted in the search.

### Program End Search

Locates end point of recording for continuity.

1

Press **SEARCH/M/A SKIP** twice to display SEARCH in Stop or Play mode.

2

```

PROGRAM END SEARCH

SEARCH START : FF

EXIT :SEARCH
    
```

Press **FF/SLOW+** on the remote to start PROGRAM END SEARCH.

- To cancel, press **PLAY** or **STOP**.

Examples of Program End Search.

Fig. 1

 


Fig. 2


 


Fig. 3

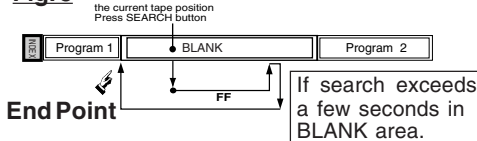

Upon locating end point,

- search continues 7 sec. past end point,
- tape rewinds to 10 sec. before end point,
- tape plays to end point and stops.

#### Note

- If Program End Search is started very close to an index mark, that mark may be skipped over.

34


For assistance, please call : 1-800-211-PANA(7262) or send e-mail to : [consumerproducts@panasonic.com](mailto:consumerproducts@panasonic.com)

**\*Important:** If a remote control button does not work when pressed, press the VCR button on the remote and try the button again.

## Zero Search


To quickly return to a specified tape location.


- 1 Press **DISPLAY** during play to display Counter.

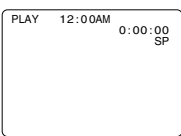2  Press **COUNTER RESET** at desired position to reset to "0:00:00".


- 3 Continue to record, playback etc.

 - 4 Press **STOP**.

- 5  Press **CA/ZERO** in Stop mode to start Zero Search.

  
STOP 12:31AM CH 02 0:00:00 SP

- DECK will go into FF or REW mode and stop at the last point the Counter was set to 0:00:00.

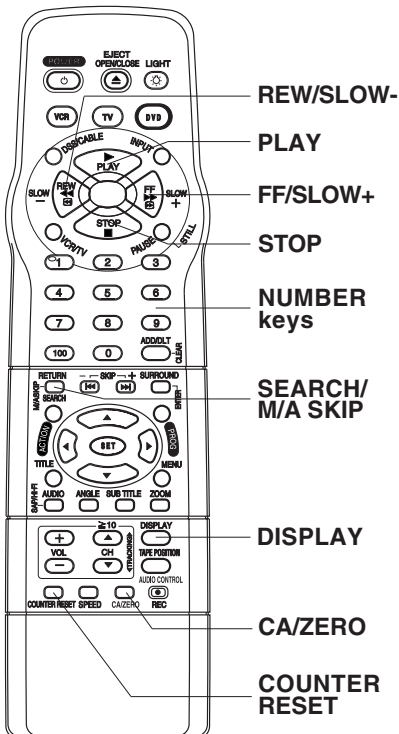

## Auto Operation Functions

### ■ Auto Play

Insert a tape → Power comes on,  
→ Play starts if there is no record tab  
(see p. 6).

### ■ Auto Rewind

Play  
Fast Forward } → Tape end → Rewind

### ■ Play Auto Eject

(Repeat Play must be off)

Play → Tape end → Rewind

→ Tape ejects if there is no record tab

VCR  
Operation


# Tape Operation (continued)

## Repeat Play


Set to playback a recording over and over.

**1** Press **ACTION\*** to display MENU.

**2** Press **▲▼** to select "SET UP VCR," and press **SET**.

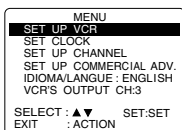

**3** Press **▲▼** to select "REPEAT PLAY," and press **SET** to set "ON" or "OFF."

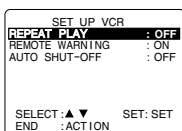


- Play repeats at tape end or if unrecorded portion over 30 sec. is detected.

**4** Press **ACTION** twice to return to normal screen.


### Note

- For repeat play in DVD mode, see page 46.

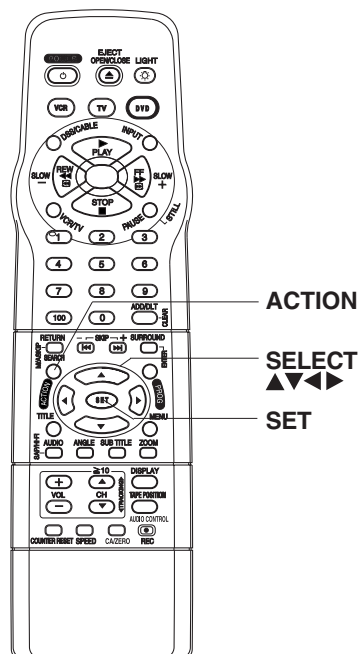

# Special VCR Features


**\*Important:** If a remote control button does not work when pressed, press the VCR button on the remote and try the button again.

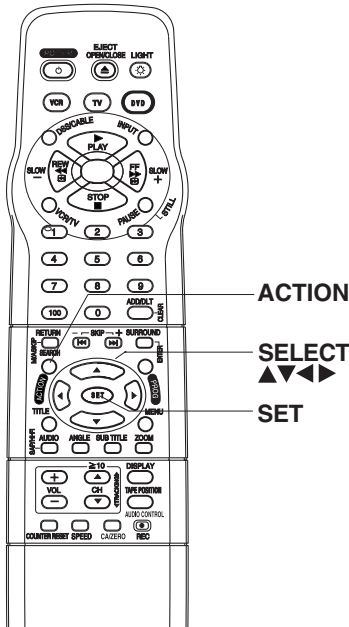


## VCR Lock Feature

When set to ON, all operations except for timer record and tape eject are prohibited. Useful for households with small children.

 
**To turn on, hold down REC on DECK in Stop mode with no tape inserted for 7 seconds.** (Please ignore "NO CASSETTE" warning.)



**To turn off, repeat above.**

 


- VCR Lock cancels in 24 hours if clock is set.

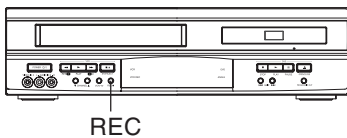


## Weak Signal Display Feature

When "ON," picture is displayed regardless of signal strength.

**1 Press ACTION** to display MENU.

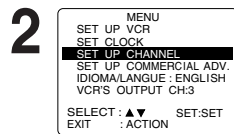

**Press ▲▼** to select "SET UP CHANNEL," and **press SET**.

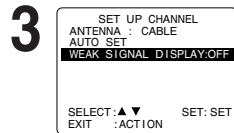

**Press ▲▼** to select "WEAK SIGNAL DISPLAY," and **press SET** to set "ON" or "OFF."


- ON: Picture is displayed regardless of signal condition, and may not always be clearly visible.
- OFF: Screen turns solid blue when signal is weak or non-existent.
- Selecting ON has no effect on connected equipment with blue back feature.

**4 Press ACTION twice** to return to normal screen.


## Auto Shut-Off Feature

The power shuts off at a preset time.


**1 Press ACTION** to display MENU.

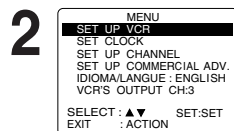

**Press ▲▼** to select "SET UP VCR," and **press SET**.

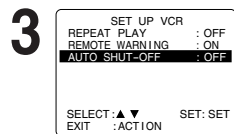

 **Press ▲▼** to select "AUTO SHUT-OFF." **Press SET** repeatedly to change shutoff time as shown below.



**4 Press ACTION twice** to return to normal screen.

### Note

- The shut-off countdown will not function during Play or Record.


# Special VCR Features (continued)

## Remote Warning Feature


If Multi-brand feature is used (p. 28), and this feature is set to on, a warning appears whenever an invalid key is pressed in TV, DSS or CABLE mode.

**1** Press **ACTION\*** to display MENU.

**2** Press **▲▼** to select "SET UP VCR," and press **SET**.

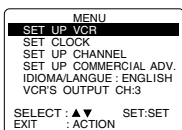


**3** Press **▲▼** to select "REMOTE WARNING," and press **SET** to set "ON" or "OFF."

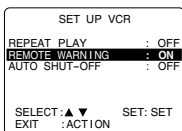

- If "OFF," remote warning will not appear when invalid key is pressed.

**4** Press **ACTION** twice to return to normal screen.

**\*Important:** If a remote control button does not work when pressed, press the VCR button on the remote and try the button again.

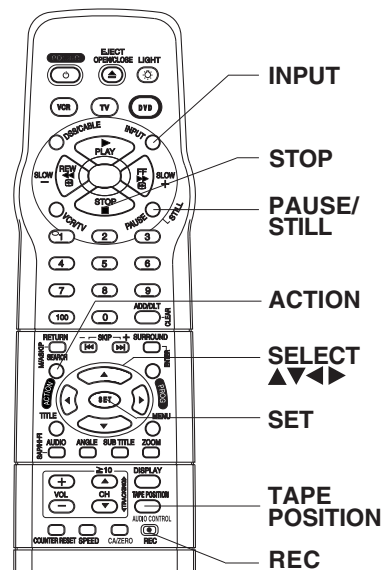

## Tape Position and Tape Status Feature

To find out the present tape position and amount of tape remaining. **Tape position is displayed for VHS-C type Cassettes, tapes under 30 minute long, and some other tapes, but the position is not correct.**

**1** Press **TAPE POSITION** to detect current tape position.

- "DETECTING TAPE POSITION" is displayed only when a cassette is first inserted, and it takes several seconds for correct tape position to appear.
- The present tape position indication and amount of tape remaining (according to tape speed) is displayed.
- Tape remaining time display may not be precise.

**2** Press **TAPE POSITION** to return to normal screen.

### Note


This function cannot display exact amount of tape remaining for tapes 30 minutes or less, or for tapes over 120 minutes in length.

**38**

For assistance, please call : 1-800-211-PANA(7262) or send e-mail to : [consumerproducts@panasonic.com](mailto:consumerproducts@panasonic.com)

# Copying Your Tapes (Dubbing)

## Connection

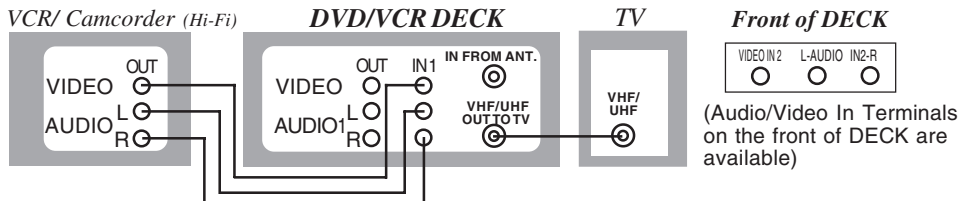

- ① Connect VIDEO OUT terminal on Playing VCR to VIDEO IN terminal on DECK. To monitor the dubbing, also connect TV as shown.
- ② Connect "L" and "R" AUDIO OUT terminals on Playing VCR to "L" and "R" AUDIO IN terminals on DECK.  
In place of Playing VCR, you can use other equipment, such as a Camcorder. Simply connect the unit's Audio/Video outputs to DECK.

### Playing (Source) VCR

### Recording (Editing) DECK

**1** Insert a pre-recorded tape.

Insert a blank tape with record tab.

**2** \_\_\_\_\_

**Press INPUT** to set DECK Input mode to LINE for Video Input.  
(See "Selecting the Input Mode" below.)

**3** **Press PLAY**, then **PAUSE/STILL** immediately to enter PLAY/PAUSE mode.

**Press REC**, then **PAUSE/STILL** immediately to enter REC/PAUSE mode.

The operation of steps 4 and 5 must be done on the playing and recording VCRs at the same time.

**4** **Press PLAY** to start dubbing. Playing VCR starts playback.

**Press PAUSE/STILL** to start dubbing. DECK starts recording.

**5** **Press STOP** to stop dubbing.

 
**Press STOP** to stop dubbing.

#### ■ To Monitor Dubbing on TV

- 1 Turn TV on and tune to the Recording VCR channel (CH 3 or CH 4).
- 2 Set the VCR/TV Selector on DECK to "VCR."

#### ■ Selecting the Input Mode

- Method 1: **Press INPUT** repeatedly.  
Channel Number ↔ LINE1 ↔ LINE2
- Method 2: **Press CH ▲/▼**.  
Display will change as below.



- "L1" or "L2" lights up on Multi Function Display (about 4 seconds) when LINE1 or LINE2 is selected.
- LINE1: For rear audio/video connection.  
LINE2: For front audio/video connection.

**Note** • Dubbing tapes protected with Copy Guard will result in poor quality recordings.

**Caution:** • Unauthorized exchanging and/or copying of copyrighted recordings may be copyright infringement.  
• Please note that some tapes cannot be dubbed on DECK. Also, it is not possible to dub DVD/ Video CD/ CD to VHS tapes using DECK.

Operation  
VCR

# Disc Operation

## Subtitle Language (DVD only)

You can select a different subtitle language (if offered) than the one set at the Settings for DVD Operation. (See p. 49.)



**1** Press **SUB TITLE\*** in Play mode to display the subtitle selection on-screen.

- Display disappears after 5 seconds.
- When no subtitles are offered, “-” will be displayed instead of the language number.



**2** Press **▲▼** to select a language. Press **▶** (or **◀**) to set. Press **▲▼** to select “ON” or “OFF.”

Number of subtitle language being played back.

### Notes

- If after several presses of the button the language does not change, language selection is not offered on the disc.
- When power is turned on again or disc is removed, subtitles revert to initial setting language. If the initial language is not recorded on the disc, the disc’s priority language will appear.

## Audio Soundtrack Language (DVD only)

You can change the audio soundtrack language, selected at the Settings for DVD Operation, to a different language if available. (See p. 49.)

(This operation works only with discs on which multiple audio soundtrack languages are recorded.)



**1** Press **AUDIO** in Play mode to display the audio selection on-screen.

- Display disappears after 5 seconds.
- Audio attribute 1 type, sampling frequency, bit No. of the disc.



**2** Press **▲▼** to select desired language.

Number of the audio soundtrack language being played back.

## Ready Checklist

- Please read “Basic DVD Operation” on p. 22.

## [Subtitle language (No.)] [Audio sound track language (No.)]

ENG	English
FRA	French
DEU	German
ITA	Italian
ESP	Spanish
NLD	Dutch
SVE	Swedish
NOR	Norwegian
DAN	Danish
POR	Portuguese
RUS	Russian
JPN	Japanese
CHI	Chinese
KOR	Korean
MAL	Malay
VIE	Vietnamese
THA	Thai
*	Other

- Change the No. by pressing **▲▼**, and press **SET**.

[Audio attribute 1 type, sampling frequency, bit No. of the disc (see p. 50.)]

LPCM	96KHz	16bit	Linear PCM disc
	or 48KHz	20bit 24bit	
Dolby Digital	1ch - 5.1ch	Dolby Digital disc	
dtts	1ch - 5.1ch	dtts disc	


### Notes

 
- If, after several presses of the AUDIO button the language does not change, language selection is not offered on the disc.
- When power is turned on again or disc is removed, language reverts to initial setting. If this language is not recorded on the disc, the language recorded will be heard.

**40** For assistance, please call : 1-800-211-PANA(7262) or send e-mail to : [consumerproducts@panasonic.com](mailto:consumerproducts@panasonic.com)



\*Important: if a remote control button does not work when pressed, press the DVD button on the remote and try the button again.


When  appears on the screen while a button is being operated, it means that the corresponding operation is prohibited by DECK or the disc.




ANGLE Indicator

**Notes**

- The ANGLE Indicator lights up on DECK when a scene recorded at different angles is detected.
- The angle number can be set beforehand so that the angle is switched whenever the ANGLE Indicator lights up.

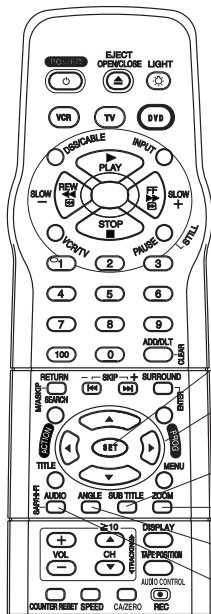


- SET
- SELECT 
- SUB TITLE
- ZOOM
- ANGLE
- AUDIO

**Notes**

- The subtitle cannot be enlarged nor can it's position be changed.
- The picture zoom feature does not work with a Video CD.
- During picture zoom, "ZOOM1" or "ZOOM2" is displayed on-screen.
- Zooming, on some discs, may result in poor picture quality, or may not operate at all.


**Multiple Angle Viewing (DVD only)**


DVDs may contain scenes shot from multiple camera angles allowing the same scene to be viewed at different angles. You can view these angles, if available, using the ANGLE button.

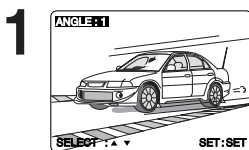

**1 Press ANGLE** in Play mode to display the angle selection on-screen.

- Display disappears after 5 seconds.

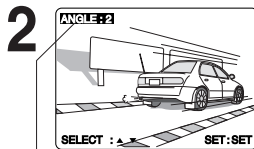




**2 Press 

Number of angle being played back.**

**Vocal Selection for Karaoke Discs (DVD/Video CD)**

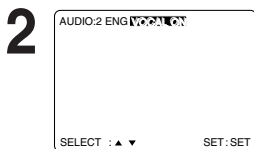**1 Press AUDIO** in Play mode to display the audio screen.



**2 Press press **


- DVD Karaoke (1 vocal) VOCAL ON ↔ VOCAL OFF
- DVD Karaoke (2 vocals) VOCAL V1 + V2 ↔ VOCAL V1 ↔ VOCAL V2 ↔ VOCAL OFF
- Video CD LR → L → R

**Picture Zoom (DVD only)**

You can enlarge specific portions of a picture and select the zoom ratio using the ZOOM button during DVD playback.

**Press ZOOM** repeatedly to change display as follows.

- You can enlarge the center portion of the image to one of 2 magnifications.

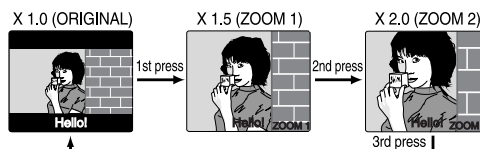

- Use the 

DVD Operation

# Disc Operation (continued)

## Title Menu (DVD only)

Some DVDs have more than one title, e.g. movies. If the disc offers a title menu, you can select the desired title number. (Operation may vary according to the disc.)

**1**

TITLE MENU	
Dogs	Castles
Lovers	Birds

<Example>

**Press *TITLE\****  
in Play mode  
to display the title screen.

**2**

TITLE MENU	
Dogs	Castles
Lovers	Birds

<b>Birds</b> of the world
------------------------------

<Example>

**Press  $\blacktriangle$  $\blacktriangledown$  $\blacktriangleleft$  $\blacktriangleright$  or *NUMBER* keys**  
to select a title, and  
**press *SET* or *PLAY***  
to start playing.

- "Pressing *SET* or *PLAY*" is not necessary when using *NUMBER* keys.

## DVD Menu (DVD only)

DVDs may offer a special menu. This menu may include guides to unique contents, audio/subtitle languages, etc. Although contents and operation may vary, the following steps show basic steps for using the menu.

**1**

DVD MENU	
1. SUBTITLE	
2. AUDIO	
3. ANGLE	

<Example>

**Press *MENU***  
in Play mode to display  
DVD MENU.

**2**


DVD MENU	
1. SUBTITLE	
2. AUDIO	
3. ANGLE	

<Example>

**Press  $\blacktriangle$  $\blacktriangledown$  $\blacktriangleleft$  $\blacktriangleright$  or *NUMBER* keys**  
to select an item, and  
**press *SET* or *PLAY***  
to perform.

- "Pressing *SET* or *PLAY*" is not necessary when using *NUMBER* keys.

**Repeat step 2 if there is more than one menu.**

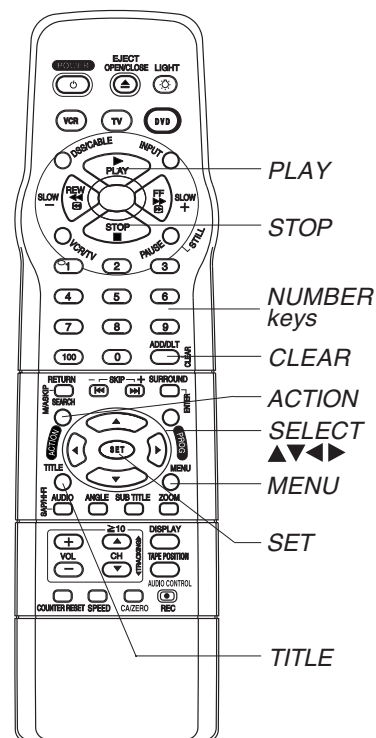

**42** For assistance, please call : 1-800-211-PANA(7262) or send e-mail to : [consumerproducts@panasonic.com](mailto:consumerproducts@panasonic.com)

\*Important: if a remote control button does not work when pressed, press the DVD button on the remote and try the button again.


## Program Play (Video CD/CD)

You can program specific tracks and order of play.


**1** Press **ACTION** to display MENU.



Press **▲▼** to select “PLAY MODE,” and press **SET** to display.

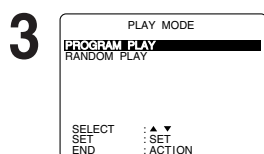


Press **▲▼** to select “PROGRAM PLAY,” and press **SET** to display.

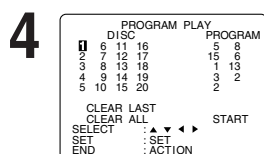

Press **▲▼◀▶** to select a track number (Track numbers on disc are displayed.), and press **SET**.

- Repeat step 4 to select another track.
- The selected track is added on the right side.

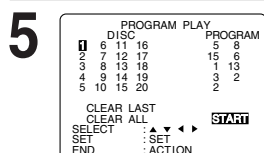

Press **▲▼◀▶** to select “START,” and press **SET** to start play of programs in the sequence selected.

- To cancel, press **STOP** during play, then press **CLEAR**.

### Notes

- Up to 15 tracks can be programmed.
- “◀” or “▶” (depending on disc) indicates additional PROGRAM PLAY screen. Press **▲▼◀▶** for next or previous screen.
- **To clear the last program one by one**  
Press **▲▼◀▶** to move to “CLEAR LAST” and press **SET**. (Pressing **CLEAR** on remote control also clears last program.)
- **To clear all programs**  
Press **▲▼◀▶** to move to “CLEAR ALL” and press **SET**. (Programs are also cleared when the power is turned off or the disc is removed.)


### Ready Checklist

- DECK is in DVD mode, press DVD.
- Video CD or CD is inserted.

## Program Repeat Play (Video CD/CD)


**1** Do operation steps 1 through 5 at left on this page.

**2** Press **DISPLAY** to display Disc Information screen. (Disc Information Screen)

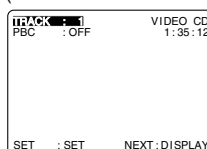


**3** Press **DISPLAY** to display DECK Information screen.

**4** Press **SET** to enter select mode. “REPEAT OFF” will flash. (DECK Information Screen)

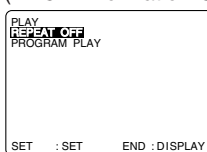

**5** Press **▲▼** to select “DISC REPEAT.” (DECK Information Screen)

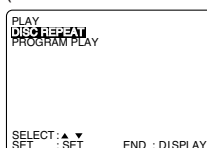

**6** Press **SET** to set mode. (“DISC REPEAT” will stop flashing.) To cancel, select “REPEAT OFF” in step 5, then press **SET**.

# Disc Operation (continued)


## Random Play (Video CD/CD)

Tracks are played in a random order.

**1** Press **ACTION\*** to display MENU.



Press **▲▼** to select "PLAY MODE," and press **SET** to display.

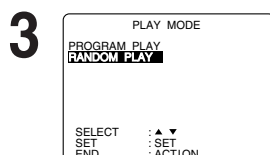

Press **▲▼** to select "RANDOM PLAY," and press **SET** to begin random play.


• To cancel, press **STOP** during play, then press **CLEAR**.

## ✓ Ready Checklist

DECK is in DVD mode, press DVD.

### \*Important:

If a remote control button does not work when pressed, press the DVD button on the remote and try the button again.

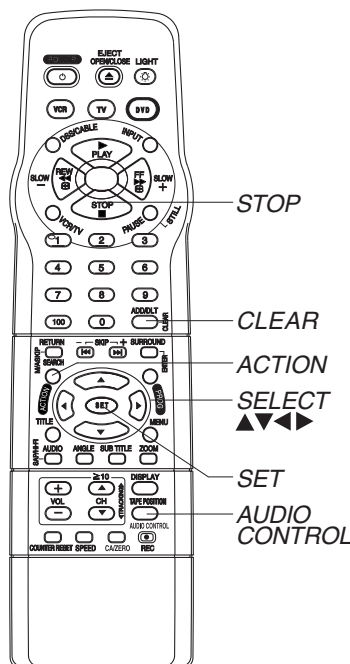

## Setting the Sound Output Level

Audio recorded on a DVD or Video CD often incorporates a dynamic range of sound.

This means that, when compared to a music CD, etc., the average volume is generally lower and the peaks may be higher. This unit can be set so that the average volume is increased automatically.

Press **AUDIO CONTROL** repeatedly to change "ON" ↔ "OFF."

• "ON" or "OFF" lights up on Multi Function Display (about 3 seconds) when press **AUDIO CONTROL**.

	Audio Control "OFF"	Audio Control "ON"
DVD /Video CD	Volume level is low.	Volume level is increased automatically when played back.
Music CD	_____	_____

- "ON" is set ..... When a DVD or Video CD is played back, the average volume is increased.
- "OFF" is set .... The volume level recorded on the disc is played back just as it is.

### Notes

- When audio equipment is connected, setting the Sound Output level to "OFF" is recommended.
- If the sound becomes abnormal while playing a disc, set the Sound Output level to "OFF."

**44**

For assistance, please call : 1-800-211-PANA(7262) or send e-mail to : [consumerproducts@panasonic.com](mailto:consumerproducts@panasonic.com)

# DVD Operation using On-Screen Displays


When **DISPLAY** is pressed, On-Screen Displays show disc information (title/chapter/track number, elapsed playing time) and DECK information (repeat play, play mode).

## Ready Checklist

- DECK is in DVD mode, press DVD.

### 1 Press **DISPLAY** in Play or Stop mode to display "On-Screen Displays."

- Each **press** of **DISPLAY** changes the on-screen display as follows. (refer to p. 46.)

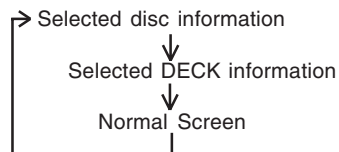


#### Note

**DISPLAY** button does not function while DVD TITLE MENU is displayed.

### 2 Press **▲▼** (or **◀▶**) to select an item, and press **SET**.

### 3 Press **▲▼** to select the setting, and press **SET**.

#### <Example of DVD>

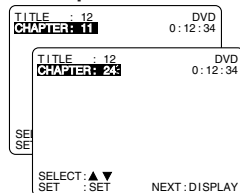



- For some functions the setting will be registered immediately without pressing **SET**.
- When numbers are displayed (e.g. title number), **NUMBER keys** are also available.

**To make corrections, press ▲▼ and SET repeatedly to move to the error, then correct.**

- Pressing **▶** is effective for elapsing time instead of the above buttons. Press **◀** repeatedly to delete the error, then correct.


**To return to normal screen, press CLEAR or DISPLAY repeatedly.**

#### <Example of Video CD>

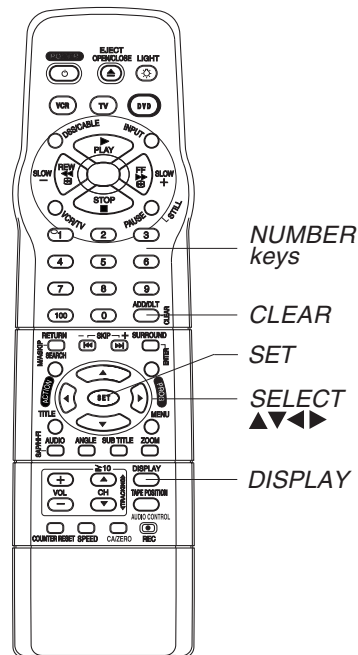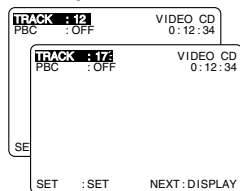

DVD Operation

#### Notes

 
- When **DISPLAY** button is pressed during playback of a Video CD with Playback control, **NUMBER keys** are not available on the displayed screen. In this case, press **DISPLAY** again to remove the displayed screen.
- When  appears on the screen while a button is being operated, it means that the corresponding operation is prohibited by DECK or the disc.

# DVD Operation using On-Screen Displays (continued)

## Detailed Descriptions of each On-Screen Display


### Disc information screen (for DVD)

1. **TITLE No.**
  - Change the No. by pressing **▲▼\*** or **NUMBER keys**, and press **SET**.
2. **Chapter No.**
  - Change the No. by pressing **▲▼** or **NUMBER keys**, and press **SET**.
3. **Disc currently being played**
4. **Elapsed playing time**
  - The screen may be changed by selecting the elapsed time.
  - Change the elapsed time by pressing **NUMBER keys**.
  - e.g., press 0 - 1 - 2 - 3 - 4 - 5 for 01 : 23 : 45.
  - This function does not work with some discs.

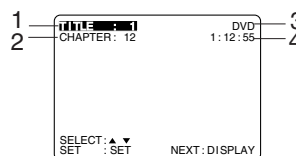

### Disc information screen (for Video CD/ CD)

- A. **Track No.**
  - Change the No. by pressing **▲▼** or **NUMBER keys**, and press **SET**.
- B. **Playback control ON/OFF**
  - [Video CD with playback control only]
  - ON | Video CD menu play is displayed.
  - OFF | Video CD menu play is cleared.
- C. **Disc currently being played**
  - Video CD | CD
- D. **Elapsed playing time**

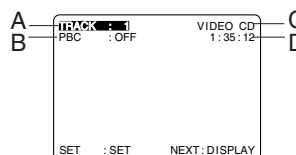

#### Note


- Track No. and the elapsed playing time are not displayed during play started from menu of Video CDs with playback control.
- When appears on the screen while a button is being operated, it means that the corresponding operation is prohibited by DECK or the disc.

### DECK information screen (for DECK)

- Change the desired mode during play by pressing **▲▼**, and press **SET**.


#### a. Repeat Play

DVD	CHAPTER REPEAT	TITLE REPEAT	REPEAT OFF
Video CD/CD	TRACK REPEAT	DISC REPEAT	REPEAT OFF

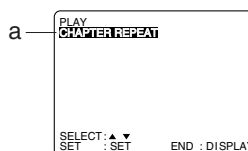



#### b. Play mode [Video CD/ CD only] (See p. 43 or 44.)

PROGRAM PLAY	program play
RANDOM PLAY	random play
----	normal play

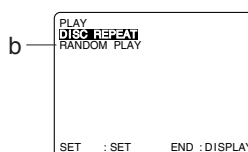

#### For your reference

- **CHAPTER/TITLE REPEAT PLAY (DVD)**
- **TRACK/DISC REPEAT PLAY (Video CD/CD)**

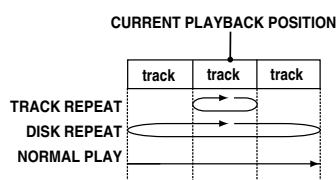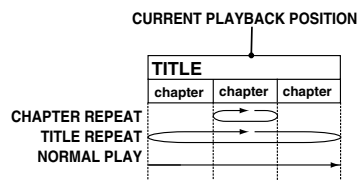

#### Note

- For repeat play in VCR mode, see p. 36.


# MP3 Playback Operation

**\*Important:** If a remote control button does not work when pressed, press the DVD button on the remote and try the button again.

## MP3 Playback

You can use this unit to play MP3 format audio recorded for personal use with a computer etc. onto a CD-R or CD-RW. Play may not be possible in some cases due to the condition of the recording.

- 1** Press **POWER** on the remote or **DECK**.
- 2** Press **OPEN/CLOSE**, and then place a MP3 disc into the disc tray. Press **OPEN/CLOSE** to close.
- 3** MP3 MENU is displayed and playback is started automatically. (The MP3 CD directory is displayed.)

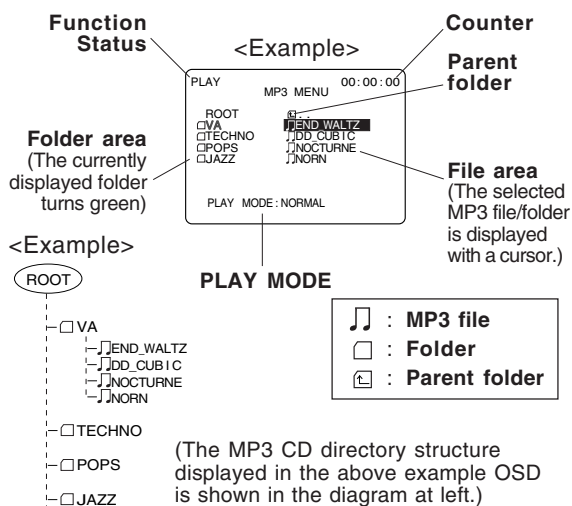

- Forward/Reverse Search**  
 Press **FF/SLOW+** or **REW/SLOW-** during play. Press **PLAY** to release.
  - Search speed, slow at first, increases with each additional press of the button up to 4 levels.
- Forward/Reverse Track Skip**  
 Press **SKIP▶▶▶** or **◀◀◀ SKIP** during play. Each press skips a track.
  - If pressed within first 3 seconds of playback, skips to the previous track. If over 3 seconds, returns to first of that track. (**◀◀◀ SKIP** only.)
  - Only the **SKIP▶▶▶** or **◀◀◀ SKIP** button can be used for track skip selection during playback. Place unit into Stop mode before performing folder/file selection (see above right.)

- 4** Press **STOP** to stop playing.

- 5** Press **OPEN/CLOSE** to eject the disc. The MP3 MENU is closed automatically.

- MP3 playback** (During STOP mode)
  - 1) Press **▲▼** to select an MP3 file (┌┐).
  - 2) Press **SET** or **PLAY** to start playback.
- Select folder** (During STOP mode)
  - 1) Press **▲▼** to select a folder (□).
  - 2) Press **SET** to display files/folders contained in the folder.
- Select parent folder** (During STOP mode)
  - 1) Press **▲▼** to select a folder (◻).
  - 2) Press **SET** to make changes to the previous directory display.

### Note

- Folder area operation cannot be done. Only file area operation is possible.

- Select PLAY MODE** (During STOP mode)
  - 1) Press **◀▶** to move cursor to **PLAY MODE**.
  - 2) Press **▲▼** to select the desired **PLAY MODE** (see below).

### [PLAY MODE]

#### NORMAL:

All MP3 files are selected and played back one time only.

#### SINGLE REPEAT:

The selected MP3 file is played back repeatedly.

#### FOLDER REPEAT:

The MP3 files contained in the selected folder are played back repeatedly. However, folders below the selected folder are not played back.

#### DISC REPEAT:

All MP3 files are played back repeatedly.

DVD Operation

# DVD Lock Feature

**\*Important:** If a remote control button does not work when pressed, press the DVD button on the remote and try the button again.


You can prevent playback of DVDs of a specific rating level which may be unsuitable for children.

- Some DVDs are encoded with a rating level. If the disc rating is higher (stricter) than the one you preset, playback will be prohibited.


## DVD Lock (DVD only)

A 4-digit code must be entered to view a blocked program or change rating settings.

**1** Press **ACTION\*** to display MENU.

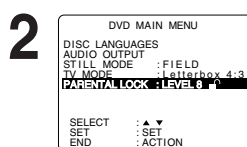


Press **▲▼** to select "PARENTAL LOCK," and press **SET** to display.

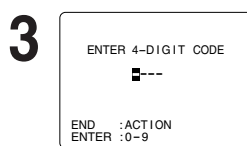

- 1) Press **NUMBER** keys to enter your secret code.
- 2) Enter same secret code again for confirmation.
- 3) Press **SET** to display.

**To Make Corrections**  
Press **◀** repeatedly to move the cursor.  
Press **NUMBER** keys to make the correction.

- Step 2) not necessary when changing rating or secret code.
- Take care that you are not observed entering the secret code.

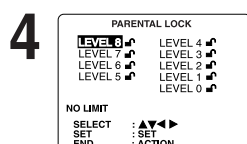

Press **▲▼◀▶** to select rating level, and press **SET** to select "LOCKED" or "UNLOCKED."

- LEVEL 0** : LOCK ALL, Playback of all DVDs, CDs and Video CDs is prohibited.  
(Use to prohibit play of mature theme DVDs not encoded with rating level.)
- LEVEL 1** : mature theme DVDs
- LEVEL 2** : DVDs expressly for children can be played back.
- LEVEL 3 to 7** : DVDs for general audiences/children can be played back. (DVDs with mature content are prohibited.)
- LEVEL 8** : NO LIMIT: (Factory preset)  
All DVDs can be played back.

**5** Press **ACTION** twice to end setup.


## Ready Checklist

- DECK is in DVD mode, press DVD.

## Caution

Discs not encoded with rating level will play even if the jacket states it is for mature audiences. For these discs, the DVD Lock Ratings will not work.

<When DVD Lock is activated>

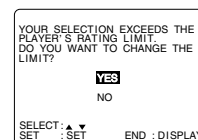

After DVD Lock is set and a blocked DVD is played, this message will appear. The message may differ depending on the disc.

**To continue viewing a blocked program for now,**  
Press **▲▼** to select "YES" and **SET**. Then, enter your 4 digit secret code. When "NO" is selected, blocked programs cannot be viewed.

## Change your secret code

- You will need your current code. Do step 1 ~ 2 left.  
Enter current secret code.  
Press **CLEAR** to clear the code.  
Do step 4 to enter new code.

## Note

- DO NOT forget your secret code.

48


For assistance, please call : 1-800-211-PANA(7262) or send e-mail to : [consumerproducts@panasonic.com](mailto:consumerproducts@panasonic.com)



# Settings for DVD Operation

**1** Press **ACTION** to display MENU.

**2** Press **▲▼** to select an item, and press **SET**.

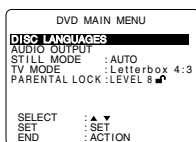

**DISC LANGUAGES** (See below)  
All languages offered on the disc can be set. If the language not offered is set, the original disc language will be selected.


**AUDIO OUTPUT** (See p. 50.)  
You can set the audio output that comes from the digital audio output terminal.

**STILL MODE** (See p. 51.)  
To select "FIELD" (Field still) or "FRAME" (Frame still) to prevent jitter or make small text or fine patterns clearly visible in a still picture. When "AUTO" is set "FIELD" or "FRAME" is selected automatically.

**TV MODE** (See p. 51.)  
To select whether the video material for a wide-screen will be played back in the Pan & Scan style, Letterbox style or 16 : 9 style.

Once initial settings are done, they remain in memory (even after power off) until changed. This means DECK will operate under the same conditions (especially DVDs) each time.


- Ready Checklist**  
 DECK is in DVD mode, press DVD.

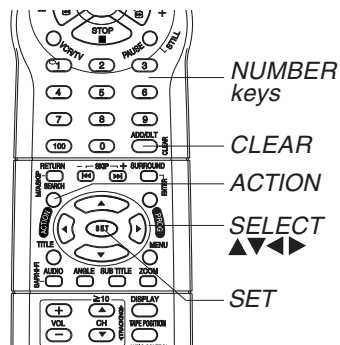


## Disc Languages (DVD only)

To select and set the language of the audio soundtrack, subtitles, or title/DVD menus for all discs to be played.

**3** Press **▲▼** to select "DISC LANGUAGES," and press **SET** to display screen.

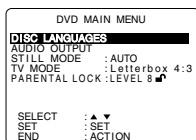

**4** Press **▲▼** to select an item, and press **SET** repeatedly for desired language. (Please refer right.)

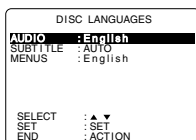

**5** Press **ACTION** to redisplay DVD menu and go to step 2 to setup another item. Or, press **ACTION** twice to exit.

### "AUDIO" selections

(Factory preset: English)  
To select the audio soundtrack language.  
**English/Spanish/French/Japanese**  
**Original**: Original disc language  
**OTHER \*\*\*\***: Other language selection\*1

### "SUBTITLE" selections

(Factory preset: AUTO)  
To select the subtitle language.  
**AUTO**: Same language selected for "AUDIO"  

- If language set for "AUDIO" is used in playback, subtitles will not appear.
- If another language is used during playback, the subtitles will appear in the language selected at "AUDIO" setup.

**English/Spanish/French/Japanese**  
**OTHER \*\*\*\***: Other language selection\*1

### "MENUS" selections

(factory preset: English)  
To select the language used in title menus or DVD menus.  
**English/Spanish/French/Japanese**  
**OTHER \*\*\*\***: Other language selection\*1

### To enter OTHER \*\*\*\* code number,

Press **NUMBER keys** (Please refer to language codes on p. 52).  
To make corrections, press **◀** repeatedly to delete language code number, and correct.


\*1 If the selected language is not offered, the original disc language is selected.

# Settings for DVD Operation (continued)


## Audio Output

Select the digital output to be output from the optical digital audio output connector of DECK.

**1** Press **ACTION\*** to display MENU.

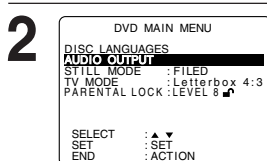

Press **▲▼** to select "AUDIO OUTPUT," and press **SET** to display screen.

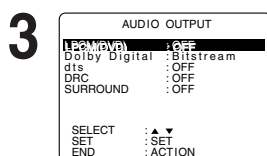

Press **▲▼** to select an item, and press **SET** repeatedly for output. (See below.)

### ■ "LPCM (DVD)" selections

**OFF:** Linear PCM of less than 48 kHz/16 bit is output. When playing DVDs recorded in linear PCM of over 48 kHz/20 bit or 96 kHz, no digital audio is output. (Factory preset)

**PCM:** When playing DVDs recorded in linear PCM of 48 kHz/20 bit/24 bit or 96 kHz, digital audio converted to 48 kHz/16 bit is output. (Digital output of PCM audio is restricted to 48 kHz/16 bit or below for copyright protection.)

### ■ "Dolby Digital" selections

**Bitstream:** Dolby Digital bitstream (1ch-5.1ch) is output. (Factory preset)

**OFF:** No output.

### ■ "dts" selections

**Bitstream:** dts bitstream is output. (Factory preset)

**OFF:** No output.

### ■ "DRC (Dynamic Range Compression)" selections

**OFF:** Normal audio range is selected. (Factory preset)

**ON:** For dynamic sound even at low volume, this is useful for late-night listening. [Dolby Digital DVDs only].

### ■ "SURROUND" selections

Surround Sound creates the effect of sound coming from non-existent rear speakers even when only connected to a 2-channel stereo system.

**OFF:** No Surround Sound effect. (Factory preset)

**ON:** Surround Sound effect.

**4** Press **ACTION** to redisplay DVD menu and go to step 2 to setup another item. Or, press **ACTION** twice to exit.



## Ready Checklist

DECK is in DVD mode, press DVD.

Type of amplifier to be connected	Recommended setting		
	LPCM (DVD)	Dolby Digital	dts
No amplifier is connected	OFF	OFF	OFF
AV amplifier (with digital audio input connector) without Dolby Digital/dts decoder	PCM*1	OFF*2	OFF*2
AV amplifier including Dolby Digital decoder	PCM*1	Bitstream	OFF
AV amplifier including Dolby Digital/dts decoder	PCM*1	Bitstream	Bitstream*3

• Make settings according to amplifier connected to optical audio output as shown in above table.

• When a dts decoder is not connected, to enjoy dts DVD, please select audio output other than dts at the dts DVD menu screen. Otherwise, there will be no sound.

\*1 Audio Output 2 from DECK is converted to 48 kHz/16 bit in addition to audio from digital audio output. To enjoy high quality sound at 48 kHz/20 bit /24 bit or 96 kHz, connect the amplifier or decoder directly to the Audio Output 2 connectors, not to the Digital Audio Output connector. [Select "OFF" at the "LPCM (DVD)".]

\*2 When connecting an amplifier (with an optical digital input connector) which does not contain the Dolby Digital or dts decoder, be sure to select "OFF". If "Bitstream" is selected, starting DVD play may cause such a high level of noise as to be harmful to your ears and damage the speakers.

\*3 When a dts decoder is connected, please select "Bitstream" in "dts". If "OFF" is selected, there will be no sound.

### Notes

- Turn off other surround effects when using this surround effect.
- For optimum effect, the distance between DECK and the listener should be about 3 or 4 times the distance between the right and left front speakers.

**\*Important:** If a remote control button does not work when pressed, press the DVD button on the remote and try the button again.

## Still Mode

Set to reduce jitter in a displayed still picture or a motion picture.

**1** Press **ACTION** to display MENU.



Press **▲▼** to select "STILL MODE," and press **SET** repeatedly for mode. (See below.)

**AUTO:** "FIELD" (Field still) or "FRAME" (Frame still) is automatically selected during the still mode. (Factory preset)

**FIELD:** "FIELD" (Field still) is always selected. This setting will reduce jitter when compared with "AUTO" on some discs.


**FRAME:** "FRAME" (Frame still) is always selected. Some texts and fine patterns will be seen clearly when compared with "AUTO" on some discs.

**3** Press **ACTION** to exit this mode.

## TV Mode

Set the screen display style for wide-screen video material playback.

**1** Press **ACTION** to display MENU.

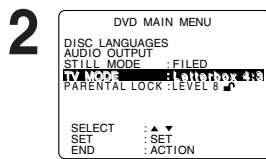


Press **▲▼** to select "TV MODE," and press **SET** repeatedly for mode. (See below.)

**Pan & Scan 4 : 3** (Factory preset) :  
 Wide-screen video data is played in Pan & Scan style (left and right of screen is trimmed.)  
 • Video data not formatted in Pan & Scan will play in letterbox style.

**Letterbox 4 : 3** :  
 Wide-screen video data is played in Letterbox style (top and bottom of screen has black margin).


**16 : 9** :  
 Set "16 : 9" when using Wide-screen TV.

**3** Press **ACTION** to exit this mode.

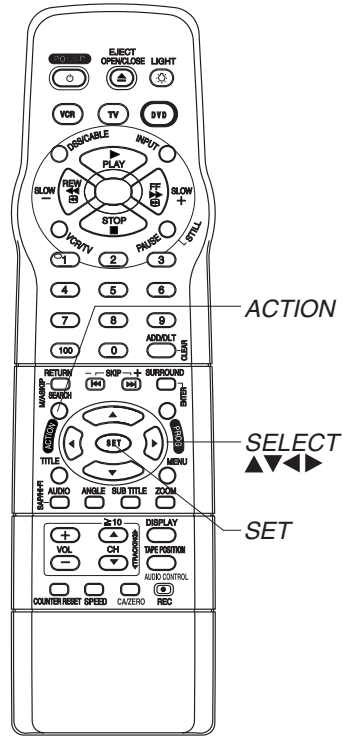


## Example

- Pan & Scan (Factory preset)

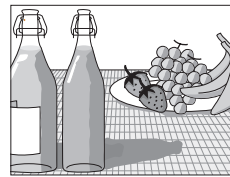

- Letterbox

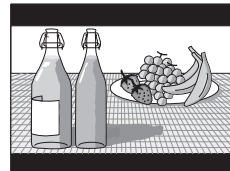

DVD  
 Operation

# Language Code List

Enter the appropriate code number for the initial settings "AUDIO", "SUBTITLE" and/or "MENUS" (see p. 49).

Code	Language	Code	Language	Code	Language	Code	Language
6565	Afar	7079	Faroese	7678	Lingala	8375	Slovak
6566	Abkhazian	7082	French	7679	Laothian	8376	Slovenian
6570	Afrikaans	7089	Frisian	7684	Lithuanian	8377	Samoan
6577	Ameharic	7165	Irish	7686	Latvian, Lettish	8378	Shona
6582	Arabic	7168	Scots Gaelic	7771	Malagasy	8379	Somali
6583	Assamese	7176	Galician	7773	Maori	8381	Albanian
6588	Aymara	7178	Guarani	7775	Macedonian	8382	Serbian
6590	Azerbaijani	7185	Gujarati	7776	Malayalam	8385	Sundanese
6665	Bashkir	7265	Hausa	7778	Mongolian	8386	Swedish
6669	Byelorussian	7273	Hindi	7779	Moldavian	8387	Swahili
6671	Bulgarian	7282	Croatian	7782	Marathi	8465	Tamil
6672	Bihari	7285	Hungarian	7783	Malay	8469	Telugu
6678	Bengali; Bangla	7289	Armenian	7784	Maltese	8471	Tajik
6679	Tibetan	7365	Interlingua	7789	Burmese	8472	Thai
6682	Breton	7378	Indonesian	7865	Nauru	8473	Tigrinya
6765	Catalan	7383	Icelandic	7869	Nepali	8475	Turkmen
6779	Corsican	7384	Italian	7876	Dutch	8476	Tagalog
6783	Czech	7387	Hebrew	7879	Norwegian	8479	Tonga
6789	Welsh	7465	Japanese	7982	Oriya	8482	Turkish
6865	Danish	7473	Yiddish	8065	Panjabi	8484	Tatar
6869	German	7487	Javanese	8076	Polish	8487	Twi
6890	Bhutani	7565	Georgian	8083	Pashto, Pushto	8575	Ukrainian
6976	Greek	7575	Kazakh	8084	Portuguese	8582	Urdu
6978	English	7576	Greenlandic	8185	Quechua	8590	Uzbek
6979	Esperanto	7577	Cambodian	8277	Rhaeto-Romance	8673	Vietnamese
6983	Spanish	7578	Kannada	8279	Romanian	8679	Volapük
6984	Estonian	7579	Korean	8285	Russian	8779	Wolof
6985	Basque	7583	Kashmiri	8365	Sanskrit	8872	Xhosa
7065	Persian	7585	Kurdish	8368	Sindhi	8979	Yoruba
7073	Finnish	7589	Kirghiz	8372	Serbo-Croatian	9072	Chinese
7074	Fiji	7665	Latin	8373	Singhalese	9085	Zulu

# Warning and Instruction Displays

These displays will alert you to a missed operation or provide further instructions.

OSD	Caution	Page
PLEASE SET CLOCK BY PRESSING ACTION KEY	If you attempt to set or review a Timer Recording and the Clock is not set...	24
PLEASE PREPARE FOR TIMER REC	If DECK is not in Stop mode or a cassette with record tab is not inserted 2 minutes before a Timer Recording is about to begin...	24 25
CHECK CASSETTE RECORD TAB	If you press REC on the remote control or DECK, and a cassette is inserted with no record tab...	6
NO CASSETTE	If you press PLAY, FF, REW, or REC on the remote control or DECK without a cassette inserted...	20 21
TO CANCEL TIMER REC HOLD DOWN STOP KEY FOR APPROX 3 SEC	If you press STOP or POWER during a Timer Recording... (visible in VCR mode only)	25
VIDEO HEADS MAY NEED CLEANING PLEASE INSERT HEAD CLEANING CASSETTE OR REFER TO MANUAL END : PLAY	If head cleaning becomes necessary while playing back a tape...	6
VCR LOCK ACTIVATED	If you press a function button other than STOP/EJECT or POWER while DECK is in VCR Lock mode...	37
REMOTE CONTROL IS SET TO CABLE/DSS MODE USE VCR : VCR KEY USE DVD : DVD KEY	If you press an invalid key on the remote while in CABLE/DSS mode...	28 29 38
REMOTE CONTROL IS SET TO TV MODE USE VCR : VCR KEY USE DVD : DVD KEY	If you press an invalid key on the remote while in TV mode...	28 29 38
PLEASE CHECK THE DISC, AND FOR STAINS OR SCRATCHES ON DISC	If you press PLAY, or DECK reads data from a stained or scratched disc in DVD mode. Also, if the type of disc is other than DVD, Video CD or CD...	4
IT IS PROHIBITED TO COPY DVD/VIDEO CD/CD TO VHS	If you press REC in DVD mode...	21

For Your Information

# Before Requesting Service

Check the following points if you are having trouble with your DECK.

<b>Power</b>	<b>Correction</b>
No power...	<ul style="list-style-type: none"> <li>• Completely insert Power Plug into an AC outlet.</li> <li>• Set POWER button to on.</li> <li>• Make sure power source is active.</li> </ul>
Power turns itself off...	<ul style="list-style-type: none"> <li>• Auto power-off (shutoff) occurs after about 5 min. in DVD mode with no operation, or if there is no broadcast signal in TV or Playback mode. Turn the power back on. (pp. 23, 37)</li> </ul>
<b>Recording &amp; Playback</b>	<b>Correction</b>
TV program cannot be recorded...	<ul style="list-style-type: none"> <li>• Check connections between DECK, external antenna, and TV.</li> <li>• Check channel selections.</li> <li>• Make sure your antenna system (CABLE or TV) is correctly set. (Channels [p. 18])</li> <li>• Make sure cassette record tab is intact. (p. 6)</li> </ul>
Timer recording cannot be performed...	<ul style="list-style-type: none"> <li>• Confirm that clock is set to current time and date.</li> <li>• Make sure Cable/DSS box (if used) is left on and tuned to channel to be recorded.</li> <li>• Set recording start/stop times correctly. (p. 24)</li> <li>• Timer recording may not be performed or continued if a power interruption occurs before or during a Timer Recording, even after power is restored.</li> </ul>
There is no playback picture, or the playback picture is noisy or contains streaks...	<ul style="list-style-type: none"> <li>• Select channel 3 or 4 on TV to match VCR output channel (3 or 4) (p. 16) or select LINE.</li> <li>• Set VCR/TV selector to "VCR."</li> <li>• Adjust TRACKING control in either direction. (p. 6)</li> <li>• Try Head Cleaning. (p. 6)</li> </ul>
During Special effects playback, picture may contain some vertical jitter when using a TV with an Automatic Vertical Hold Control...	<ul style="list-style-type: none"> <li>• Set TV's Vertical Hold Control to MANUAL, then adjust.</li> </ul>
DECK cannot be controlled...	<ul style="list-style-type: none"> <li>• Make sure DECK power is on.</li> <li>• Check Remote batteries.</li> <li>• Make sure VCR LOCK is set to off. (p. 37)</li> <li>• Make sure Remote is in proper mode.(p. 28)</li> <li>• Make sure Timer Recording is not in progress.</li> </ul>
<b>Remote Control</b>	<b>Correction</b>
DECK cannot be remote controlled...	<ul style="list-style-type: none"> <li>• Make sure DECK power is on.</li> <li>• Make sure Remote is in VCR mode.</li> <li>• Aim Remote Control directly at remote sensor on DECK. (p. 9)</li> <li>• Avoid any object blocking signal path.</li> <li>• Check Remote batteries. (p. 4)</li> <li>• Exposing DECK remote sensor to direct fluorescent or outdoor light may cause signal interference.</li> </ul>
PROG buttons do not respond...	<ul style="list-style-type: none"> <li>• PROG functions are not available in COMPONENT Video Output and S-VIDEO OUT. Set TV to either RF IN or VIDEO IN. (p. 10)</li> <li>• Check Remote batteries. (p. 4)</li> <li>• Press VCR or DVD button for DVD/VCR mode. (p. 28)</li> </ul>

Check the following points if you are having trouble with your DECK.

DVD/ Video CD/ CD	Correction
Play fails to start even when PLAY is pressed...	<ul style="list-style-type: none"> <li>This DECK cannot play discs other than DVDs, Video CDs and CDs.</li> <li>The disc may be dirty and require cleaning.</li> </ul>
Play starts but then stops immediately...	<ul style="list-style-type: none"> <li>Be sure disc is installed with label side up.</li> </ul>
Picture is distorted during rapid advance or rapid reverse...	<ul style="list-style-type: none"> <li>The picture will be somewhat distorted at times: this is normal.</li> </ul>
No Forward/Reverse Scene Search play...	<ul style="list-style-type: none"> <li>Some discs may have sections which prohibit Forward/Reverse Scene Search. (p. 23)</li> </ul>
Play does not start even when title is selected...	<ul style="list-style-type: none"> <li>Confirm the "DVD LOCK" setting. (p. 48)</li> </ul>
Audio soundtrack and/or subtitle language is not the one selected at the initial settings...	<ul style="list-style-type: none"> <li>If the audio soundtrack and/or subtitle language selected at DVD initial settings does not exist on the disc, it will not be accessible.</li> </ul>
No subtitles...	<ul style="list-style-type: none"> <li>Subtitles appear only when available on disc.</li> <li>"OFF" is selected at the changing subtitle language. Select "ON" at the "Subtitle Languages" section (p. 40) to display the subtitles.</li> </ul>
Alternative audio soundtrack (or subtitle) language cannot be selected...	<ul style="list-style-type: none"> <li>Alternative language cannot be selected with discs which do not contain more than one language.</li> <li>For some discs, alternative language cannot be selected with the AUDIO or SUB TITLE button. Try selecting it from the DVD MENU if available.</li> </ul>
Angle cannot be changed...	<ul style="list-style-type: none"> <li>This function is dependent on software availability. Even if disc has multiple angles, they may be recorded for specific scenes only (ANGLE indicator on DECK lights up). (p. 41)</li> </ul>
Miscellaneous	Correction
Programs cannot be viewed on TV...	<ul style="list-style-type: none"> <li>Make sure TV is set to output of DECK.</li> <li>Check connections between DECK, external antenna, and TV.</li> <li>Set VCR/TV selector to "TV." (p. 21)</li> <li>Make sure proper signal source is selected.</li> </ul>
Video cassette cannot be inserted...	<ul style="list-style-type: none"> <li>Insert the cassette with window side up; record tab facing you.</li> </ul>
Video cassette ejects when a recording is started or the power is turned off for timer recording...	<ul style="list-style-type: none"> <li>Make sure cassette record tab is intact. (p. 6)</li> </ul>
In Stop mode, the motor (CYLINDER) continues to rotate...	<ul style="list-style-type: none"> <li>To enable Quick play mechanism, the cylinder will rotate for about 3 minutes. This reduces response time from Stop to Play mode.</li> </ul>
The disc cannot be removed..	<ul style="list-style-type: none"> <li>First, unplug DECK. Then, prepare a rigid wire (e.g. an extended paper clip) and, applying moderate force, insert it straight into the hole at the base of the tray. The tray will eject a little. Now, pull the tray all the way out and remove the disc. (p. 9)</li> </ul>

For Your Information

**If you cannot resolve the problem, please call the Customer Call Center for product assistance at 1-800-211-PANA (7262).**

**To locate an authorized servicenter, please call toll free 1-800-211-PANA (7262). or send e-mail to : [consumerproducts@panasonic.com](mailto:consumerproducts@panasonic.com)**

# Limited Warranty

PANASONIC CONSUMER ELECTRONICS COMPANY,  
DIVISION OF MATSUSHITA ELECTRIC  
CORPORATION OF AMERICA  
One Panasonic Way Secaucus, New Jersey 07094

PANASONIC SALES COMPANY, DIVISION OF MATSUSHITA  
ELECTRIC OF PUERTO RICO, INC.,  
AVE. 65 de Infantería, Km. 9.5 San Gabriel Industrial Park,  
Carolina, Puerto Rico 00985

## Panasonic/Quasar Video Products Limited Warranty

### Limited Warranty Coverage

If your product does not work properly because of a defect in materials or workmanship, Panasonic Consumer Electronics Company or Panasonic Sales Company (collectively referred to as "the warrantor") will, for the length of the period indicated on the chart below, which starts with the date of original purchase ("warranty period"), at its option either (a) repair your product with new or refurbished parts, or (b) replace it with a new or a refurbished product. The decision to repair or replace will be made by the warrantor.

Product	Parts	Labor	Service	Contact Number
Camcorder	One (1) Year (except CCD Image Sensor) CCD Image Sensor - 6 (Six) Months	Ninety (90) Days  Ninety (90) Days	Carry-In or Mail-In	1-800-211-PANA(7262)
DVD/VCR Deck, A/V Mixer	One (1) Year	Ninety (90) Days	Carry-In or Mail-In	1-800-211-PANA(7262)
TV/VCR, TV/DVD, TV/DVD/VCR Combination	One (1) Year (except CRT) CRT - Two (2) Years	Ninety (90) Days  Ninety (90) Days	Carry-In: 21" CRT and Smaller In-Home or Carry-In: 22" CRT and Larger	1-800-211-PANA(7262)
TV/HDR Combination	One (1) Year (except CRT) CRT - Two (2) Years	Ninety (90) Days  Ninety (90) Days	In-Home or Carry-In	1-888-843-9788
Rechargeable Batteries (in exchange for defective item)	Ten (10) Days	Not Applicable	Carry-In or Mail-In	1-800-211-PANA(7262)
Tape (in exchange for defective item)	Five (5) Days	Not Applicable	Carry-In or Mail-In	1-800-211-PANA(7262)
Memory Cards (in exchange for defective item)	Ninety (90) Days	Not Applicable	Carry-In or Mail-In	1-800-211-PANA(7262)

During the "Labor" warranty period there will be no charge for labor. During the "Parts" warranty period, there will be no charge for parts. You must carry-in or mail-in your product or arrange for in-home service, as applicable, during the warranty period.

If non-rechargeable batteries are included, they are not warranted. This warranty only applies to products purchased and serviced in the United States or Puerto Rico. This warranty is extended only to the original purchaser of a new product which was not sold "as is". A purchase receipt or other proof of the original purchase date is required for warranty service.

### Carry-In, Mail-in or In-Home Service

For Carry-In, Mail-In or In-Home Service (as applicable) in the United States call toll free contact number listed above or visit Panasonic Web Site: <http://www.panasonic.com>

For assistance in Puerto Rico call Panasonic Sales Company (787)-750-4300 or fax (787)-768-2910.

In-Home service, if applicable, requires clear, complete and easy access to the product by the authorized servicer and does not include removal or re-installation of an installed product. It is possible that certain in-home repairs will not be completed in-home, but will require that the product, or parts of the product, be removed for shop diagnosis and/or repair and then returned.



#### Limited Warranty Limits And Exclusions

This warranty ONLY COVERS failures due to defects in materials or workmanship, and DOES NOT COVER normal wear and tear or cosmetic damage, nor does it cover markings or retained images on the picture tube resulting from viewing fixed images (including, among other things, letterbox pictures on standard 4:3 screen TV's, or non-expanded standard 4:3 pictures on wide screen TV's, or onscreen data in a stationary and fixed location). The warranty ALSO DOES NOT COVER damages which occurred in shipment, or failures which are caused by products not supplied by the warrantor, or failures which result from accidents, misuse, abuse, neglect, mishandling, misapplication, alteration, faulty installation, set-up adjustments, misadjustment of consumer controls, improper maintenance, power line surge, lightning damage, modification, or commercial use (such as in a hotel, office, restaurant, or other business), rental use of the product, service by anyone other than a Factory Servicenter or other Authorized Servicer, or damage that is attributable to acts of God.

**THERE ARE NO EXPRESS WARRANTIES EXCEPT AS LISTED UNDER "LIMITED WARRANTY COVERAGE". THE WARRANTOR IS NOT LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS WARRANTY.** (As examples, this excludes damages for lost time, cost of having someone remove or re-install an installed unit if applicable, or travel to and from the servicer, loss of media or images, data or other memory or recorded content. The items listed are not exclusive, but are for illustration only.)

**ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING THE WARRANTY OF MERCHANTABILITY, ARE LIMITED TO THE PERIOD OF THE LIMITED WARRANTY.**

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the exclusions may not apply to you.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state. If a problem with this product develops during or after the warranty period, you may contact your dealer or Servicenter. If the problem is not handled to your satisfaction, then write to the warrantor's Consumer Affairs Department at the addresses listed for the warrantor.

**PARTS AND SERVICE (INCLUDING COST OF AN IN-HOME SERVICE CALL, WHERE APPLICABLE) WHICH ARE NOT COVERED BY THIS LIMITED WARRANTY ARE YOUR RESPONSIBILITY.**

## Customer Services Directory

*For Product Information, Operating Assistance, Literature Request, Dealer Locations, and all Customer Service inquiries please contact:  
1-800-211-PANA (7262), Monday-Friday 9 am-9 pm; Saturday-Sunday 9 am-7 pm, EST.  
or send e-mail : [consumerproducts@panasonic.com](mailto:consumerproducts@panasonic.com)*

*Web Site: <http://www.panasonic.com>  
You can purchase parts, accessories or locate your nearest servicenter by visiting our Web Site.*

#### **Accessory Purchases:**

**1-800-332-5368 (Customer Orders Only)**  
**Panasonic Services Company 20421 84th Avenue South, Kent, WA 98032**  
**(Monday-Friday 6 am-5 pm; Saturday 6 am-10:30 am, PST)**  
**(Visa, MasterCard, Discover Card, American Express, Check)**

#### *Service in Puerto Rico*

***Matsushita Electric of Puerto Rico, Inc. Panasonic Sales Company/ Factory Servicenter:  
Ave. 65 de Infantería, Km. 9.5, San Gabriel Industrial Park, Carolina, Puerto Rico 00985  
Phone (787)750-4300 Fax (787)768-2910***

For Your  
Information

As of February 2002

57

# Spanish Quick Use Guide/ Guía para rápida consulta

## Conexiones/Configuración Inicial (READY TO PLAY)


Favor realice la conexión de antena o cable antes de conectar el cordón de AC a la toma de pared.

Conectando el cordón de AC de la DECK en toma de pared iniciará automáticamente la búsqueda de canales y colocación de tiempo.

### Conectando


#### Para Ant/Cable → DECK → TV

- 1 Conecte Ant/Cable a la entrada de antena de la DECK (DECK In).
- 2 Conecte la salida de la DECK (DECK Out) a la entrada de antena de la TV (TV In) con el cable-accesorio RF incluido.

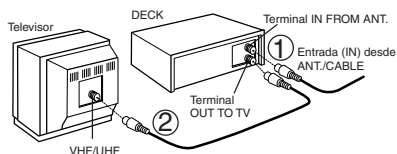

#### Para Sistema Digital de Satélite (DSS)/ Convertidor de cable → DECK → TV

- 1 Conecte la salida del convertidor de cable a la "DECK In" con el RF cable accesorio incluido.
- 2 Conecte "DECK Out" a la "TV In" con el cable-accesorio incluido.

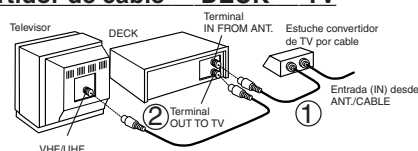

### Realizando configuración inicial

- 1 Presione el botón DECK del control remoto para dicha modalidad. Encienda la TV y cambie a canal 3.
- 2 Conecte cordón de AC de la DECK a la toma de pared. La DECK se activará e iniciará búsqueda de canales y colocación de tiempo.
  - Si la pantalla abajo no aparece cheque la conexión DECK-TV y si la TV fue cambiada a el canal 3, trate cambiando a el canal 4.
  - Para cambios a el canal de salida de la DECK favor hacer referencia a "VCR's Output Channel" (p. 19).

- 3 Selecciones se realizaron automáticamente cuando la configuración terminó, esta pantalla aparece.

```

9/29/2002 SUN  2:20PM
                DST:ON
SETTING : CH 10
AUTO CLOCK SET
COMPLETED
    
```

Si "AUTO CLOCK SET IS INCOMPLETE" aparece, coloque manualmente el tiempo, vealo abajo.

```

AUTO CLOCK SET IS
INCOMPLETE
PLEASE SET CLOCK BY
PRESSING ACTION KEY
    
```

### Conectando cordón de AC a la toma de pared.

```

CH AUTO SET PROCEEDING
CANCEL : STOP
    
```

Al inicio, el idioma de la pantalla está fijado a inglés. Para cambiar el idioma consulte la página 18.

```

AUTO CLOCK SET
PROCEEDING
CANCEL : STOP
    
```

Si usa convertidor de cable solo enciéndala y seleccione el canal PBS en su horario de uso u horario de zona. Si utiliza receptor DSS este debe estar apagado.

#### PRECAUCION

Si se sobre ajusta "NUT TYPE" el cable coaxial RF podría dañar las terminales de conexión. Ajusta ligeramente utiliza solo los dedos.

### Realizando configuración inicial

Si la colocación de tiempo fue incompleta.

- 1 Presione la tecla ACTION en el control remoto para visualizar la pantalla del menú RELOJ.

```

FIJAR RELOJ
11:--:--
VERANO:ACT
ELEGIR MES
ELEGIR : ▲ ▼
FIJAR : SET
SALIR : ACTION
    
```

- 2 Presione ▲ ▼ para seleccionar el mes y SET para ajustar. De la misma forma, seleccione y ajuste la fecha, año, hora y DST (Hora de Verano).

```

FIJAR RELOJ
9/29/2002 DOM 12:00PM
VERANO:ACT
FIJACION ES COMPLETO
    
```

- 3 Presione dos veces la tecla ACTION para poner el RELOJ en marcha y salir.

## Operaciones básicas para la reproducción

- 1 Inserte un cassette,
  - La alimentación del DECK se activa. En la Pantalla de Visualización Multi Función se ilumina "VCR".
- 2 Presione **PLAY** para reproducir el cassette.
  - Si el cassette no tiene lengüeta de prevención de grabación (página 6), se inicia la reproducción automáticamente.

### Detalles especiales durante la grabación


- Presione **FF/SLOW+** o **REW/SLOW-** para búsqueda de escenas hacia delante/ hacia atrás. Presione **PLAY** para liberar. Luego de que la búsqueda se ha iniciado, cada vez que presione **FF/SLOW+** o **REW/SLOW-** se cambia la velocidad como sigue:
    - [SLP] aprox. 21X ↔ aprox. 9X
    - [LP] aprox. 9X ↔ aprox. 7X
    - [SP] aprox. 7X ↔ aprox. 3X
 Si la imagen se interrumpe con la velocidad de 21x, 9x o 7x, cambie la velocidad a 9x, 7x o 3x.
  - Presione **PAUSE/STILL** para imagen Fija (Congelada). Presione **PLAY** para liberar.
  - Presione **PAUSE/STILL** en el modo de imagen fija para imágenes cuadro a cuadro. Presione **PLAY** para liberar.
  - Presione **FF/SLOW+** o **REW/SLOW-** en el modo de imagen fija para imágenes cuadro a cuadro. Presione **PLAY** para liberar.
- 3 Presione **STOP** para detener el cassette.
    - Presione **REW/SLOW-** o **FF/SLOW+** en el modo de parada para rebobinado/avance rápido del cassette.
    - Presione **EJECT** en el control remoto, o **STOP/EJECT** en el DECK para expulsar el cassette.

## Operaciones básicas para la grabación

- 1 Inserte el cassette con lengüeta de protección de grabación (pág. 6).
- 2 Presione **CH ▲/▼**, o las teclas de números para seleccionar el canal.
- 3 Presione **SPEED** para seleccionar la velocidad de grabación (pág.6)
  - SP = Reproducción estándar,
  - LP = Larga duración,
  - SLP = Superlarga duración.
- 4 Presione **REC** para comenzar a grabar.
  - Para eliminar escenas indeseadas, presione **PAUSE/STILL** para pausar, y al presionar nuevamente se reanuda la grabación.
  - No podrá ver otro canal durante la grabación.
- 5 Presione **STOP** para detener la grabación.

## Programación fácil para la grabación con temporizador

- 1 Presione **PROG** para visualizar PROGRAM.

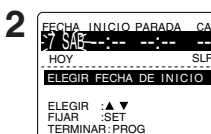


- 1) Para ajustar la **FECHA de grabación**, presione **▲▼** para seleccionar:
  - 1-31 = una vez, o
  - DIARIO = a la misma hora de lunes a viernes, o
  - SEMANA = a la misma hora cada semana y presione **SET** para ajustar.

### Orden para elegir


Ejemplo  
 Fecha de hoy — 8-9.....31-1-2.....6  
 ▲/▼ Orden para elegir DIARIO  
 SEMANAL.....SEMANAL SEMANAL  
 (SAB) (LUN) (DOM)

- 2) Para ajustar los ítems que quedan, presione **▲▼** para seleccionar y presione **SET** para ajustar los tiempos de INICIO/ PARADA, CANAL, o entrada de LÍNEA (pág. 35), y velocidad del cassette (SP, LP, SLP). Presione **PROG** para finalizar PROGRAM.

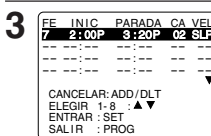

- 3 Presione **▲▼** para seleccionar un número que no está usando para ingresar mas programas y presione **SET** para ajustar. Luego repita el paso 2. O Presione nuevamente **PROG** para salir.

 - Grabación de un toque (grabar en marcha), Presione **REC** repetidamente para ajustar la hora de grabación (30 min - 4 horas).
  - La videograbadora termina la grabación a una hora programada.



Guía para rápida consulta

# Spanish Quick Use Guide/ Guía para rápida consulta

## Operaciones básicas del DVD

**1** Presione **POWER** en el control remoto o el aparato.

**2** Presione **DVD** para seleccionar el modo DVD.

**3** 1) Presione **OPEN/CLOSE**.

2) Ponga un disco en la bandeja de disco.

- Sujete el disco sin tocar ninguna de sus superficies, póngalo con el lado donde esté impreso el título hacia arriba, alinéelo con las guías y póngalo en su posición apropiada.

Disco de 3" (8 cm)      Disco de 5" (12 cm)

**4** Presione **PLAY** para iniciar la reproducción.

La bandeja del disco se cierra automáticamente.

- Si está usando un DVD interactivo (Interactive DVD) o un Vídeo CD con control de reproducción (playback control) y aparece un menú de títulos (TITLE MENU) en la pantalla, siga al paso 5.

**5** Presione **▲▼◀▶** o las teclas numéricas para seleccionar el artículo deseado.

Presione **SET** para la reproducción.

Si usa las teclas numéricas, la reproducción comienza automáticamente.

**6** Presione **STOP** para parar la reproducción.

**7** Presione **OPEN/CLOSE** para expulsar el disco.

### ■ Para buscar una escena particular

**Búsqueda hacia adelante**

Presione **FF/SLOW+** en el modo de reproducción.

**Búsqueda hacia atrás**

Presione **REW/SLOW-** en el modo de reproducción.

(Para liberar, presione **PLAY**)

### ■ Para saltar un capítulo o una pista

**Salto hacia adelante**

Presione **SKIP ▶▶** en el modo de reproducción.

Un capítulo (DVD) o una pista (Vídeo CD/CD) se salta cada vez que se oprime la tecla.

**Salto hacia atrás**

Presione **◀◀ SKIP** en el modo de reproducción.

### ■ Para ver una imagen fija

Presione **PAUSE/STILL** durante la reproducción.

(Para liberar, presione **PLAY**)

### ■ Para ver imágenes cuadro a cuadro

(DVD/Vídeo CD)

Presione **PAUSE/STILL** en el modo de imagen fija.


La imagen avanza un cuadro cada vez que presiona la tecla.

(Para volver a la reproducción normal, presione **PLAY**.)

### ■ Para ver en cámara lenta (DVD/Vídeo CD)

Presione **FF/SLOW+** o **REW/SLOW-** en el modo de imagen fija.

(Para liberar, presione **PLAY**)

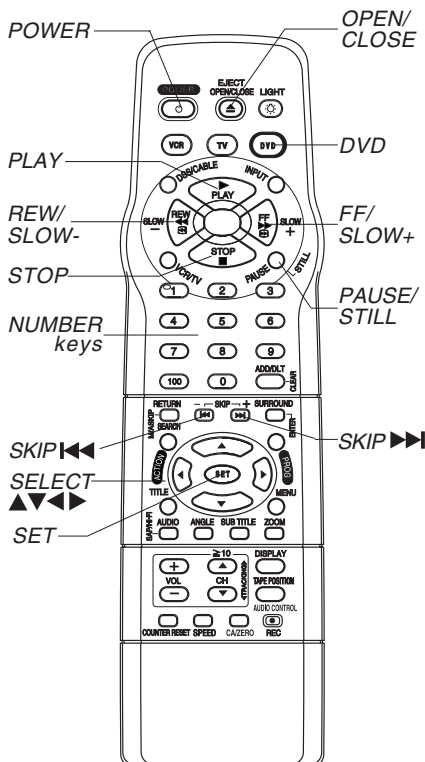


## Funcionamiento del DVD utilizando visualizaciones en pantalla

Cuando se presiona DISPLAY, la visualización en pantalla muestra la información del disco (título / capítulo / número de lista, tiempo transcurrido de reproducción, audio / idioma del subtítulo, y ángulo) e información (repetir la reproducción, modo reproducción, Karaoke vocal encendido / apagado, etc.).

**1** Presione **DISPLAY** en el modo reproducción o parada para visualizar Visualizaciones en pantalla.



- Cada vez que se presione **DISPLAY**, la visualización en pantalla cambia como se muestra a continuación.

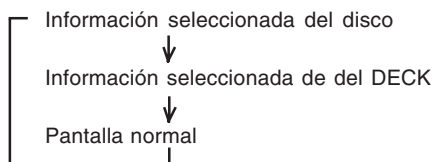

**2** Presione **▲▼** (o **◀▶**) para seleccionar el ítem deseado. Presione **SET** para ajustar.

**3** Presione **▲▼** para seleccionar el ajuste deseado. Presione **SET** para ajustar.

Para volver a la pantalla normal, Presione repetidamente **CLEAR** o **DISPLAY**.

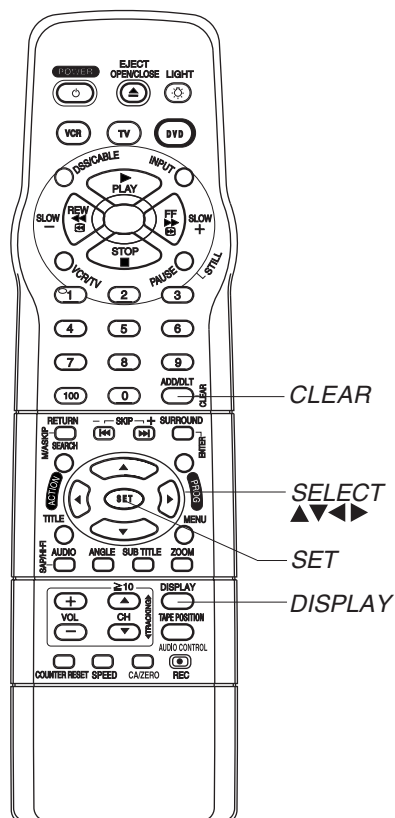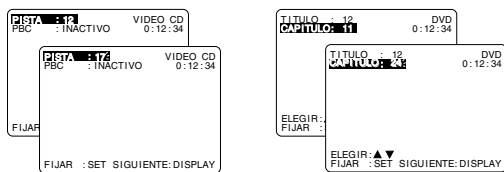

Guía para rápida  
consulta

# Spanish Quick Use Guide/ Guía para rápida consulta

## Fijaciones iniciales



- 1 Presione DVD** para seleccionar el modo DVD.
- 2 Presione ACTION en el modo de parada** para visualizar MENU.
- 3 Presione ▲▼** para seleccionar el artículo deseado.  
**Presione SET.**  
**IDIOMAS DEL DISCO**  
Todos los idiomas ofrecidos en el disco pueden ser ajustados. Si el idioma ajustado no es ofrecido en el disco, se seleccionará el idioma original del disco.  
**SALIDA DE AUDIO**  
Puede usted ajustar la salida audio procedente del terminal de salida audio digital.  
**DETENER RASTREO**  
Para seleccionar "CAMPO" o "CUADRO fijo" para prevenir inestabilidad o para permitir ver textos pequeños o patrones finos claramente en el modo de imagen fija.  
**PREFERENCIA**  
Para seleccionar si el material del vídeo para pantalla ancha será vuelto a reproducir en el estilo Pan&Scan, en el estilo Letterbox o en el estilo 16 : 9 en la pantalla.
- 4 Presione ▲▼** para seleccionar el artículo deseado.  
**Presione SET.**
- 5 Volver a visualizar el menú de DVD para continuar el ajuste.**  
**Presione ACTION** y pase al paso 3 para ajustar otro ajuste o, para salir, **presione ACTION** tres veces.

## Selección de IDIOMAS DEL DISCO [DVD solamente]

- Seleccione "AUDIO"**  
(Fijación de fábrica : inglés)  
**Inglés / Español / Francés / Japonesa :**  
**Original :** Se seleccionará el idioma original de cada disco.  
**OTRO \*\*\*\* :** Se puede seleccionar el otro idioma.
- Seleccione "SUBTITULO"**  
(Fijación de fábrica)  
**AUTO :** Se seleccionará el mismo que fue seleccionado en la preparación de "AUDIO".
- Si el idioma seleccionado en la preparación de "AUDIO" se utiliza durante la reproducción, los subtítulos no aparecerán.
  - Si se utiliza otro idioma durante la reproducción, los subtítulos aparecerán en el idioma seleccionado en la preparación de "AUDIO"
- Inglés / Español / Francés / Japonesa :**  
**OTRO \*\*\*\* :** Se puede seleccionar el otro idioma.
- Seleccione "MENU"**  
(Fijación de fábrica : inglés)  
**Inglés / Español / Francés / Japonesa :**  
**OTRO \*\*\*\* :** Se puede seleccionar el otro idioma.

## Cambio del idioma de subtítulos [DVD solamente]

El idioma de los subtítulos seleccionado al hacer las fijaciones iniciales se puede cambiar por otro idioma diferente, si éste se encuentra disponible.

- 1**  **Presione SUBTITLE** durante la reproducción. Cuando no haya subtítulos grabados, "... se visualizará en lugar del número de idioma.
- 2**  **Presione ▲▼** para seleccionar el idioma deseado.  
**Presione ► (o ◀)** para ajustar.  
**Presione ▲▼** para seleccionar "ACTIVO" o "INACTIVO."


## Cambio del idioma de la pista de sonido [DVD solamente]


El idioma de la pista de sonido seleccionado al hacer las fijaciones iniciales se puede cambiar por otro idioma diferente, si éste se encuentra disponible.

- 1**  **Presione AUDIO** durante la reproducción para visualizar la pantalla AUDIO.
- 2**  **Presione ▲▼** para seleccionar idioma.

## Visión desde otro ángulo [DVD solamente]

Algunos discos DVD tienen escenas que han sido filmadas simultáneamente desde un número de ángulos diferentes. Con estos discos, la misma escena podrá verse desde cada uno de estos ángulos diferentes utilizando el botón ANGLE.

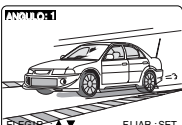**1**  Presione **ANGLE** durante la reproducción para visualizar la pantalla de ángulo.

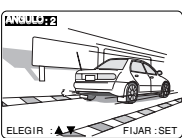**2**  Presione **▲▼** para seleccionar el ángulo deseado.

## Utilización de un menú de títulos [DVD solamente]


Algunos discos con películas, por ejemplo, vienen con dos o más títulos. Si el disco tiene un menú de títulos grabados, el botón TITLE podrá utilizarse para seleccionar el título de la película.

**1** Presione **TITLE** durante la reproducción. Ahora se visualiza una lista de los títulos del disco.

**2**  Presione **▲▼◀▶** o las teclas de números para seleccionar el título deseado. Presione **SET**.

## Selección de vocal para los discos de Karaoke [DVD/Video CD]

**1** Presione **AUDIO** durante la reproducción para visualizar la pantalla AUDIO.

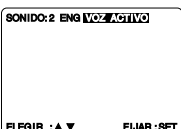
**2**  Presione **▲▼** (o **◀▶**) para seleccionar el ajuste deseado. Presione **▶** (o **◀**) para ajustar. (DVD solamente)

- DVD Karaoke (1 vocal) VOCAL ON → VOCAL OFF
- DVD Karaoke (2 vocals) VOCAL V1 + V2 → VOCAL V1 → VOCAL V2 → VOCAL OFF
- Video CD LR → L → R

## Utilización de un menú de DVD [DVD solamente]

Algunos discos DVD tienen estructuras únicas de menús llamadas menús DVD. Por ejemplo, los DVDs programados con un contenido complejo proporcionan menús guía, y los grabados con varios idiomas proporcionan menús para audio e idiomas de subtítulos. Aunque los contenidos de los menús DVD y la operación cambian de disco a disco, a continuación se explica la operación básica cuando se utiliza esta característica.

**1** Presione **MENU** durante la reproducción. El menú de DVD introducido en el disco se visualiza ahora.

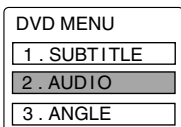
**2**  Presione **▲▼◀▶** o las teclas de números para seleccionar el ítem deseado. Presione **SET**.

## Ampliación de la imagen [DVD solamente]

Durante la reproducción de un DVD, puede ampliar partes específicas de una imagen y seleccionar la relación de zoom usando el botón ZOOM.

Presione **ZOOM** repetidamente para cambiar el tamaño de la imagen como se indica a continuación:

- Use los botones **▲, ▼, ◀, ▶** para desplazar la posición hacia arriba, hacia abajo, hacia la izquierda o hacia la derecha.

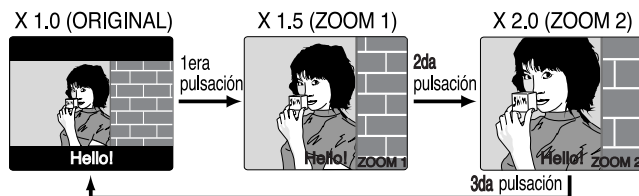

# Index

## DECK & VCR

- A** ACTION button ..... 8, 18
- Accessories ..... 4
- ADD/DELETE button (Add or Delete a Channel) . 8, 19
- Audio Broadcast types (Stereo/SAP/Mono) .... 26
- Audio Mode (Playback, Recording) ..... 27
- Auto Operation Functions ..... 35
- Auto Shut-Off ..... 37
- B** Batteries ..... 4
- C** Channel ("SET UP CHANNEL") ..... 18
- Channel Up/Down, Tracking/V-Lock Button ... 6, 8
- Clock ("SET CLOCK") ..... 18
- Commercial Advance ..... 30 ~ 32
- Connections ..... 12 ~ 15
- Copy Your Tapes (Dubbing) ..... 39
- COUNTER RESET button ..... 8, 35
- Customer Services Directory ..... 57
- D** DISPLAY button ..... 8, 11
- DSS/CABLE mode button ..... 8, 28
- DST (Daylight Saving Time) ..... 19
- E** EJECT button ..... 8, 20
- ENTER button (For tuning TV Channel) .... 8, 28
- F** FAST FORWARD/SEARCH button ..... 8, 20
- H** Head Cleaning ..... 6
- I** Index Search ..... 34
- Indicator (Multi Function Display) ..... 11
- Initial Setup (Ready to Play) ..... 16, 17
- INPUT button ..... 8, 39
- L** Limited Warranty ..... 56, 57
- Location of Controls (Remote, DECK) .... 8 ~ 10
- M** Movie Advance ..... 33
- Multi-Brand Control ..... 28, 29
- O** On-Screen Displays (VCR) ..... 11
- One Touch Recording ..... 21
- P** PAUSE/STILL button (Still Picture) ..... 8, 20
- PLAY button (Playback a Tape) ..... 8, 20
- POWER button ..... 8
- PROG button (PROGRAM) ..... 8, 24
- Program Clear, Review, Replace ..... 25
- Program End Search ..... 34
- Q** Quality Picture ..... 6
- R** REC button (Record on a Tape) ..... 8, 21
- Record Tab ..... 6
- Remote Sensor ..... 9
- Remote Warning ..... 38
- Repeat Play ..... 36
- REWIND/SEARCH button ..... 8, 20
- S** SAP/Hi-Fi ..... 27
- SEARCH (Index and Program End Search) ... 34
- Servicenter List ..... 56
- SPEED+/SLOW- button (Slow Motion Picture) .. 8, 20
- Spanish Quick Use Guide ..... 58 ~ 63
- Specifications ..... 7
- SPEED button ..... 8, 21
- Still (Freeze) Picture ..... 20
- STOP button ..... 8, 20
- T** Tape Position, Tape Status ..... 38
- Timer Recording ..... 24
- Trouble Shooting ..... 54, 55
- TV mode button ..... 8, 28
- V** VCR Lock ..... 37
- VCR mode button ..... 8, 28
- VCR/TV button ..... 8, 9, 21
- VOLUME +/- button (TV Volume) ..... 8, 28
- W** Warning and Instruction Displays ..... 53
- Weak Signal Display ..... 37
- Z** ZERO SEARCH button ..... 8, 35

## DVD

- A** ACTION button ..... 8, 49
- ANGLE button (Multiple Angle Viewing) .... 8, 41
- AUDIO button (Audio Soundtrack Language) ... 8, 40
- AUDIO CONTROL button ..... 8, 44
- Audio Output (For Selecting Audio Output) ... 50
- Auto Power Off Function ..... 23
- C** CLEAR button ..... 8, 43, 48
- Component Video Output ..... 10, 13
- D** Disc Languages ..... 49
- DISPLAY button ("On-Screen Display") ..... 8, 45
- DVD Menu ..... 42
- DVD mode button ..... 8, 28
- DVD Lock Ratings ..... 48
- F** Frame by Frame Picture ..... 23
- Forwards/Reverse Chapter/Track ..... 23
- Forwards/Reverse Scene Search ..... 23
- K** Karaoke (Vocal Selection for Karaoke Discs) .... 41
- L** Language Code List ..... 52
- M** MENU button (To display DVD Menu) ..... 8, 42
- MP3 ..... 47
- Multiple Angle Viewing ..... 41
- O** OPEN/CLOSE button ..... 8, 22
- Optical Digital Audio Output ..... 10, 15
- P** PLAY button (Play a Disc) ..... 8, 22
- Program Play (For Video CD/ CD) ..... 43
- R** Random Play (For Video CD/ CD) ..... 44
- Repeat Play ..... 46
- Resume Function ..... 23
- RETURN button ..... 8, 22
- S** SEARCH button
- (Forward/Reverse Scene Search) ..... 8, 23
- SKIP ►►I or I◄◄ button
- (Forward/Reverse Chapter/Track) ..... 8, 23
- SLOW+/SLOW- button (Slow Motion Picture) . 8, 23
- Sound Output Level ..... 44
- STILL button (Still Picture or Pause) ..... 8, 23
- Still Mode (For selecting "FIELD" or "FRAME") ... 51
- STOP button ..... 8, 22
- SUBTITLE button
- (For selecting Subtitle Language) ..... 8, 40
- SURROUND button ..... 8, 23
- S-Video Out ..... 10, 13
- T** TITLE button (Title Menu) ..... 8, 42
- TV Mode (For selecting the screen display style) .... 51
- V** Video CD ..... 23
- Z** ZOOM button (Picture Zoom) ..... 8, 41

Panasonic Consumer Electronics Company,  
 Division of Matsushita Electric Corporation of America  
 One Panasonic Way Secaucus, New Jersey 07094

Panasonic Sales Company ("PSC"),  
 Division of Matsushita Electric of Puerto Rico, Inc.  
 Ave. 65 de Infantería. Km. 9.5 San Gabriel Industrial Park, Carolina,  
 Puerto Rico 00985



Printed in Indonesia  
 LSQT0525B  
 S0102-1052