



MICRO COMPONENT SYSTEM  
MP3-CD/CD-R/RW PLAYBACK  
MM-C6DAB

Instruction Manual



## Safety Warnings



**CLASS 1 LASER PRODUCT**  
**KLASSE 1 LASER PRODUKT**  
**LUOKAN 1 LASER LAITE**  
**KLASS 1 LASER APPARAT**  
**PRODUCTO LASER CLASE 1**



### CAUTION

RISK OF ELECTRIC SHOCK.  
DO NOT OPEN



### CAUTION:

TO REDUCE THE RISK OF ELECTRIC SHOCK,  
DO NOT REMOVE REAR COVER.  
NO USER SERVICEABLE PARTS INSIDE.  
REFER SERVICING TO QUALIFIED SERVICE  
PERSONNEL.



This symbol indicates that dangerous voltage which can cause electric shock is present inside this unit.



This symbol alerts you to important operating and maintenance instructions accompanying the unit.

### CLASS 1 LASER PRODUCT

This Compact Disc player is classified as a CLASS 1 LASER product.

Use of controls adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

### CAUTION-INVISIBLE LASER RADIATION WHEN OPEN AND INTER LOCKS DEFEATED, AVOID EXPOSURE TO BEAM.

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

## Wiring the Mains Power Supply Plug(UK Only)

### IMPORTANT NOTICE

The mains lead on this equipment is supplied with a moulded plug incorporating a fuse. The value of the fuse is indicated on the pin face of the plug and, if it requires replacing, a fuse approved to BS1362 of the same rating must be used.

Never use the plug with the fuse cover omitted. If the cover is detachable. If a replacement fuse cover is required, it must be of the same colour as the pin face of the plug. Replacement covers are available from your dealer.

If the fitted plug is not suitable for the power points in your house or the cable is not long enough to reach a power point, you should obtain a suitable safety approved extension lead or consult your dealer for assistance.

However, if there is no alternative to cutting off the plug, remove the fuse and then safely dispose of the plug. Do NOT connect the plug to a mains socket as there is a risk of shock hazard from the bared flexible cord.

 
### IMPORTANT

The wires in the mains lead are coloured in accordance with the following code:-

**BLUE = NEUTRAL      BROWN = LIVE**

As these colours may not correspond to the coloured markings identifying the terminals in your plug, proceed as follows:-

The wire coloured BLUE must be connected to the terminal marked with the letter N or coloured BLUE or BLACK. The wire coloured BROWN must be connected to the terminal marked with the letter L or coloured BROWN or RED.

**WARNING: DO NOT CONNECT EITHER WIRE TO THE EARTH TERMINAL WHICH IS MARKED WITH THE LETTER E OR BY THE EARTH SYMBOL , OR COLOURED GREEN OR GREEN AND YELLOW.**

## Contents

Thank you for buying this  
SAMSUNG micro-component system.

Please take time to read these instructions.  
They will allow you to operate your  
system with ease and take full advantage  
of its features.



◆ SAFETY WARNINGS .....	2
◆ INSTALLING YOUR MICRO-COMPONENT SYSTEM .....	
■ Front Panel View .....	4
■ Remote Control .....	5
■ Rear Panel View .....	6
■ Where to Install your Micro-Component System .....	7
■ Connecting your System to the Power Supply .....	7
■ Inserting Remote Control Batteries .....	7
■ Connecting to an External Source .....	8
■ Speaker Connection .....	8
■ Connecting the AM (MW) Aerial .....	9
■ Connecting the FM Aerial .....	9
■ Connecting the DAB Antenna(included) .....	9
■ Demo/Dimmer Function .....	10
■ Setting the Clock .....	10
◆ CD-PLAYER .....	
■ To replay the CD/MP3-CD .....	10
■ Regarding the playback of CD-R/RW .....	11
■ Selecting a Track .....	11
■ Selecting the MP3-CD album and track .....	11
■ Shuffle Play Function .....	11
■ Searching for a Specific Music Passage on a CD .....	12
■ Function to skip through 10 tracks at a time .....	12
■ Last Memory Function .....	12
■ Repeating One or All Tracks on the Compact Discs .....	13
■ Repeat A ↔ B Function .....	13
■ Programming the Order of Playback .....	13
■ Checking or Changing Programmed Tracks .....	14
◆ TUNER .....	
■ Searching for and Storing the Radio Stations .....	14
■ Selecting a Stored Station .....	15
■ Improving Radio Reception .....	15
■ Listening to DAB Stations(Future proof digital radio tuner) .....	16
■ Storing DAB Stations .....	17
■ DAB Related Functions .....	17
■ About RDS broadcasting .....	18
■ About RDS DISPLAY Function .....	18
■ PTY(Program Type) indication and PTY-SEARCH function .....	19
◆ TAPE DECK .....	
■ Listening to a Cassette .....	20
■ Tape Counter .....	20
■ Recording a Compact Disc .....	21
■ Recording a Radio Program .....	21
◆ OTHER FUNCTIONS .....	
■ Timer Function .....	22
■ Cancelling the Timer .....	22
■ Power Sound Function .....	23
■ EQ/S.BASS (Super Bass) Function .....	23
■ Sleep Timer .....	24
■ MUTE Function .....	24
■ Connecting Headphones .....	24
◆ RECOMMENDATIONS FOR USE .....	
■ Safety Precautions .....	25
■ Cleaning your Micro-Component System .....	25
■ Precautions When Using Compact Discs .....	26
■ Precautions When Using Audio Cassettes .....	26
■ Before Contacting the After-Sales Service .....	26
■ Technical Specifications .....	27

### Symbols



Press



 
Push




Important



Note

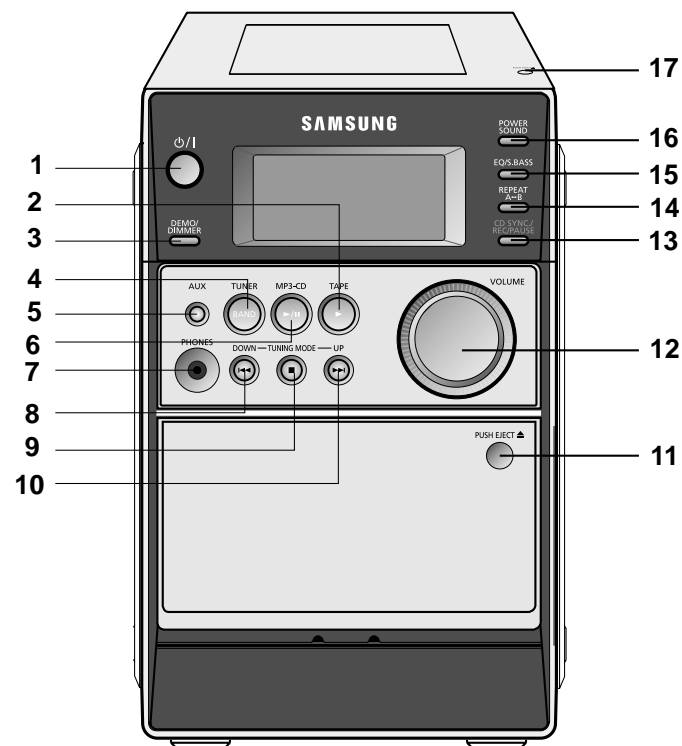


- |                            |                                    |
|----------------------------|------------------------------------|
| 1. STANDBY/ON              | 11. PUSH EJECT                     |
| 2. TAPE PLAY               | (CASSETTE DOOR OPEN/CLOSE)         |
| 3. DEMO/DIMMER             | 12. VOLUME CONTROL                 |
| 4. TUNER / BAND            | 13. CD SYNC./REC/PAUSE             |
| 5. AUX                     | 14. CD OR TAPE REPEAT A ↔ B        |
| 6. MP3-CD PLAY/PAUSE       | 15. EQ/SUPER BASS                  |
| 7. HEADPHONE JACK          | 16. POWER SOUND                    |
| 8. SKIP OR SEARCH REWIND   | 17. PUSH EJECT(CD DOOR OPEN/CLOSE) |
| 9. STOP/TUNING MODE        |                                    |
| 10. SKIP OR SEARCH FORWARD |                                    |

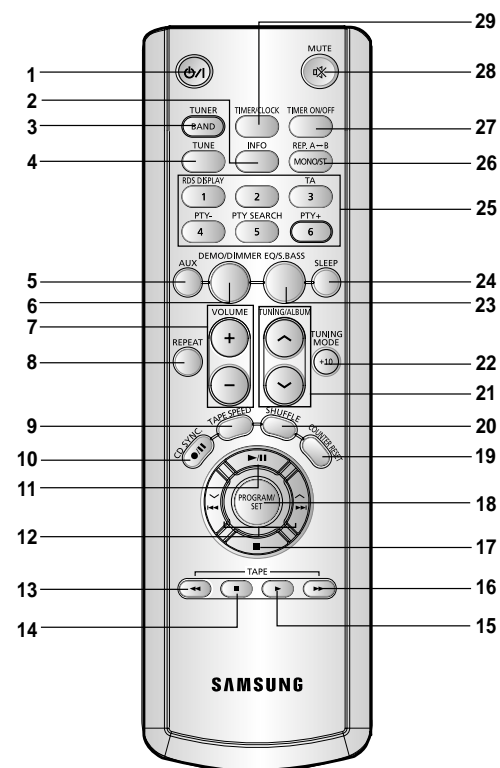 

- |                          |                                      |
|--------------------------|--------------------------------------|
| 1. STANDBY/ON            | 16. TAPE FAST-FORWARD                |
| 2. INFORMATION           | 17. CD STOP                          |
| 3. TUNER/BAND            | 18. PROGRAM/SET                      |
| 4. TUNE                  | 19. COUNTER RESET                    |
| 5. AUX                   | 20. SHUFFLE                          |
| 6. DEMO/DIMMER           | 21. TUNING UP OR DOWN / ALBUM SKIP   |
| 7. VOLUME CONTROL        | 22. TUNING MODE/+10                  |
| 8. REPEAT                | 23. EQ/S.BASS                        |
| 9. TAPE SPEED            | 24. SLEEP                            |
| 10. CD SYNCHRO/REC/PAUSE | 25. RDS SELECTION/DAB PRESET STATION |
| 11. CD PLAY/PAUSE        | 26. REPEAT A ↔ B / FM MONO/STEREO    |
| 12. CD SKIP OR SEARCH    | 27. TIMER ON/OFF                     |
| 13. TAPE REWIND          | 28. MUTE                             |
| 14. TAPE STOP            | 29. TIMER/CLOCK                      |
| 15. TAPE PLAY            |                                      |

## Rear Panel View

 GB

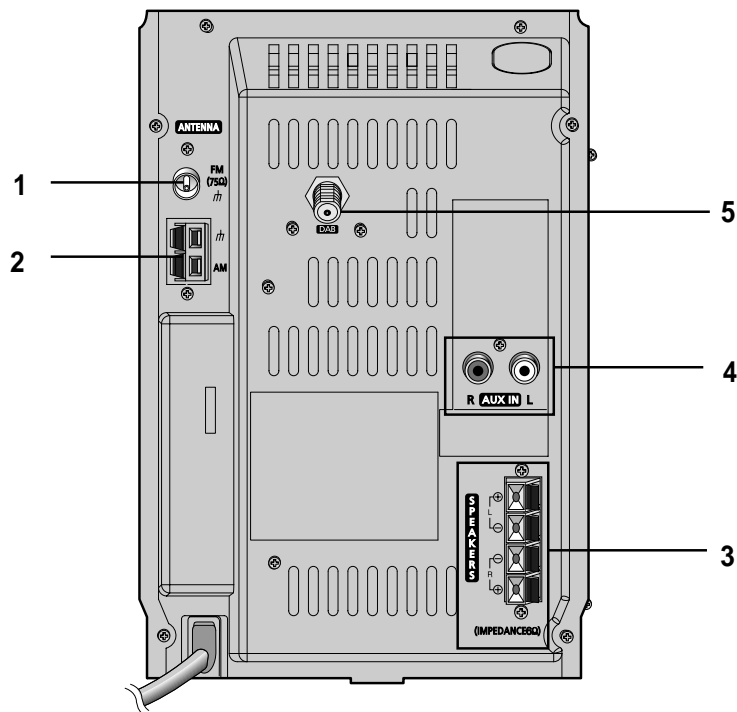


1. FM Aerial Connector Terminal
2. AM Aerial Connector Terminals
3. Loudspeakers Connector Terminals
4. AUX-Input
5. DAB Aerial Connector Terminal

## Where to Install Your Micro-Component System

 To take full advantage of your new micro-component system, follow these installation instructions before connecting the unit.

- ♦ Install the system on a flat, stable surface.
- ♦ Never place this unit on carpeting.
- ♦ Never place this unit in an outdoor area.
- ♦ Maintain an open space of approximately 6 inches (15 cm) on the sides and rear of the system, for ventilation purposes.
- ♦ Make sure that you have enough room to open the compact disc compartment easily.
- ♦ Place the loudspeakers at a reasonable distance on either side of the system to ensure good stereo sound.
- ♦ Direct the loudspeakers towards the listening area.
- ♦ For optimum performance, make sure that both speakers are placed at an equal distance above the floor.

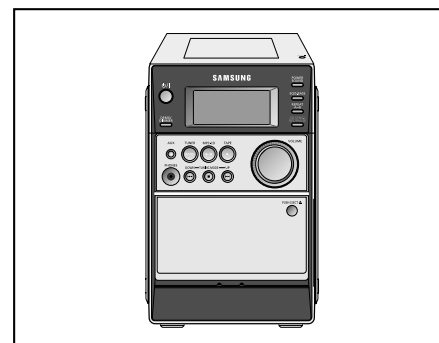


## Connecting your System to the Power Supply

The main lead must be plugged into an appropriate socket.

Before plugging your system into a main socket, you must check the voltage.

 - 1 Plug the main lead into an appropriate socket.
- 2 Press the **Standby/On** button to switch your micro-component system on.

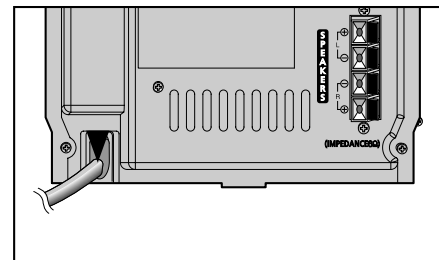


## Inserting Remote Control Batteries

GB


Insert or replace remote control batteries when you:

- ♦ Purchase the micro-component system
- ♦ Find that the remote control is no longer operating correctly

 When replacing the batteries, use a new set of batteries and never mix alkaline and manganese batteries.

- 1 Place your thumb on the position marked  on the battery compartment cover (rear of the remote control) and push the cover in the direction of the arrow.
- 2 Insert two AAA, LR03 or equivalent batteries, taking care to respect the polarities:
  - ♦ + on the battery against + in the battery compartment
  - ♦ - on the battery against - in the battery compartment
- 3 Replace the cover by sliding it back until it clicks into position.

 ➤ If you will not be using the remote control for a long time, remove the batteries to prevent corrosion.

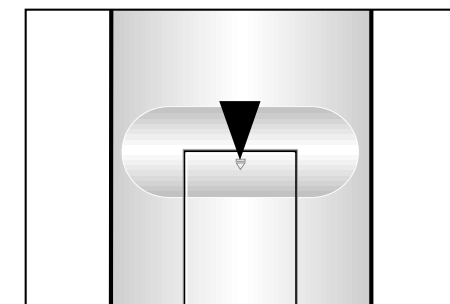

## Connecting to an External Source



The auxiliary input can be used to take advantage of the sound quality of your micro-component system when listening to other sources.

- Examples:**
- ♦ A television
  - ♦ A video disc player
  - ♦ A Hi-Fi stereo video cassette recorder

➤ To connect to the external source, the source must have an audio output. In addition, you need an RCA connection cable.

- 1 Set the system to standby mode and disconnect it and the external source from the main socket.

- 2 Connect the audio cable to the rear of the micro-component system.

**Connect the... To the connector marked...**

- Red jack..... R (right)  
White jack..... L (left)

➤ For optimum sound quality, do not invert the right and left channels.

 
- 3 Plug the system back into the main socket and press **Standby/On** (⏻/⏻) to switch it on.

- 4 Select the AUX source by pressing **AUX**.  
**Result:** AUX is displayed.

- 5 Switch the external source on.

- 6 Adjust the volume and balance as required:  
♦ Volume ♦ Equaliser

**Example:** You can watch a film and take advantage of stereo sound provided that the original sound track is in stereo (as if you were in a cinema).

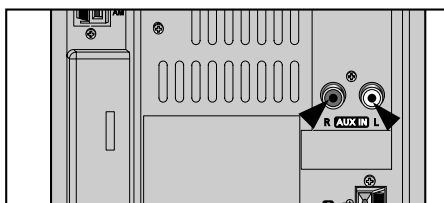

## Speaker Connection

 
The loudspeaker connector terminals are located on the rear of the system (red and black tabs).

There are four terminals on the system:

- ♦ Two for the left speaker (marked L)
- ♦ Two for the right speaker (marked R)

To achieve the correct sound quality, connect the:

- ♦ Red wire to the + terminals
- ♦ Black wire to the - terminals

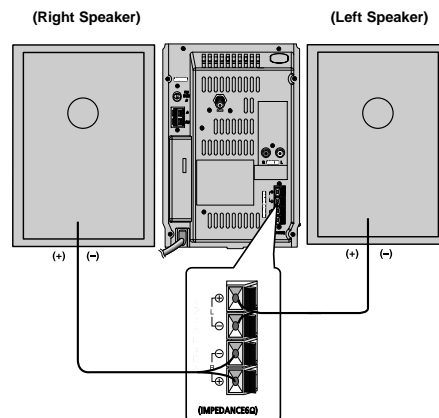

## Directions in Installing Speaker

- ♦ Installation in a place near heating apparatus, under direct lay of light or with high humidity may cause performance degradation of the speaker.
- ♦ Do not install on the wall or on a high place of pole or other unstable place to prevent any safety accident caused by falling of the speaker.
- ♦ Do not take the speaker apart from TV or computer monitor. The speaker near the TV or computer monitor may influence the quality of the screen display.

## Connecting the AM (MW) Aerial

 


The AM aerial (for long and medium waves) can be:

- ♦ Placed on a stable surface
- ♦ Fixed to the wall (you must first remove the base)

The **AM** aerial connector terminals are located on the rear of the system and are marked **AM**.


- To avoid noise interference, check that the loudspeaker wires do not run close to the aerial wires.  
Always keep them at least 2 inches (5 cm) away.

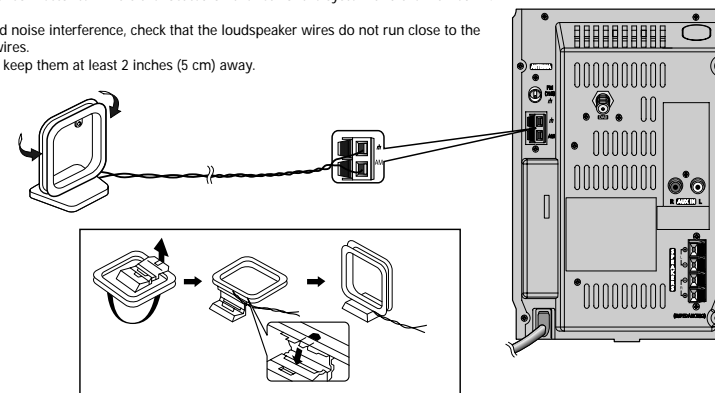

## Connecting the FM Aerial


How to connect a COAXIAL TYPE aerial.

 - ♦ Connect a 75Ω antenna to the **FM** antenna terminal.
- ♦ Plug the connector on the **FM** aerial supplied into the coaxial socket (75Ω) marked **FM** on the rear of the system.
- ♦ Follow the instructions given on Page 14 to tune into a radio station, and determine the best position for the aerial.
- ♦ If reception is poor, you may need to install an outdoor aerial.  
To do so, connect an outdoor **FM** aerial to the **FM** socket on the rear of the system using a 75Ω coaxial cable (not supplied).

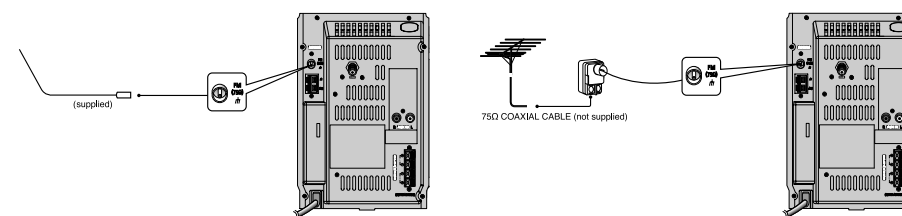

## Connecting the DAB Antenna (Included)

 - 1 Connect the connector on the end of the DAB antenna cable into the DAB antenna input on the back of the unit.
- 2 Attach the end of the DAB antenna cable to a wall with good reception.

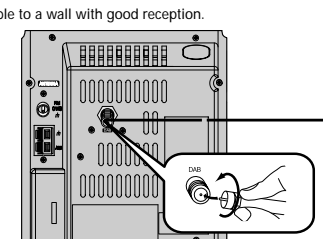

## Demo/Dimmer Function



All functions available on the system can be viewed on the display and the display's brightness can be switched between "on" and "off".

- Press the **DEMO/DIMMER** button on the front panel or on the remote control.  
**Result:** All functions available on the system appear on the front panel display.
  - Each of these are explained in detail in this guide. Please refer to the relevant section.
  - Press the **DEMO/DIMMER** button again.  
**Result:** The Dimmer function is selected and the display darkens.
  - Press the **DEMO/DIMMER** button once again to brighten the front panel display.
- A display brightness control can only be performed while the system power is on.



## Setting the Clock

 
our system is equipped with a clock which allows you to turn your system on and off automatically. You should set the clock:

- ◆ When you first purchase the micro-component system
- ◆ After a power failure
- ◆ After unplugging the unit

- ◆ For each step, you have a few seconds to set the required options. If you exceed this time, you must start again.

- Switch the system on by pressing **Standby/On** (⏻/I).
- Press **TIMER /CLOCK** twice.  
**Result:** **CLOCK** is displayed.
- Press **PROGRAM /SET**.  
**Result:** The hour flashes.
- | To...                    | Press... |
|--------------------------|----------|
| Decrease the hours ..... | ⏮        |
| Increase the hours ..... | ⏭        |
- When the correct hour is displayed, press **PROGRAM /SET**.  
**Result:** The minutes flash.
- | To...                      | Press... |
|----------------------------|----------|
| Decrease the minutes ..... | ⏮        |
| Increase the minutes ..... | ⏭        |
- When the correct time is displayed, press **PROGRAM /SET**.  
**Result:** The clock starts and is displayed, even when the system is in standby mode.

- ◆ You can display the time, even when you are using another function, by pressing **TIMER /CLOCK** once.

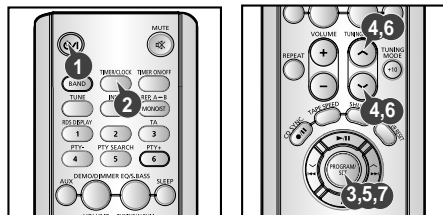

## To replay the CD/MP3-CD

This unit has been designed to playback the CDs: Audio CD, CD Text, CD-R, CD-RW and MP3-CD.

Continued use of irregular shape CDs (heart-shape, octagonal, etc.) can damage the unit.

- Select the CD function by pressing **MP3-CD** (▶/II) button.
- Press the **PUSH EJECT** (▲) button.  
**Result:** The compartment opens.
- Place your disc in the compartment, with the label on the disc facing upwards.
- Close the compartment by pressing the **PUSH EJECT** (▲) button again until it clicks into place.
- Press the **MP3-CD** (▶/II) button.
  - ◆ Your CD Player will take a few moments to scan through all the tracks recorded on a particular MP3-CD
  - ◆ The English name of the song may be indicated on the display only if directly downloaded from the PC or if the purchased MP3-CD is sorted according to titles(directory). (Other languages besides English may not be indicated.)
  - ◆ The English name of the track may not be indicated depending on the characteristics of the MP3-CD.
- To stop playback temporarily, press the **MP3-CD** (▶/II) button.  
➤ Press **MP3-CD** (▶/II) again to continue playing the disc.
- Press the **STOP** (■) button when you have finished.



 
## Regarding the playback of CD-R/RW

- ◆ In the case of an original CD-R(Recordable) recorded in audio CD format, CD-RW(Rewritable) and editing by the user, playback is processed on the respective completed status. (The player may not be played back according to the characteristics of the CD or recorded status.)
- ◆ The CD-RW is comparably less reflexive than CD which causes more time delay to read.

## Selecting a Track

You can select the track you wish to listen to, either when the compact disc player is stopped or when a disc is playing.

To start playback at the beginning of the...	Press...
Next track .....	⏭ once
Current track .....	⏮ once
Previous track .....	⏮
Track of your choice .....	⏮ appropriate number of times.

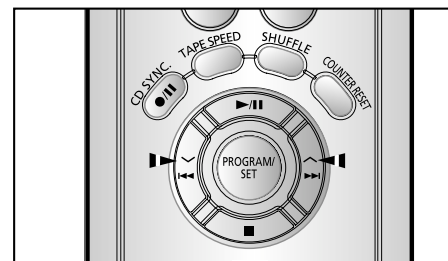


## Selecting the MP3-CD album and track




The album and track of the MP3-CD desired to listen may be selected on stopping or during playbacks.

 - You can select the album by pressing **TUNING/ALBUM** button on the remote control.  
**Result:** **ALBUM** is displayed.
- To move the album, press the **⏮** or **⏭** button.



 
- To move the track, press the **⏮**, **⏭** button.  
**Result:** **TRACK** is displayed and the track number is moved.

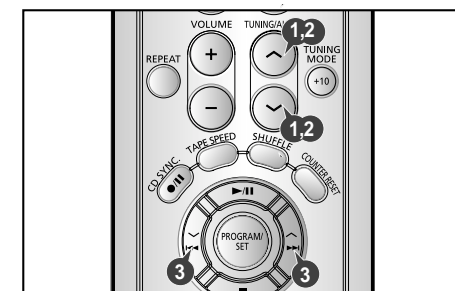

## Shuffle Play Function

You can listen to the tracks on a compact disc in a different order each time, as the various tracks will be selected automatically in a random sequence.

 - Press the **SHUFFLE** button.  
**Result:** The **SHUFFLE**(CD) or **RANDOM**(MP3-CD) indication appears and all the tracks are played in a random order. Both the track number and the playing time are displayed.
- When playing tracks in a random order, you can:
  - ◆ Move on to the next track (selected at random) by pressing **⏭**.
  - ◆ Search quickly for a specific point in the current track by pressing **⏮** / **⏭**.
- When you have finished the random playback, press **■** or press the **SHUFFLE** button again.

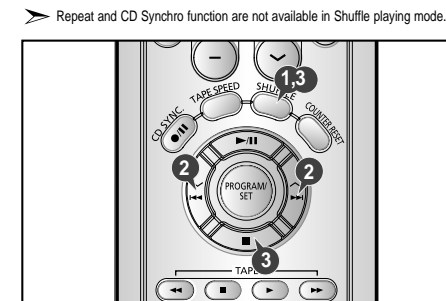

- Repeat and CD Synchro function are not available in Shuffle playing mode.

## What is MP3?

MP3 means MPEG1 Layer 3, the global standard for audio signal compression technology. It uses digital compression technology to compress original sound data by up to 12 times without sound quality degradation.

## File Compatibility

- ♦ The unit will playback files created in MP3 format (Mpeg1.Layer3) with \*.mp3 as their extension.
- ♦ Files created in MP2 format (Mpeg1.Layer2) with \*.mp2 as their extension can also be played back.

 
## How many MP3 files can a CD-R or CD-RW disc record?

The maximum capacity of one CD-R or CD-RW disc is 680MB.

Normally, one MP3 file has a capacity of 4MB, therefore approximately 170 files can be recorded on a single disc.

## Playback sequence of albums and tracks

- ♦ In case of Window Explorer display.
- ♦ The arrows indicates playback sequence of albums and tracks.
- ♦ Tracks with jpg, wav or doc only are not audio files and therefore will be skipped.

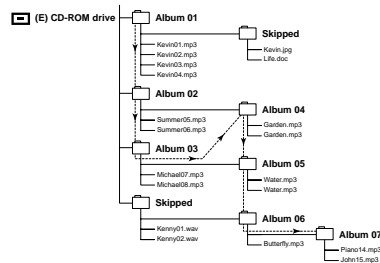


## Searching for a Specific Music Passage on a CD

When listening to a compact disc, you can quickly search for a specific music passage on a track.

**To search through the tracks... Press and hold down...**

Forwards ..... **▶▶** at least one second  
Backwards ..... **◀◀** at least one second

 ➤ It is recommended that you turn the volume down before using this function.

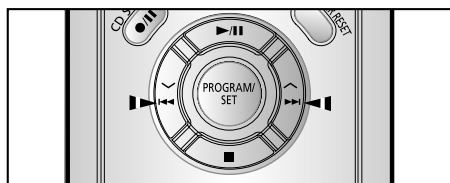


## Function to skip through 10 tracks at a time

Press the +10 button briefly while playing back a CD. The track 10 tracks after the current one will then be played back.

Example: If you want to select track 43 during playback of track 15, press the +10 button three times, and then press the **▶▶** button three times.

 15 → 20 → 30 → 40 → 41 → 42 → 43

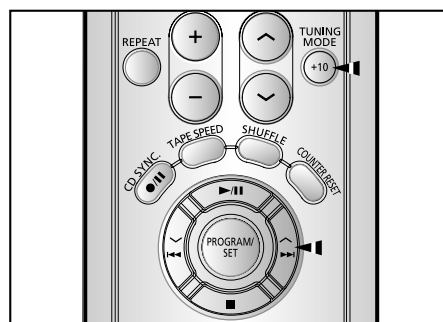


## Last Memory Function

(This function is only available during playback of MP3-CD.)

When MP3-CD playback is selected again after your CD player has been stopped or turned off, this function allows playback from the start of the track that you last listened to.

 - ♦ Press the PROGRAM/SET button while your MP3-CD is being played. The LAST ON and LAST OFF may be repeatedly selected.

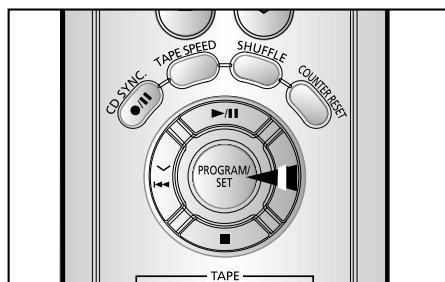

## Repeating One or All Tracks on the Compact Discs

 
You can repeat indefinitely:

- ♦ A specific track on a compact disc.
- ♦ All tracks on the compact disc selected.

**1 To repeat... Press Repeat on the Front Panel one or more times until...**

The current track indefinitely ..... **REPEAT 1** is displayed  
All songs ..... **REPEAT ALL** is displayed

**2** When you wish to stop the Repeat function, press REPEAT button.  
Result: **REPEAT** is no longer displayed and the function is cancelled.

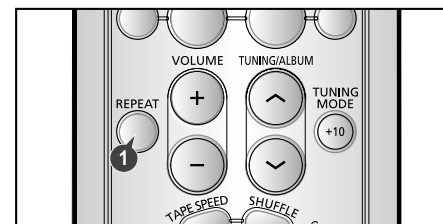

## REPEAT A-B Function

(This function is not available during playback of a MP3-CD.)

When you select CD(TAPE) **REPEAT A ↔ B** playback, the music passages to which you were listening are repeated 3 times.

- 1** Press **MP3-CD (▶/II) o TAPE** button.  
Result: The CD(TAPE) player starts playing.
- 2** Press **REPEAT A ↔ B** button.  
Result: The indications appear: **START**  
The flashes appear: **A ↔**  
♦ A Time is memorised.
- 3** Press **REPEAT A ↔ B** button.  
Result: The indications appear: **END**  
♦ B Time is memorised.  
♦ Your selected passages are repeated 3 times.
- 4** When you have finished the Repeat playback, Press **REPEAT A ↔ B**.



## Programming the Order of Playback

 
(This function is only available during playback of a CD.)

You can decide for yourself:

- ♦ The order in which you listen to the tracks
- ♦ The tracks to which you do not wish to listen

➤ This feature can be combined with the CD Repeat function.

- 1** If necessary, stop the player by pressing **STOP (■)**.
- 2** Press **PROGRAM / SET**.  
Result: **PRO 01** is displayed.
- 3** Select the required track by pressing the SKIP buttons:  
♦ **▶▶** to move forwards through the tracks  
♦ **◀◀** to move backwards through the tracks
- 4** Press **PROGRAM / SET**.  
Result: **PRO 02** is displayed.
- 5** To select other tracks, repeat Steps 3 and 4.  
➤ You can programme up to 24 tracks.
- 6** When you have finished selecting the tracks, press **MP3-CD (▶/II)** to start listening to the selection, in the order in which the tracks were programmed.
- 7** Press **STOP (■)** twice to cancel the selection when the disc is playing.

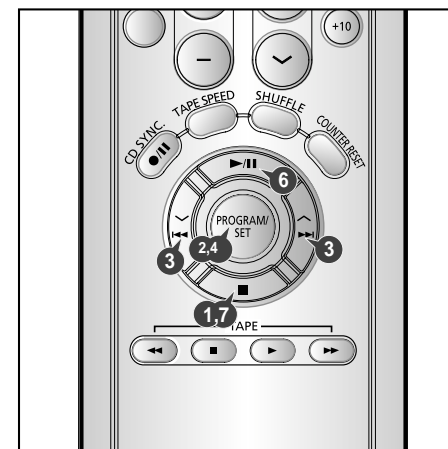



## Checking and Changing Programmed Tracks



You can check and change your selection of tracks at any time.



 
You must have selected at least one track.

- 1 Press **STOP** (■) once if you have started listening to the selection.
- 2 Press **PROGRAM / SET**.  
➤ Each time you press Program/Set, the next selection is displayed.
- 3 Press **PROGRAM / SET** one or more times until the track to be changed is displayed.

TRACK FROM  
CH01 01

- 4 Press **◀** or **▶** to select the new track.
- 5 Press **PROGRAM / SET**.
- 6 Press **MP3-CD** (▶/||) to start listening to the selection.  
**Result:** The first track selected is played.

➤ You can change one or more tracks in your initial selection

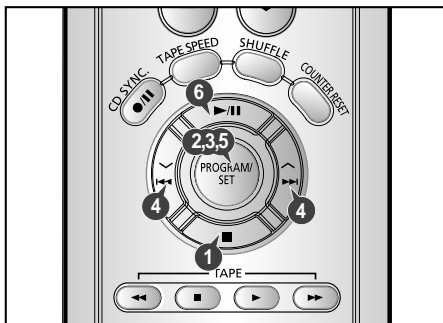

## Searching for and Storing the Radio Stations

You can store up to:

- ♦ 15 FM stations
- ♦ 15 AM station

 
- 1 Switch the system on by pressing **Standby/On** (⏻ / I).
- 2 Select the **TUNER** function by pressing **TUNER/BAND**.
- 3 Select the required frequency band by pressing **TUNER/BAND** again.  
**Result:** The appropriate indication is displayed:  
♦ **FM** Frequency Modulation  
♦ **AM(MW)** Medium Wave

### 4 To search for a station ... Press Tuning Mode ...

Manually.....One or more times until **MANUAL** is displayed.

Automatically.....One or more times until **AUTO** is displayed.

- 5 Select the station to be stored by pressing **◀**, **▶** on the front panel to decrease or increase the frequency respectively.  
♦ To scroll through the frequencies faster when searching manually, hold down the **◀**, **▶** on the front panel.  
♦ The automatic search procedure may stop on a frequency that does not correspond to a radio station. If this happens, use the manual search mode.
- 6 Adjust the volume by:  
♦ Turning the **VOLUME** knob on the front panel or  
♦ Pressing the **VOLUME+**, **-** button on the remote control.
- 7 Select the FM stereo or mono mode by pressing **MO/ST** on the remote control.

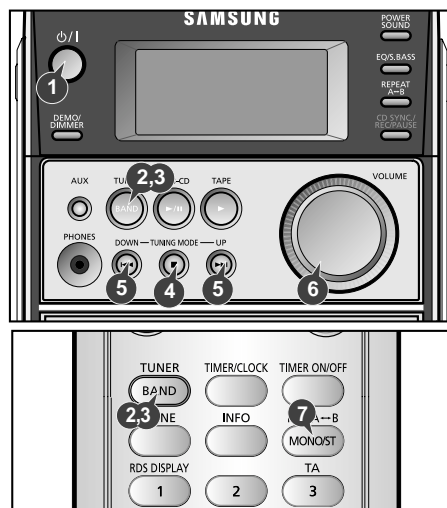


## Searching for and Storing the Radio Stations(continued)

- 8 If you do not want to store the radio station found, revert to Step 4 and search for another station.  
Otherwise:  
a Press **PROGRAM/SET**  
**Result:** The program number is displayed for a few seconds.  
b Press **TUNING** **∨** and **∧** to assign a program number between 1 and 15.  
c Press **PROGRAM/SET** to store the radio station.  
**Result:** The program number is no longer displayed and the station is stored.

- 9 To store any other radio frequencies required, repeat Steps 3 to 6.

 ➤ The **PROGRAM** function can be used to assign a new station to an existing program number.

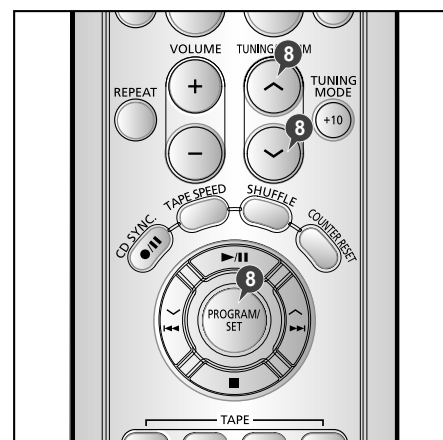

## Selecting a Stored Station

 


You can listen to a stored radio station as follows:

- 1 Switch the system on by pressing **Standby/On** (⏻ / I).
- 2 Select the **TUNER** function by pressing **TUNER/BAND**.
- 3 Select the required frequency band by pressing **TUNER/BAND**.
- 4 Select the radio station as follows.

To listen to ...	Press ...
A stored station.....	a Press the <b>TUNING MODE</b> button until <b>'PRESET'</b> is displayed.
	b <b>TUNING</b> <b>∨</b> and <b>∧</b> to select the required station.


➤ Press **TUNING MODE** again to exit the stored station selection function.

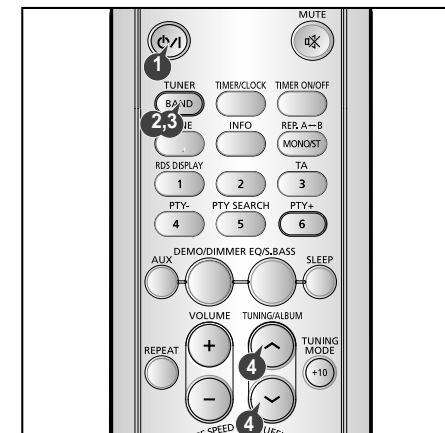

## Improving Radio Reception

You can improve the quality of radio reception by:

 - ♦ Rotating the FM or AM(MW) aerial
  - ♦ Testing the positions of the FM and AM(MW) aerials before fixing them permanently
- If reception from a specific FM radio station is poor, press **MO/ST** to switch from stereo mode to mono. The quality of the sound will be improved.

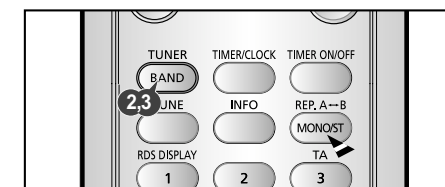



## Listening to DAB Stations(Future proof digital radio tuner)



You can receive a DAB (Digital Audio Broadcasting) broadcast with clear CD-quality audio and text captions. However, because DAB broadcasting is still in testing phase, you can receive the broadcast only in limited areas .



### Automatic Tuning

 
- If no signal can be received because the unit is being used for the first time or because you have recently moved, please set available services.

- 1 Press **TUNER/BAND** to select "DAB".
  - Each time you press the button, the mode changes as follows:  
FM → AM → DAB.
- 2 Press and hold **TUNE** for longer than 2 seconds.
  - "SCAN 00" blinks on the display and all available services will be searched.
  - It will about 20 to 60 seconds to search all available services. Some stations may not transmit PTY, information therefore this may not be displayed in all cases.

### Manual Tuning

- If no signal can be received because the unit is being used for the first time or because you have recently moved, please set available services.

- 1 Press **TUNER/BAND** to select "DAB".
  - Each time you press the button, the mode changes as follows:  
FM → AM → DAB.
- 2 Press **TUNE**.
  - The current frequency will be shown on the display.
- 3 Press  $\wedge$ ,  $\vee$  on the remote control or press  $\lll$ ,  $\ggg$  on the main unit to move to the desired frequency.
- 4 Press **TUNE**.
  - If no signal is received, "NO SVC" will appear on the display.

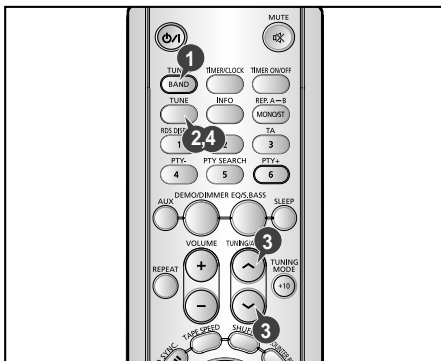

### What is DAB?

DAB stands for digital audio broadcasting. It is a new form of radio that is broadcast digitally. Digital audio provides a superior quality of sound compared to regular analogue broadcasting.

### Remote Control Unit

- 1 Press **TUNER/BAND** to select "DAB".
  - Each time you press the button, the mode changes as follows:  
FM → AM → DAB.
- 2 Select the service.
  - Press  $\wedge$ ,  $\vee$  to select the service.
- 3 Press **TUNE**.
  - Press  $\wedge$ ,  $\vee$  to move to the desired frequency.

### Main Unit

- 1 Press **TUNER/BAND** to select "DAB".
- 2 Press  $\lll$ ,  $\ggg$  to select the service.
  - If "NO SVC" appears on the display, press and hold **TUNE** for longer than 2 seconds.
  - "SCAN 00" blinks on the display and all available services will be searched. If "NO SVC" continues to be displayed after the service search has finished, make sure you are not in a non-reception area and check the antenna connection.

### About Ensemble and Service

- For each ensemble, there are various services such as audio and data.
- If you press  $\lll$ ,  $\ggg$  when there are many ensembles, you can easily search services.
- Shaded areas are frequencies used currently as of March, 2005 in the UK ("United Kingdom")

 
174.928MHz	216.928MHz	192.352MHz	234.208MHz	209.936MHz
180.064MHz	222.064MHz	197.648MHz	239.200MHz	215.072MHz
185.360MHz	227.360MHz	202.928MHz	178.352MHz	220.352MHz
190.640MHz	232.496MHz	208.064MHz	183.648MHz	225.648MHz
195.936MHz	237.488MHz	213.360MHz	188.928MHz	230.784MHz
201.072MHz	176.640MHz	218.640MHz	194.064MHz	235.776MHz
206.352MHz	181.936MHz	223.936MHz	199.360MHz	
211.648MHz	187.072MHz	229.072MHz	204.640MHz	

## Storing DAB Stations

- You can store up to 6 DAB stations.

Example: Storing the service name "ALPHA1" to the service number 3

- 1 Press **TUNER/BAND** to select "DAB".
    - Each time you press the button, the mode changes as follows:  
FM → AM → DAB.
  - 2 Press  $\wedge$ ,  $\vee$  to select the service.
    - Press **TUNE** and  $\wedge$ ,  $\vee$  to change the ensemble, you can select a service number from 1 to 3.
  - 3 Press **PROGRAM/SET** button .
    - "PRST-1" will appear on the display.
  - 4 Press  $\wedge$ ,  $\vee$  to select the service number to which the service will be stored .
    - You can select a preset number from 1 to 6 .
    - "PRST-3" disappears from the display and the station will be stored .
  - 5 Press **PROGRAM/SET** button .
    - Press the **PROGRAM/SET** button before "STORED" disappears from the display .
  - 6 Repeat steps 2 to 5 to store other stations.
- **Tuning in to a Stored DAB Station**
- Press 1-6 on the remote control to select the stored station .
  - If no station is stored when you press 1-6, "NO MEMO" will appear on the display.

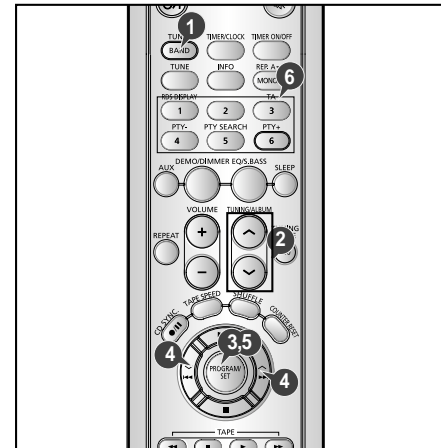


## DAB Related Functions

### Information Display Function

- You can check various information about the service being received.

Press **INFO**.

 
- Each time you press the button during reception, the mode changes on the display as follows:
- Depending on the service information , the display may vary or does not work.

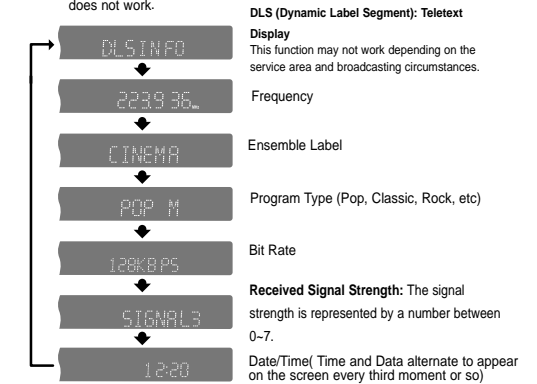

- 
- If no button is pressed for 7-8 seconds, you will be exited from the Information Display function.
  - Small letters and some special characters ( $\Omega$ ,  $\iota$ ,  $\approx$ ,  $?$ ) cannot be displayed.

### To Initialize DAB

 - With the DAB function selected, press **STOP** on the main unit for longer than 5 seconds.
- "DAB RET" blinks on the display and the DAB function will be reset to the default setting.
- When the DAB function is reset, Auto Scan is started.

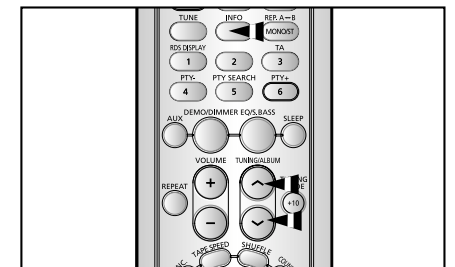

## About RDS broadcasting



This unit has the RDS (Radio Data System) function, which enables for the various information such as broadcasting station, radio text, time and 30 types of programs (News, Rock, Classic, etc.) to be received from the FM RDS station together with normal radio signal.

- 1 Press the **Standby/On** (⏻ / I) button.
- 2 Receive the FM radio.
  - ◆ See the radio receiving method on the page 14~15.
  - ◆ FM and frequency are shown on the display
  - ◆ If the received station transfers the RDS information, 'RDS' appears automatically on the display.
- 3 Press the **RDS DISPLAY** button to select the desired RDS mode.
  - ◆ Whenever the button is pressed, RDS mode changes as follows.

➤ PS NAME → RT → CT → Current FM frequency

☛ The RDS function is available only in FM broadcasting.

### ➤ Description on RDS function

1. **PTY**(Program Type) : Displays the type of programme currently being broadcast
2. **PS NAME**(Program Service Name) : Indicates the name of broadcasting station and is composed of 7 characters.
3. **RT**(Radio Text) : Decodes the text broadcast by a station (if any) and is composed of maximum 64 characters.
4. **CT**(Clock Time) : Decodes the real time clock from the FM frequency.
  - Some stations may not transmit PTY, RT or CT information therefore this may not be displayed in all cases.
5. **TA**(Traffic Announcement) : When this symbol flashes it shows that the traffic announcement is in progress.



## About RDS DISPLAY function

 
### About "PS NAME" MODE

- Displays the name of broadcasting station.

Press the **RDS DISPLAY** button to select the PS NAME.

- ◆ "PS NAME" appears on the display.
- ◆ If the PS information is being received, the PS name (BBC, AFO, NDR, etc.) is shown on the display.
- ◆ If the PS information isn't received, the original FM frequency is shown.

☛ Even though no **RDS DISPLAY** button is pressed, the reception of PS information ensures the PS name is displayed.

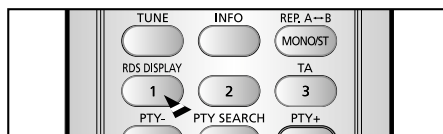


### About 'RT' MODE

- Displays the character transmitted from the broadcasting station.

Press the **RDS DISPLAY** button to select the RT MODE.

 - ◆ "RT" appears on the display.
- ◆ If the RT information is being received, the received information is shown on the display.
- ◆ If the RT information isn't received, the "NO RT" is shown on the display.

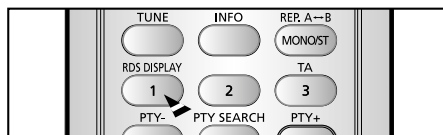


### About CT(Clock Time)

- Sets the time of RDS clock.

To select the CT time, set the **RDS DISPLAY** button to CT MODE.

 - ◆ The CT information will take up to 2 minutes to be decoded therefore the clock isn't displayed immediately.
- ◆ If there is no received CT information, "NO CT" is displayed.

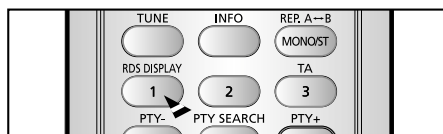

## PTY(Program Type) indication and PTY-SEARCH function

- ◆ The PTY information is composed of an identification symbol, which helps the FM radio to recognize the program type of each FM station.
- ◆ The below 30 PTY information is shown on the display by pressing the Pty button.

Display	Program Type
NEWS	• News including an announced opinion and report
AFFAIRS	• Several matters including a current incident, documentary, discussion and analysis.
INFO	• Information including weights and measures, returns and forecast, matters interesting the customer, medical information, etc.
SPORT	• Sports
EDUCATE	• Education
DRAMA	• Drama-Radio serial, etc.
CULTURE	• Culture-National or local culture including the religious problem, social science, language, theatre, etc.
SCIENCE	• Natural science and technology
VARIED	• Others-Speech, amusing program (quiz, game), interview, comedy and satirical play, etc.
POP M	• Pop music
ROCK M	• Rock music
M.O.R.M	• M.O.R.- Comfortable music, occasionally vocal or piece
LIGHT M	• Light classical music- Classical music and instrumental and chorus music
CLASSIC	• Heavy classical music-Orchestra music, symphony, chamber music and opera
OTHER M	• Other music - Jazz, R&B country music
WEATHER	• Weather
FINANCE	• Finance
CHILDR	• Children's programmes
SOCIAL	• Social affairs
RELIGIO	• Religion
PHONE I	• Phone in
TRAVEL	• Travel
LEISURE	• Leisure
JAZZ	• Jazz Music
COUNTRY	• Country Music
NATION	• National Music
OLDIES	• Oldies Music
FOLK M	• Folk Music
DOCUMENT	• Documentary
TEST	• Alarm Test

 
 
### About PTY-SEARCH

- Searches the same PTY as the program type of broadcasting station.

- 1 Receive the FM radio.
  - ◆ See the radio receiving method on the page 14~15.
  - ◆ The FM and frequency appear on the display.
  - ◆ If the received station is transmitting the RDS information, "RDS" lights up.
- 2 Press the **PTY** button.
  - ◆ The PTY MODE(NEWS, AFFAIRS, etc.) appears on the display.
  - ◆ Press the TUNING ◀▶ or ▶▶ button on the front panel to select the desired PTY MODE.

- If the station is transmitting no PTY information, 'NO PTY' lights on the display.
- ◆ When the PTY MODE is selected(The PTY MODE is shown on the display), press the PTY KEY once again to convert into PTY-SEARCH MODE and auto-search the station sequentially.
- ◆ If the PTY MODE received in the course of auto-search agrees with the selected PTY MODE, the auto-search stops and the PTY-SEARCH is finished.

☛ If the PTY MODE which agrees with the PTY MODE selected in the course of auto-search, isn't received, it is returned to the first frequency at beginning the PTY SEARCH and the auto-search and PTY SEARCH are suspended.

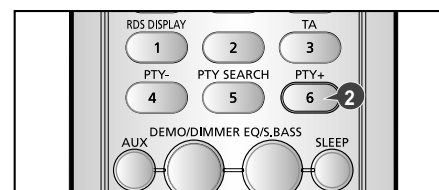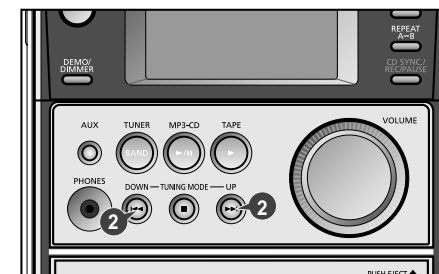

## Listening to a Cassette



- 1 Switch the system on by pressing **Standby/On** (⏻/⏻).
- 2 Select the **TAPE** function by pressing **TAPE** on the front panel.
- 3 Open the cassette deck by pushing on the corner of the cover marked **PUSH EJECT** until you hear a click and then release it.
- 4 Insert the pre-recorded cassette with the open edge of the tape facing downwards.
- 5 Close the deck by pushing on it until it clicks into place.
- 6 Press the **TAPE** (▶) button.  
**Result:** The cassette starts playing.
- 7 Press **TAPE SPEED** on the remote to adjust the speed of the tape playing. And each time the button is pressed, the mode changes as follows.

→ -10% SPEED → +10% SPEED → NORMAL

- 8 When the cassette is stopped, select one of the following functions as required.

To... Press...

Rewind the cassette..... ⏮ / ⏮

Fast-forward the cassette..... ⏭ / ⏭

➤ The cassette player stops automatically when the beginning or end of the cassette is reached.

- 9 To stop the playback or search, press **STOP** (■) button.

 


## Tape Counter

When playing a cassette in one of the cassette decks, a counter is displayed to enable you to take note of the counter value at the start of each track to start playback at the beginning of the track to which you wish to listen.

➤ Before starting to record a cassette for which you wish to take note of the counter values at the beginning of each track, reset the counter by pressing **COUNTER RESET**.

➤ Each cassette deck has a separate counter.

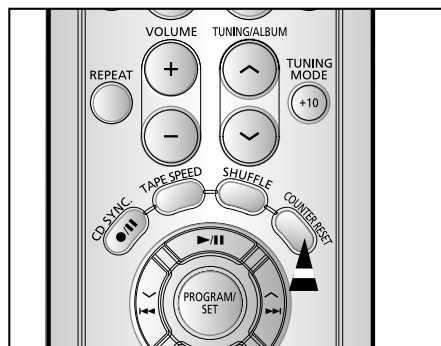

## Recording a Compact Disc

You can record a compact disc on a cassette in two different ways:

- ◆ Synchronised recording
- ◆ Direct recording

### Synchronised recording

This feature enables you to synchronize the start of the recording with the start of the disc or track of your choice.

- 1 Switch the system on by pressing (⏻/⏻).
- 2 Insert a blank cassette in Deck.  
◆ Press the **PUSH/EJECT** button (▲) to open the cassette door, insert a cassette, and then close the cassette door.  
◆ Insert the cassette with the safety tabs.
- 3 Load a compact disc.  
◆ Press the **PUSH/EJECT** button (▲) to open the CD door.  
◆ Insert a CD and press the **PUSH/EJECT** button (▲) to close the CD door.  
Press the **MP3-CD** (▶/II) button.  
◆ Use the CD selection (⏮, ⏭) buttons to select the desired song.
- 5 Press and hold **CD SYNC/REC/PAUSE** button.  
◆ When stopped, press the button to start the recording from the first piece of music.  
◆ Press and hold **CD SYNC/REC/PAUSE** button during the playback of CD to start the recording from the first part of the music being played.
- 6 To stop recording, press ■ button.

### Direct recording

The direct recording mode enables you to start recording with any track on the compact disc.

- ◆ You do not need to adjust the volume, as it has no effect on the recording.

- 1 Switch your system on by pressing **Standby/On** (⏻/⏻).
- 2 Insert a blank cassette in Deck.
- 3 Load a compact disc.
- 4 Press the **MP3-CD** (▶/II) button.  
◆ Use the CD selection (⏮, ⏭) buttons to select the desired song.
- 5 Press the **REC/PAUSE** button.  
**Result:** Recording will begin.
- 6 To stop recording, press **STOP** (■) button.



## Recording a Radio Program

You can record a radio program of your choice.

- ◆ You do not need to adjust the volume, as it has no effect on the recording.

- 1 Switch the system on by pressing **Standby/On** (⏻/⏻).
- 2 Insert a blank cassette in Deck.
- 3 Select the **TUNER** function by pressing **TUNER/BAND**.
- 4 Select the radio station that you wish to record by pressing ⏮ or ⏭ button on the front panel or ⏮ or ⏭ on the remote control.
- 5 Press **REC/PAUSE**.  
**Result:** REC is displayed and recording starts.
- 6 To stop recording, press **STOP** (■) button.



## Timer Function



The timer enables you to switch the system on or off at specific times.

 
**Example:** You wish to wake up to music every morning.

- If you no longer want the system to be switched on or off automatically, you must cancel the timer.
- ◆ Before setting the timer, check that the current time is correct.
- ◆ For each step, you have a few seconds to set the required options. If you exceed this time, you must start again.

- 1 Switch the system on by pressing **Standby/On** (⏻ / I).
  - 2 Press **TIMER/CLOCK** until ⌚ **TIMER** is displayed.
  - 3 Press **PROGRAM/SET**.  
**Result:** **ON TIME** is displayed for a few seconds, followed by any switch-on time already set; you can set the timer switch-on time.
  - 4 Set the timer switch-on time.  
a Set the hour by pressing ∨ and ∧.  
b Press **PROGRAM/SET**.  
**Result:** The minutes flash.  
c Set the minutes by pressing ∨ and ∧.  
d Press **PROGRAM/SET**.  
**Result:** **OFF TIME** is displayed for a few seconds, followed by any switch-off time already set; you can now set the timer switch-off time.
  - 5 Set the timer switch-off time.  
a Set the hour by pressing ∨ and ∧.  
b Press **PROGRAM/SET**.  
**Result:** The minutes flash.  
c Set the minutes by pressing ∨ and ∧.  
d Press **PROGRAM/SET**.  
**Result:** **VOL 10** is displayed, where **10** corresponds to the volume already set.
  - 6 Press ∨ and ∧ to adjust the volume level and press **PROGRAM/SET**.  
**Result:** The source to be selected is displayed.
  - 7 Press ∨ and ∧ to select the source to be played when the system switches on.
- | If you select...  | You must also...  |
|-------------------|---|
| TAPE (cassette)   | Insert a recorded cassette in the deck.   |
| TUNER (radio)     | Select the FM or AM (MW/LW) frequency band by pressing ∨ and ∧.<br>• Press <b>PROGRAM/SET</b> .<br>• Select a preset station by pressing ∨ and ∧. |
| CD (compact disc) | Load a compact disc.  |
- 8 Press **PROGRAM/SET** to confirm the timer.
  - 9 Press **Standby/On** to set the system to standby mode.  
**Result:** ⌚ is displayed on the top right of the time, indicating that the timer has been set. The system will switch on and off automatically at the required times.

➤ If the timer switch on and off times are identical, the word **ERROR** is displayed.

➤ You can use ⏮/⏭ button on the front panel instead of ∨ / ∧ button on the remote control in step 4,5,6,7.

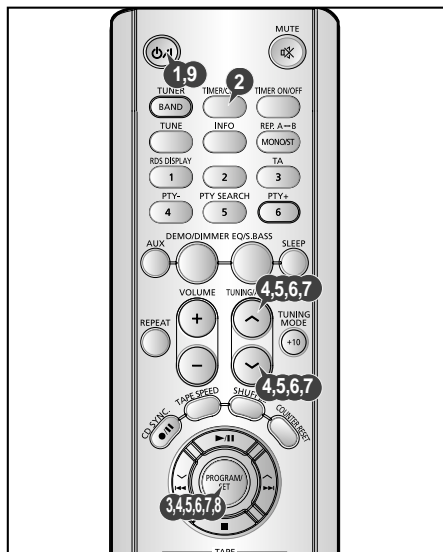


## Cancelling the Timer

After having set the timer, it will start automatically as shown by the timer indication on the display. If you no longer wish to use the timer, you must cancel it.

- You can stop the timer at any time (system on or in standby mode).

 
To...	Press <b>TIMER ON/OFF</b> ...
Cancel the timer.....	Once. <b>Result:</b> ⌚ is no longer displayed.
Restart the timer.....	Twice. <b>Result:</b> ⌚ is displayed again.

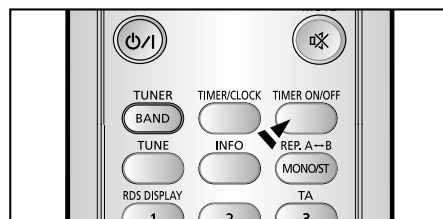

## Power sound function

This machine is equipped with the function of **POWER SOUND**, which amplifies bass treble output to twice as much for powerful surround-sound.

 - 1 Press the **POWER SOUND** button on the front panel.  
**Result:** ◆ **P.SOUND** is displayed for a few seconds.  
◆ A more powerful resonant sound is diffused.
- 2 To cancel this function, press **POWER SOUND** again.  
**Result:** ◆ **OFF** is displayed for a few seconds.

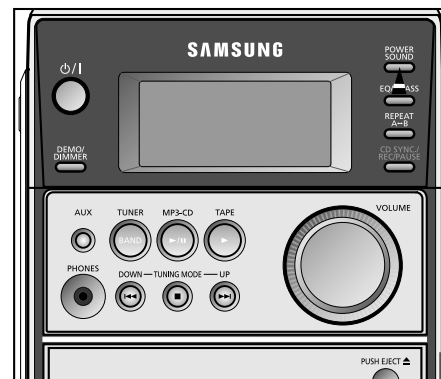


## EQ /S.BASS (Super Bass) Function

Your Micro Component system has a bass amplification function and equipped with a preset equaliser that allows you to choose the most appropriate balance between treble and bass frequencies, according to the type of music you are listening to. That is called **EQ/S.BASS**.

This function makes the sound more powerful and real.

 Press **EQ/S. BASS** on the front panel or **EQ/S. BASS** on the remote control until the required option is selected.


 
To obtain a...	Select...
Normal balance (linear).....	PASS
Balance suitable for pop music.....	POP
Balance suitable for rock music.....	ROCK
Balance suitable for classic music.....	CLASSIC
Balance suitable for jazz music.....	JAZZ
Balance suitable for s-bass music.....	S-BASS

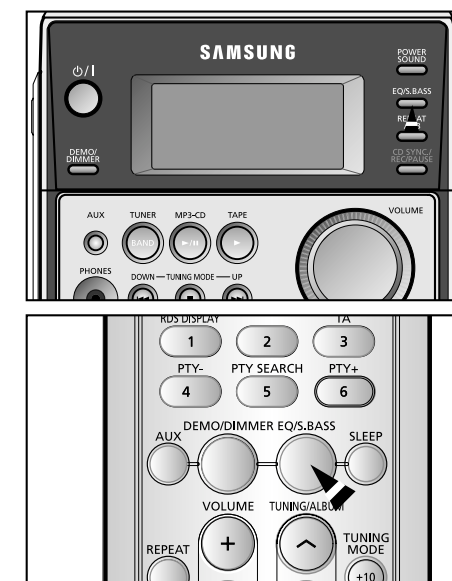


## Sleep Timer



You can set the system to switch off automatically.  
**Example:** You wish to fall a sleep to music.

 
- 1 Press **SLEEP** on the remote control.  
**Result:** The following indications are displayed:  

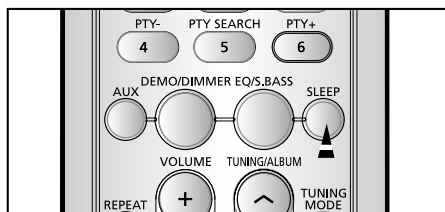- 2 Press **SLEEP** one or more times to indicate how long the system should continue playing before it switches off:  

  - At any time, you can:
    - ♦ Check the remaining time by pressing **SLEEP**
    - ♦ Change the remaining time by repeating Steps 1 and 2
- 3 To cancel the sleep timer function, press **SLEEP** one or more times until **OFF** is displayed and the word **SLEEP** disappears.



## MUTE Function

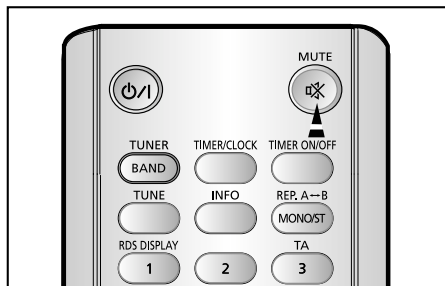 You can turn the sound off temporarily.  
**Example:** You wish to answer a telephone call.

- 1 Press **MUTE**.
- 2 To switch the sound back on (at the same volume as before), press **MUTE** again, or turn **VOLUME** button.




## Connecting Headphones

 You can connect a set of headphones to your micro component system so that you can listen to music or radio programs without disturbing other people in the room. The headphones must have a 3.5 mm connector or appropriate adaptor.

Connect the headphones to the Phones connector on the rear panel (or top right corner).


**Result:** The loudspeakers are no longer used for sound output.

- Prolonged use of headphones at a high volume may damage your hearing.

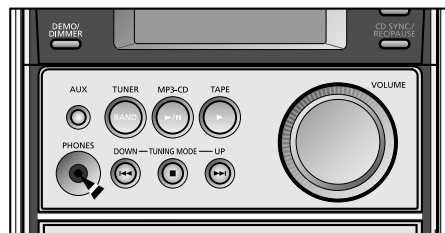


## Safety Precautions


The following diagrams illustrate the precautions to be taken when using or moving your micro-component system.

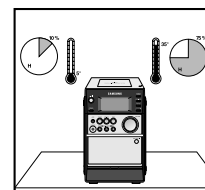 

 
Ambient operating conditions:  
 Ambient temperature 5 °C-35°C  
 Humidity 10-75%

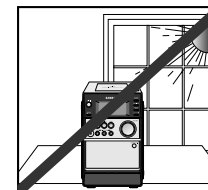

 
Do not expose the unit to direct sun radiation or other heat sources. This could lead to overheating and malfunction of the unit.

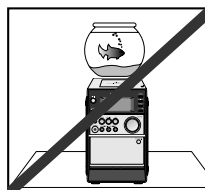

 
Do not place potted plants or vases on top of the unit. Moisture entering the unit could lead to dangerous electric shock and can cause equipment damage. In such events immediately disconnect the main plug from the socket.

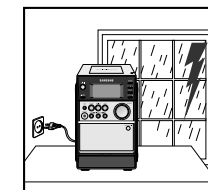

 
During thunderstorms, disconnect the main plug from the socket. Main voltage peaks due to lightning could damage the unit.

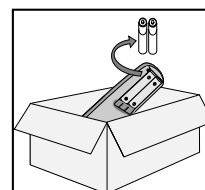

 
Remove the batteries from the remote control, if not used for any extended period. Leaking batteries can cause serious damage to the remote control.

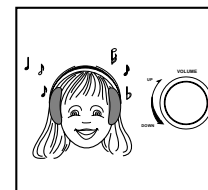

 When using headphones, take care not to listen at excessive volumes. Extended use of headphones at high volumes will lead to hearing damage.

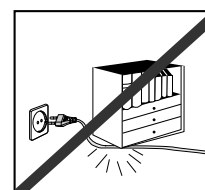

 Do not place heavy items on the main lead. Main cable damage can lead to damage of the equipment (fire hazard) and can cause electric shock.

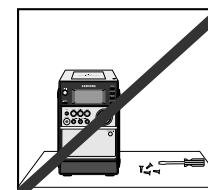

Do not remove any equipment panels. The inside of the unit contains live components, which cause electric shock.

## Cleaning Your Micro-Component System



To obtain the best possible results from your micro-component system, you must clean the following elements regularly:

- ♦ The outer casing
- ♦ The compact disc player
- ♦ The cassette players (heads, rollers and drive capstans)
- Always unplug the system from the wall outlet:
  - ♦ Before cleaning it
  - ♦ If you are not going to be using it for a long time

### Outer Casing

 
Clean the outer casing regularly using a soft cloth and a light detergent. Do not use abrasive powders, liquids or aerosol cleaners. Never let any liquids get into the system.

### Compact Disc Player

- 1 Before playing a compact disc, clean it with a special CD cleaning agent. Do not use the same cleaning agents as for vinyl LP records. Carefully wipe the disc from the centre outward.
- 2 Regularly clean the player with a special cleaning disc (available from your local dealer).

### Tape Decks

- 1 Press **PUSH EJECT** (▲) to open the cassette deck.
- 2 Use a cotton bud and a special cassette cleaning agent to clean the:
  - ♦ Head (1)
  - ♦ Rollers (2)
  - ♦ Drive capstans (3)

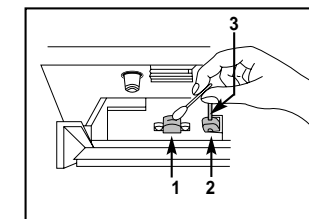

- If you will not be using the remote control for a long time, remove the batteries to prevent corrosion.
- ♦ Although your system is very hard-wearing, it should not be used in an excessively dusty environment or subjected to shocks or extreme heat (close to heating appliances or in direct sunlight, etc.).
- ♦ If the unit emits an unpleasant odour when in use, unplug it from the main supply and contact the after-sales service.

## Precautions When Using Compact Discs

 
 
GB

- ◆ Handle your compact discs with care. Always hold them by the edges to avoid leaving fingerprints on the shiny surface.
- ◆ When you have finished playing a compact disc, always put it back in its case.
- ◆ Do not fix paper or adhesive tape to the discs and do not write on the label.
- ◆ Clean them with a special-purpose cloth.
- ◆ Store your compact discs in a clean place, out of direct sunlight, where they will not be exposed to high temperatures.
- ◆ Always use compact discs marked **DAI**.



## Precautions When Using Audio Cassettes

- ◆ Check that the tape in the cassette is sufficiently taut.
- ◆ To prevent erasing a cassette that you wish to keep, remove the safety tab on the upper edge of the cassette. To record a cassette, where the tab has been broken, simply cover the opening with adhesive tape.
- ◆ When you have finished playing a cassette, always put it back in its case.
- ◆ Store your cassettes in a clean place, out of direct sunlight, where they will not be exposed to high temperatures.
- ◆ Avoid using 120-minute cassettes as they place unnecessary strain on the tape mechanism.

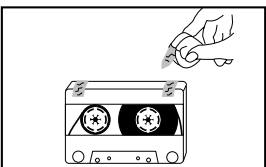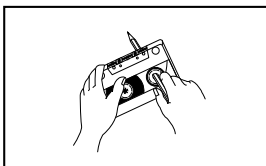

## Before Contacting the After-Sales Service

It always takes a little time to become familiar with a new appliance. If you have any of the problems listed below, try the solutions given. They may save you the time and inconvenience of an unnecessary service call.

Problem	Checks/Explanation
The system does not work	<ul style="list-style-type: none"> <li>• The main lead is not correctly plugged into a wall socket or the wall socket is not switched on.</li> <li>• The remote control batteries need replacing or the polarity has not been respected.</li> <li>• The <b>STANDBY/ON</b> button has not been pressed.</li> </ul>
There is no sound	<ul style="list-style-type: none"> <li>• The volume has been completely turned down.</li> <li>• The correct function (TUNER, MP3-CD, TAPE, AUX) has not been selected.</li> <li>• You have connected a set of earphones.</li> <li>• The loudspeaker wires have been disconnected.</li> <li>• The <b>MUTE</b> button has been pressed.</li> </ul>
The Timer does not work	<ul style="list-style-type: none"> <li>• The timer has been stopped by pressing <b>TIMER ON/OFF</b>.</li> </ul>
In case it does not work, even the action is taken as above.	<ul style="list-style-type: none"> <li>• Press the <b>POWER SOUND</b> button for 5 seconds in power 'OFF'(standby), then it is returned the original position (RESET)</li> </ul>
The compact disc player does not start playing	<ul style="list-style-type: none"> <li>• The CD function has not been selected.</li> <li>• The disc has been inserted face down or is either dirty or scratched.</li> <li>• The laser sensor is dirty or dusty.</li> <li>• The system has not been installed on a flat, horizontal surface.</li> <li>• Condensation has formed in the player; leave the system in a warm, airy room for at least one hour.</li> </ul>
The MP-3 CD player cannot be played.	<ul style="list-style-type: none"> <li>• Use the PC to confirm if the extension is *.mp3.</li> </ul>
The tape does not start playing	<ul style="list-style-type: none"> <li>• The <b>TAPE</b> function has not been selected.</li> <li>• The cassette has not been inserted correctly.</li> <li>• The cassette player has not been closed.</li> <li>• The tape is either slack or broken.</li> </ul>
The volume falls off The cassette is not erased correctly There is excessive wow and flutter	<ul style="list-style-type: none"> <li>• The audio heads are dirty.</li> <li>• The rollers or drive capstans are dirty.</li> <li>• The tape is worn.</li> </ul>
Reception is poor or no radio stations are received at all	<ul style="list-style-type: none"> <li>• The <b>TUNER</b> function has not been selected.</li> <li>• The radio frequency has not been correctly selected.</li> <li>• The aerial has been disconnected or is not facing the right way. Turn it until you find the best orientation.</li> <li>• You are in a building that blocks radio waves; you must use an outside aerial.</li> </ul>

If the above guidelines do not allow you to solve the problem, take a note of:

- ◆ The model and serial numbers, normally printed on the rear of the system
- ◆ Your warranty details
- ◆ A clear description of the problem

Then contact your local dealer or SAMSUNG after-sales service.

## Technical Specifications

SAMSUNG strives to improve its products at all times. Both the design specifications and these user instructions are thus subject to change without notice.

### RADIO

#### DAB

Usable sensitivity -90dBm

S/N Ratio 75 dB

Total harmonic distortion 0.2 %

#### AM (MW)

Signal/noise ratio 35 dB

Usable sensitivity 54 dB

Total harmonic distortion 2 %

#### FM

Signal/noise ratio 55 dB

Usable sensitivity 15 dB

Total harmonic distortion 1 %

### COMPACT DISC PLAYER

Frequency range 20 Hz - 20 KHz

Signal/noise ratio 70 dB (at 1 KHz) with filter

Distortion 0.1 % (at 1 KHz)

Channel separation 45 dB

Disc sizes Diameter: 120 or 80 mm. Thickness: 1.2 mm

### TAPE DECK

Frequency range 125 Hz ~ 8 KHz

Signal/noise ratio 40 dB

Channel separation 30 dB

Erasing effect 45 dB

### AMPLIFIER

Output power (6 Ω) 2 X 20 Watts RMS (total harmonic distortion : 10%)

Channel separation 40 dB

Signal/noise ratio 70 dB

### GENERAL

Dimensions 145(W) x 226 (H) x 282(D) mm

**THIS APPLIANCE IS MANUFACTURED BY:**



**ELECTRONICS**