

SONY®

2-149-222-01(1)

Portable CD/DVD Player

Operating Instructions



DVP-FX701

© 2004 Sony Corporation

WARNING

 
To prevent fire or shock hazard, do not expose the unit to rain or moisture.
To avoid electrical shock, do not open the cabinet. Refer servicing to qualified personnel only.

CAUTION

The use of optical instruments with this product will increase eye hazard. As the laser beam used in this CD/DVD player is harmful to eyes, do not attempt to disassemble the cabinet.
Refer servicing to qualified personnel only.

CAUTION VISIBLE AND INVISIBLE LASER RADIATION WHEN OPEN AND INTERLOCK DEFEATED. DO NOT STARE INTO BEAM OR VIEW DIRECTLY WITH OPTICAL INSTRUMENTS.

This label is located on the bottom of the unit.



This CD/DVD player is **CLASS 1 LASER PRODUCT**.



This symbol is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

ATTENTION: POUR ÉVITER LES CHOCS ÉLECTRIQUES, INTRODUIRE LA LAME LA PLUS LARGE DE LA FICHE DANS LA BORNE CORRESPONDANTE DE LA PRISE ET POUSSER JUSQU’AU FOND.

Welcome!

Thank you for purchasing this CD/DVD Player. Before operating this player, please read this manual thoroughly and retain it for future reference.

Important Safety Instructions

1. Read these instructions.
 2. Keep these instructions.
 3. Heed all warnings.
 4. Follow all instructions.
 5. Do not use this apparatus near water.
 6. Clean only with dry cloth.
 7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
 8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
 9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
 10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
 11. Only use attachments/accessories specified by the manufacturer.
 12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
-
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
 14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

Precautions

Owner's Record

The model and serial numbers are located on the bottom of the unit. Record the serial number in the space provided below. Refer to them whenever you call upon your Sony dealer regarding this product.

Model No. DVP-FX701

Serial No. _____

CAUTION

You are cautioned that any change or modifications not expressly approved in this manual could void your authority to operate this equipment.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Precautions (continued)

- The power requirements and power consumption of this unit are indicated on the AC power adaptor. Check that the unit's operating voltage is identical with your total power supply.

On safety

 
- Caution – The use of optical instruments with this product will increase eye hazard.
- To prevent fire or shock hazard, do not place objects filled with liquids, such as vases, on the apparatus.
- Should any solid object or liquid fall into the cabinet, unplug the player and have it checked by qualified personnel before operating it any further.
- Do not put any foreign objects in the DC IN 9.8V (external power input) jack.

On temperature increases

- Heat may build up while charging or during extended use. This is not a malfunction.
- If the surrounding temperature is very high, the protective function will turn off the player automatically. Leave the player in a cool location for about 30 minutes before using it again.


- Use only the supplied AC power adaptor. Do not use any other AC power adaptor. It may cause a malfunction.

Polarity of the plug



- If the AC power adaptor causes interference to radio reception, move it away from the radio.
- Do not touch the AC power adaptor with wet hands.
- The player is not disconnected from the AC power source (mains) as long as it is connected to the wall outlet, even if the player itself has been turned off.
- If you are not going to use the player for a long time, be sure to disconnect the player from the wall outlet. To disconnect the AC power cord (mains lead), grasp the plug itself; never pull the cord.
- Should the AC power cord need to be changed, have it done at a qualified service shop only.
- Use a commercially available AC plug adaptor, if necessary, depending on the design of the wall outlet.

 Wall outlet



AC plug adaptor

Precautions (continued)

On the rechargeable battery

- Charge the rechargeable battery before you start using it.
- Do not allow dust to come into contact with the battery terminals of the player and rechargeable battery.
- Do not short the terminals.
- Do not open the terminal covers of the player.
- Do not leave the battery in a place subject to direct sunlight, or in a car with its windows closed.
- Keep the battery dry.
- Use only the rechargeable battery(NP-FX100) supplied with this player(DVP-FX701). Other rechargeable batteries supplied with other models cannot be used with this player.
- Do not disassemble.
- Do not incinerate.
- Dispose of used batteries promptly.

To dispose of the rechargeable battery

- Certain countries may regulate disposal of the battery used to power this product. Please consult with your local authority.

To store the rechargeable battery

The rechargeable battery is consumed gradually as time elapses even if is not used. In order to prevent the battery from deteriorating, store the rechargeable battery as follows:

- Remove the rechargeable battery from the player after use.
- Use up the battery completely on the player before storing it.
- Keep the rechargeable battery in a cool location to prevent it from deteriorating.
- Charge and use the rechargeable battery at least once in 6 months.

On charging the rechargeable battery


- Heat may build up in the rechargeable battery while charging. This is not a malfunction.
- When the battery life of a fully charged rechargeable battery becomes about half the normal life, you may need to replace the battery with a new one.
- Disconnect the rechargeable battery from the player as soon as the battery has been charged. Leaving it connected may result in reduced battery performance.

Precautions (continued)

On handing the player

- Keep the lens on the player clean and do not touch it. If you do so, the lens may be damaged and the player will not operate properly.
- Place the player in a location with adequate ventilation to prevent heat build-up in the player.
- Do not put any heavy object on top of the player. The player and the discs may be damaged.
- Do not leave the player in a location near heat sources, or in a place subject to direct sunlight, excessive dust or sand, moisture, rain, mechanical shock, on an unlevel surface, or in a car with its windows closed.
- Do not wrap the player in a cloth or blanket during use as it may cause malfunction or serious accidents.
- If the player causes interference to radio or television reception, turn off the player or move it away from the radio or television.
- Keep the player and discs away from equipment with strong magnets, such as microwave ovens, or large loudspeakers.

- If the player is brought directly from a cold to warm location, or is placed in a very damp place, moisture may condense on the lenses of the player. Should this occur, the player may not operate properly. In this case, remove the disc and leave the player for about half an hour until the moisture evaporates.

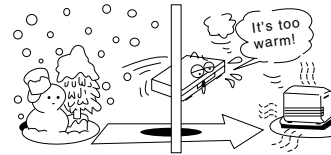

- Discs with non-standard shapes (e.g. heart, square, star) cannot be played on this player. Do not use discs.
- While operating, do not move, shake or otherwise allow any shock to the player. It may cause a malfunction.
- Use this player in a stable, horizontal position where it is not subject to vibration.
- Do not touch the disc if it is still spinning when you open the lid.
- When you move the player, take out any discs in the player. If you don't, the disc may be damaged.

Precautions (continued)

On handling the LCD screen

- The LCD is manufactured using high precision technology. You may, however, see tiny black points and/or bright points (red, blue, green) that continuously appear on the LCD. This is a normal result of the manufacturing process and does not indicate a malfunction.
- Do not scratch the LCD or exert pressure on it. This could cause a malfunction.
- Using the player in low temperature conditions may produce a residual image on the screen. This is not a malfunction. When the player returns to normal temperature, the screen returns to normal.
- A residual image may appear on the screen if the same image is displayed for a lengthy period of time. The residual image disappears in a while. If you are going to leave the player for a long time, turn off the power.
- The screen becomes warm during operation. This is normal and does not indicate a malfunction.

On headphones

Preventing hearing damaged

Avoid using headphones at high volume. Hearing experts advise against continuous, loud and extended play. If you experience a ringing in your ears, reduce volume or discontinue use.

Caring for others

Keep the volume at a moderate level. This will allow you to hear outside sounds and to be considerate to the people around you.

On adjusting volume

Do not turn up the volume while listening to a section with very low level inputs or no audio signals. If you do, the speakers may be damaged when a peak level section is played.

Road safety

Do not use the monitor unit and headphones while driving, cycling, or operating any motorized vehicle. It may create a traffic hazard and is illegal in some areas. It can also be potentially dangerous to play your headsets at high volume while walking, especially at pedestrian crossings. You should exercise extreme caution or discontinue use in potentially hazardous situations.

- Do not install the monitor display where viewable by the driver.
- Some states restrict the use of monitors and televisions in vehicles. Where use is permitted, the units should not be installed or operated so as to be viewable by the driver.

Precautions (continued)

On transportation

- When you transport this player, use the original carton box and packing materials.
- Before you move this player, make sure to remove any discs from the player.

On cleaning

Clean the cabinet, panel, and controls with a soft cloth slightly moistened with a mild detergent solution. Do not use any type of abrasive pad, scouring powder or solvent such as alcohol or benzene.

On cleaning discs

Do not use a commercially available cleaning disc. It may cause a malfunction.

IMPORTANT NOTICE

Caution: This player is capable of holding a still video image or on-screen display image on your television screen indefinitely. If you leave the still video image or on-screen display image displayed on your TV for an extended period of time you risk permanent damage to your television screen. Plasma Display Panel televisions and projection televisions are especially susceptible to this.

If you have any questions or problems concerning your player, please consult your nearest Sony dealer.

RECYCLING LITHIUM-ION BATTERIES

Lithium-ion batteries are recyclable. You can help preserve our environment by returning your used rechargeable batteries to the collection and recycling location nearest you.




For more information regarding recycling of rechargeable batteries, call to 1-800-822-8837, or visit <http://www.rbrcl.org/>

Caution:

- Do not handle damaged or leaking Lithium-ion batteries. Never expose the battery pack to temperature above 140°F (60° C) such as in a car parked in the sun or under direct sunlight.
- This product contains mercury. Disposal of this product may be regulated if sold in the United States. For disposal or recycling Electronics Industries Alliance. (<http://www.eiae.org>)

About This Manual

- Instructions in this manual describe the controls on the remote. You can also use the controls on the player if they have the same or similar names as those on the remote.
- Some DVD video discs have functions that may not be explained in this owner's manual. Therefore, some instructions may differ from this owner's manual, and there may be extra instructions. In this case, follow the instructions displayed on the LCD screen or package.
- “” may appear on the LCD screen during operation.

This icon means the function explained in this owner's manual is not available on that specific DVD video disc.

Notes about the Discs

On handling discs

- To keep the disc clean, handle the disc by its edge. Do not touch the surface.
- Do not stick paper or tape on the disc.



On storing discs

- Do not expose the disc to direct sunlight or heat sources such as air ducts, or leave it in a car parked in direct sunlight as the temperature may rise considerably inside the car.
- After playing, store the disc in its case.

On cleaning discs

- Fingerprints or dust on a disc may cause the image or sound quality to deteriorate. Use clean discs.
- Wipe the disc with a soft cloth from the center out.




- If the disc is very dirty, first wipe it with a damp cloth, then wipe it again with a dry cloth.
- Do not use solvents such as benzene, thinner, commercially available cleaners, or anti-static spray intended for vinyl LPs.

Table of Contents

Introductions	
❑ WARNING	.2
❑ Welcome!	.2
❑ Important Safety Instructions	.3
❑ Precautions	.4-9
❑ About This Manual	.10
❑ Notes on Discs	.10
❑ Table of Contents	.11
❑ Identification of Controls	.12-17
Main Unit	.12-13
Display Window	.14
Remote Control	.15-17
❑ Power Connections	.18-20
AC Adaptor	.18
Battery Pack	.19-21
Basic Operations	
❑ Playing a Disc	.21-26
Basic Playback	.21-23
Stopping Play	.24
Resume Play	.24
Screen Saver	.24
Pause	.25
Skipping Chapters and Tracks	.25
To Scan at Fast Forward or Fast Reverse Playback	.26
Playing in Slow-Motion	.26
Operation Using GUI Menu Icons	
❑ General Information about GUI Menu Icons	.27
❑ Detailed Description of each GUI Menu Icon	.28-29
Advanced Operations	
❑ Using a Title Menu	.30
❑ Using a DVD Menu	.30
❑ Changing Subtitle Language	.31
❑ Changing Audio Soundtrack Language	.32
❑ Viewing from another Angle	.33
❑ 3D Surround Effects	.34
❑ Repeat Play	.35-36
❑ Random Play	.37
❑ Program Play	.38-39
❑ Operation with Audio CD and MP3 discs	.40-42
❑ Operation with JPEG discs	.43-44
Initial Settings	
❑ Selection of Initial Settings	.45
❑ Selecting Disc Language	.46
❑ Selecting Rating Level	.47
❑ Selecting an Area Code	.48
❑ Selecting the TV Aspect	.49
❑ Selecting the Menu Language	.50
❑ Selecting Digital Audio Output	.51-52
❑ Others	.53
❑ Table of Languages and their Code Numbers	.54
❑ Area Code List	.55-56
Connections	
❑ Connecting to a TV	.57
❑ Connecting to an amplifier equipped with a Dolby Digital decoder	.58
❑ Connecting to an amplifier equipped with a Dolby Pro Logic Surround	.59
❑ Connecting to an amplifier equipped with a DTS decoder	.60
❑ Connecting to an amplifier equipped with a digital audio input	.61
Reference	
❑ To use the player with car battery charger	.62-64
❑ Disc Requirements	.65
❑ Copyright Information	.66
❑ Before Calling Service Personnel	.67-69
❑ Specifications	.70-71

Identification of Controls

Main Unit

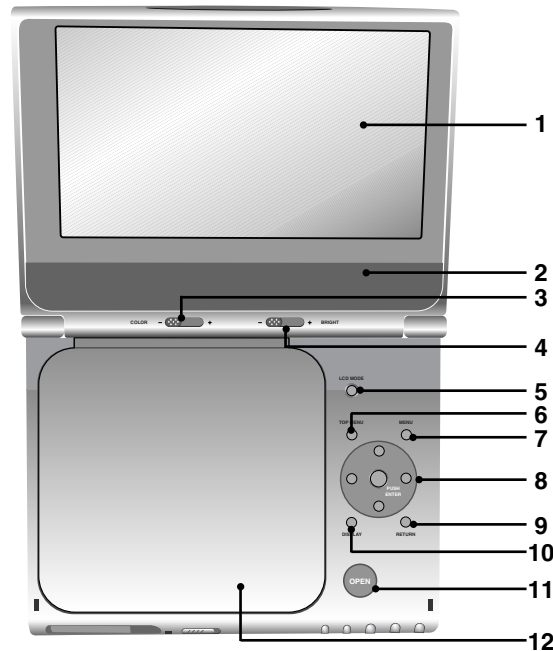


1. LCD screen
2. Speaker
3. COLOR control slide (page 21)
4. BRIGHT control slide (page 21)
5. LCD MODE (page 22)
NORMAL → FULL → ZOOM → OFF
6. TOP MENU (page 30)
Displays the title menu.
7. MENU (page 30)
Displays menu programs.
8. ←/↑/↓/→ button, ENTER button
9. RETURN button
10. DISPLAY (page 27-29)
Operation mode display.
11. OPEN button (page 21)
Push this button to open the Disc lid.

12. Disc Lid

NOTE:

Place a disc with the playback side down on the spindle, and push gently on the center of the disc so it goes into position.

Identification of Controls (continued)

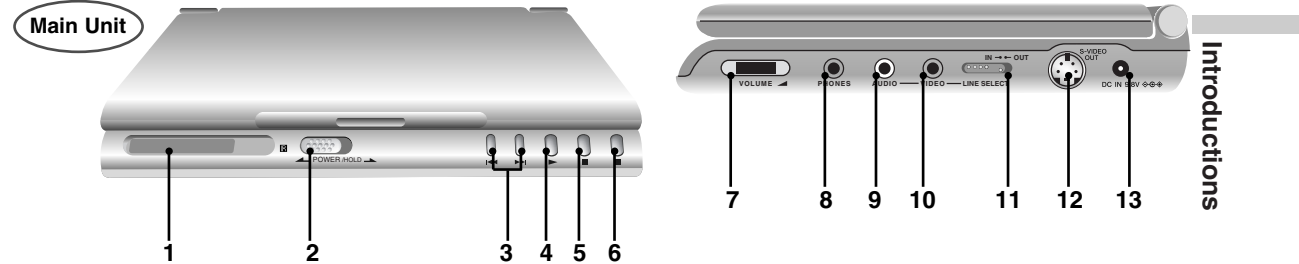

1. Display Window

See details on next page.

2. POWER and HOLD switch

To turn off the power, you need to press the POWER switch for at least one second. This is to prevent the player from being accidentally turned off.

HOLD switch

- The hold function locks the buttons on the DVD player so that they will not work if accidentally touched.
- To enable, slide the HOLD switch on the left side of the DVD player to the HOLD position.
- To disable, slide the switch back to its original position.

3. PREV/NEXT buttons (page 25)

4. PLAY button (page 21)

5. PAUSE button (page 25)

6. STOP button

7. VOLUME dial (page 21)

8. PHONES connector

Connect the supplied Headphone Y-Splitter to connect two sets of headphones at the same time.

Note that the volume will drop when two sets of headphones are connected.

9. AUDIO IN/OUT/ OPTICAL OUT connector (page 57)

10. VIDEO IN/OUT connector (page 57)

11. LINE SELECT switch (page 57-61)


12. S-VIDEO OUT connector (page 57)

13. DC IN 9.8V connector (page 18)

Connect the AC adaptor.

Identification of Controls (continued)

Display Window

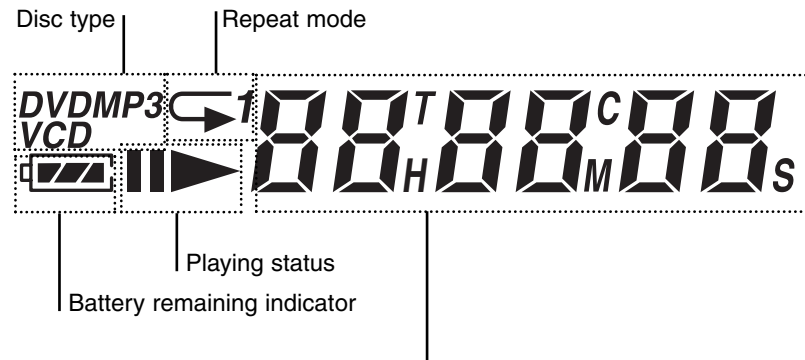

When playing back a DVD: Playing time of the current title or current Title/ Chapter number (Press PLAY button while playing disc. Title/ Chapter number appears for 2 seconds.)

When playing back a VIDEO CD with Playback Control(PBC): Playing time of the current track.

When playing back a CD, or VIDEO CD(without PBC): Playing time of the current track and current track number.

When playing back a DATA CD(JPEG): Current track number.


Disc type	Indication
1. DVD	: DVD
2. CD (CDDA)	: CD
3. VCD	: VCD
4. Data-Disc	: CD and MP3


NOTES:

- "MP3" and "CD" are displayed in the Display Window when a Data-Disc is played.
- Data-Discs are discs that contain MP3 or JPEG files.

Identification of Controls (continued)

Inserting batteries into the remote

You can control the player using the supplied remote. Insert two size AA(R6) batteries (supplied) by matching the \oplus and \ominus ends on the batteries to the markings inside the compartment. When using the remote, point it at the remote sensor  on the player.

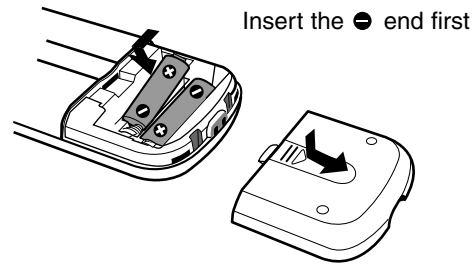


NOTES:

- Do not leave the remote in an extremely hot or humid place.
- Do not drop any foreign object into the remote casing, particularly when replacing the batteries.
- Do not expose the remote sensor to direct light from the sun or lighting apparatus. Doing so may cause a malfunction.
- If you do not use the remote for an extended period of time, remove the batteries to avoid possible damage from battery leakage and corrosion.

Identification of Controls (continued)

Remote Control

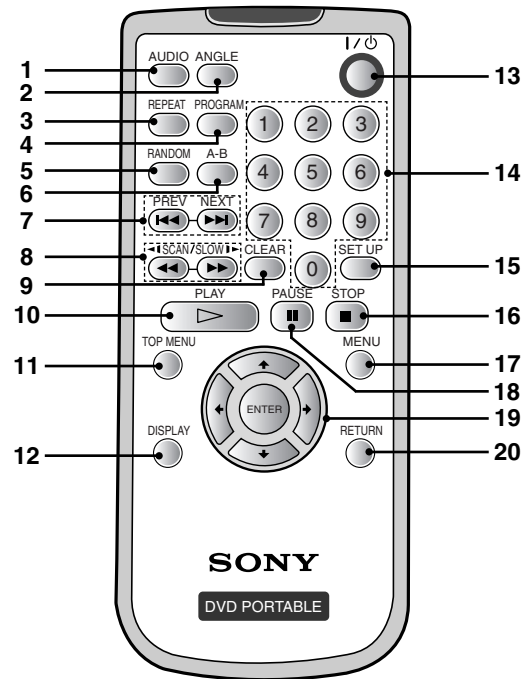

1. AUDIO button (page 32)
2. ANGLE button (page 33)
3. REPEAT button (page 35)
4. PROGRAM button (page 38-39)
5. RANDOM button (page 37)
6. A-B button (page 36)
7. PREVIOUS button (page 25)
8. SCAN/SLOW button (page 26)
9. CLEAR button
10. PLAY button
11. * TOP MENU button (page 30)
12. DISPLAY button (page 27-29)
13. POWER button
14. NUMBER buttons
15. SET UP button (page 45)

Identification of Controls (continued)

16. STOP button

17. MENU button

Use the MENU button to display the menu screen included on a DVD disc.
To operate a menu screen, follow the instructions in "Using a DVD Menu" (page 30).

18. PAUSE button

19. $\leftarrow/\uparrow/\downarrow/\rightarrow$ button, ENTER button

(up, down, left, right) for use in highlighting a selection on a GUI menu screen, TOP MENU and MENU screen.

20. RETURN button


* TOP MENU button:

Use the TOP MENU button to display the title screen included on DVD video discs. To operate a menu screen, follow the instructions in "Using a Title Menu" (page 30)

Power Connections

AC power Adaptor

Follow steps 1 to 3 to connect.
When disconnecting, reverse the order.

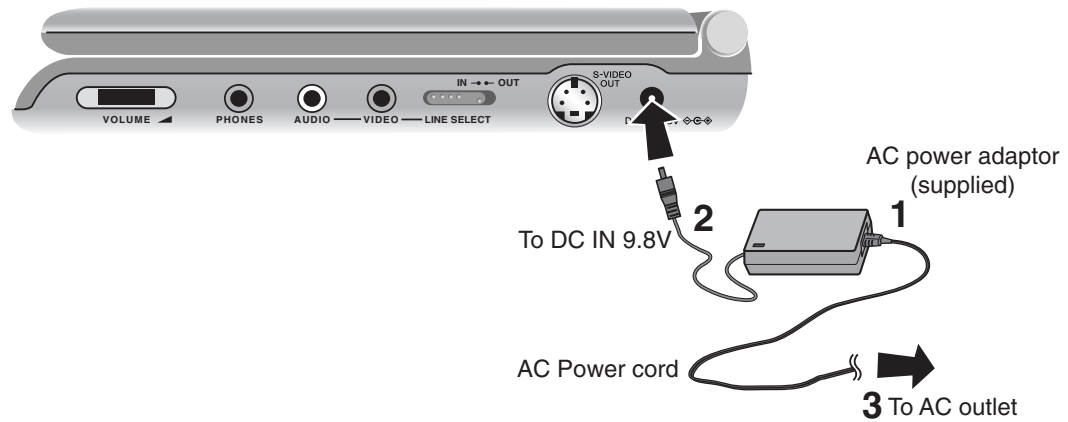

NOTES:

- When you disconnect the AC power cord, be sure to stop playback.
- Disconnecting the AC power cord during playback may cause a malfunction.

Power Connections (continued)


Battery Pack

You can use the NP-FX100 rechargeable battery pack (supplied) to enjoy the player when an AC outlet is not available.

- Charge the battery pack before using it for the first time.

■ Attaching the battery pack (supplied)

1. Match the hooks of the battery pack into the holes on the bottom of the player.
2. Press and slide the battery pack until the hooks click.

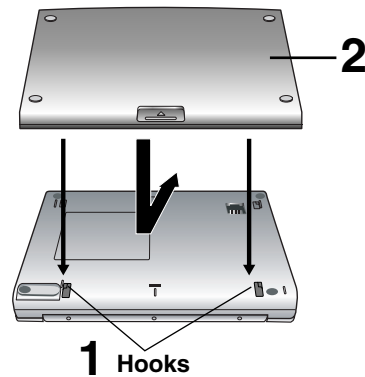


NOTES:

- Do not detach the battery pack during playback.
- Be careful not to drop the battery pack.


■ Detaching the battery pack

1. Press the **RELEASE** switch
2. Slide the battery pack until the hooks click.

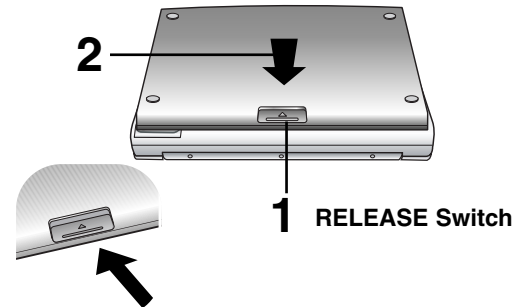

NOTE:


If you use the battery pack separately to the main unit, use the tab on the player to keep the player from tipping over.

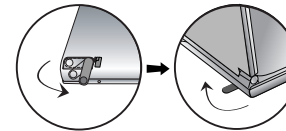

Power Connections (continued)


■ Charging the battery pack

1. Attach the battery pack to the player.
2. Connect the AC power adaptor to the player and then plug into an AC outlet.

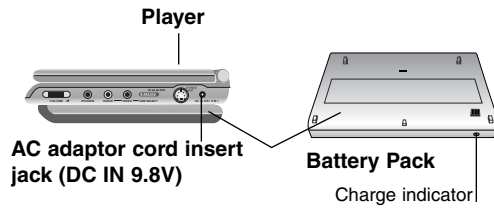

3. During recharging, charge indicator is red. If recharging is complete, charge indicator changes to green color.

 ■ Confirm the battery charge on the unit's display window



- If using the AC adaptor, battery display does not appear.

■ Recharging and play times

Recharging with player	Play time	
	LCD On	LCD Off
Approx. 2.6 hours	Approx. 3 hours*	Approx. 5 hours

* When Brightness control is set to “-”.

NOTES:

- Recharging times shown above depend on operating conditions.
- When the power is ON, you cannot charge the battery.
- Charge the battery at a temperature of +5°C (+41°F) to +35°C (+95°F). The charging time may vary, depending on the surrounding temperature.
- If the surrounding temperature is higher than approximately 86°F (30°C), the player's temperature will rise and the battery may not begin to charge as soon as you turn off the player. This is not a malfunction.
- The battery will begin to automatically charge as soon as the surrounding temperature or the temperature of the player drops.

Playing a Disc

DVD VCD CD

Basic Playback

- Prepare the power supply.

1. Open the outer cover and slide the POWER switch to the left to turn the unit on.

Power indicator lights and then the indicator will disappear after 5 seconds.

2. Press OPEN to open the disc lid and insert a disc with the side you want to play label up. Close the disc lid by hand.

- If the disc is placed in upside down (and it is a single-sided disc), "NO DISC" or "DISC ERROR" appears on the LCD screen.
- If you insert an audio CD, the CD indicator lights up in the display window.
- After playing back all of the chapters in the title, the DVD player automatically stops and returns to the menu screen.

3. Press PLAY to start play.

4. Adjust the volume.

NOTES:

- Place a disc with the playback side down on the spindle, and push gently on the center of the disc so it goes into position.
- Confirm LCD MODE position by pressing LCD MODE button.
- If no picture appears on the LCD, check that the LINE SELECT switch is set to LINE OUT mode.


Adjusting color intensity

- Use the COLOR control slide -/+ to adjust the color shade.
- ; black and white
+ ; color
- Power consumption increases with the level of color.

Adjusting the brightness

Use the BRIGHT control slide -/+ to adjust the brightness.

- ; dark
- + ; light

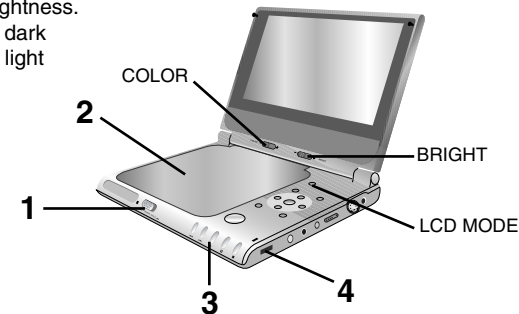

Playing a Disc (continued)

DVD VCD CD










■ Changing the size of the picture

Use the LCD MODE button to change the picture mode. The mode is shown on the unit's display window as follows.



■ The picture mode and size

The picture shown on the LCD depends on the display mode and the size recorded on the disc.

Mode	NORMAL	FULL	ZOOM	OFF
Wide-screen	Full screen 	Full screen 	Top and bottom edges are cut off. 	OFF
Regular (4:3)	Screen with blackbands on the right and left 	The normal mode screen is horizontally enlarged. 	Top and bottom edges of the full mode screen are cut off. 	OFF
Regular (4:3), Letterbox	The picture is surrounded by a black frame. 	The normal mode screen is horizontally enlarged. 	Full screen 	OFF

NOTES:

- If you are not using the LCD on this unit, select OFF to conserve power.
- The LCD is turned off if you close the unit.
- Horizontal lines may appear in the picture when the mode is switched to ZOOM, but this is not an indication of a malfunction.

Playing a Disc (continued)

DVD VCD CD


■ When a menu screen appears on the LCD screen.

In case of interactive DVDs with control, a menu screen appears on the LCD screen.



Example of interactive
DVD On-Screen Menu

Press **◀/▶/⏪/⏩** and press ENTER, or press the numeric button(s), to select the desired item.

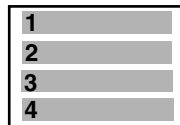

OR



Playback of the selected item begins.

- For further information, also refer to the jacket or case of the disc you are playing.

After operation

When the unit is not in use, remove the disc and press POWER to turn off the DVD player.

Video CD

This contains recordings of pictures and sound whose quality is on a par with that of video tape. This player also supports Video CDs with playback control (Version 2.0).

What is playback control (PBC)?

If a Video CD has “playback control” written on its disc or jacket, it means that particular scenes or information can be selected for viewing interactively with the LCD monitor using the menu screen.

NOTES:

- When “⊗” appears on the LCD screen while a button is pressed, it means that this function is not available on the disc you are playing.
- Depending on the DVD disc, some operations may be different or restricted. Refer to the jacket or case of the disc you are playing.

Playing a Disc (continued)

DVD VCD CD

■ Stopping Play

Press STOP during playback.

■ Resume Play

When play is stopped, the unit records the point where STOP was pressed (RESUME function). Press PLAY and play will resume from this point.

NOTES:

- This operation works only with discs for which the elapsed playing time appears in the display window during stop.
- When you press the STOP button, RESUME ■ (stop) appears on the screen and the player enters the resume mode. The current play information will appear on the front panel display. Note that this information varies according to the type of disc being played. For DATA CDs, no information may be displayed depending upon the condition of the disc. For Video CDs, the information varies if PBC is ON or OFF.
- The Resume function may not be available on some DVD discs or Video CDs (version 2.0).

■ Screen Saver

The screen saver is useful to prevent your display from becoming damaged.

The screen saver picture appears when you leave the DVD player in stop mode for about 15 minutes.

Automatic power off function

After the Screen Saver has been engaged for about 15 minutes, the DVD player will automatically turn itself off.

Playing a Disc (continued)

DVD VCD CD

■ Pause

Press **PAUSE** during playback.

- DVD/Video CD
The player will be placed in the still picture mode.
- CD
The player will be placed in the pause mode.

■ Skipping Chapters and Tracks

Skipping forward

Press **NEXT** **▶▶** during playback.

A chapter (DVD) or a track (CD/Video CD) is skipped each time the button is pressed.

Skipping back

Press **PREV** **◀◀** during playback.

- When the button is pressed once midway through a chapter/track, the player returns to the start of that chapter/track. When it is pressed again, a chapter/track is skipped each time the button is pressed.

For your reference:

- When **◀◀** / **▶▶** is pressed during menu play of video CDs equipped with PBC (Version 2.0), a menu screen may sometimes be recalled.

Playing a Disc (continued)

DVD VCD CD

■ To Scan at Fast Forward or Fast Reverse Playback

Press **SCAN/SLOW** ◀ or ▶ button during playback.

[LCD screen]



- The speed of advance (reverse) is relatively slow at first. When the button is pressed again, the speed becomes faster. (Each time the button is pressed, the speed increases up to 4 steps (DVD) or 3 steps (Video CD).)
- The speed will be retained even after the button is released.

To return to normal playback, press PLAY.

NOTE:

The DVD player does not play back sound during the high speed reverse and forward playback of DVD video discs.

However, the DVD player plays back sound during fast forward or fast reverse playback of audio CDs.

■ Playing in Slow-Motion (DVD and Video CD only)

Press **SCAN/SLOW** ◀ or ▶ during Pause mode.

[LCD screen]



- The speed of slow-motion is slow at first. When the button is pressed again, the speed becomes faster. (Each time the button is pressed, the speed increase up to 4 steps.)
- The speed will be retained even after the button is released.

To return to normal playback, press PLAY.

NOTES:


- The sound is muted during slow-motion playback.
- Subtitles do not appear on the screen during slow motion playback.
- The reverse slow does not work with Audio and Video CD.

General information about GUI Menu Icons

DVD VCD CD

This unit features GUI* Menu Icons showing disc information (title/chapter/track number, elapsed playing time, audio/subtitle language, angle, and sound) and player information (repeat play, play mode, marker, etc.). Some icons only show the indicated information. Other icons allow the settings to be changed.

* GUI: Graphic User Interface

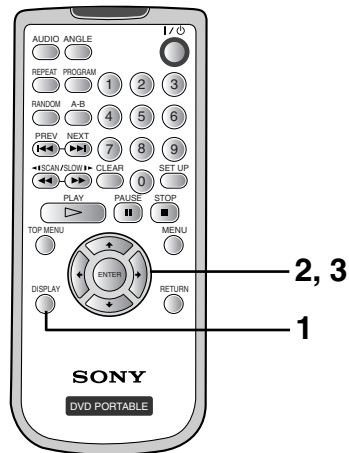

Common procedures

1. Press DISPLAY during playback.

Title function can be accessed from the stop mode.

2. Press ↑/↓ to select the desired item.

The current selected item is indicated by a yellow frame on its GUI menu icons.

3. Press ←/→ to select the desired setting.

- When numbers are displayed (e.g. title number), the numeric buttons can also be used for selecting instead of ←/→.
- For some functions, the setting will be registered immediately; for others, ENTER must be pressed.

To clear the GUI Menu Icons, press DISPLAY again.

Examples of GUI Menu Icons.

(The screens may differ depending on the disc contents.)



(DVD GUI)



(Video CD GUI)










(Video CD (Version 2.0))

Detailed Description of each GUI Menu Icon

DVD

You can view information about a disc and its operational status on the LCD screen.

Press DISPLAY during
playback. [LCD screen]
DVD GUI

	FUNCTION (Press \leftarrow/\rightarrow to select desired item)	SELECTION METHOD
 1 / 3	Shows the current title number and total number of titles, and skips to the desired title number.	\leftarrow/\rightarrow , or Numeric ENTER
 1 / 12	Shows the current chapter number and total number of chapters, and skips to the desired chapter number.	\leftarrow/\rightarrow , or Numeric ENTER NEXT, PREV
 0:20:09	Shows the elapsed playing time, and searches for a point on the disc using the playing time.	Numeric ENTER
 1 ENG □□D 5.1 CH	Shows the current audio soundtrack language, encoding method, and channel number, and changes the setting.	\leftarrow/\rightarrow , AUDIO
 OFF	Shows the current subtitles language, and changes the setting.	\leftarrow/\rightarrow
 1 / 1	Shows the current angle number and total number of angles, and changes the angle number.	\leftarrow/\rightarrow , ANGLE
 NORM.	Shows the current sound mode, and changes the setting.	\leftarrow/\rightarrow





Detailed Description of each GUI Menu Icon (continued)

VCD

Press DISPLAY during playback. [LCD screen]
Video CD GUI

FUNCTION
(Press \leftarrow/\rightarrow to select desired item)

SELECTION METHOD

 1 / 3	Shows the current track number, total number of tracks and PBC On mode, and skips to the desired track number.	\leftarrow/\rightarrow , or Numeric ENTER NEXT, PREV
 0:20:09	Shows the elapsed playing time (Display only)	_____
 ST	Shows the audio channel, and changes the audio channel.	\leftarrow/\rightarrow , AUDIO
 NORM.	Shows the current sound mode, and changes the setting.	\leftarrow/\rightarrow

Operation Using GUI Menu Icons

NOTE:

Some DVD discs may not provide all of the above GUI menu icons.

Using a Title/DVD Menu

DVD

Using a Title Menu

Some movie discs may contain two or more titles. If the disc has a title menu recorded on it, the TOP MENU button can be used to select the movie title. (The details of operation differ depending on the disc used.)

- Selecting a title may not be possible on certain DVD discs.

1. Press TOP MENU.

A list of the titles on the disc is displayed.

 


Press TOP MENU again to resume play from the scene when TOP MENU was first pressed.

- Resume play may not be possible on certain discs.

2. Press **←/↑/↓/→** and press **ENTER** or **PLAY**, or press the numeric button(s), to select the desired title.

Playback of the selected item begins.




Using a DVD Menu

Some DVDs have unique menu structures called DVD menus. For example, DVDs programmed with complex contents provide guide menus, and those recorded with various languages provide menus for audio and subtitle language. Although the DVD menu's contents and operation differ from disc to disc, the following explains the basic operation when this feature is used.

1. Press MENU during play.

The DVD menu available on the disc is displayed.

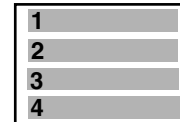

Pressing MENU again resumes play from the scene when MENU was first pressed.

- Resume play may not be possible on certain discs.

2. Press **←/↑/↓/→** and press **ENTER**, or press the numeric button(s), to select desired item.




The selected item is executed.

Changing Subtitle Language

DVD

It is possible to change the subtitle language to a different language from the one selected at the initial settings. (See page 45 for further info.)

This operation works only with discs on which multiple subtitle languages are recorded.

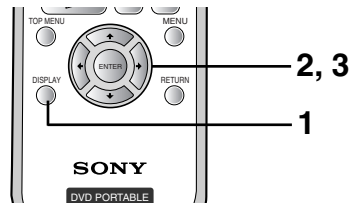

NOTES:

- In some cases, the subtitle language is not changed to the selected one immediately.
- When a disc supporting the closed caption is played, the subtitle and the closed caption may overlap each other on the LCD screen. In this case, turn the subtitle off.
- When the desired language is not selected even after pressing the button several times, it means that the language is not available on the disc.
- When the power is turned on or the disc is removed, subtitles appear in the language selected at the initial settings. If this language is not recorded on the disc, the disc's priority language appears.

1. Press **DISPLAY** during playback.



2. Press **↑/↓** to select the Subtitle item.




3. Press **←/→** repeatedly until the desired Subtitle is selected.

Each time this button is pressed, the LCD screen display changes.

Changing Audio Soundtrack Language

DVD VCD CD

It is possible to change the audio soundtrack language (or encoding method, channel number) to a different language from the one selected at the initial settings in case of DVD disc. (See page 45 for further info.) This operation works only with discs on which multiple audio soundtrack languages are recorded. It is possible to change the audio channel of Video CDs as well.

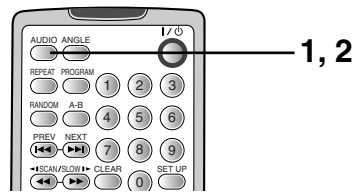

NOTES:

- When the desired language is not selected even after pressing the button several times, it means that the language is not available on the disc.
- When the power is turned on or the disc is removed, the language heard is the one selected at the initial settings. If this language is not recorded on the disc, only the available language on the disc will be heard.
- Some discs may not respond to the Audio feature.

• DVD

1. Press AUDIO during play.

Number of the audio soundtrack language being played back.



2. Press AUDIO repeatedly until the desired language (or encoding method, channel number) is selected.



• Audio and Video CD

1. Press AUDIO during play.




 
2. Press AUDIO repeatedly until the desired sound is selected.



Viewing from another Angle

DVD

Some DVDs may contain scenes which have been shot simultaneously from a number of different angles. For these discs, the same scene can be viewed from each of these different angles using the ANGLE button. (The recorded angles differ depending on the disc used.)

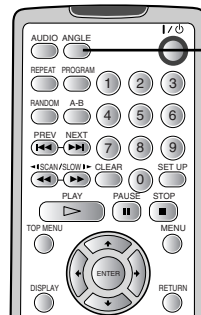

1, 2

1. Press ANGLE during playback.

Number of angle
being played back.



2. Press ANGLE repeatedly until the desired angle is selected.



For your reference

- The ANGLE indicator will blink on the LCD screen at scenes recorded at different angles to indicate that angle switching is possible.
- The angle number can be programmed beforehand; the angle will be switched to the selected number when the ANGLE indicator blinks.

NOTE:


This function only works for discs having scenes recorded at different angles.

Advanced Operations

3D Surround Effects

DVD CD

This unit can produce a 3D Surround effect, using 3D Surround Sound technology, which simulates multi-channel audio playback from two conventional stereo speakers instead of the five or more speakers normally required to listen to multi-channel audio from a home theater. This feature works with DVD discs encoded with Dolby Pro Logic and Dolby Digital audio tracks.

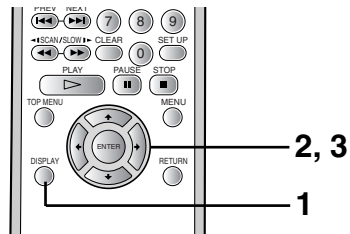

NOTES:

- This 3D Surround effect may not be available on some DVD discs, such as those recorded with a mono audio soundtrack.
- Turn off the TV surround sound and other surround effects when using this 3D surround effect.
- For the best 3D Surround effect using only two speakers, it is recommended that the two speakers be positioned approximately 2 m to 2.5 m apart, and that the listening position be 2 m to 2.5 m away from the speakers.

3D Surround Effect works only when you connect a PHONES connector or AUDIO IN/OUT.

1. Press DISPLAY during playback.

2. Press \uparrow/\downarrow to select SOUND item.

((...)) NORM.

3. Press \leftarrow/\rightarrow repeatedly until the desired sound is selected.

Each time this button is pressed, the LCD screen display changes.

((...)) SUR


Repeat Play

DVD VCD CD

Repeating viewing (listening)

Press **REPEAT** during playback.

Each time this button is pressed, the LCD screen changes as shown below and the disc will repeat a chapter or title (DVD) or a track (Audio and Video CD).

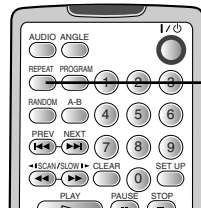


REPEAT

• DVD

Cancel repeat mode (normal play)

Repeat chapter being played

Repeat title being played

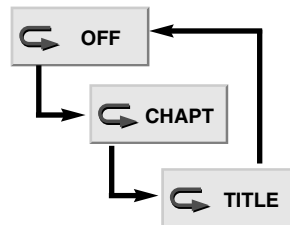


• Audio and Video CD

Cancel repeat mode (normal play)

Repeat track being played

Repeat entire disc contents

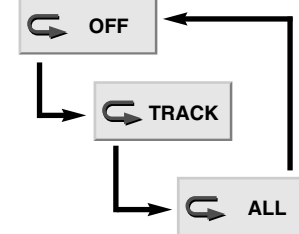


To enjoy program repeat play (Video CD)

If REPEAT is pressed during program play, repeat play is operated as shown below.

Cancel repeat mode (Program play)

Repeat the current programmed track

Repeat all programs

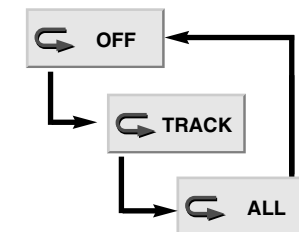

To return to normal play


Press REPEAT several times until "OFF" is displayed.

Advanced Operations

Repeat Play (continued)

DVD VCD CD

Repeating sections between two specific points (A-B repeat)

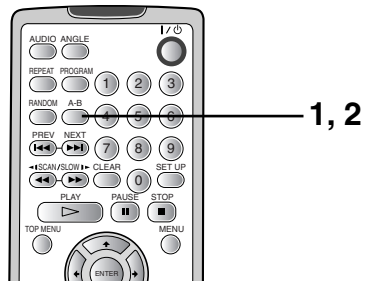


1. Press A-B during playback at the point where repeat play is to start (A).



• You can select "OFF" at this step by pressing CLEAR.

 2. Press A-B during playback at the point where repeat play is to be concluded (B).



Repeat play of the selection between points A and B starts.

To return to normal playback
Press A-B once "OFF" is displayed.



NOTES:

- Repeat play works only with discs for which the elapsed playing time appears in the display window during playback.
- Repeat play may not work correctly with some DVDs and some Video CDs.
- A-B repeat play works only within a title DVD or a track Video CD.
- Some subtitles recorded around point A or B may fail to appear (DVD).

Random Play

DVD VCD

 
Random play (Karaoke DVD, Video CD (PBC OFF))

NOTE:

This function only works with karaoke DVDs and Video CDs. Random does not work with DVD movie discs.

You can playback titles or tracks in random order.
(Random playback)

The DVD player automatically selects the titles on a DVD video karaoke disc only and plays them back randomly.



1. Press **RANDOM** during playback.

The DVD player automatically starts random playback and the **RANDOM** indicator in the display window appears for 2 seconds.


RANDOM indicator also appears in the display window when a new track starts to play.

2. To return to normal play.

Press **RANDOM** again.

NOTES:

- Random playback may not be possible on certain discs.
- If you press the **▶▶** or **◀◀** button during random playback, the DVD player goes to another track randomly and starts playback.

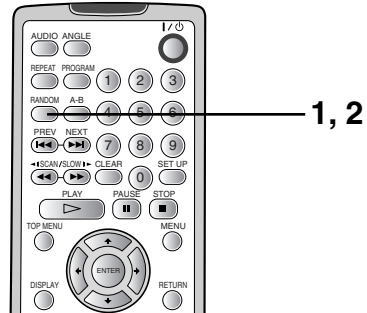

Program Play



Programmed Playback with Audio CDs and MP3 disc

The Program function enables you to store your favorite tracks from any disc in the player memory. Program can contain 30 tracks.

1. Press PROGRAM during playback or in the stop mode to enter the Program Edit mode.

The “ ” mark will appear to the right of the word Program on the right side of the menu screen.

NOTE:

Press PROGRAM to exit the Program Edit mode; the “ ” mark will disappear.

2. Select a track by using \uparrow/\downarrow , then press ENTER to place the selected track on the Program list.

3. Repeat step 2 to place additional tracks on the Program list.

4. Press \rightarrow .

The programmed track you selected last is highlighted on the program list.

5. Press \uparrow/\downarrow to select the track you want to start playing.


Press TOP MENU to move to the next page.
Press MENU to move to the previous page.

6. Press \triangleright (PLAY) to start.


Playback begins in the order in which you programmed the tracks and “PROG.” appears on the menu screen. Playback stops after all of the tracks on the Program list have played once.

7. To resume normal playback from programmed playback, press PROGRAM and select a track of CD (or MP3) list, then press ENTER.

“PROG.” indicator disappears on the menu screen and starts normal playback.

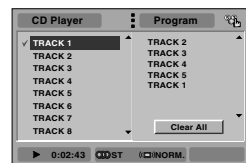

Audio CD menu

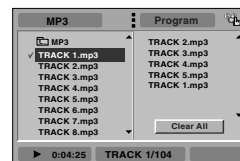

MP3 menu

Program Play (continued)

VCD CD MP3

Programmed Playback with Video CDs


NOTE:

On a Video CD with PBC, you must set PBC to Off on the setup menu to use the Program function.

1. Insert Video CD and close the tray.

2. Press PROGRAM while playback is stopped.

The VCD Program menu will appear.

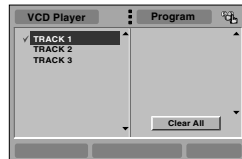

NOTE:

Press RETURN or PROGRAM to exit the Program menu.

3. Follow steps 2-6 of “Programmed Playback with Audio CD and MP3 disc” on page 38.


4. To resume normal playback from programmed playback, press PROGRAM during playback.

“No” indicator disappears in the display window.

Repeat Programmed Tracks

- To repeat the track currently playing, press REPEAT. The Repeat icon and “TRACK” appears on the menu screen.
- To repeat all tracks on the program list, press REPEAT a second time. The Repeat icon and “ALL” appears on the menu screen.
- To cancel Repeat mode, press REPEAT a third time. The Repeat icon and “OFF” appears on the menu screen.

Erasing a Track from Program List

1. Press PROGRAM during playback (Audio CD and MP3 disc only) or in the stop mode to enter the Program Edit mode. The “” mark will appear.
2. Press \rightarrow to move to the Program list.
3. Use \uparrow/\downarrow to select the track that you wish to erase from the Program list.
4. Press CLEAR. The track will be erased from the Program list.

Erasing the Complete Program List

1. Follow steps 1-2 of “Erasing a Track from Program List” as above.
2. Use \uparrow/\downarrow to select “Clear All”, then press ENTER. The complete Program for the disc will be erased. The programs are also cleared when the disc is removed.

Operation with Audio CD and MP3 discs

 


The DVD Player can play MP3 formatted recordings on CD-ROM, CD-R or CD-RW discs. Before playing MP3 recordings, read the “Notes on MP3 Recordings” on page 41.

1. Insert a disc and close the tray.


Audio CD; Audio CD menu appears on the LCD screen. Go to step 4.

MP3 disc; The MP3-JPEG choice menu appears on the LCD screen. Go to step 2



2. Press \uparrow/\downarrow to select the MP3 then press ENTER.

The MP3 menu appears on the LCD screen. Press RETURN to move to the MP3-JPEG choice menu.

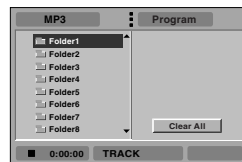

3. Press \uparrow/\downarrow to select a folder, and ENTER.

A list of files in the folder appears.

4. Press \uparrow/\downarrow to select a track then press \triangleright (PLAY) or ENTER.


Playback starts.

During playback, the current track's elapsed playing time will appear on the display window and menu.


Playback will stop at the end of the disc.

Press TOP MENU to move to the next page.

Press MENU to move to the previous page.

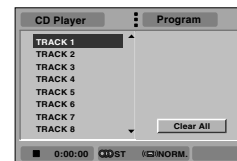

Audio CD menu

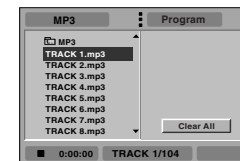

MP3 menu

💡 Hint

If you are in a file list and want to return to the Folder list, use the \uparrow/\downarrow to highlight and press ENTER to return to the previous menu screen.

5. To stop playback at any other time, press

■ (STOP).

Notes on MP3 Recordings

About MP3

- An MP3 file is audio data compressed by using the MPEG1 audio layer-3 file-coding scheme. We call files that have the “.mp3” file extension “MP3 files”.
- The player can not read an MP3 file that has a file extension other than “.mp3”.

MP3 disc compatibility with this player is limited as follows:

1. Sampling Frequency / only at 44.1 kHz
2. Bit rate / within 32-320 kbps CBR (Constant Bit Rate)
3. CD-R physical format should be “ISO 9660”
4. Discs created in the Packet Write format cannot be played.
5. A single session disc requires MP3 files in the first track. If there is no MP3 file in the 1st track, it cannot playback MP3 files. If you wish to playback MP3 files, format all the data in the disc or use a new one.
6. File names should be named using 8 letters or less and must incorporate “.mp3” extension e.g. “*****.MP3”.
7. Do not use special letters such as “/ : * ? “ < > ” etc.

8. Total number of files on the disc should be less than 650.

This DVD player requires discs/recordings to meet certain technical standards in order to achieve optimal playback quality. Pre-recorded DVDs are automatically set to these standards. There are many different types of recordable disc formats (including CD-R containing MP3 files). that require certain pre-existing conditions (see above) to insure compatible playback.

9. VBR (Variable Bit Rate) is not supported

Pause

1. Press **||** (PAUSE) during playback.
2. To return to playback, press **▷** (PLAY) or press **||** (PAUSE) again.

Moving to another Track

- Press **◀◀** or **▶▶** briefly during playback to go to the next track or to return to the beginning of the current track.
- Press **◀◀** twice briefly to step back to the previous track.
- In case of audio CDs, to go directly to any track, enter the track number using the numbered buttons (0-9) during playback.

Repeat Track/All/Off

1. To repeat the track currently playing, press REPEAT.
The Repeat icon and "TRACK" appears on the menu screen.
2. To repeat all tracks on a disc, press REPEAT a second time.
The Repeat icon and "ALL" appears on the menu screen.
3. To cancel Repeat mode, press REPEAT a third time.
The Repeat icon and "OFF" appears on the menu screen.

Search

1. Press ◀◀ or ▶▶ during playback.
The player will now go into SEARCH mode.
2. Press ◀◀ or ▶▶ repeatedly to select the required speed: 1 ◀◀◀, 2 ◀◀◀, 3 ◀◀◀ (backward) or 1 ▶▶▶, 2 ▶▶▶, 3 ▶▶▶ (forward).
Search speed and direction are indicated on the menu screen.
3. To exit SEARCH mode, press ▷ (PLAY).

Random

1. Press RANDOM during playback or when playback is stopped.
The unit automatically begins Random Playback and RANDOM or "RAND." appears on the display window and menu screen.
2. To return to normal playback, press RANDOM repeatedly until "RAND." disappears on the menu screen.

Surround (Audio CD only)

This unit can produce a Surround effect, which simulates multi-channel audio playback from two conventional stereo speakers, instead of the five or more speakers normally required to listen to multi-channel audio from a home theater system.

1. Press AUDIO or DISPLAY during playback.
2. Press ◀/▶ to select "NORM.".
3. Press ▲/▼ to select "SUR.".

To turn off the Surround effect, select "NORM.".

Changing the Audio Channel

(Audio CD only)

Press AUDIO repeatedly during playback to hear a different audio channel (ST, LEFT or RIGHT).

Operation with JPEG discs

JPEG

This DVD Player can play discs with JPEG files.
Before playing JPEG recordings, read the notes on
JPEG Recordings on page 44.

1. Insert a disc and close the tray.

The MP3-JPEG choice menu appears on the LCD
screen.



2. Press \uparrow/\downarrow to select the JPEG then press ENTER.

 
The JPEG menu appears on the LCD screen.



3. Press \uparrow/\downarrow to select a folder, and ENTER.

A list of files in the folder appears.
Press RETURN to move to the MP3-JPEG choice
menu.

Hint

If you are in a file list and want to return to the Folder
list, use the \uparrow/\downarrow on the remote to highlight “” and
press ENTER to return to the previous menu screen.

4. If you want to view a particular file, press \uparrow/\downarrow to highlight a file and press ENTER or \triangleright (PLAY).

Viewing of the file starts.


When viewing a file, press RETURN to move to
the previous menu (JPEG menu).

Press TOP MENU to move to the next page.

Press MENU to move to the previous page.

NOTE:

Press DISPLAY to display the information of the
current JPEG File. (The current number of file/
The total number of files, File size, File name)

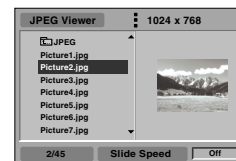

Hint

There are three viewing Slide Speed options: Fast,
Normal, Slow, and Off. Press \leftarrow/\rightarrow to highlight the
Slide Speed then press \uparrow/\downarrow to select the option you
want to use, and press ENTER.

5. To stop viewing at any other time, press ■ (STOP).

The JPEG menu appears.

Moving to another File

Press **◀◀** or **▶▶** once when viewing a picture to advance to the next file or to the previous file.

Still Picture

1. Press **⏸** (PAUSE) during slide show.
The player goes into PAUSE mode.
2. To return to the slide show, press **▶** (PLAY) or press **⏸** (PAUSE) again.

To flip the picture

Press **↕** when showing a picture to flip the picture horizontally or a vertically.

To rotate picture

Press **↻** when showing a picture to rotate the picture clockwise or counter clockwise.

Notes on JPEG Recordings


- Depending upon the size and number of the JPEG files, it could take a long time for the DVD player to read the disc's contents. If you don't see an on-screen display after several minutes, some of the files are too big — reduce the resolution of the JPEG files to less than 2 mega pixels and save to another disc.
- Total number of files and folders on the disc should be less than 650.
- Some disc may be incompatible due to different recording format or condition of the disc.
- Ensure that all the selected files have the “.jpg” extensions when copying to the CD.
- If the files have “.jpe” or “.jpeg” extensions, please rename them as “.jpg” files.
- File names without “.jpg” extension will not be able to be read by this DVD player. even though the files are shown as JPEG image files in windows explorer.

Selection of Initial Settings

DVD

Once the initial settings have been completed, the player can always be operated under the same conditions (especially with DVD discs).

The settings will be retained in the memory until they are changed, even if the power is switched off.

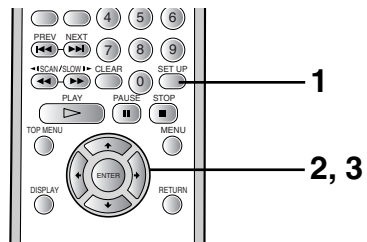

Selection of initial settings

1. Press SET UP in the stop or playback mode.

The SET UP menu is displayed.



2. Press \uparrow/\downarrow to select the desired item.

The screen will show the current setting for the selected item, and the alternate setting(s).

- Disc Audio (see page 46.)
- Disc Subtitle (see page 46.)
- Disc Menu (see page 46.)
- Rating (see page 47.)
- Area Code (see page 48.)
- TV Aspect (see page 49.)
- Menu Language (see page 50.)
- Digital Audio Output (see pages 51-52.)
- Others (see page 53.)

3. Press \rightarrow and then \uparrow/\downarrow to select the desired setting and press ENTER.

- Some items require additional steps. (See the respective page.)

When the alternate setting is selected the screen returns to the Initial Settings display.

To exit SET UP menu

Press SET UP, RETURN or PLAY.


Initial Settings

Selecting Disc Language

DVD

This is to select the audio soundtrack language, subtitle language and the language used in title menus or DVD menus which will always be used for every disc to be played back.

When you play back a DVD video disc, the DVD player automatically displays the pre-selected subtitle language if it is included on the disc.

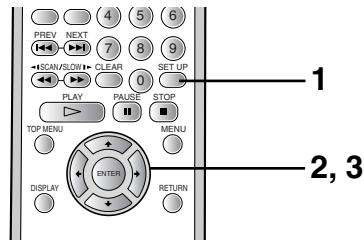

1. At the SET UP menu screen, press \uparrow/\downarrow to select "Disc Audio" and press \rightarrow .



2. Press \uparrow/\downarrow to select the desired language and then press ENTER.



Original : The original language of each disc will be selected.

English : English will be selected.

Other : Another language can be selected. You can input a 4-digit language code. (Refer to the language codes on page 54. Press CLEAR if an incorrect language code is entered.)

The "Disc Subtitle" and "Disc Menu" are selected by the same method.


NOTE:

If the language selected is not available on the disc, the original language designated by each disc will be selected.

Selecting Rating Level

DVD

Movies on DVDs may contain scenes not suitable for children. Therefore, discs may contain Parental Control information that applies to the complete disc or to certain scenes on the disc. These scenes are rated from 1 to 8, and alternatively, more suitable scenes are available for selection on some discs. Ratings are country-dependent. The Parental Control feature allows you to prevent discs from being played by your children or to have certain discs played with alternative scenes.

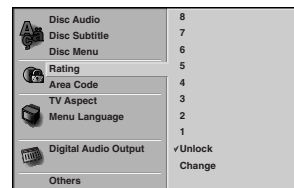

Selecting rating level

1. Select “Rating” on the Setup menu using the \uparrow/\downarrow .

2. While “Rating” is selected, press \rightarrow .

3. When you have not entered a password yet.

Enter a 4-digit password using the numbered buttons to create a personal 4-digit security password. then press ENTER. Enter the 4-digit password again and press ENTER to verify.

When you have already entered a password;

Enter a 4-digit password using the numbered buttons to confirm the personal 4-digit security password, then press ENTER.

If you make a mistake before pressing ENTER, press CLEAR and enter 4-digit security password again.

4. Select a rating from 1 to 8 using the \uparrow/\downarrow buttons. One (1) has the least playback restrictions. Eight (8) has the most playback restrictions.

Unlock: If you select Unlock, Parental Control is not active. The disc will play in full.

Ratings 1 to 8: Some discs contain scenes not suitable for children. If you set a rating for the player, all disc scenes with the same rating or lower will be played. Higher rated scenes will not be played unless an alternative scene is available on the disc. The alternative must have the same rating or a lower one. If no suitable alternative is found, playback will stop. You must enter the 4-digit password or change the rating level in order to play the disc.

5. Press ENTER to confirm your rating selection, then press SET UP to exit the menu.

Initial Settings

Selecting an Area Code

DVD

Enter the code of a country/area whose standards were used to rate the DVD video disc, referring to the list (See "Area Code List", page 55-56.).



1. Select Area Code using the \uparrow/\downarrow on the setup menu.
2. While Area Code is selected, press \rightarrow .
3. Follow step 3 of "Rating" on previous page.
4. Select the first character using the \uparrow/\downarrow .
5. Shift the cursor using \rightarrow and select the second character using \uparrow/\downarrow .
6. Press ENTER to confirm your country code selection, then press SET UP to exit the menu.

NOTE:

Confirmation of the 4-digit password is necessary when the code is changed (see "Changing the 4-digit code" below.).

Changing the 4-digit code

- 1 Follow Steps 1-2 as shown to the previous page (Rating).
- 2 Enter the old code, then press ENTER.
- 3 Select Change using \uparrow/\downarrow then press ENTER.
- 4 Enter the new 4-digit code, then press ENTER.
- 5 Enter exactly the same code a second time and verify by pressing ENTER.
- 6 Press SET UP to exit the menu.

If you forget your 4-digit code


If you forget your password, to clear the current password, follow the procedure below.

- 1 Press SET UP to display the setup menu.
- 2 Use the Number buttons to enter the 6-digit number "210499".
- 3 Enter a new code as shown on the previous page (Rating).


Selecting the TV Aspect

DVD


Select the appropriate screen type according to your TV set; conventional size screen (4:3) or wide-screen (16:9).

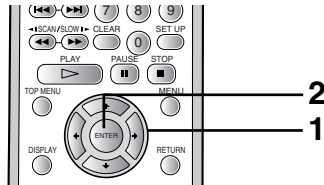

1. At the **SETUP** menu screen, press \uparrow/\downarrow to select “**TV Aspect**” and press \rightarrow .

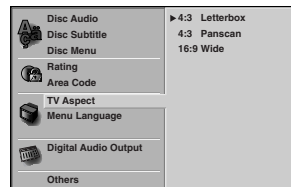

2. Press \uparrow/\downarrow to select the desired Aspect and

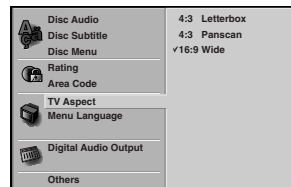


press **ENTER**.

4:3 Letterbox : The video material not formatted in the Pan & Scan style is played back in the letter-box style (black bands appear at top and bottom of screen).

4:3 Panscan : Select when a conventional TV set is connected. The video material formatted in the Pan & Scan style is played back in that style (the left and right edges are cut off).

16:9 Wide : Select when a wide-screen TV set is connected. Played in “FULL” size. (Setting the wide-screen TV to “FULL” mode is also necessary.)

* Each screen shows an example when the video material for a wide-screen is played. (This setting does not affect the video material for conventional size pictures.)

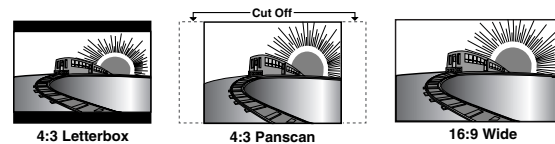


Initial Settings

Selecting the Menu Language

DVD

Selects language for SETUP menus and displays on the TV.

1. At the SETUP menu screen, press \uparrow/\downarrow to select "Menu Language" and press \rightarrow .

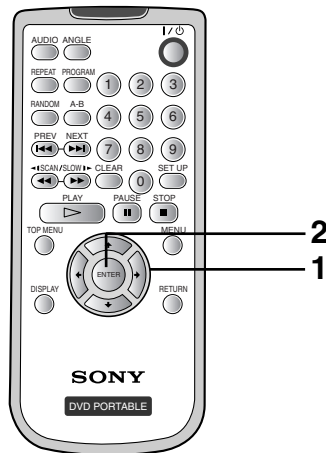

2. Press \uparrow/\downarrow to select the desired Language and press ENTER.




Selecting Digital Audio Output

DVD

Each DVD disc has a variety of audio output options. Set the player's Digital Audio Output according to the type of audio system you use.

- At the **SETUP** menu screen, press **▲/▼** to select **"Digital Audio Output"** and press **▶**.

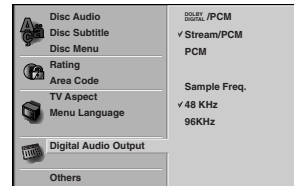

- Press **▲/▼** to select the desired output and press **ENTER**.

You can select Digital Audio Output or Sampling Frequency by pressing **ENTER**.

■ Digital Audio Output

DOLBY DIGITAL/PCM: Select "DOLBY DIGITAL/PCM" if an active digital output is supplied to a Dolby Digital decoder, (or an amplifier or other equipment with Dolby Digital decoder).

Stream/PCM: Select "Stream/PCM" if an active digital output is supplied to an amplifier or other equipment with DTS decoder, Dolby Digital decoder and MPEG decoder.

PCM: Select "PCM" if an active digital output is supplied to an amplifier or other equipment with linear PCM only (or MD recorder or DAT deck).

Playback Disc	OUTPUT		
	Stream/PCM	Dolby Digital/PCM	PCM only
96 kHz Linear PCM DVD	PCM	PCM	PCM
DTS DVD	DTS bit Stream	no audio output	no audio output
Dolby Digital DVD	Dolby Digital bit Stream	Dolby Digital bit Stream	PCM
MPEG DVD	MPEG bit Stream	PCM	PCM
Audio CD/Video CD	PCM	PCM	PCM
DTS Audio CD	DTS bit Stream	DTS bit Stream	DTS bit Stream

Initial Settings

Selecting Digital Audio Output (continued)

DVD

■ Sampling Frequency

To change the Sample Frequency setting, first select the desired digital audio output type as indicated on page 51.

If your A/V receiver or surround processor is NOT capable of handling 96kHz signals, select the 48kHz option. When this choice is made, this unit will automatically convert any 96kHz signals to a 48kHz output so that your system is capable of decoding them.

If your A/V receiver or surround processor is capable of handling 96kHz signals, select the 96kHz option. When this choice is made, this unit will pass each type of signal through without any further processing.

NOTES:


- When you are not using the player's digital audio output, don't select any of the options.
- If an active digital audio output signal is supplied to a receiver or other equipment without a corresponding digital decoding capability, a very loud noise may be produced which could permanently damage the speakers.
- The DTS DVD disc sound is played back only when the DVD player is connected to a receiver with a DTS decoder.

Others

DVD

The DRC, PBC settings can be changed.

1. At the **SETUP** menu screen, press **↑/↓** to select “Others” and press **→**.

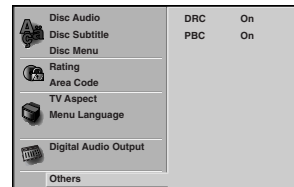

2. Press **↑/↓** to select the desired items and press **ENTER**.

The setting of the selected item are changed between On and Off.

■ DRC (Dynamic Range Compression) On/Off

- On:** Select this option to turn on the Dynamic Range Compression circuitry so that the dialogue remains clear even at low volume levels.
- Off:** Select this option to turn off the Dynamic Range Compression and have the soundtrack presented exactly as it was created.

■ PBC On/Off

Set Playback Control (PBC) to On or Off

- On:** Video CDs with PBC are played back according to the PBC.
- Off:** Video CDs with PBC are played back in the same way Audio CDs.

About DRC (Dynamic Range Compression)

With the DVD format you have the opportunity to hear a program's soundtrack in the most accurate and realistic presentation possible, thanks to the use of digital audio technology. However, in certain instances you may wish to slightly compress the dynamic range of the audio output (the difference between the loudest sounds and the quietest ones) so that you may listen to a movie at a lower volume without losing dialogue intelligibility.

NOTES:

- The DRC function works only during playback of Dolby Digital recorded discs.
- The level of Dynamic Range Compression may differ depending on the DVD disc.
- When playing karaoke, connect appropriate audio equipment (such as an amplifier) to the DVD video player.

Initial Settings

Table of Languages and their Code Numbers

DVD

Enter the appropriate code number for the initial settings “Audio”, “Subtitle” and/or “Menu” (See page 46).

Code	Language	Code	Language	Code	Language	Code	Language
6565	Afar	7079	Faroese	7678	Lingala	8375	Slovak
6566	Abkhazian	7082	French	7679	Laothian	8376	Slovenian
6570	Afrikaans	7089	Frisian	7684	Lithuanian	8377	Samoa
6577	Ameharic	7165	Irish	7686	Latvian, Lettish	8378	Shona
6582	Arabic	7168	Scots Gaelic	7771	Malagasy	8379	Somali
6583	Assamese	7176	Galician	7773	Maori	8381	Albanian
6588	Aymara	7178	Guarani	7775	Macedonian	8382	Serbian
6590	Azerbaijani	7185	Gujarati	7776	Malayalam	8385	Sudanese
6665	Bashkir	7265	Hausa	7778	Mongolian	8386	Swedish
6669	Byelorussian	7273	Hindi	7779	Moldavian	8387	Swahili
6671	Bulgarian	7282	Croatian	7782	Marathi	8465	Tamil
6672	Bihari	7285	Hungarian	7783	Malay	8469	Telugu
6678	Bengali; Bangla	7289	Armenian	7784	Maltese	8471	Tajik
6679	Tibetan	7365	Interlingua	7789	Burmese	8472	Thai
6682	Breton	7378	Indonesian	7865	Nauru	8473	Tigrinya
6765	Catalan	7383	Icelandic	7869	Nepali	8475	Turkmen
6779	Corsican	7384	Italian	7876	Dutch	8476	Tagalog
6783	Czech	7387	Hebrew	7879	Norwegian	8479	Tonga
6789	Welsh	7465	Japanese	7982	Oriya	8482	Turkish
6865	Danish	7473	Yiddish	8065	Panjabi	8484	Tatar
6869	German	7487	Javanese	8076	Polish	8487	Twi
6890	Bhutani	7565	Georgian	8083	Pashto, Pushto	8575	Ukrainian
6976	Greek	7575	Kazakh	8084	Portuguese	8582	Urdu
6978	English	7576	Greenlandic	8185	Quechua	8590	Uzbek
6979	Esperanto	7577	Cambodian	8277	Rhaeto-Romance	8673	Vietnamese
6983	Spanish	7578	Kannada	8279	Rumanian	8679	Volapük
6984	Estonian	7579	Korean	8285	Russian	8779	Wolof
6985	Basque	7583	Kashmiri	8365	Sanskrit	8872	Xhosa
7065	Persian	7585	Kurdish	8368	Sindhi	8979	Yoruba
7073	Finnish	7589	Kirghiz	8372	Serbo-Croatian	9072	Chinese
7074	Fiji	7665	Latin	8373	Singhalese	9085	Zulu

Area Code List

DVD

Enter the appropriate code number for the initial setting "Area Code" (See page 48).

Code	Area	Code	Area	Code	Area	Code	Area
AD	Andorra	BV	Bouvet Island	EH	Western Sahara	HN	Honduras
AE	United Arab Emirates	BW	Botswana	ER	Eritrea	HR	Croatia
AF	Afghanistan	BY	Belarus	ES	Spain	HT	Haiti
AG	Antigua and Barbuda	BZ	Belize	ET	Ethiopia	HU	Hungary
AI	Anguilla	CA	Canada	FI	Finland	ID	Indonesia
AL	Albania	CC	Cocos (Keeling) Islands	FJ	Fiji	IE	Ireland
AM	Armenia	CF	Central African Republic	FK	Falkland Islands	IL	Israel
AN	Netherlands Antilles	CG	Congo	FM	Micronesia	IN	India
AO	Angola	CH	Switzerland	FO	Faroe Islands	IO	British Indian Ocean Territory
AQ	Antarctica	CI	Ivory Coast	FR	France	IQ	Iraq
AR	Argentina	CK	Cook Islands	FX	France (European Territory)	IR	Iran
AS	American Samoa	CL	Chile	GA	Gabon	IS	Iceland
AT	Austria	CM	Cameroon	GB	Great Britain	IT	Italy
AU	Australia	CN	China	GD	Grenada	JM	Jamaica
AW	Aruba	CO	Colombia	GE	Georgia	JO	Jordan
AZ	Azerbaijan	CR	Costa Rica	GF	French Guyana	JP	Japan
BA	Bosnia-Herzegovina	CS	Former Czechoslovakia	GH	Ghana	KE	Kenya
BB	Barbados	CU	Cuba	GI	Gibraltar	KG	Kyrgyzstan
BD	Bangladesh	CV	Cape Verde	GL	Greenland	KH	Cambodia ⁶
BE	Belgium	CX	Christmas Island	GM	Gambia	KI	Kiribati
BF	Burkina Faso	CY	Cyprus	GN	Guinea	KM	Comoros
BG	Bulgaria	CZ	Czech Republic	GP	Guadeloupe (French)	KN	Saint Kitts & Nevis Anguilla
BH	Bahrain	DE	Germany	GQ	Equatorial Guinea	KP	North Korea
BI	Burundi	DJ	Djibouti	GR	Greece	KR	South Korea
BJ	Benin	DK	Denmark	GS	S. Georgia & S. Sandwich Isls.	KW	Kuwait
BM	Bermuda	DM	Dominica	GT	Guatemala	KY	Cayman Islands
BN	Brunei Darussalam	DO	Dominican Republic	GU	Guam (USA)	KZ	Kazakhstan
BO	Bolivia	DZ	Algeria	GW	Guinea Bissau	LA	Laos
BR	Brazil	EC	Ecuador	GY	Guyana	LB	Lebanon
BS	Bahamas	EE	Estonia	HK	Hong Kong	LC	Saint Lucia
BT	Bhutan	EG	Egypt	HM	Heard and McDonald Islands	LI	Liechtenstein


Initial Settings

Area Code List (continued)

DVD

Code	Area	Code	Area	Code	Area	Code	Area
LK	Sri Lanka	NF	Norfolk Island	SD	Sudan	TW	Taiwan
LR	Liberia	NG	Nigeria	SE	Sweden	TZ	Tanzania
LS	Lesotho	NI	Nicaragua	SG	Singapore	UA	Ukraine
LT	Lithuania	NL	Netherlands	SH	Saint Helena	UG	Uganda
LU	Luxembourg	NO	Norway	SI	Slovenia	UK	United Kingdom
LV	Latvia	NP	Nepal	SJ	Svalbard and Jan Mayen Islands	UM	USA Minor Outlying Islands
LY	Libya	NR	Nauru	SK	Slovak Republic	US	United States
MA	Morocco	NU	Niue	SL	Sierra Leone	UY	Uruguay
MC	Monaco	NZ	New Zealand	SM	San Marino	UZ	Uzbekistan
MD	Moldavia	OM	Oman	SN	Senegal	VA	Vatican City State
MG	Madagascar	PA	Panama	SO	Somalia	VC	Saint Vincent & Grenadines
MH	Marshall Islands	PE	Peru	SR	Suriname	VE	Venezuela
MK	Macedonia	PF	Polynesia (French)	ST	Saint Tome and Principe	VG	Virgin Islands (British)
ML	Mali	PG	Papua New Guinea	SU	Former USSR	VI	Virgin Islands (USA)
MM	Myanmar	PH	Philippines	SV	El Salvador	VN	Vietnam
MN	Mongolia	PK	Pakistan	SY	Syria	VU	Vanuatu
MO	Macau	PL	Poland	SZ	Swaziland	WF	Wallis and Futuna Islands
MP	Northern Mariana Islands	PM	Saint Pierre and Miquelon	TC	Turks and Caicos Islands	WS	Samoa
MQ	Martinique (French)	PN	Pitcairn Island	TD	Chad	YE	Yemen
MR	Mauritania	PR	Puerto Rico	TF	French Southern Territories	YT	Mayotte
MS	Montserrat	PT	Portugal	TG	Togo	YU	Yugoslavia
MT	Malta	PW	Palau	TH	Thailand	ZA	South Africa
MU	Mauritius	PY	Paraguay	TJ	Tadjikistan	ZM	Zambia
MV	Maldives	QA	Qatar	TK	Tokelau	ZR	Zaire
MW	Malawi	RE	Reunion (French)	TM	Turkmenistan	ZW	Zimbabwe
MX	Mexico	RO	Romania	TN	Tunisia		
MY	Malaysia	RU	Russian Federation	TO	Tonga		
MZ	Mozambique	RW	Rwanda	TP	East Timor		
NA	Namibia	SA	Saudi Arabia	TR	Turkey		
NC	New Caledonia (French)	SB	Solomon Islands	TT	Trinidad and Tobago		
NE	Niger	SC	Seychelles	TV	Tuvalu		


Connecting to a TV

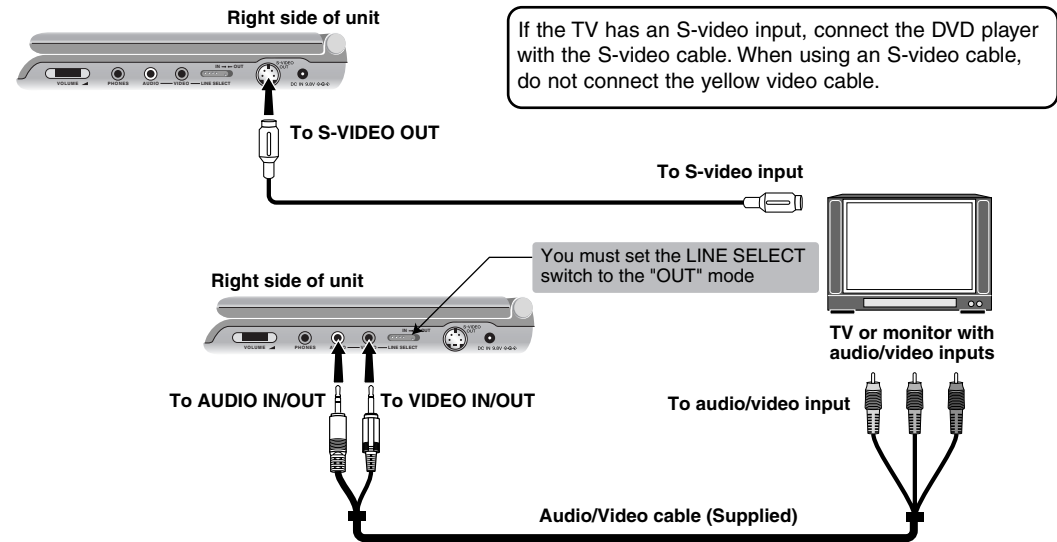

NOTES:

- Refer to the owner's manual of your TV as well.
- Before you connect the DVD player to your TV, be sure to turn off the power and unplug both units from the wall outlet before making any connections.
- **Connect the DVD player to your TV directly. If you connect the DVD player to a VCR, the playback picture will be distorted because DVD video discs are copy protected.**

Connecting to an amplifier equipped with a Dolby Digital decoder

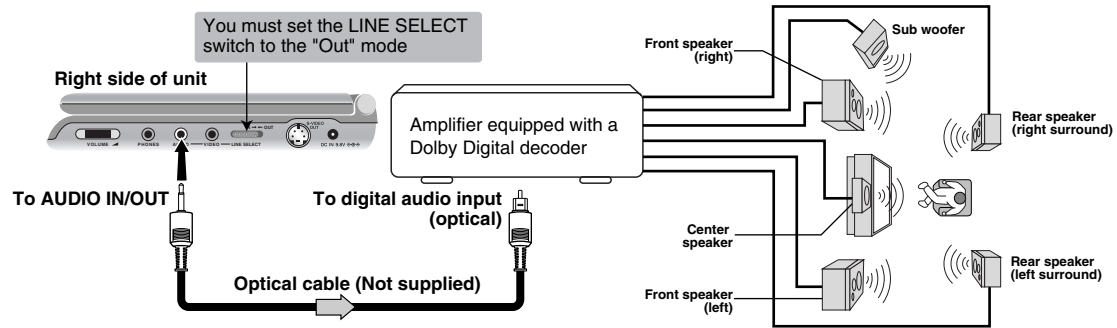

To enjoy Dolby Digital sound from this DVD player you need the following:

- DVD recorded in Dolby Digital
- 6 channel receiver equipped with a Dolby Digital decoder, or Dolby Digital processor and power receiver
- 5 speakers and 1 sub woofer
- Set the Digital Audio Output of this DVD player to "Dolby Digital" from the SETUP menu


Manufactured under license from Dolby Laboratories. "Dolby", "Pro Logic", and the double-D symbol are trademarks of Dolby Laboratories.

Connecting to an amplifier equipped with a Dolby Pro Logic Surround

Dolby Pro Logic Surround

You can still enjoy the excitement of Surround Sound even if your A/V receiver does not offer Dolby Digital decoding.

If your A/V receiver has a Dolby Pro Logic II/ Pro Logic decoder, refer to the following connection diagram.

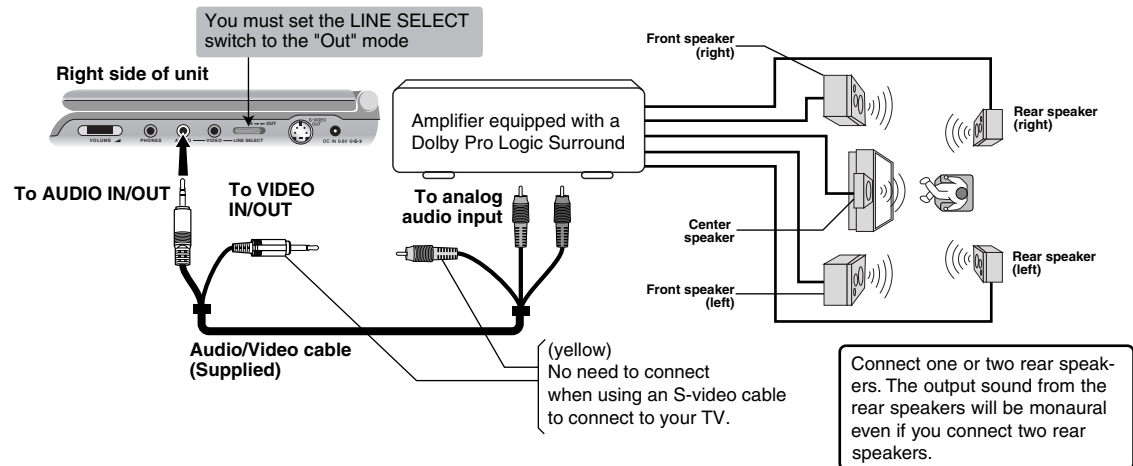


- **With a receiver equipped with Dolby Digital**
Connect the equipment the same way as described in "Connecting to an amplifier equipped with a Dolby Digital decoder" on the previous page. Refer to that receiver's owner's manual and set the receiver so you can enjoy Dolby Pro Logic Surround sound.

NOTE:
Be sure to set Digital Audio Output of this DVD player to "PCM" from the SETUP menu when you enjoy sounds of Dolby Pro Logic Surround using this connection.

Connecting to an amplifier equipped with a DTS decoder

Digital Theater System(DTS)

DTS is high quality surround technology used in theaters and now available for home use, on DVD video discs or audio CDs. If you have a DTS decoder or processor, you can obtain the full benefit of 5.1 channel DTS encoded sound tracks on DVD video discs or audio CDs.

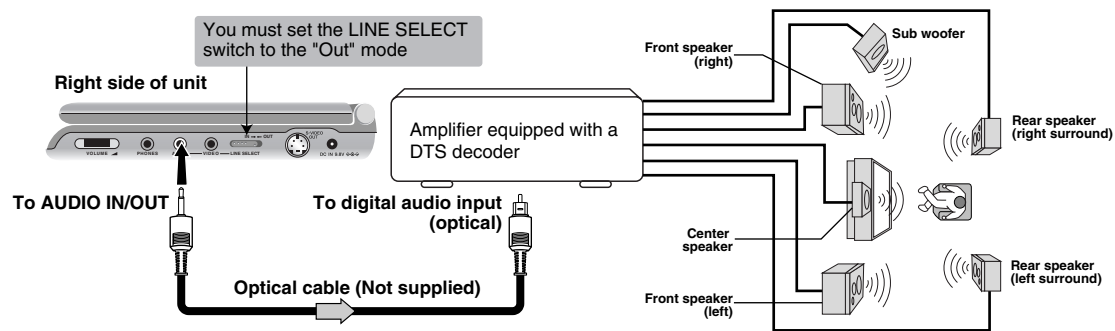

“DTS” and “DTS Digital Out” are trademarks of Digital Theater Systems, Inc.


NOTE:

When you are connecting (via the OPTICAL OUT) an AV decoder that does not have the Dolby Digital, Digital Theater System (DTS) or MPEG2 decoding, be sure to set Digital Audio Output of this DVD player to “PCM” from the SETUP menu. Otherwise, high volume sound may damage your hearing as well as the speakers.

Connecting to an amplifier equipped with a digital audio input

2 Channel Digital Stereo

You can enjoy the dynamic sound of 2 Channel Digital Stereo by connecting this DVD player to a receiver equipped with a digital audio input and speaker system (right and left front speakers).

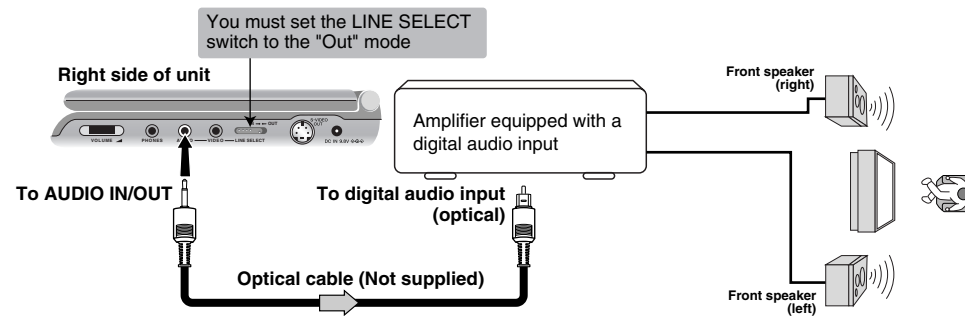


NOTES:

For all connections

- Connect the OPTICAL OUT of the player to the "OPTICAL" input of a Receiver or Processor.
- Refer to the owner's manual of your audio equipment as well.
- Before you connect the DVD player to other equipment, be sure to turn off the power and unplug all of the equipment from the wall outlet before making any connections.
- The output sound of the DVD player has a wide dynamic range. Be sure to adjust the receiver's volume to a moderate listening level. Otherwise, the speakers may be damaged by a sudden high volume sound.
- Turn off the receiver before you connect or disconnect the DVD player's power cord. If you leave the receiver power on, the speakers may be damaged.

To use the player with car battery charger

Connect the player to the cigarette lighter socket using the supplied car battery charger (DCC-FX100).

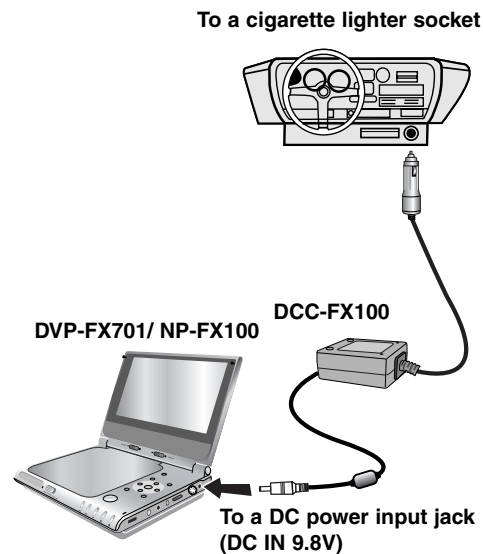


NOTES

- Route the cords so that they will not interfere with driver.
- Turn off the player by Power switch. If you turn off the player by turning off the ignition key of the car when the rechargeable battery is not attached, the settings may be cleared.
- Do not install the monitor display where viewable by the driver.
- Some states restrict the use of monitors and televisions in vehicles. Where use is permitted, the units should not be installed or operated so as to be viewable by the driver.
- Keep this unit away from Sony DVP-FX701 if the picture is disturbed.

To use the player with car battery charger (continued)

Fuse Replacement

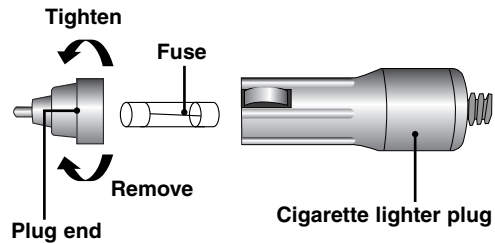

If this unit is not working properly, check to see if the fuse has blown out.

If the fuse has blown out, replace it in the following way.

- 1 Pull the cigarette lighter plug out of the cigarette lighter socket.
- 2 Detach the end of the plug by turning it counter-clockwise.
- 3 Replace the fuse with a new one.
- 4 Reattach the end of the plug by turning it clockwise firmly.

NOTES

- To replace the fuse on the car battery cord Be sure to use a fuse with the correct amperage (5A, 250V, length 31mm).
- When replacing the fuse, do not substitute anything for the specified fuse.
- If the fuse blows again soon after replacement, consult your nearest Sony dealer.

Please contact your car dealer about the polarity that your car is grounded or the voltage of your car battery, etc.

To use the player with car battery charger (continued)

Others

- Use this car battery charger only for cars which use a 12-24 volt battery.
- There are cars which are negatively grounded and there are others which are positively grounded.




This car battery charger is for negatively grounded cars only.

- Use the unit with leaving the car engine going. If you use the unit with the car engine stopped, the car battery may become unusable.
 - This unit is not disconnected from the power source as long as it is connected to the cigarette lighter socket of a car.
 - Unplug the car battery cord from the cigarette lighter socket when not in use. To disconnect the cord, pull it out by the plug. Never pull the cord itself.
 - Do not operate the unit if it has been dropped or damaged.
 - Be sure that nothing metallic comes into contact with the metal parts of the unit. If it does, a short may occur and the unit may be damaged.
- Always keep the metal contacts clean.
 - If the car's cigarette lighter socket is dirty with ash, etc., the plug part will become hot due to a poor connection. Be sure to clean it before using.
 - Do not disassemble or convert the unit.
 - Do not apply mechanical shock or drop the unit.
 - Heat may build up while charging or during extended use. This is not a malfunction.
 - While listening to the car radio, keep the plug of the Car Battery Cord out of the cigarette lighter socket or keep the radio away from the unit to avoid static.
 - Avoid placing it where it would be subject to vibration.
 - Avoid leaving the unit where they would be subject to high temperatures, such as direct sunlight e.g. on the dashboard or hot air from the heater.

Disc Requirements

Playable Discs

This DVD player can play back the following discs.

	Disc mark	Contents	Disc size	Maximum playback time
DVD video discs		Audio+Video (moving pictures)	12 cm	Approx. 4 hours (single sided disc)
				Approx. 8 hours (double sided disc)
			8 cm	Approx. 80 minutes (single sided disc)
				Approx. 160 minutes (double sided disc)
Video CDs		Audio+Video	12 cm	74 minutes
			8 cm	20 minutes
Audio CDs		Audio	12 cm	74 minutes
			8 cm	20 minutes

In addition, this unit can play a DVD-RW (Video Mode), DVD-R, DVD+RW and CD-R or CD-RW that contains audio titles or MP3 or JPEG files.

You cannot playback discs other than those listed above.

(CVD, CD-ROM, CD-Extra, CD-G, and CD-i discs can not be played on this DVD player.)

Copyright Information

Region Management Information

Region Management Information: This DVD Player is designed and manufactured to respond to the Region Management Information that is recorded on a DVD disc. If the Region number described on the DVD disc does not correspond to the Region number of this DVD player, this DVD player cannot play that disc.



The Region number of this DVD player is 1.

Note on Unauthorized Discs

You may not be able to play back some DVD video discs on this player if they were purchased from outside your geographic area or made for business purposes.

When you try to play back an unauthorized disc, "**Check Regional Code**" appears on the LCD screen.

Note on Copyright

It is forbidden by law to copy, broadcast, show, broadcast on cable, play in public, and rent copyrighted material without permission.

DVD video discs are copy protected, and any recordings made from these discs will be distorted.

This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Macrovision, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision.

Reverse engineering or disassembly is prohibited.

Before Calling Service Personnel

Symptoms and Correction

Check the following guide for the possible cause of a problem before contacting service.

Symptom	Cause	Correction
No power.	• The power cord is disconnected.	• Plug the power cord into the wall outlet securely.
	• Hold switch is set to HOLD position.	• Release the hold mode.
	• The battery is discharged.	• Recharge the battery.
The power is on, but the DVD player does not work.	• No disc is inserted.	• Insert a disc. (Check that the DVD or, audio CD indicator in the display window is lit.)
No picture on the LCD or TV (including video from another unit).	• The video cable is not connected securely.	• Connect the video cable into the jacks securely.
	• The AV LINE SELECT switch is not set correctly.	• Set the LINE SELECT switch correctly. <ul style="list-style-type: none"> - While you are playing a disc, set the LINE SELECT switch to Out mode. - While you are viewing video from other equipment, set the LINE SELECT switch to In mode.
	• LCD mode is set to OFF.	• Select a LCD mode other than OFF.
	• Check that Brightness control is set to “-”.	• Adjust the brightness.
	• The TV is not set to receive DVD signal output.	• Select the appropriate video input mode on the TV so the picture from the DVD player appears on the LCD screen.
• The connected TV power is turned off.	• Turn on the TV.	

Reference

Before Calling Service Personnel (continued)

Symptom	Cause	Correction
No sound.	• The equipment connected with the audio cable is not set to receive DVD signal output.	• Select the correct input mode of the audio receiver so you can listen to the sound from the DVD player.
	• The audio cables are not connected securely.	• Connect the audio cable into the jacks securely.
	• The power of the equipment connected with the audio cable is turned off.	• Turn on the equipment connected with the audio cable.
	• The Digital Audio Output is set to the wrong position.	• Set the Digital Audio Output to the correct position, then turn on the DVD player again.
The playback picture is poor.	• The disc is dirty.	• Clean the disc.
The DVD player does not start playback.	• No disc is inserted.	• Insert a disc. (Check that the disc indicator in the display window is lit.)
	• An unplayable disc is inserted.	• Insert a playable disc. (Check the disc type, color system and Regional code.)
	• The disc is placed upside down.	• Place the disc with the playback side down.
	• The disc is not placed within the guide.	• Place the disc on the disc tray correctly inside the guide.
	• A menu is on the LCD screen.	• Press the SET UP button to turn off the menu screen.
	• The Rating level is set.	• Cancel the Rating function or change the rating level.

Before Calling Service Personnel (continued)

Symptom	Cause	Correction
The LCD is dark.	<ul style="list-style-type: none"> • Check that Brightness control is set to “-”. 	<ul style="list-style-type: none"> • Adjust the brightness.
No response when buttons are pressed.	<ul style="list-style-type: none"> • Some discs prohibit certain operations. 	<ul style="list-style-type: none"> • “⊘” may appear on the screen during operation.
	<ul style="list-style-type: none"> • Hold switch is set to HOLD position. 	<ul style="list-style-type: none"> • Release the hold mode.
The remote control does not work properly.	<ul style="list-style-type: none"> • The remote control is too far from the DVD player. 	<ul style="list-style-type: none"> • Operate the remote control within about 23 ft (7 m).
	<ul style="list-style-type: none"> • There is an obstacle in the path of the remote control and the DVD player. 	<ul style="list-style-type: none"> • Remove the obstacle.
	<ul style="list-style-type: none"> • The batteries in the remote control are exhausted 	<ul style="list-style-type: none"> • Replace the batteries with new ones.

Specifications

[DVD player]	Power requirements	DC 9.8 V (AC adaptor/ Car Battery Charger terminal), DC 7.4 V (Battery)
	Power consumption	12 W with battery
	Weight	1.43 lbs (0.65 kg) (without battery pack)
	External dimensions (W X D X H)	7 1/2 x 6 x 1 1/16 inches (189 x 150.3 x 26.1 mm)
	Signal system	NTSC
	Laser	Semiconductor laser, wavelength 650 nm (DVD), 780 nm (CD)
	Frequency range (audio)	DVD linear sound: 48kHz sampling 4 Hz to 20 kHz 96kHz sampling 4 Hz to 44 kHz
	Signal-to-noise ratio (audio)	More than 95 dB
	Dynamic range (audio)	More than 95 dB
	Harmonic distortion (audio)	0.08 %
	Operating conditions	Temperature: 41°F to 95°F, Operation status: Horizontal
[Connectors]	Video input/output (VIDEO In/Out)	1.0 V (p-p), 75 Ω, negative sync., ø3.5mm mini jack x 1
	S-video output	(Y) 1.0 V (p-p), 75 Ω, negative sync., Mini DIN 4-pin x 1 (C) 0.3 V (p-p), 75 Ω
	Audio output (optical audio)	Optical connector (ø3.5mm) x 1
	Audio input/output (AUDIO In/Out, analog audio)	2.0 Vrms(1 KHz, 0 dB), ø3.5mm mini jack x 1
	Earphone terminal	ø3.5mm stereo mini jack x 1

Specifications (continued)

[AC Power Adaptor]	Power requirements	100 to 240 AC, 50/60Hz
[Car Battery Charger]	Power requirements	12-24V DC (12-24V, only for negative grounded cars)
[Liquid Crystal Display]	Panel size	7 inches (16:9)
	Projection system	TN color transmission
	Driving system	a-Si TFT active matrix
	Resolution	234 x 480 (effective pixel rate: more than 99.99%)
[Supplied Accessories]	<ul style="list-style-type: none"> • Audio/Video connecting cord1 • AC Adaptor (AC-FX100)1 • Power Cord1 • Battery Pack (NP-FX100)1 • Remote control (RMT-D163A).....1 • Size AA (R6) batteries2 • Car Battery Charger (DCC-FX100).....1 • Headphone Y-Splitter1 	

Reference

* Designs and specifications are subject to change without notice.



Sony Corporation Printed in Korea

<http://www.sony.net/>

