

MINOLTA

The essentials of imaging

www.minoltaeurope.com



DiMAGE 7 Hi

E INSTRUCTION MANUAL

9222-2778-11 MM-A208

BEFORE YOU BEGIN

Thank you for purchasing this Minolta digital camera. Please take the time to read through this instruction manual so you can enjoy all the features of your new camera.

This manual contains information regarding products introduced before September, 2002. To obtain compatibility information for products released after this date, contact a Minolta Service Facility listed on the back cover of this manual.

Check the packing list before using this product. If any items are missing, immediately contact your camera dealer.

Minolta DiMAGE digital camera
Ni-MH batteries (set of four)
Ni-MH battery charger set
Neck strap NS-DG1000
Lens shade DLS-7Hi
Lens cap L -1249
Accessory shoe cap SC-9

16MB CompactFlash card
AV cable AVC-300
USB cable USB-100
DiMAGE software CD-ROM
DiMAGE Instruction Manuals CD-ROM
Quick Reference Guide
Warranty card

This product is designed to work with accessories manufactured and distributed by Minolta. Using accessories or equipment not endorsed by Minolta may result in unsatisfactory performance or damage to the product and its accessories.

Apple, the Apple logo, Macintosh, Power Macintosh, Mac OS, and the Mac OS logo are registered trademarks of Apple Computer Inc. Microsoft and Windows are registered trademarks of the Microsoft Corporation. The official name of Windows is Microsoft Windows Operating System. Pentium is a registered trademark of the Intel Corporation. Microdrive is a trademark of the International Business Machines Corporation. QuickTime is a trademark used under license. Adobe is a registered trademark of Adobe Systems Incorporated. All other trademarks are the property of their respective owners.

FOR PROPER AND SAFE USE

Read and understand all warnings and cautions before using this product.

WARNING

Using batteries improperly can cause them to leak harmful solutions, overheat, or explode which may damage property or cause personal injury. Do not ignore the following warnings.

- Only use the batteries specified in this instruction manual.
- Do not install the batteries with the polarity (+/-) reversed.
- Do not use batteries which show wear or damage.
- Do not expose batteries to fire, high temperatures, water, or moisture.
- Do not attempt to short or disassemble batteries.
- Do not store batteries near or in metallic products.
- Do not mix batteries of different types, brands, ages, or charge levels.
- Do not charge alkaline batteries.
- When recharging rechargeable batteries, only use the recommended charger.
- Do not use leaking batteries. If fluid from the batteries enters your eye, immediately rinse the eye with plenty of fresh water and contact a doctor. If fluid from the batteries makes contact with your skin or clothing, wash the area thoroughly with water.

- Use only the specified AC adapter within the voltage range indicated on the adapter unit. An inappropriate adapter or current may cause damage or injury through fire or electric shock.
- Do not disassemble this product. Electric shock may cause injury if a high voltage circuit inside the product is touched.
- Immediately remove the batteries or unplug the AC adapter and discontinue use if the camera is dropped or subjected to an impact in which the interior, especially the flash unit, is exposed. The flash has a high voltage circuit which may cause an electric shock resulting in injury. The continued use of a damaged product or part may cause injuries or fire.
- Keep batteries or small parts that could be swallowed away from infants. Contact a doctor immediately if an object is swallowed.
- Store this product out of reach of children. Be careful when around children, not to harm them with the product or parts.
- Do not fire the flash directly into the eyes. It may damage eyesight.
- Do not fire the flash at vehicle operators. It may cause a distraction or temporary blindness which may lead to an accident.
- Do not use the monitor while operating a vehicle or walking. It may result in injury or an accident.
- Do not use this product in a humid environment, or operate this product with wet hands. If liquid enters the product, immediately remove the batteries or unplug the AC adapter and discontinue use. The continued use of a product exposed to liquids may cause damage or injury through fire or electric shock.
- Do not use the product near inflammable gases or liquids such as gasoline, benzene, or paint thinner. Do not use inflammable products such as alcohol, benzene, or paint thinner to clean the product. The use of inflammable cleaners and solvents may cause an explosion or fire.
- When unplugging the AC adapter, do not pull on the power cord. Hold the adapter unit when removing it from an outlet.
- Do not damage, twist, modify, heat, or place heavy objects on the AC adapter cord. A damaged cord may cause damage or injury through fire or electric shock.
- If the product emits a strange odor, heat, or smoke, discontinue use. Immediately remove the batteries taking care not to burn yourself as the batteries become hot with use. The continued use of a damaged product or part may cause injuries or fire.
- Take the product to a Minolta Service Facility when repairs are required.

CAUTION

- Do not use or store the product in a hot or humid environment such as the glove compartment or trunk of a car. It may damage the product and batteries which may result in burns or injuries caused by heat, fire, explosion, or leaking battery fluid.
- If batteries are leaking, discontinue use of the product.
- The camera temperature rises with extended periods of use. Care should be taken to avoid burns.
- Burns may result if the CompactFlash card or batteries are removed immediately after extended periods of use. Turn the camera off and wait for it to cool.
- Do not fire the flash while it is in contact with people or objects. The flash unit discharges a large amount of energy which may cause burns.
- Do not apply pressure to the LCD monitor. A damaged monitor may cause injury, and the liquid from the monitor may cause inflammation. If liquid from the monitor makes contact with skin wash the area with fresh water. If liquid from the monitor comes in contact with the eyes, immediately rinse the eyes with plenty of water and contact a doctor.
- The rim of the lens hood can cause injury. Take care not to accidentally strike anyone with the camera when the lens hood is attached.
- When using the AC adapter, insert the plug securely into the electrical outlet.
- Do not use if the AC adapter cord is damaged.
- Do not cover the AC adapter. A fire may result.
- Do not obstruct access to the AC adapter; this can hinder the unplugging of the unit in emergencies.
- Unplug the AC adapter when cleaning or when the product is not in use.

TABLE OF CONTENTS

Names of parts	12
Camera body	12
Data panel	15
Monitor display – recording mode	16
Monitor display – Quick View & playback mode	17
Getting up and running.....	18
Attaching the camera strap	18
Removing the lens cap	18
Attaching the lens hood.....	19
Installing and changing batteries.....	20
Battery condition indicator	21
Auto power save	21
External power supplies (sold separately).....	22
Inserting and changing a memory card.....	22
Setting the date and time	24
Basic recording	26
Setting the camera to record images automatically	26
EVF and LCD monitor display.....	26
Basic recording operation.....	27
Focus lock.....	28
Automatic monitor amplification.....	28
Focus signals.....	29
Special focusing situations	29
Using the built-in flash	30
Flash range – automatic operation.....	30
Handling the camera	31
Diopter adjustment	31
Camera-shake warning	31
Digital-subject-program button.....	32
Basic playback	34
Single-frame playback and histogram display	34
Viewing images	35
Deleting single images	35
Changing the Quick View & playback display.....	36
Enlarged playback	37
Viewing movies.....	38
Playing back voice memos	38
Viewing images on a television	39

Advanced recording	40
Display controls – recording mode	40
Pro-auto button	42
Spot-AE lock button	43
Manual focus	43
Autofocus areas and control	44
Flex Focus Point	45
Digital zoom	46
Macro mode	47
Setting the function dial	48
Memory – storing camera settings	50
Metering modes	51
Exposure modes	52
Program – P	53
Program shift	53
Aperture priority – A	54
Shutter priority – S	55
Manual exposure – M	56
Bulb exposures	57
Attaching a remote cord (sold separately)	57
Drive modes	58
Continuous advance	59
High-speed continuous advance	60
UHS continuous advance	61
UHS continuous-advance movies	61
Bracketing	62
Notes on bracketing	63
Interval	64
Self-timer	66
White balance	67
Automatic white balance	68
Preset white balance	68
Custom white balance	68
Camera sensitivity – ISO	70
Flash range and camera sensitivity	71
Shutter-speed range and camera sensitivity	71
Attaching a Minolta accessory flash unit	72
Using the flash sync terminal	72
Digital Effects Control	73
Exposure and flash compensation	74

Contrast compensation	76
Color-saturation compensation	77
Filter	77
A short guide to photography	78
What is an Ev? What is a stop?	79
Recording mode menu	80
Navigating the recording-mode menu	80
Electronic keyboard	82
Autofocus modes	83
Image size	84
About the frame counter	84
Image quality	85
About super-fine and RAW image quality	86
Image-file size and memory card capacity	87
Flash modes	88
Wireless/Remote flash	90
Wireless/Remote camera and flash ranges	92
Notes on wireless/remote flash	93
Flash control	94
Magnification button and electronic magnification	95
Spot AF/AEL	96
Data imprinting	97
Color mode	98
About Adobe RGB	99
Sharpness	99
Instant playback	100
Voice memo	101
Movie recording	102
Navigating the movie menu	104
Pro-auto button	105
Playback mode menu	106
Navigating the playback-mode menu	106
Frame selection screen	108
Deleting images	109
Formatting memory cards	110
Locking images	111
Changing the index playback format	111
Slide Show	112
About DPOF	114
Creating a DPOF print order	114


Ordering an index print	115
Canceling a DPOF print order	115
Copying images	116
Setup mode	118
Navigating the setup menu	118
EVF and LCD monitor brightness	120
Audio signals	120
Shutter FX	120
Volume	121
Language	121
File number memory	121
Folder name	122
Select folder	123
New folder	123
Display mode	124
Direct manual focus	125
Reset default	126
EVF auto switch – Controlling the auto-display function	128
Setting the date and time	128
Setting the date format	128
Video output	129
Auto power save	129
Memory recall	129
Control dial (M)	130
Manual shift	130
Bracketing	131
Color profile	131
Delete confirmation	131
Data-transfer mode	132
System requirements	132
Connecting the camera to a computer	133
Changing the memory card (data-transfer mode)	135
Connecting to Windows 98 / 98 second edition	136
Automatic installation	136
Manual installation	137
Connecting to Mac OS 8.6	139
QuickTime system requirements	139
Auto power save (Data-transfer mode)	139
Memory card folder organization	140

Disconnecting the camera from the computer	142
Windows 98 / 98 second edition.....	142
Windows ME, 2000 Professional, and XP	142
Macintosh.....	143
Troubleshooting	144
When using filters	146
Removing the driver software – Windows	147
Care and storage	148
Camera care.....	148
Cleaning.....	148
Storage.....	148
Operating temperatures and conditions	149
Memory card care and handling.....	149
Batteries	150
About Ni-MH batteries	150
LCD monitor care	151
Copyright	151
Before important events or journeys	151
Questions and service	151
Technical specifications.....	152
System accessories	154

The following marks may be found on the product:



This mark on your camera certifies that this camera meets the requirements of the EU (European Union) concerning interference causing equipment regulations. CE stands for Conformité Européenne (European Conformity).

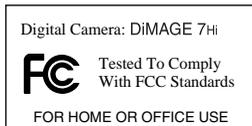


This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
 Tested by the Minolta Corporation
 101 Williams Drive, Ramsey, New Jersey 07446, U.S.A.
 Do not remove the ferrite cores from the cables.

This Class B digital apparatus complies with Canadian ICES-003.
 Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.


NAMES OF PARTS


CAMERA BODY

* This camera is a sophisticated optical instrument. Care should be taken to keep these surfaces clean. Please read the care and storage instructions in the back of this manual (p. 148).

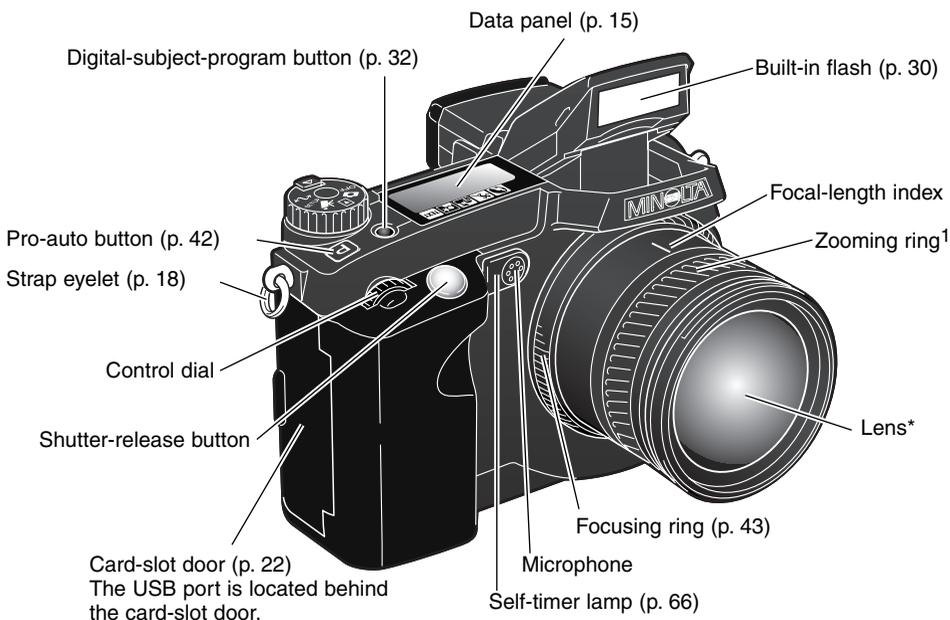


¹ The focal-length scale on the zooming ring is given in 35mm focal-length equivalents. The DiMAGE Viewer software supplied with the camera can display the actual focal length used to capture the recorded image as well as the equivalent focal length in 35mm photography.

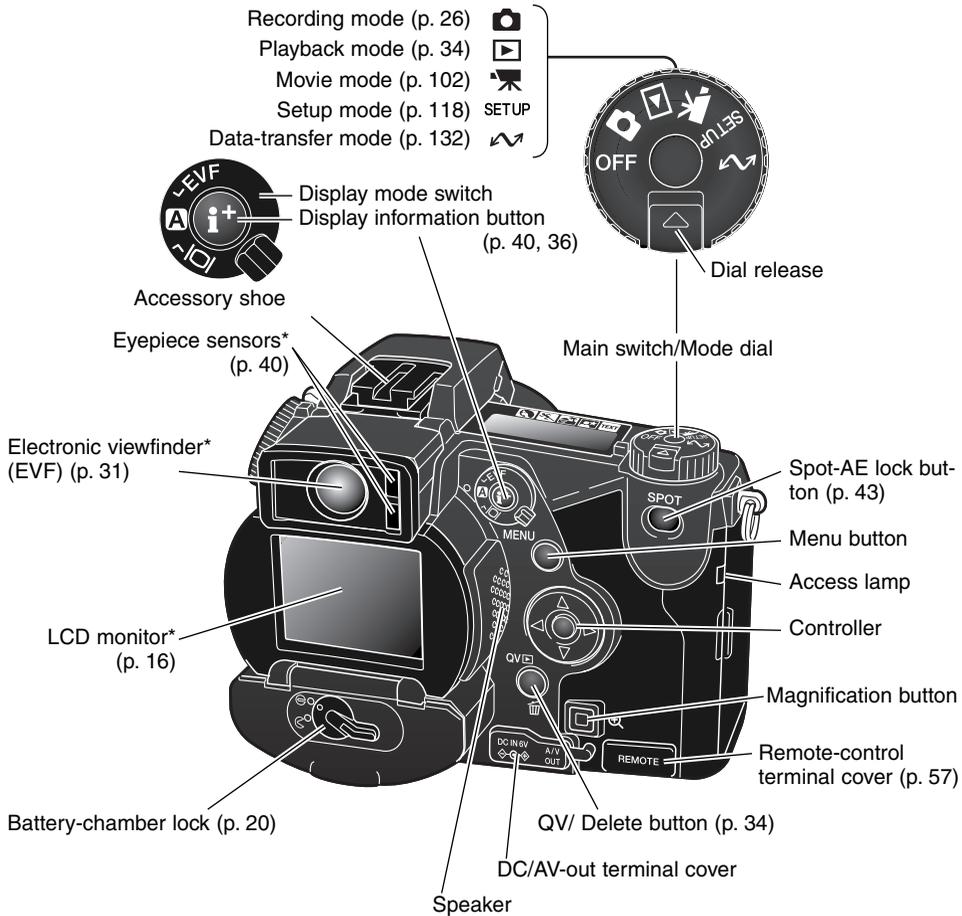

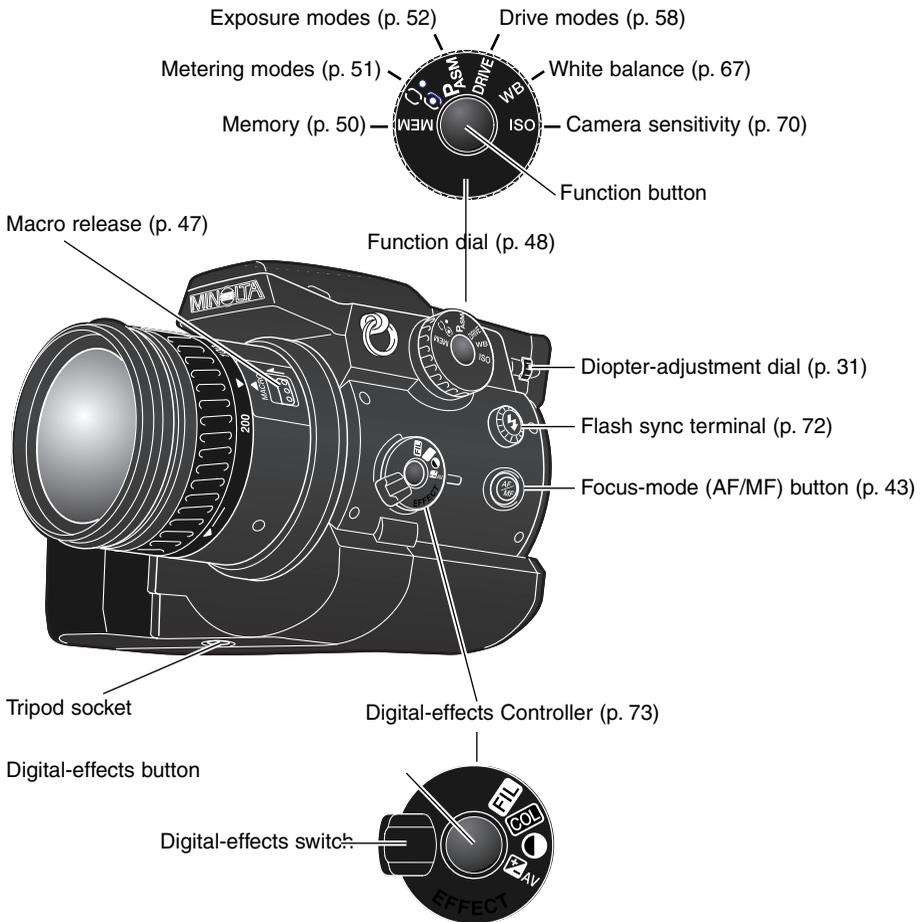

DATA PANEL

Located on the top of the camera body, the data panel shows the status of the camera. All icons have been shown for clarity.

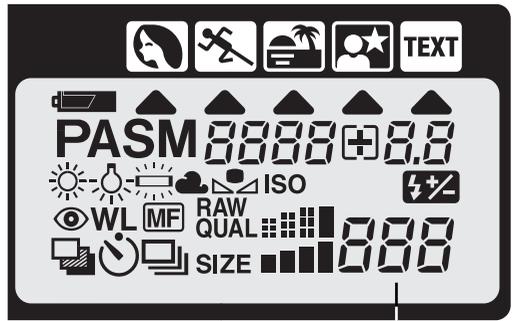

Digital-subject-program icons (p. 32)



Digital-subject-program indicators (p. 32)



Battery-condition indicator (p. 21)

PASM

Exposure-mode indicators (p. 52)



White-balance indicators (p. 67)

ISO

Camera-sensitivity indicator (p. 70)



Flash-compensation indicator (p. 74)



Red-eye reduction indicator (p. 88)

WL

Wireless/Remote flash indicator (p. 90)

MF

Manual-focus indicator (p. 43)



Drive-mode indicators (p. 58)

RAW QUAL


Image-quality display (p. 85)

SIZE

Image-size display (p. 84)

8888+8.8


Shutter-speed and aperture display/exposure/flash compensation display

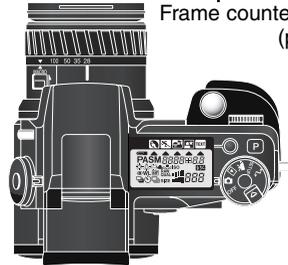

Frame counter
(p. 84)

The frame counter cannot exceed 999. When the number of recordable images exceeds this, 999 will be displayed. The frame counter will continue to count down when the number of recordable images falls below one thousand.

MONITOR DISPLAY – RECORDING MODE

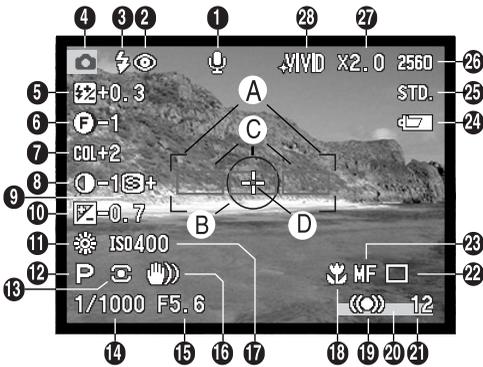

1. Microphone indicator
2. Flash-mode indicator (p. 88)
3. Flash signal (p. 30)
4. Mode indicator
5. Flash-compensation display (p. 74)
6. Filter display (p. 77)
7. Color-saturation-compensation display (p. 77)
8. Contrast-compensation display (p. 76)
9. Sharpness display (p. 99)

10. Exposure-compensation display (p. 74)
11. White-balance indicator (p. 67)
12. Exposure-mode/Digital-subject-program indicator (p. 52, 32)
13. Metering-mode indicator (p. 51)
14. Shutter-speed display
15. Aperture display
16. Camera-shake warning (p. 31)
17. Camera-sensitivity (ISO) display (p. 70)
18. Macro-mode indicator (p. 47)
19. Focus signal (p. 29)
20. Data-imprinting indicator (p. 97)
21. Frame counter (p. 84)
22. Drive-mode indicator (p. 58)
23. Manual-focus indicator (p. 43)
24. Battery-condition indicator (p. 21)
25. Image-quality indicator (p. 85)
26. Image-size display (p. 84)
27. Digital-zoom display (p. 46)
28. Color-mode indicator (p. 98)

- A. Focus frame
- B. Spot metering area (p. 51)
- C. AF sensors
- D. Flex Focus Point (p. 45)

MONITOR DISPLAY – QUICK VIEW & PLAYBACK MODE

Mode indicator [▶] 1280 Image size (p. 84)
 STD. Image quality (p. 85)

Time of capture 15:36 Frame number/
 Date of capture 2002.08.27 [0007/0058] total number of images

[Print icon] Print indicator (p. 114)
 [Lock icon] Lock indicator (p. 111)
 [Voice icon] Voice-memo indicator (p. 101)

Mode indicator [▶] 1280 Image size (p. 84)
 STD. Image quality (p.85)

1/2000 Shutter speed
 F8 Aperture value
 AWB White-balance setting
 (p. 67)
 ISO400 Sensitivity setting (p. 70)
 [0] Degree of exposure
 compensation (p. 74)
 HLT10 Folder name (p. 140)

Date of capture 2002.08.27 100-0003 Folder number – image file number

The black area of the histogram shows the luminance distribution of the recorded image from black (left) to white (right). Each one of the 256 vertical lines indicates the relative proportion of that light value in the image. The histogram can be used to evaluate exposure and contrast, but displays no color information.


GETTING UP AND RUNNING

This section covers the preparation of the camera. This includes the changing of batteries and memory card as well as the use of external power supplies.

ATTACHING THE CAMERA STRAP


Attach the camera strap to the strap eyelets as shown. Always keep the camera strap around your neck in the event that you drop the camera.

The neck strap is made with leather. Water may stain the strap. When the strap is wet or in contact with light colored material, the strap may stain the wearers clothing.

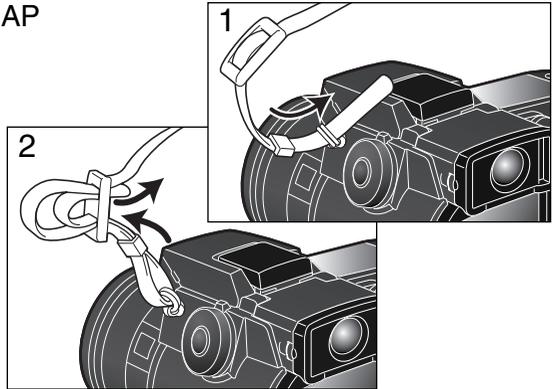


REMOVING THE LENS CAP

Using your thumb and index finger, pinch the inside or outside tabs of the lens cap to remove. When the camera is not in use, always replace the lens cap.

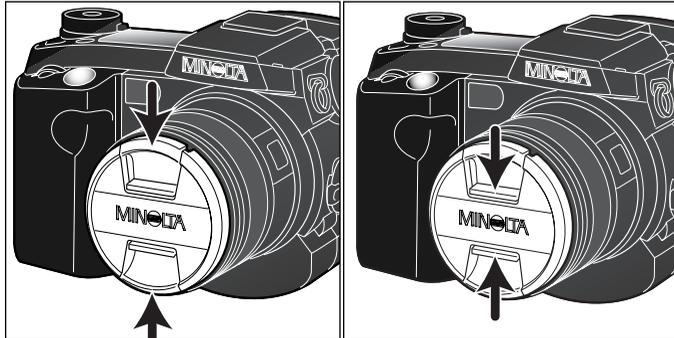

ATTACHING THE LENS HOOD

The lens hood is used to control stray light from entering the lens and causing flare. When using the camera under bright light, the use of the lens hood is recommended. The lens hood should not be used with the built-in flash as it can cause a shadow.

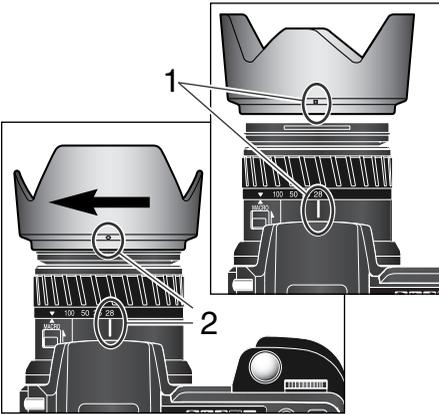


To mount the lens hood, align the rectangular dimple on the rim of the hood with the focal-length index on the top of the lens barrel (1).

Slide the hood onto the end of the lens and turn it 90° clockwise until it clicks and the circular dimple is aligned with the focal-length index (2). When mounted correctly, the large petals of the lens hood should be to the top and bottom. Never force the lens hood. If it does not fit, check its orientation. To detach the lens hood, turn it 90° counterclockwise and remove.

The lens hood can be reverse mounted when the camera is not in use.

With one of the large petals to the top, slide the hood onto the end of the lens. Turn it 90° clockwise until it clicks into place.

The lens hood can be attached or removed with the lens cap on the camera. To detach the lens hood, turn it 90° counterclockwise and remove.

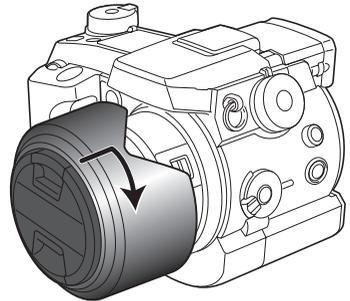


INSTALLING AND CHANGING BATTERIES


This digital camera uses four AA-size nickel-metal hydride (Ni-MH) batteries. When using new Ni-MH batteries, fully charge them before their initial use.




When replacing batteries, check that the mode dial is in the off position.

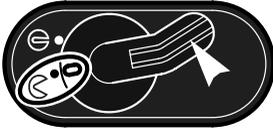

Open the battery-chamber door by moving the battery-chamber lock to the open position.

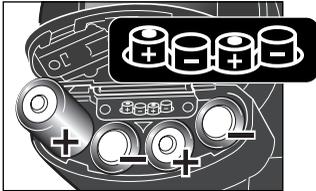

Insert the batteries. Make sure the positive and negative battery terminals are orientated as illustrated on the diagram in the battery chamber.

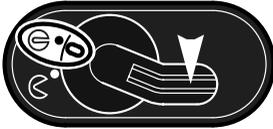

Close the battery-chamber door and slide the lock lever to the close position.

Although alkaline batteries can be used with this product, their performance will be limited. Only use alkaline batteries for test photographs or when Ni-MH batteries, the Minolta External High-power Battery Pack, or AC adapter are not available.

BATTERY CONDITION INDICATOR


This camera is equipped with an automatic battery-condition indicator. When the camera is on, the battery-condition indicator appears on the data panel and monitors. The monitor icon will change from white to red when battery power is low. If the data panel and monitors are blank, the batteries may be dead or installed incorrectly.



Full-battery – the batteries are fully charged. This icon is displayed for five seconds on the monitors when the camera is turned on. The icon remains on the data panel.



Low battery warning – battery power is very low, but all functions are operational. The batteries should be replaced as soon as possible. This warning automatically appears and remains on the display until the batteries are changed.

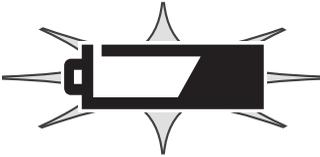

Blinking low battery warning – displayed on the data panel with no other icons. Power is insufficient for camera operation. The shutter will not release. Replace or recharge the batteries immediately.


AUTO POWER SAVE

To conserve battery power, the camera will turn off displays and unnecessary functions if an operation is not made within a certain period. The LCD monitor will turn off after thirty seconds, and the EVF and data panel turn off after one minute. To restore the displays, press the shutter-release button partway down or press the display-information button. The length of the auto-power-save period for the EVF and data panel can be changed in the advanced 2 section of the setup menu (p. 118).

EXTERNAL POWER SUPPLIES (SOLD SEPARATELY)

The AC Adapter allows the camera to be powered from an electrical household outlet. The AC Adapter is recommended when the camera is interfaced with a computer or during periods of heavy use. AC Adapter model AC-1L is for use in North America, Japan, and Taiwan, and AC-2L is for use in all other areas.

The External High-power Battery Pack Kit EBP-100 is a portable power source and significantly extends the operating time of the camera. The kit contains a high-power lithium-ion battery, holder, and charger. The battery, holder, and charger are also available separately.

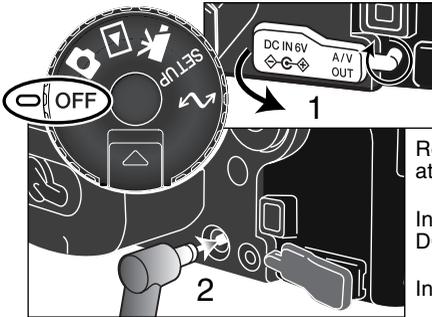

Always turn off the camera and confirm the access lamp is not lit before changing between power supplies.

Remove the DC terminal cover from the left (1). The cover is attached to the body to prevent loss.

Insert the mini plug of the AC adapter or battery pack into the DC terminal (2).


Insert the AC adapter plug into an electrical outlet.

INSERTING AND CHANGING A MEMORY CARD



Always turn off the camera and confirm the access lamp is not lit before inserting or removing a memory card, otherwise the card may be damaged, and data lost.

A memory card must be inserted for the camera to operate. If a card has not been inserted, a no-card warning will be displayed on the monitors. Type I and II CompactFlash cards and IBM Microdrives are compatible with this camera. For memory card care and handling, see page 149.

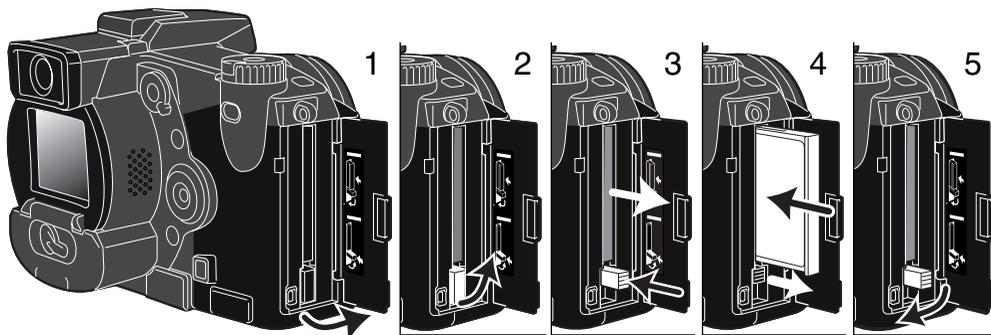

Open the card-slot door in the direction indicated (1).

To eject a memory card, lift (2) then press (3) the card-eject lever. The card can now be pulled out. Take care when removing the card as it becomes hot with use.


Insert a memory card into the card slot until the card-eject lever pops out (4). Insert the card so the face is toward the front of the camera. Always push the card in straight. Never force the card. If the card does not fit, check that it is orientated correctly.

Fold the card-eject lever down as shown (5) and close the card-slot door.


If the card-not-recognized message appears, the inserted card in the camera may need to be formatted. A memory card used in another camera may have to be formatted before being used. If the unable-to-use-card message appears, the card is not compatible with the camera and should not be formatted. A card can be formatted in the basic section of the playback menu (p. 106). When a card is formatted, all the data on the card is permanently erased. If the card-error message appears, press the central button of the controller to close the window; check the Minolta web site for the latest compatibility information: North America: <http://www.minoltausa.com>, Europe: http://www.minoltaeu-urope.com/pe/digital/languages_stage.html.

SETTING THE DATE AND TIME


After initially inserting a memory card and battery, the camera's clock and calendar must be set. When images are recorded, the image data is saved with the date and time of recording. Depending on the region, the menu language may also have to be set. To change the language, see the camera notes on the following page.

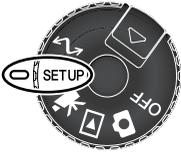


Turn the mode dial on the top of the camera to the setup position. The camera will turn on and the setup menu will be displayed.

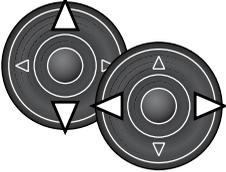

Navigating the menu is simple. The up/down and left/right keys of the controller (1) move the cursor and change settings on the menu.

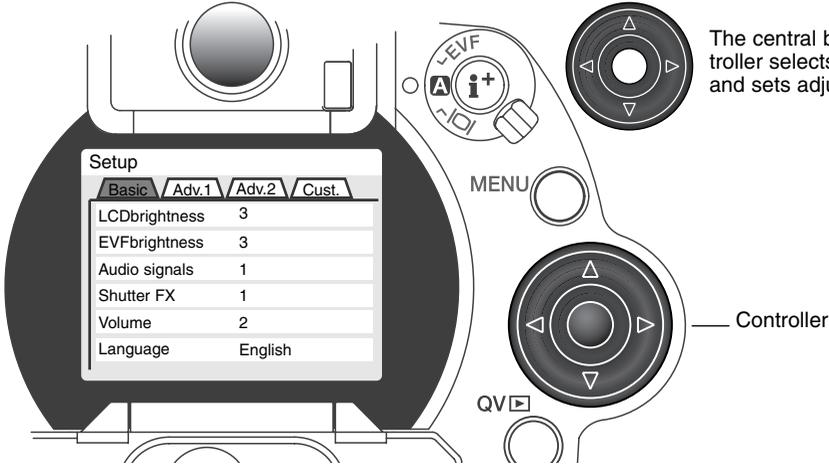

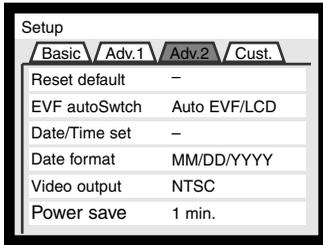

Advanced 2 section



Use the right controller key to highlight the advanced 2 tab at the top of the menu.




Use the down key to highlight the date/time-set menu option.



Press the right key. "Enter" will appear on the right side of the menu.



Press the central button to display the date/time setting screen.

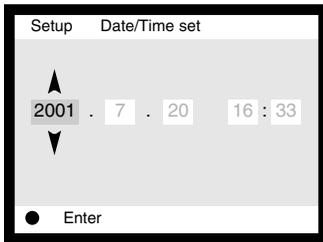

Date/Time setting screen



Use the left and right keys to select the item to be changed.



Use the up and down keys to adjust the item.




Press the central button to set the clock and calendar. The setup menu will be displayed.

Camera notes

For customers in certain areas, the menu language must also be set. Highlight the language option in the basic section of the setup menu. Press the right key to display the language settings. Using the up/down keys, highlight the desired language. Press the central button to set the highlighted language; the setup menu will be displayed in the selected language.

BASIC RECORDING


SETTING THE CAMERA TO RECORD IMAGES AUTOMATICALLY

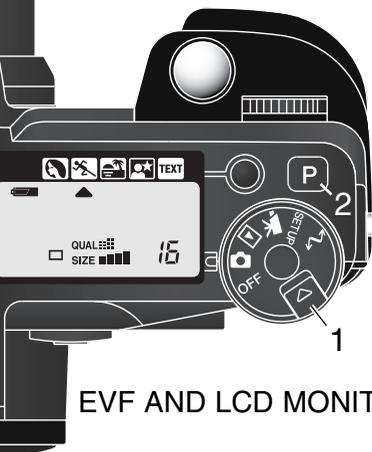


While holding in the dial release (1), turn the mode dial to still-image recording; the electronic viewfinder (EVF) and LCD monitor will activate. Press the pro-auto button (2) to reset the programmed and automatic functions.

All camera operations are now fully automatic. The autofocus, exposure, and imaging systems will work together to bring professional results effortlessly.

EVF AND LCD MONITOR DISPLAY

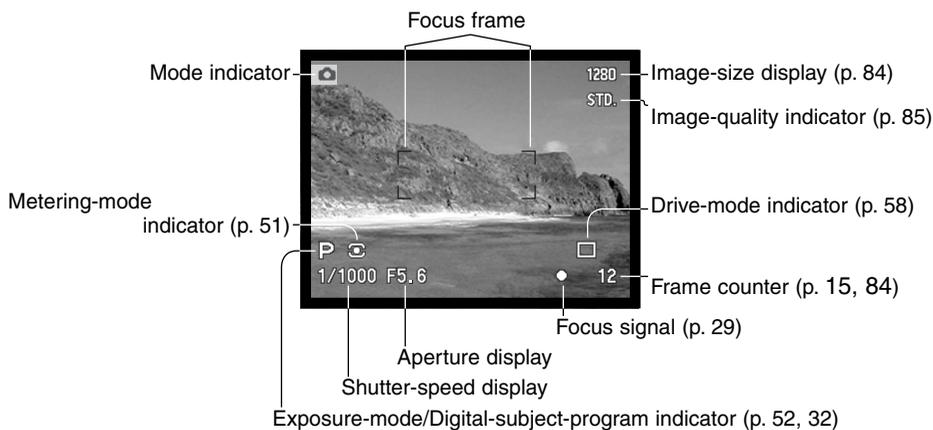

BASIC RECORDING OPERATION

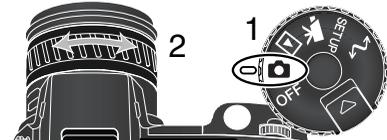

Turn the mode dial to the recording position (1). Use the zooming ring to frame the subject (2). The effect of the zoom is immediately displayed in the viewfinder (EVF) and LCD monitor.



Place the subject within the focus frame.

- For off-center subjects use the focus-lock function (p. 28).
- Make sure the subject is within the focus range of the lens: 0.5m (1.6ft) – ∞. For subjects closer than 0.5m, use the macro function (p. 47).

Press the shutter-release button partway down (3) to lock the focus and exposure.


- The focus signals (p. 29) on the monitors will confirm that the image is in focus. If the focus signal is red, the camera was unable to focus on the subject. Repeat the previous steps until the signal is white.

When the focus is set, an AF sensor will briefly appear in the live image to indicate the point of focus.

- The shutter speed and aperture value will change from white to black indicating the exposure is locked.
- The live image may freeze for an instant as the AF system determines focus.

Press the shutter-release button all the way down (4) to take the picture.

The access lamp will glow indicating the image data is being written to the memory card. Never remove a card while data is being transferred.

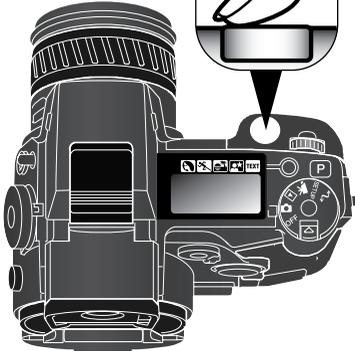

FOCUS LOCK

The focus-lock function is used when the subject is off-center and outside the focus frame. Focus lock may also be used when a special focusing situation prevents the camera from focusing on the subject.



Place the subject within the focus frame. Press and hold the shutter-release button partway down.

- The focus signals will indicate that the focus is locked. The shutter speed and aperture value will change from white to black indicating the exposure is locked.
- When the focus is set, an AF sensor will briefly appear on the live image to indicate the point of focus.



Without lifting your finger from the shutter-release button, recompose the subject within the image area. Press the shutter-release button all the way down to take the picture.

AUTOMATIC MONITOR AMPLIFICATION

In extremely low-light conditions when the camera-sensitivity gain has reached its limit, the automatic monitor-amplification function will intensify the EVF and LCD monitor image. The live image will be brighter, however, the display will be black and white. This will have no effect on the final color image.

When the automatic monitor amplification activates, the electronic-magnification function (p. 95) cannot be used. If the real-time histogram (p. 40) is used, the display will reflect the amplified image and not the final values of the exposure.

FOCUS SIGNALS

This digital camera has a quick, accurate autofocus system. The focus signals in the lower right corner of the EVF and LCD monitor indicate the focus status. For more information on autofocus modes see p. 83.



White focus indicator – focus confirmed.




Red focus indicator – the subject is too close or a special situation is preventing the AF system from focusing. The shutter can be released.

When the AF system cannot focus, the focus is set between 5 m and infinity (16.4 ft and ∞). When the flash is in use, the focus is set between 3.0 m and 3.8 m (9.8 ft and 12.5 ft). In this case, focus lock can be used with an object at the same distance as the main subject or the camera can be focused manually (p. 43).

SPECIAL FOCUSING SITUATIONS

The camera may not be able to focus in certain situations. If the autofocus system cannot focus on a subject, the focus icon will turn red. In this situation the focus-lock function can be used to focus on another object at the same distance as your main subject, and then the image can be recomposed to take the picture.

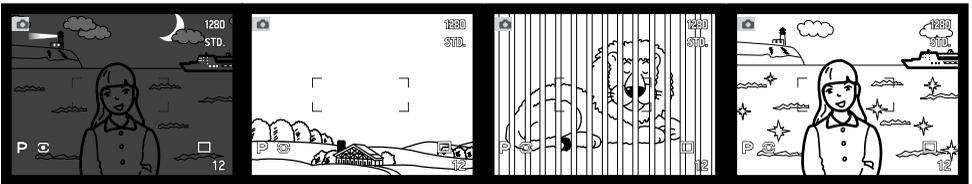

The subject is too dark.


The subject in the focus frame is low in contrast.

Two subjects at different distances overlap in the focus frame.

The subject is near a very bright object or area.

USING THE BUILT-IN FLASH

In low-light conditions or indoors, the flash is needed to illuminate the subject and reduce blurring through camera shake. The flash can also be used as a fill light in direct sunlight to soften harsh shadows. Always remove the lens hood when using the built-in flash; the hood may cast a shadow if mounted.

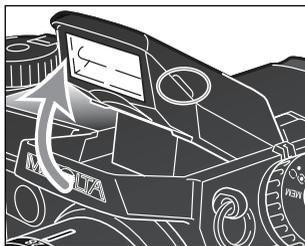

To use the flash, simply pull up the unit by the tabs on each side. The flash position must be set manually, and once up, the flash unit will always fire regardless of the amount of ambient light. The following indicators will appear in the upper left corner of the EVF and LCD monitors to show the flash status



When pressing the shutter-release button partway down, the red flash icon indicates the flash is charging.



When pressing the shutter-release button partway down, the white flash icon indicates the flash is ready to fire.



After taking a picture, a blue flash icon appears if the flash properly exposed the subject.



Flash warning. In backlit situations, the icon appears to recommend the use of the flash.

FLASH RANGE – AUTOMATIC OPERATION

The camera will automatically control the flash output. For well-exposed images, the subject must be within the flash range. Because of the optical system, the flash range is not the same at the lens' wide-angle position as it is at the telephoto position.

Wide-angle position


0.5m ~ 3.8m (1.6 ft. ~ 12.5 ft.)

Telephoto position

0.5m ~ 3.0m (1.6 ft. ~ 9.8 ft.)

HANDLING THE CAMERA


While using the electronic viewfinder (EVF) or LCD monitor, grip the camera firmly with your right hand while supporting the body with the palm of your left hand. Keep your elbows at your side and your feet shoulder-width apart to hold the camera steadily.

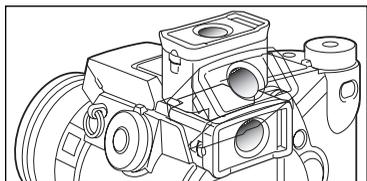

The electronic viewfinder can be tilted between 0° to 90°. Simply grip the finder between your fingers and move it to the position desired. Always store the camera with finder down against the body.

DIOPTER ADJUSTMENT

The EVF has a built-in diopter that can be adjusted between -5.0 to +0.5. While looking through the EVF, turn the diopter-adjustment dial until the viewfinder image is sharp.

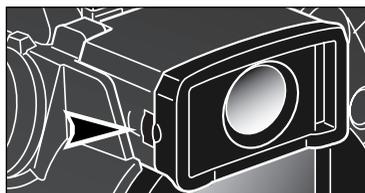


CAMERA-SHAKE WARNING

If the shutter speed falls below the point where the camera can be hand held safely, the camera-shake warning will appear on the monitors; the shutter can still be released. Camera shake is slight blurring caused by subtle hand motion and is more pronounced at the telephoto setting of the lens than at the wide-angle. The warning appears at approximately the reciprocal of the focal length used; if the lens is set at 100mm, the camera shake warning will appear at 1/100 second. If the warning appears, the following steps can be taken:

- Place the camera on a tripod.
- Use the built-in flash.
- Increase the camera sensitivity (ISO) (p. 70).
- Zoom the lens towards the wide-angle position.



DIGITAL-SUBJECT-PROGRAM BUTTON

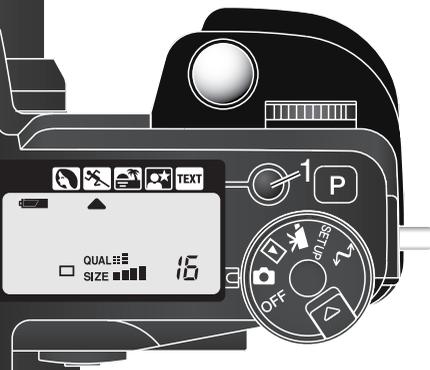

The digital-subject-program button (1) optimizes the camera's performance for various conditions and subjects. Exposure, white-balance, and image-processing systems work in unison for beautiful results.

Pressing the digital-subject-program button cycles through the modes: portrait, sport action, sunset, night portrait, text, and the original exposure mode. A pointer will indicate the active subject program. The subject program will remain in effect until it is changed.



Portrait – optimized to reproduce warm, soft skin tones and a slight defocusing of the background.



Sports action – used to capture fast action by maximizing shutter speeds and tracking subjects with continuous AF.



Sunset – optimized to reproduce rich, warm sunsets.



Night portrait – for deep, subtle night scenes. When used with flash, the subject and background are balanced.



Text – for the crisp reproduction of black text on white backgrounds.



While camera performance is optimized for each shooting condition, some changes can be made to camera settings with subject programs. The autofocus mode can be changed (p. 83). The sports action mode uses continuous AF, the other modes use single AF. The Digital Effects Controller can be used to adjust image brightness, contrast, and color (p. 73). White balance can be changed in all modes except sunset and night portrait (p. 67). Sharpness can be changed in the sport action, sunset, and text modes (p. 99). The metering mode cannot be changed.

Shooting tips

Portrait – Most portraits look best at a telephoto setting; the longer focal length does not exaggerate facial features and the shallower depth of field softens the background. Use the built-in flash with strong direct sunlight or backlight to reduce harsh shadows.

Sports action – When using a flash, make sure the subject is within the flash range (p. 30). The flash range can be extended by changing the camera sensitivity (p. 71). A monopod is more flexible and compact than a tripod when shooting events.


Sunset – When the sun is above the horizon, do not point the camera toward the sun for prolonged periods of time. The intensity of the sun could damage the CCD. Between exposures, turn off the camera or cover the lens.

Night portrait – When taking pictures of a landscape at night, use a tripod to eliminate blurring from camera shake. The flash can only be used with close subjects such as with a portrait of a person. When using the flash, ask your subjects not to move after the burst; the shutter will still be open for the background exposure.

Text – When taking pictures of small text on a sheet of paper, the macro mode (p. 47) can be used. Use a tripod to eliminate camera shake and ensure the sharpest images.

BASIC PLAYBACK

Images can be viewed in the Quick View or playback modes. This section covers the basic functions in both modes. The playback mode has additional menu functions, see page 106.

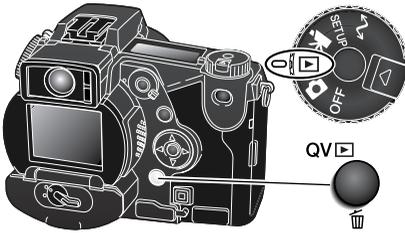

To view images from the playback mode, turn the mode dial to the playback position.

To view images from the recording or movie recording modes, press the Quick View / delete button.

SINGLE-FRAME PLAYBACK AND HISTOGRAM DISPLAY

The diagram shows a camera's LCD screen in playback mode. The screen is divided into several sections:

- Top Left:** A small square icon with a right-pointing arrow, labeled 'Mode indicator'.
- Top Right:** '1280' and 'STD.', labeled 'Image size (p. 84)' and 'Image quality (p. 85)' respectively.
- Center:** A large image of a landscape.
- Bottom Left:** '15:36' (Time of capture), '2002.08.27' (Date of capture), a voice-memo icon, a lock icon, and '2 [0007/0058]' (Frame number/ total number of images).
- Bottom Center:** A histogram.
- Bottom Right:** '1280 STD.' (Image size/quality), '1/2000' (Shutter speed), 'F8' (Aperture value), 'AWB' (White-balance setting), 'ISO400' (Sensitivity setting), '0' (Degree of exposure compensation), and 'MLT10' (Folder name).

Additional labels and callouts include:

- 'Aperture value' pointing to 'F8'.
- 'Shutter speed' pointing to '1/2000'.
- 'White-balance setting (p. 67)' pointing to 'AWB'.
- 'Sensitivity setting (p. 70)' pointing to 'ISO400'.
- 'Degree of exposure compensation (p. 74)' pointing to '0'.
- 'Folder name (p. 140)' pointing to 'MLT10'.
- 'Folder number – image file number' pointing to '100-0003'.
- 'Histogram (p. 17)' pointing to the histogram.
- A directional pad icon is shown to the right of the screen.

VIEWING IMAGES



When in the Quick view or playback mode, use the left/right keys of the controller to scroll through the images on the memory card.



To view the histogram of a still image, press the up key. Press the down key to return to single-frame playback.



To return to a recording mode from Quick View, press the menu button.



Controller



QV/Delete button



DELETING SINGLE IMAGES

The displayed image can be deleted. Once deleted, an image cannot be recovered.



To delete a displayed image, press the QV/delete button; a confirmation screen will appear.



Use the left/right keys to highlight "Yes." "No" will cancel the operation.




Press the controller to execute the command on the confirmation screen. The camera will return to playback mode.



Confirmation screen

CHANGING THE QUICK VIEW & PLAYBACK DISPLAY


In the center of the display switch, the display-information button controls the display format. Each time the button is pressed, the display cycles through to the next format: full display, image only, index playback.

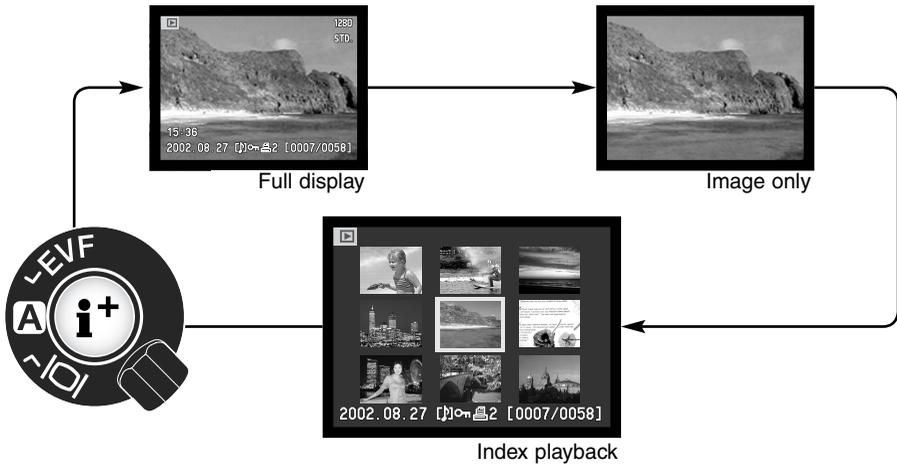


In index playback, the left/right keys of the controller will move the yellow border to the next or the previous image. When the image is highlighted with the border, the date of recording, voice-memo icon, the lock and printing status, and the frame number of the image are displayed at the bottom of the screen. The highlighted image can be deleted using the QV/delete button (p. 35) or an accompanying audio track can be played by pressing the central button of the controller. When the display information button is pressed again, the highlighted image will be displayed in the single-frame playback mode. A nine or four image index can be displayed. The index-playback format can be changed in the basic section of the playback-mode menu (p. 106).

ENLARGED PLAYBACK

In single-frame playback, a still image can be enlarged for closer examination. Images can be magnified between 1.2X and 4.0X in 0.2X increments. 640 X 480 size images can only be magnified between 1.2X and 2.0X. RAW and super fine images cannot be enlarged.


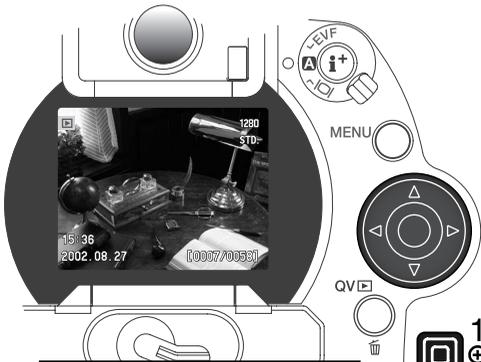


With the image to be enlarged displayed, press the magnification button (1). The degree of magnification is displayed on the monitors.

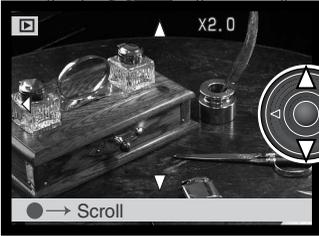

Use the up/down keys of the controller to adjust the magnification.

Press the central button of the controller to switch between the zoom and scroll functions. The scroll arrows or magnification display will turn blue to indicate the active function.

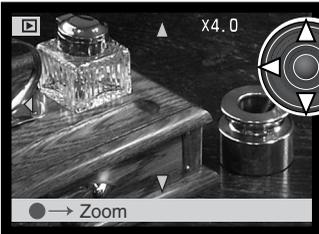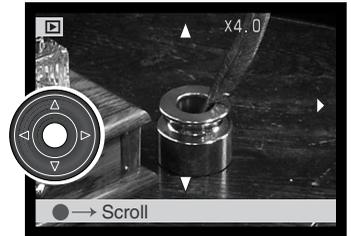


When the scroll arrows are blue, use the four-way key to scroll the image. Press and hold the four-way key to scroll continuously. Press the magnification button to exit the enlarged playback mode.

The guidance bar and display icons can be hidden or shown by pressing the display information button (i+).

VIEWING MOVIES

Standard, Night, time-lapse, and UHS continuous-advance movies can be played back on the camera. Movie files are indicated by a icon at the bottom of the display. Standard and Night Movies are also indicated by a thumbnail of the first frame.

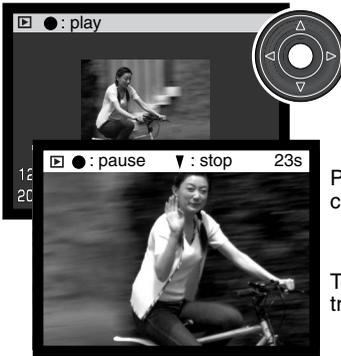

Press the center of the controller to play back the file.

Press the controller to pause the movie; pressing the controller again will resume the playback.



To cancel the playback, press the down key of the controller.



PLAYING BACK VOICE MEMOS



Voice memos (p. 101) are indicated by the voice-memo indicator displayed at the bottom of the monitor image.



MENU



Press the central button of the controller to start the audio playback. To cancel the playback, press the down key.





Controller

QV

VIEWING IMAGES ON A TELEVISION

It is possible to view camera images on your television. The camera has a video-out terminal which can be used to connect the camera to a television using the supplied AV cable. The camera is compatible with the NTSC and PAL standards. The video-output setting can be checked and set in the advanced 2 section of the setup menu (p. 118).

1. Turn off the television and the camera.
2. Insert the mini-plug end of the AV cable into the camera's AV-out terminal.
3. Plug the other end of the AV cable into the video and audio input terminal on the television. The yellow plug is for the video output, and the white plug is for the monaural audio output.
4. Turn the television on.
5. Change the television to the video channel.
6. Turn the camera's mode dial to the playback position. The camera's monitors will not activate when the camera is attached to a television. The playback-mode display will be visible on the television screen.

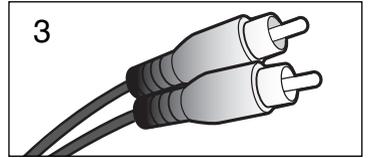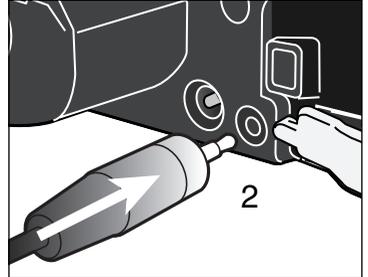

7. View images as described in the playback section. Use the television controls to adjust the volume of the audio playback. Because of the broadcast standard used to display television images, image quality and resolution will appear lower than when displayed on a computer monitor.

ADVANCED RECORDING

This section contains detailed information on the camera's recording functions and operation. Read the sections pertaining to your interest and need.

DISPLAY CONTROLS – RECORDING MODE

Located on the back of the camera, the display-mode switch and the display-information button control on which monitor the image is displayed and what information is included in the display. The three position switch allows the choice between automatic display and setting the display to the EVF or LCD monitor.



Auto display – the camera will automatically change between displaying the live image in the EVF or on the LCD monitor. The EVF's eye sensors monitor if the EVF is being used and switches the display location accordingly.



EVF display – the live image will only be displayed in the electronic viewfinder. Under bright light, the image is easier to see in the EVF than on the LCD monitor.




LCD monitor display – the live image will only be displayed on the LCD monitor.


If battery power is a concern, have the eye sensor activate the EVF when in use, but not the LCD monitor. The auto-display function can be changed in the advanced 2 section of the setup menu (p. 118).



In the center of the display switch, the display-information button controls what information is displayed with the live image. Each time the button is pressed, the display cycles to the next format: standard display, focus frame, real-time histogram, and live image only. The number of screens and their formats can be changed in the advanced 1 section of the setup menu (p. 118).

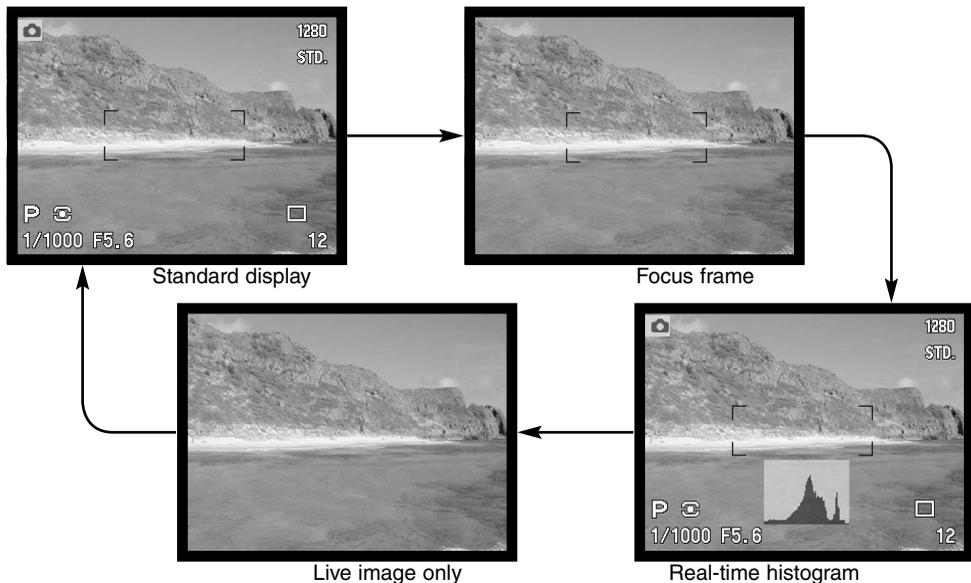

The real-time histogram shows the approximate luminance distribution of the live image. This histogram will not be accurate when the monitor image is amplified (p. 28, 56), or the built-in or a compatible Minolta flash unit is used. The histogram of a recorded image may not have the same distribution as the real-time histogram.

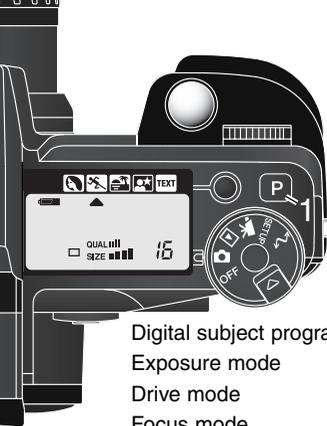


PRO-AUTO BUTTON

Simply pressing the pro-auto button (1) resets the camera to programmed and automatic functions in the still-image recording mode. The camera's systems work together to bring professional results leaving the operator free to concentrate on aesthetic decisions. The pro-auto button affects functions in either the recording or movie modes (p. 105) only when the mode is in use.


- | | |
|-------------------------------|--------------------------------------|
| Digital subject program | – Canceled (p. 32) |
| Exposure mode | – Program (p. 53) |
| Drive mode | – Single-frame advance (p. 58) |
| Focus mode | – Single AF (p. 83) |
| Autofocus area | – Wide (p. 44) |
| White balance | – Auto white balance (p. 67) |
| Metering mode | – Multi-segment metering (p. 51) |
| Exposure compensation | – 0.0 (p. 74) |
| Contrast compensation | – 0 (p. 76) |
| Color-saturation compensation | – 0 (p. 77) |
| Filter | – 0 (p. 77) |
| Flash control | – ADI metering (p. 94) |
| Flash compensation | – 0.0 (p. 74) |
| Flash mode | – Fill or red-eye reduction* (p. 88) |
| Sharpness | – Normal (p. 99) |

*The flash mode is reset to whichever of the two modes was set last.

The last camera settings before the pro-auto button is pressed can be reset; press and hold the function button and press the pro-auto button.

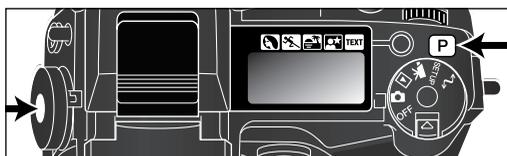

SPOT-AE LOCK BUTTON

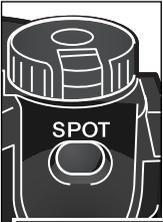

The spot-AE lock button below the main dial on the back of the body locks the automatic exposure system. This function allows the exposure to be set by a specific element within the scene or a gray card outside the scene.

When the spot-AE lock button is pressed and held, the spot metering circle is displayed indicating the area used for the exposure calculation; the shutter speed and aperture of the exposure will be displayed in black on the monitor. The setting will remain in effect until the button is released. Focus is locked by pressing the shutter-release button partway down.




Spot metering display

The operation of the spot button can be customized in the advanced 1 section of the recording-mode menu (p. 96).


MANUAL FOCUS

Manual control over focus is simple. The focus mode button (AF/MF) (1) switches between automatic and manual focus. The MF icon is displayed on the data panel and monitors when the camera is in the manual-focus mode.

Use the focus ring (2) at the rear of the lens barrel to make a sharp image on monitors. The approximate distance from the CCD to the subject is displayed near the frame counter. Manual focus can be used with movie recording and in macro mode.

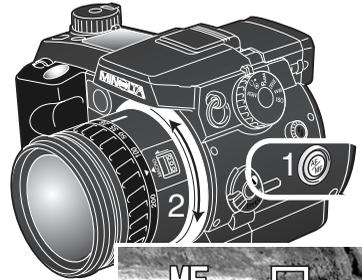


Approximate location of the CCD plane.

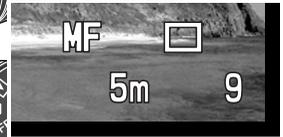


AUTOFOCUS AREAS AND CONTROL

In still-image recording mode, the controller selects the focus area used and moves the spot-focus area within the image. The two focus areas, wide focus area and spot focus point, allow flexibility over a variety of situations.

The wide focus area is an array of local focus areas that work together to control focus. This system is especially effective with moving subjects or quick shooting during fast-moving events. When the focus is locked in single AF mode, one of the AF sensors within the wide focus area will briefly indicate the point of focus. The spot focus point gives critical control over focus. It can be used to single out an individual subject from a group.

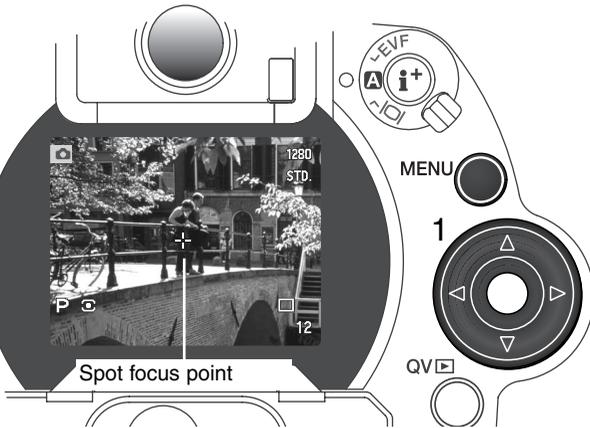

Wide focus area

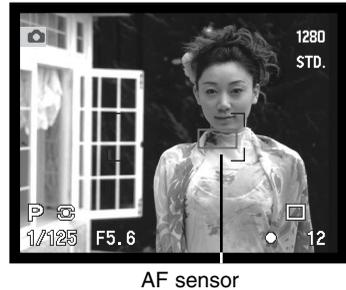

Switching between the wide focus area to the spot focus point is simple. Press and hold the central button of the controller (1) until the wide-focus-area frame lines change to the spot-focus-point cross. Press and hold the controller again to return to the wide-focus-area frame lines.

FLEX FOCUS POINT

Once displayed, the spot focus area can be moved to any point in the image area. This Flex Focus Point is a powerful tool for off-center subjects. The Flex Focus Point cannot be used with the digital zoom (p. 46).

With the spot-focus-area cross displayed, use the controller's four-way keys (1) to move the focus point anywhere within the live image. Press the shutter-release button partway down to focus; the cross will turn red to confirm focus.




Pressing the central button of the controller (2) returns the focus point to the center of the image area. To return to the wide-focus-area mode press and hold the button until the wide-focus-area frame lines appear.



DIGITAL ZOOM

The digital zoom doubles the lens magnification. The digital zoom cannot be used with RAW image quality or in movie recording.

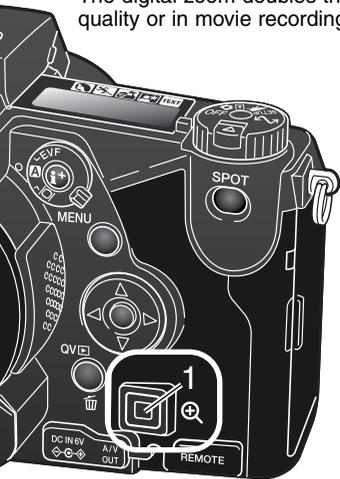

Press the magnification button (1) on the back of the camera. The effect is immediately displayed. Pressing the magnification button a second time cancels the digital zoom.

The live image is enlarged on the LCD monitor and is cropped with a shaded border in the EVF. X2.0 is displayed in the monitors when the digital zoom is in effect. When using the wide focus area (p. 44), the AF sensor will not appear to indicate the point of focus.



When an image is taken with the digital zoom, the final image size depends on the image-size setting on the camera. The image is trimmed and then the total number of pixels are interpolated to produce an image with a pixel resolution shown in the chart.

	Image size setting			
	2560 X 1920	1600 X 1200	1280 X 960	640 X 480
Recorded image size	1280 X 960	1280 X 960	1280 X 960	640 X 480

1280 X 960 UHS continuous-advance images are resized to 640 X 480.

MACRO MODE

The macro mode is used for close-up photographs of small objects. The macro mode can be used with the digital zoom to increase the close-up effect. Subject programs and movie recording can be used with the macro setting. The built-in flash cannot be used with macro mode.

Align one of the arrows on the zoom ring with the arrow next to the macro switch. The lens must be zoomed to the wide-angle or telephoto position for the macro switch to engage.


Slide the macro switch on the lens barrel forward. The camera is now in macro mode. The macro icon is displayed in the lower right corner of the monitors. Make sure the subject is within the macro focusing range:

Wide angle: 0.3 – 0.6m / 12 – 24 in from the CCD.

Telephoto: 0.25 – 0.6m / 10 – 24 in from the CCD.

The zoom ring will be locked at the wide-angle position in macro mode. At the telephoto position, the zoom ring can move slightly to make fine adjustments to image size.

To return to normal recording mode, slide the macro switch towards the rear of the lens.

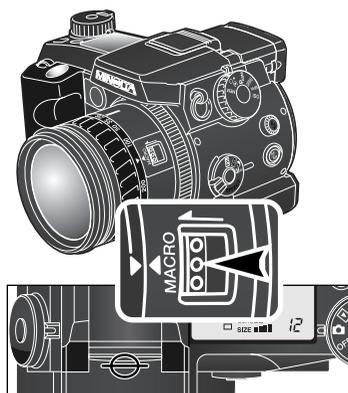

Approximate location of the CCD plane.

Shooting tips

Because of the high image magnification, hand holding cameras during close-up photography is very difficult. When possible, use a tripod.

Use the Flex Focus Point (p. 45) to specify the area to be within focus. Because depth of field (the area in focus) is narrow in close-up photography, using focus lock with off-center subjects can cause minor errors which are exaggerated at high magnifications.

The variable position EVF makes working in tight spaces and at low levels easy. The EVF can be tilted between 0° and 90°.



SETTING THE FUNCTION DIAL

The memory function, metering mode, exposure mode, drive mode, white balance, and camera sensitivity are controlled by the function dial. Making changes with the function dial is simple. The function dial can only be used for still photography.



Turn the function dial to the mode to be changed (1).



While pressing the button in the center of the function dial, turn the control dial near the shutter-release button to change the mode (2). Release the function button to set the mode. Changes are displayed on the monitors and data panel.

MEM

Memory – to store and recall camera settings (p. 50).



Metering modes – changes the metering pattern (p. 51).

PASM

Exposure modes – changes the method of exposure control (p. 52).

DRIVE

Drive modes – changes the method of image capture (p. 58).

WB


White balance – changes between automatic, preset, and custom white balance (p. 67).

ISO

ISO – changes camera sensitivity (p. 70).

Dial	Display	Setting	Page	EVF & Monitor Display
MEM	Menu	Memory registers or the setting function are selected with a special menu displayed on the monitors.	50	
		Multi-segment	51	No data panel display.
		Center weighted		
		Spot		
PASM	P	Program	53	Display for the data panel, EVF and LCD monitor are the same unless indicated.
	A	Aperture priority	54	
	S	Shutter priority	55	
	M	Manual	56	
DRIVE		Single-frame advance	58	
		Bracketing	62	
		Continuous advance	59	
		High-speed continuous advance	60	
		UHS continuous advance	61	
		Interval	64	
		Self-timer	66	
WB		Automatic white balance	68	AWB (No display when set)
		Daylight	68	
		Tungsten		
		Fluorescent 1 and 2		
		Cloudy		
		Custom setting 1 through 3	68	
ISO		Custom calibration		
		Automatic gain		(No display when set)
	100, 200, 400, 800.	Preset camera sensitivity in ISO equivalents.	70	ISO value is displayed


MEMORY – STORING CAMERA SETTINGS

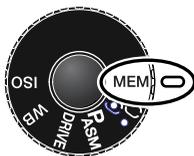


Five sets of camera settings can be saved. This saves time under frequently repeating conditions by eliminating the need to set the camera. Except for the spot AEL button, subject programs, data imprinting, voice memo, and instant playback settings, all recording-mode camera settings will be saved including the position of the Flex Focus Point, the display mode, the custom white balance setting, and changes made with the function dial and digital effects control. Although the bracketing drive mode setting can be saved, the type of bracket, exposure, contrast, color saturation, or filter must be reset.

Camera settings are saved with the function dial (p. 48). Initially, each memory location contains the camera's original settings.

To save the current camera settings, turn the function dial to the memory position, and press the function button (1) to display the memory settings on the monitor. Turn the control dial (2) to highlight the store-memory option. Release the function button to open the store-memory screen.

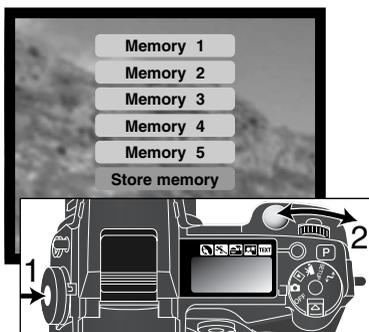


On the store-in-memory screen, use the up/down keys of the controller (3) to select the memory register in which the camera settings are to be saved. Press the central button of the controller (4) to save the settings; the previous settings will be erased and replaced by the new ones. A confirmation screen will open; press the central button of the controller to close.

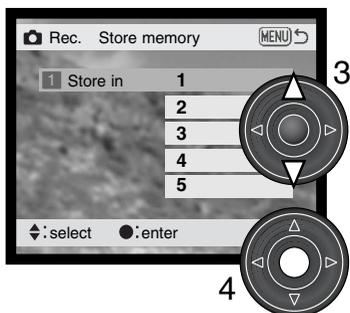

To recall a setting, press the function button and highlight the memory register using the control dial. Release the function button to apply the memory settings. Memory settings can also be recalled using the digital subject program button, see page 129.

Camera settings cannot be deleted from memory by turning the camera off or using the pro-auto button. They will be erased with the default function on the setup menu.

METERING MODES

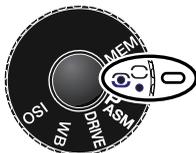

The icons indicating the metering mode are displayed on the monitors only. Do not confuse these icons with the focus signals (p. 29). The metering mode is changed with the function dial (p. 48). When center-weighted or spot metering is selected, pressing the shutter-release button partway down will activate the exposure system, but will not lock the exposure; the spot AE lock button (p. 43) can be used to lock the exposure, but uses the spot metering area only.



Multi-segment – uses 300 segments to measure luminance and color. This data is combined with distance information to calculate the camera exposure. This advanced metering system will give accurate worry-free exposures in almost all situations.



Center weighted – a traditional metering method in silver-halide cameras. The system measures light values over the entire image area with emphasis given the central region.




Spot – uses a small area within the image to calculate the exposure. When this mode is selected, a small circle will appear in the middle of the live image indicating the measuring area. The spot allows precise exposure measurements of a particular object without being influenced by extremely bright or dark areas within the scene.



Spot metering display

EXPOSURE MODES

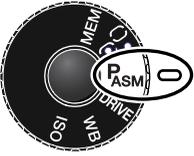

The four exposure modes allow extensive control over image making. Programmed AE gives carefree operation, aperture and shutter priority allow photographers to maximize exposures in different situations, and manual exposure provides complete freedom in controlling the final image. See setting the function dial section on page 48.

P

Program – the camera controls both the shutter speeds and aperture.

A

Aperture priority – the photographer selects the aperture and the camera sets the appropriate shutter speed.

S

Shutter priority – the photographer selects the shutter speed and the camera sets the appropriate aperture.


M

Manual exposure – the photographer selects both the shutter speed and aperture.

LCD monitor



Data panel

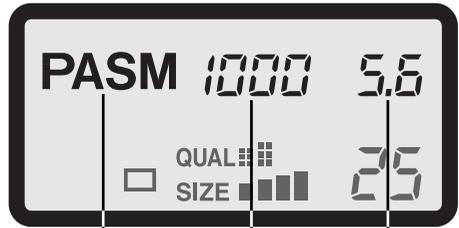

Exposure modes
Shutter speed
Aperture

All exposure mode icons on the data panel have been shown for clarity.

PROGRAM – P


The programmed AE exposure control uses luminance and focal-length information to ensure perfect exposures. The sophisticated exposure system allows the photographer the freedom to shoot without having to worry about the technical details of exposure settings. The shutter speed and aperture values of the exposure are displayed on the monitors and data panel. The shutter speed range in program exposure mode is 8 to 1/4000 second when camera sensitivity is set to auto (p. 71). If the brightness level of the scene is outside the exposure control range of the camera, the shutter-speed and aperture displays will turn red on the monitors and blink on the data panel.

The program line adjusts with the changes in focal length of the zoom lens. The camera is programmed to maximize depth of field in the wide-angle range to provide sharp landscape pictures, and to maximize shutter speed in the telephoto range to minimize camera shake and blurred images. When the shutter speed falls below an acceptable limit for the camera to be hand held, the camera-shake warning appears in the lower left corner of the monitors (p. 31).


PROGRAM SHIFT

Although exposure calculations can be left to the camera, photographers can still have control over the final exposure with the program-shift function. As described in the basic recording operation (p. 31), press the shutter-release button partway down (1) until the shutter speed and aperture value are displayed. The control dial (2) can then be used to shift the shutter speed and aperture combination; each combination will give the optimum exposure.

The built-in flash cannot be used with program shift. The camera gives priority to the flash exposure; once the flash is raised, any changes made with the program shift will be canceled.

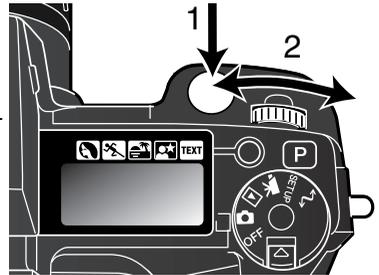

APERTURE PRIORITY – A

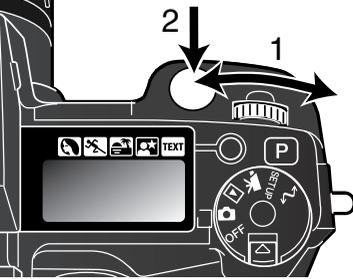

The photographer selects the aperture and the camera sets the appropriate shutter speed to ensure correct exposure. When A mode is selected, the aperture value on the monitors turns blue.

Turn the control dial (1) to set the desired aperture. Press the shutter-release button partway down to activate the exposure system (2); the corresponding shutter speed will be displayed.


The aperture values can be changed by half stop increments between $f/2.8$ and $f/8$ at the lens' wide-angle position and $f/3.5$ to $f/9.5$ at the lens' telephoto position. If the aperture value is beyond the shutter-speed range, the shutter-speed display will blink on the data panel and turn red on the monitors. The shutter speed range in aperture-priority exposure mode is 15 to $1/4000$ second when camera sensitivity is set to auto (p. 71).

When the shutter speed falls below an acceptable limit for the camera to be hand held, the camera-shake warning (p. 31) appears in the lower left corner of the EVF and LCD monitor. When the warning appears, decrease the aperture value until the warning disappears or place the camera on a tripod.

Because the shutter speeds can be adjusted in fine steps, the same shutter speed maybe displayed when the aperture is changed. With the camera sensitivity (ISO) set to auto, the shutter speed may not change when the aperture is adjusted.



SHUTTER PRIORITY – S

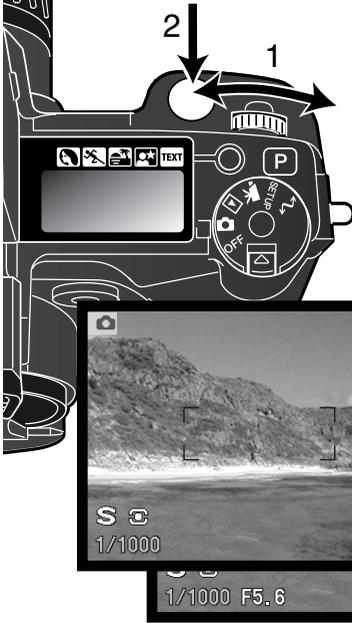

The photographer selects the shutter speed and the camera sets the appropriate aperture to ensure correct exposure. When S mode is selected, the shutter speed on the monitors turns blue.

Turn the control dial (1) to set the desired shutter speed. Press the shutter-release button partway down to activate the exposure system (2); the corresponding aperture will be displayed.


The shutter speeds can be changed by half stop increments from 15 to 1/2000 second when camera sensitivity is set to auto (p. 71). If the shutter speed is beyond the aperture range, the aperture display will blink on the data panel and turn red on the monitors.

Camera Notes


For 35mm photographers, an aperture range of f/2.8 to f/8 does not seem impressive. However, because of the CCD size and the actual focal length of the lens, the apertures on this digital camera give significantly more depth of field at any given angle of view with any given aperture than a 35mm camera. So even with the minimum aperture of f/8, the depth of field will give the coverage needed to create beautiful, sharp images.

MANUAL EXPOSURE – M

Manual exposure mode allows individual selection of shutter speeds and apertures. This mode overrides the exposure system giving the photographer total control over the final exposure. The shutter speeds and aperture values can be changed in half stop increments. The shutter speed range in manual exposure mode is 15 to 1/2000 second including bulb when camera sensitivity is set to auto (p. 71). The camera sensitivity is set to ISO 100, but can be changed with the function dial (p. 48).

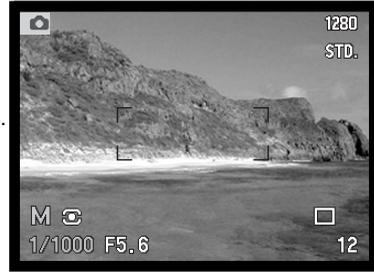

As changes are made to the exposure, the effect will be visible on the monitors. The shutter-speed and aperture display will blink on the data panel and turn red on the monitors if the image is extremely under or overexposed. If the monitors are black, increase the exposure until the image is visible; decrease the exposure if the monitors are white. If the monitor image is too dark because of the exposure setting, press the function button and display-information button (i+) at the same time to amplify the image; the M on the monitor will turn red. The AE system will maintain a bright image on the monitors, however, the image nor the real-time histogram will reflect the final exposure. Repeat the procedure to cancel the amplified display. When using the built-in flash, the monitor image is also amplified and does not reflect the ambient light exposure.

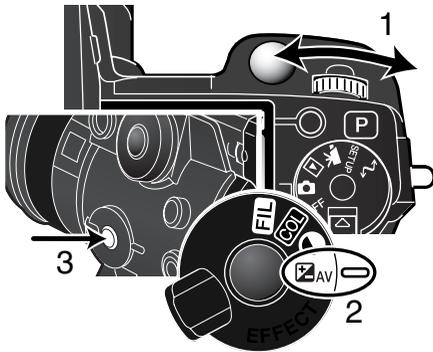

To set the shutter speed:

- Turn the control dial (1) to set the shutter speed.

To set the aperture:

- Set the digital effects switch (2) to the exposure-compensation position.
- While pressing the digital effects button (3), turn the the control dial (1) to set the aperture. Flash compensation (p. 74) can also be set with the up/down key of the controller.

The operation of the manual exposure mode can be customized with the setup menu (p. 130).

BULB EXPOSURES


Bulb photographs can be taken in the manual-exposure mode (M). Exposures up to thirty seconds can be made by pressing and holding the shutter-release button. The use of a tripod and a remote cord is recommended for bulb exposures. The camera's exposure system cannot be used to calculate bulb exposures. The use of a separate light meter is recommended.

Use the control dial (1) to decrease the shutter-speed until "bulb" is displayed.

To set the aperture value, turn the digital effects switch to exposure compensation (2) position. While pressing the digital effects button (3), turn the control dial (1) until the correct aperture is displayed.

To take the picture, press and hold the shutter-release button for the duration of the exposure. Releasing the shutter button will end the exposure.

The monitors will be blank during the exposure. If on, the shutter sound effect will signal the end of the exposure. The monitors will remain blank for a period equal to the exposure time while noise-reduction processing is applied to the image.

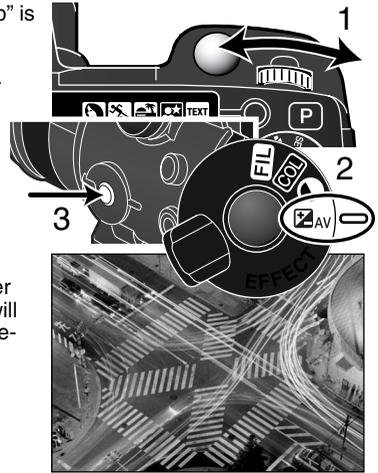


ATTACHING A REMOTE CORD (SOLD SEPARATELY)


The optional remote cords (RC-1000S or RC-1000L) can be used to reduce vibrations from touching the camera during long exposures.

Remove the remote-control terminal cover using the notch on the right side of the cover. The cover is attached to the body to prevent loss.

Insert the plug of the cord into the terminal.

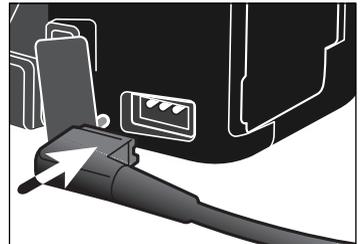


DRIVE MODES

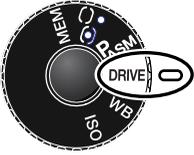

The drive modes control the rate and method images are captured. Icons indicating the selected drive mode appear on the data panel and LCD monitor and in the EVF. See setting the function dial section on page 48.

- Single-frame advance – to take a single image each time the shutter-release button is pressed.
- Bracketing – to take a series of images with differing exposure, contrast, saturation, and color.
- Continuous advance – to take multiple images when the shutter-release button is pressed and held.
- High-speed continuous advance – to take multiple images at size and quality setting approximately 3 frames per second.
- UHS continuous advance – to take multiple 1280 X 960 images at approximately 7 frames per second.
- Self-timer – to delay the release of the shutter. Used for self-portraits.
- Interval – to take a series of images over a period of time.

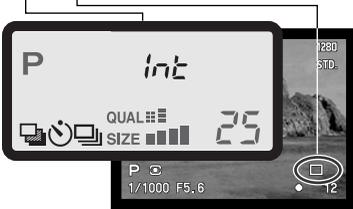

All icons have been shown for clarity. The single-frame advance and continuous advance indicators occupy the same area of the data panel. All the drive-mode icons appear at the same location in the monitors.

When a large amount of image data is captured in a short span of time, the camera's internal buffer memory becomes full. Time must be given for this data to be written to the memory card. Depending on the battery power level, the frame counter or drive-mode indicator turns yellow on the monitors (see chart). Wait for the indicator to turn white before capturing more images.

Buffer full warning	Frame counter	Drive-mode indicator


CONTINUOUS ADVANCE

Continuous-advance mode allows a series of images to be captured while holding down the shutter-release button. Continuous advance acts like a motor drive on a film camera. The number of images that can be captured at one time depends on the image-quality and image-size setting. The maximum rate of capture is 2 fps with full-size images with manual focus in manual-exposure mode. The continuous-advance mode is set with the function dial (p. 48).

When the shutter-release button is pressed and held, the camera will begin recording images until the maximum number has been taken or the shutter button is released. The built-in flash can be used, but the rate of capture is reduced because the flash must recharge between frames. The following chart lists the maximum number of images that can be captured with different image-quality and image-size combinations.

Size Quality	2560 X 1920	1600 X 1200	1280 X 960	640 X 480
RAW	5	—	—	—
Super fine	3	3	3	3
Extra fine	7	12	15	33
Fine	10	19	27	61
Standard	17	29	42	84

Compose the picture as described in the basic recording section (p. 27). Press the shutter-release button partway down (1) to lock the exposure and focus for the series; if the autofocus mode is set to continuous AF, the lens will continually focus during the series (p. 83). Press and hold the shutter-release button all the way down (2) to begin taking pictures.

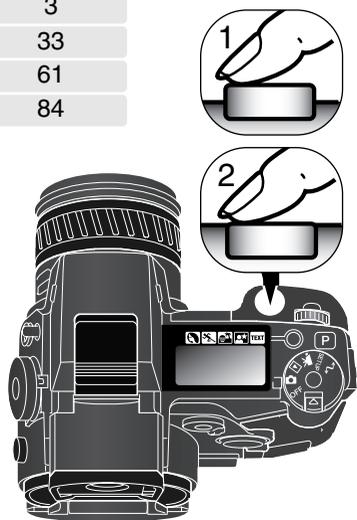

HIGH-SPEED CONTINUOUS ADVANCE


High-speed continuous-advance allows a series of images to be captured rapidly. The rate of capture is approximately 3 fps with full-size images with manual focus in manual-exposure mode. The rate of capture decreases with images smaller than 2560 X 1920. The continuous-advance mode is set with the function dial (p. 48).

When the shutter-release button is pressed and held, the camera will begin recording images until the maximum number has been taken or the shutter button is released. The built-in flash can be used, but the rate of capture is reduced because the flash must recharge between frames. The following chart lists the maximum number of images that can be captured with different image-quality and image-size combinations.

Size Quality	2560 X 1920	1600 X 1200	1280 X 960	640 X 480
RAW	5	–	–	–
Super fine	3	3	3	3
Extra fine	7	12	15	33
Fine	10	19	27	61
Standard	17	29	42	84

Compose the picture as described in the basic recording section (p. 27). Press the shutter-release button partway down (1) to lock the exposure and focus for the series. Press and hold the shutter-release button all the way down (2) to begin taking pictures. The monitor will be blank when recording full size images.

If the low battery warning (p. 21) appears, the maximum number of images that can be captured will be reduced. Low power will also prevent RAW or super fine images to be captured in series; the shutter-release button must be pressed to capture each image.

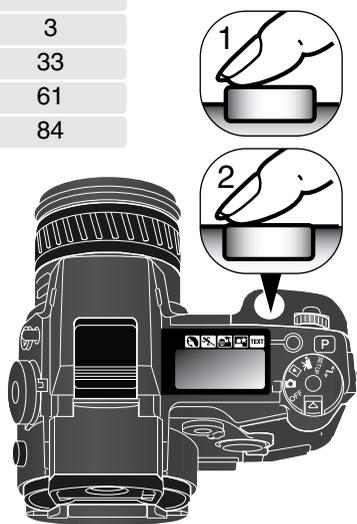


UHS CONTINUOUS ADVANCE

UHS continuous-advance mode allows a series of 1280 X 960 images to be captured at a rate of approximately 7 frames per second; image size is changed to 640 X 480 when the digital zoom is used. The number of images that can be captured at one time depends on the image-quality setting: extra fine – 32 frames, fine – 62 frames, and standard – 100 frames. This mode cannot be used with super-fine or RAW image quality, flash illumination, or Digital Subject Programs. If image quality is set to RAW or super fine before selecting the drive mode, it is reset to fine. Shutter speeds slower than 1/8th of a second cannot be used. If the low battery power indicator (p. 21) appears, the shutter cannot be released. The UHS continuous-advance mode is set with the function dial (p. 48).

When the shutter-release button is pressed and held, the camera will begin recording images until the maximum number has been taken or the shutter button is released.

Compose the picture as described in the basic recording section (p. 27). Press the shutter-release button partway down (1) to lock the exposure and focus for the series. Press and hold the shutter-release button all the way down (2) to begin taking pictures. Very bright light sources in the image may cause streaking. A recorded image may show black areas caused by a loss of data. After the series is captured, the monitor will remain blank while the images are saved.

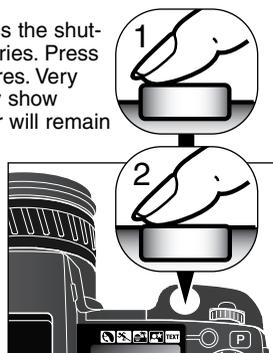


UHS CONTINUOUS-ADVANCE MOVIES

By turning on the UHS movie function in the advanced 1 section of the recording-mode menu, a separate VGA (640 X 480) movie file with audio will be created automatically from the captured still images. When the function is active, the movie camera icon is displayed next to the UHS continuous-advance indicator on the monitors. The time required to make the movie file is approximately equal to the recording time, the monitor will be blank and the access lamp will glow during that period. The shutter sound effect is disabled.



BRACKETING

This mode makes a three image bracket of a scene. Bracketing is a method of taking a series of images of a static subject in which each image has a slight variation in exposure. The camera is not limited to exposure brackets, but can also make contrast, saturation, and filter brackets. Only one image characteristic can be bracketed at a time. The bracketing mode is set with the function dial (p. 48).

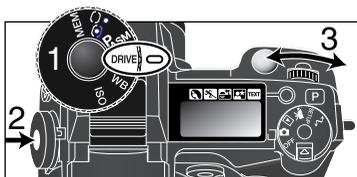

Turn the function dial to the drive-mode position (1). While pressing the function button (2), turn the control dial (3) to set the bracketing mode.



Turn the digital-effect switch to the image characteristic to be bracketed. For more on the Digital Effects Control, see page 73.



Exposure bracket



Contrast bracket



Color-saturation bracket





Filter bracket

The order of the exposure bracket series is normal exposure (as indicated by the shutter-speed and aperture displays), underexposure, and overexposure. The exposure bracket is set to 0.3Ev increments, but can be adjusted to 0.5Ev or 1.0Ev increments in the advanced 2 section of the recording-mode menu (p. 80).

Set the contrast, color saturation or filter to the desired level; the bracket series is from the Digital Effects Control setting to one unit under to one unit over. See the Digital Effects Control section on page 73 to set the contrast, color saturation, and filter. Except for a RAW image, if the contrast or color saturation is set to the maximum or minimum level (± 3), one bracket will be made at ± 4 : +3, +2, +4. A RAW image cannot exceed the maximum and minimum levels and will contain two identical brackets: +3, +2, +3. A black and white Filter bracket is made to the Filter settings before and after the set Filter (p. 155). If filter 10 is selected, the bracket series will be 10, 9, 0.

Compose the picture as described in the basic recording section (p. 27). Press the shutter-release button partway down (1) to lock the exposure and focus for the series; the camera will continue to focus during the series if set to continuous AF (p. 83). Press and hold the shutter-release button all the way down (2) to make the bracket series; three consecutive images will be captured.

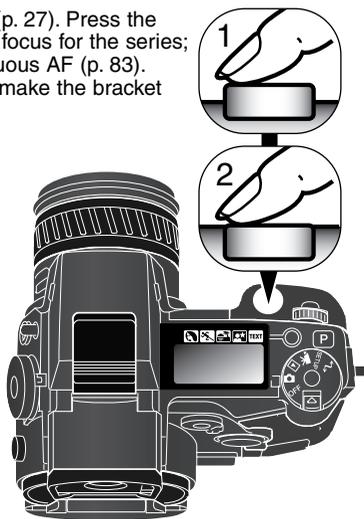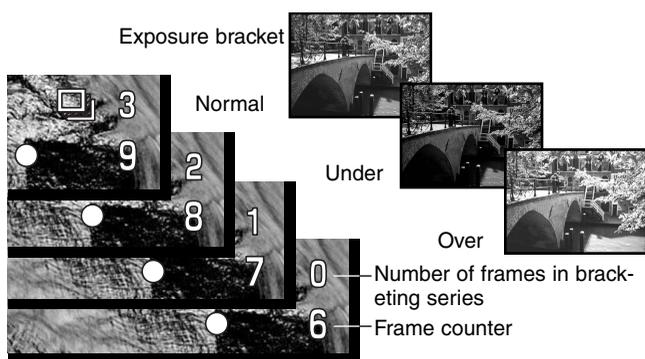

NOTES ON BRACKETING

If the memory card is filled or the shutter button is released before the series has completed, the camera will reset and the entire bracket must be made again.

To make a flash bracket, set the digital-effects switch to the exposure position and raise the camera flash. When using flash, the bracket will not advance automatically; the shutter-release button must be pressed for each frame of the series. Once the serie begins, the focus and exposure are fixed. The remaining number of frames in the bracket series is displayed on the monitors next to the bracketing icon.

When exposure brackets are made in S exposure mode, the aperture controls the bracket. In A and M modes, the shutter speed controls the bracket. The aperure can be used to control the bracket in M mode by setting the digital-effects switch to the exposure position and holding the digital-effects button during the exposures. Both the aperture and shutter speed can control the bracket in P mode.

int/ INTERVAL

The interval mode makes a series of still or moving images over a period of time. Similar to time-lapse photography, a series of images of a slow moving event can be taken: the blossoming of a flower, the construction of a building. The built-in flash can be used. Instant playback (p. 100) is disabled.

The parameters of the interval series is set up in the advanced 1 section of the recording-mode menu. Refer to the navigation section on page 80 on how to use the menu. The length of the interval between frames can be set at 1 – 10, 15, 20, 30, 45, and 60 minutes. The number of images in the series is set with the frames menu option: 2 – 99 frames. To capture a series of still images or to make a movie file is selected with the interval-mode option.



Still image – to create a series of still images specified within the parameters set on the recording-mode menu. Image size and quality can be changed.



Time-lapse movie – to create a movie specified within the parameters set on the recording-mode menu. The movie file is played back at four frames per second. Image size can be changed. If image quality is set to RAW or super fine before selecting the time-lapse movie mode, the quality setting is reset to fine.

Set the drive mode to interval with the function dial (p. 48). After mounting the camera on a tripod, compose the image so that the subject area falls within the focus frames; the camera sets the focus, exposure, and white balance, and charges the flash just before each exposure. Continuous AF can be used. Settings locked with the spot AE lock button are canceled after the first frame. To override the automatic systems, use manual focus (p. 43), manual exposure (p. 56), and preset or custom white balance (p. 67).



Number of frames in the interval series

Frame counter

Confirm the memory card has enough storage capacity for the series by comparing the number of frames in the interval series with the number of recordable images displayed on the frame counter. When taking still-images, image size and quality settings can be changed to increase the number of pictures that can be saved on the memory card.

Press the shutter-release button to begin the series. During the interval series, the monitors will be turned off to conserve power. "Int" will be displayed on the data panel and the data-panel frame counter will countdown the remaining frames in the interval series. The access lamp will glow when an image is being recorded.



The setting sun: 10 minute intervals

The camera will stop recording images and reset to the first frame when the number of frames set has been taken, or when the memory card is full. To cancel the interval series, turn off the camera.


When viewing time-lapse movies on a computer, the computer performance is important. On slower computers, frames may be dropped during the playback of movies recorded at 2560 X 1920 or 1600 X 1200.

SELF-TIMER

Used for self-portraits, the self-timer will delay the release of the shutter for approximately ten seconds after the shutter is released. The self-timer is set with the function dial (p. 48).

With the camera on a tripod, compose the picture as described in the basic recording section (p. 27). Focus lock (p. 28) or the Flex Focus Point (p. 45) can be used with off-center subjects. Press the shutter-release button partway down (1) to lock the exposure and focus. Press the shutter-release button all the way down (2) to begin the countdown. Because focus and exposure are determined when the shutter-release button is pressed, do not stand in front of the camera when taking a self-timer image. Always confirm the focus with the focus signals before beginning the countdown (p. 29).


During the countdown, the self-timer lamp on the front of the camera will start to blink and is accompanied by an audio signal. A few seconds before the exposure, the self-timer lamp will blink rapidly. The lamp will glow steadily just before the shutter fires. To stop the countdown, press the pro-auto button or change the position of the flash (lift it or push it down). The audio signal can be turned off in the basic section of the setup menu (p. 118).

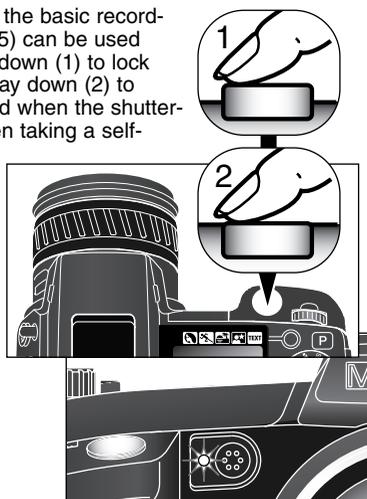

Shooting tips


The self-timer can be used to minimize camera shake with long exposures. When using the camera on a tripod, photographs of static subjects (landscapes, still-lives, or close-up photographs) can be made with the self-timer. Because no contact is made with the camera during exposure, there is no risk of camera shake caused by the operator.

WHITE BALANCE

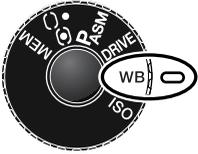

White balance is the camera’s ability to make different types of lighting appear neutral. The effect is similar to selecting daylight or tungsten film, or using color compensating filters in conventional photography.

When setting the white balance, “Auto” (data panel) and “AWB” (monitors) will be displayed to indicate the auto white-balance setting. An icon will be displayed on the data panel and monitors if a setting other than auto white-balance was chosen. See setting the function dial section on page 48.

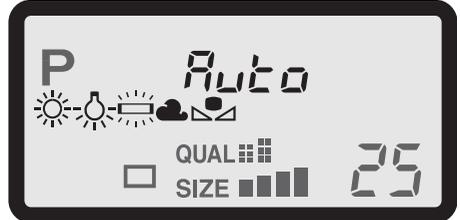

-  No display AUTO / AWB – to automatically detect the type of light and adjust the white balance accordingly.
-  Daylight – for outdoor and sunlit subjects.
-  Tungsten – for incandescent lighting: household filament light bulbs.
-  Fluorescent – for fluorescent lighting: office ceiling lights.
-  Cloudy – for overcast outdoor scenes.
-  Custom setting – for using the custom white-balance setting.
-  Custom calibration – for manual white-balance calibration.

AUTOMATIC WHITE BALANCE

The automatic white balance compensates for the color temperature of a scene. In most cases, the AUTO setting will balance the ambient light and create beautiful images, even under mixed-lighting conditions. When the built-in flash is used, the white balance is set for the color temperature of the flash.

PRESET WHITE BALANCE

Preset white-balance settings must be set before the image is taken. Once set, the effect is immediately visible on the monitors. Five settings are available: daylight, tungsten, fluorescent 1, fluorescent 2, and cloudy. Fluorescent 1 is for standard fluorescent lighting, and fluorescent 2 is for fluorescent lighting with a higher color temperature close to natural daylight.

The built-in flash can be used with preset white-balance settings, but will create a pinkish or blueish cast with the fluorescent and tungsten settings. The flash is daylight balanced and will produce good results with the daylight setting.

Shooting tips


White balance cannot correct high-energy vapor lighting: sodium-vapor (yellow highway lights), or mercury vapor. For portraits under these lighting conditions, the flash can be used to overpower the ambient light. With landscapes containing these types of lights, set the white balance to the preset daylight setting. Auto, preset, and custom white balance will not change the color of neon signs.

CUSTOM WHITE BALANCE

Custom-white-balance function allows a photographer to calibrate the camera to a specific lighting condition. Three setting can be stored in the camera and used repeatedly. Custom white balance is especially useful with mixed-lighting conditions or when critical control over color is needed.

To calibrate the camera, press the function button and turn the control dial until the custom white-balance icon and “SET” appear on the data panel and red on the monitors. While holding the function button (1), use the up/down keys of the controller (2) to select one of the three memory registers. Select a white object and fill the image area with it; the object does not need to be in focus. Press the shutter-release button to calibrate the camera.

If an error occurs during calibration, an error message will appear on the monitors. Press the controller to cancel the message; the custom white balance icon will turn yellow to indicate the error. Recalibrate using a suitable reference target and the shutter-release button. This sequence can be repeated as many times as necessary.

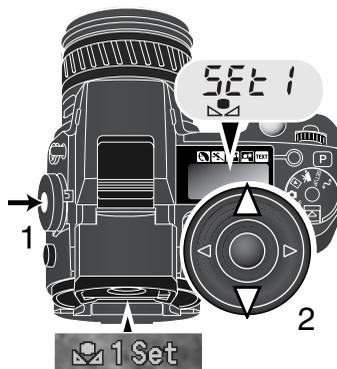

The setting will remain in the selected register until it is replaced with another calibration. If the custom white-balance setting needs to be used again, while pressing the function button, turn the control dial until the custom white-balance icon is displayed without the “SET” on the data panel and white on the monitors. While holding the function button (1), use the up/down keys of the controller (2) to select one of the three memory registers.


The built-in flash can be used with the custom setting. However, since the flash is daylight balanced, it will give an unusual color cast to an image if the camera is calibrated to any other light source.

Shooting tips

When making the calibration, the color of the object used is critical. The object should be white. A colored object will cause the calibration to compensate for the object color rather than the color temperature of the ambient light. A blank piece of white paper is an ideal surface and can easily be carried in a camera bag.

A calibration error may occur under extremely bright light sources, especially with high-power flash units. Use a gray card as the calibration target to reduce the intensity of the illumination. The aperture can also be stopped down in the manual exposure mode to control the light.

CAMERA SENSITIVITY – ISO

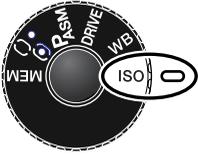

Five settings can be selected for camera sensitivity: Auto, 100, 200, 400, and 800; the numerical values are based on an ISO equivalent. ISO is the standard used to indicate film sensitivity; the higher the number, the more sensitive the film. See setting the function dial section on page 48 to change the ISO setting.

The auto setting automatically adjusts the camera sensitivity to the light conditions between ISO 100 and 200. When any other setting than auto is used, “ISO” will appear on the data panel, and “ISO” and the set value will be displayed on the monitors.

Photographers can select a specific sensitivity setting. Like grain in silver-halide film that increases with speed, noise increases with sensitivity in digital imaging; an ISO setting of 100 will have the least noise and 800 will have the most noise. A change in ISO also affects the flash range; the higher the ISO, the greater the range.

As the ISO value doubles, the camera sensitivity doubles; changing the ISO between 100 and 200, 200 and 400, or 400 and 800 changes the camera sensitivity by one stop or 1 Ev (p. 79). A change between 100 and 800 changes the camera sensitivity by a factor of 8 or three stops. High ISO settings (400, 800) will allow the photographer to hand hold the camera in low-light conditions without the need of a flash.

Camera Notes

When making bulb exposures (p. 57), noise can be more pronounced because of the unusually long exposure times, especially at 400 and 800 ISO. Longer bulb exposures at lower ISO settings will be less affected by noise than the equivalent exposure at a high ISO. For example, a fifteen second exposure at ISO 200 will have less noise than a four second exposure at ISO 800. With long exposures at high ISO settings, noise from interference may be noticeable.

FLASH RANGE AND CAMERA SENSITIVITY

For correct flash exposures, the subject must be within the flash range. The flash range can be extended by changing the camera sensitivity. When the camera sensitivity is set to auto, the ISO is set between ISO 100 and 200. The flash range is measured from the CCD. Because of the optical system, the flash range is not the same at the lens' wide-angle position as it is at the telephoto position.

ISO setting	Flash range (wide angle)	Flash range (telephoto)
AUTO	0.5m ~ 3.8m / 1.6 ft. ~ 12.5 ft.	0.5m ~ 3.0m / 1.6 ft. ~ 9.8 ft.
100	0.5m ~ 2.7m / 1.6 ft. ~ 8.8 ft.	0.5m ~ 2.1m / 1.6 ft. ~ 6.9 ft.
200	0.5m ~ 3.8m / 1.6 ft. ~ 12.5 ft.	0.5m ~ 3.0m / 1.6 ft. ~ 9.8 ft.
400	0.5m ~ 5.4m / 1.6 ft. ~ 17.6 ft.	0.5m ~ 4.2m / 1.6 ft. ~ 13.8 ft.
800	0.5m ~ 7.6m / 1.6 ft. ~ 25 ft.	0.5m ~ 6.0m / 1.6 ft. ~ 19.6 ft.

SHUTTER-SPEED RANGE AND CAMERASENSITIVITY

The shutter speed range changes with the camera sensitivity. A change in ISO only affects the slowest shutter speed, it does not change the length of bulb exposures.

Exposure mode	AUTO	100	200	400	800
Program	8 (10) s.	15 s.	8 (10) s.	2 (6) s.	2 (3) s.
Aperture priority	15 s.	15 s.	15 s.	8 (10) s.	4 (6) s.
Shutter priority	15 s.	15 s.	15 s.	8 (10) s.	4 (6) s.
Manual	15 s.	15 s.	15 s.	8 (10) s.	4 (6) s.

Numbers in parentheses indicate shutter speed at the 200mm zoom position.

ATTACHING A MINOLTA ACCESSORY FLASH UNIT

To extend the versatility of the camera, an accessory flash unit (sold separately) can be mounted on the camera. See page 154 for a list of compatible flash units. Always remove the accessory flash when the camera is not in use, and replace the accessory-shoe cap to protect the contacts.


Slide the accessory-shoe cap off as shown. Mount the flash unit on the accessory shoe by sliding it forward until it stops.



USING THE FLASH SYNC TERMINAL

The flash sync terminal allows a studio or location flash system to be connected to the camera with a standard PC cord. The terminal is compatible with both center positive (normal polarity) and center negative (positive polarity) flash units with a voltage of 400V or lower.

Unscrew the terminal cover. Securely connect the flash's PC cord to the flash sync terminal. Always replace the cover when the terminal is not in use.

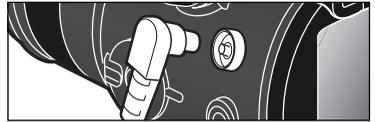

To ensure correct exposures, use the manual exposure mode (p. 56). Set the shutter speed equal to or slower than the flash duration; refer to the flash unit's instruction manual. If the built-in flash is raised when another flash unit is connected to the flash sync terminal, both flash units will fire. However, the camera's automatic flash control systems will not provide correct exposures. To use the built-in flash as a fill light, use manual flash control (p. 94).

The use of custom white balance is recommended (p. 68). When calibrating the camera, use the shutter speed and aperture settings require for the final exposure. A gray card may have to be used as the reference target with powerful flash units to reduce the intensity of the illumination. If custom white balance is not practical, use the preset daylight setting; auto white balance is not recommended.

DIGITAL EFFECTS CONTROL

The Digital Effects Controller is a powerful tool. As well as being able to make adjustments to exposure, the controller can also change image contrast, color, and saturation. The effect of any change is instantly visible on the monitors before the image is captured. Since compensation is applied to the image before it is compressed and saved, image information can be maximized before leaving the scene. The digital effects controller can be used with movie recording. Operating the controller is very simple:




Turn the digital-effect switch to the image characteristic to be adjusted.

- AV Exposure
- COL Color-saturation
- FIL Filter
- Contrast

Press and hold the digital-effects button (1) in the center of the switch and adjust the setting by turning the control dial (2) next to the shutter-release button. Release the digital-effects button to set the adjustment.

Adjustments can be made repeatedly and in combination. Adjustments remain in effect until manually reset. When set to any value other than zero, an icon will be displayed on the monitors as a warning.

To adjust flash compensation, the up/down keys of the controller are used instead of the control dial. See page 74.

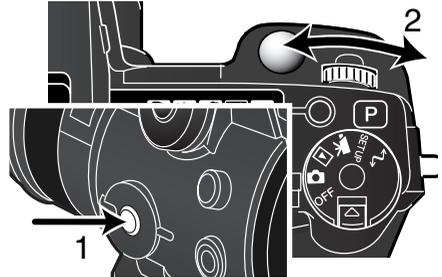

To reset all changes made with the Digital Effects Controller, press the Pro-auto button while holding in the digital-effects button.




EXPOSURE AND FLASH COMPENSATION



The ambient light and flash exposure can be adjusted before the image is captured to make the final picture lighter or darker. Exposure can be adjusted by as much as $\pm 2\text{Ev}$ in $1/3$ increments (p. 79). The exposure and flash compensation will remain in effect until it has been reset.

Adjustments to exposure must be set before the image is captured. When setting exposure or flash compensation, the change in Ev is shown on the data-panel aperture display and on the monitors. After the setting is made, the shutter-speed and aperture displays will indicate the actual exposure. Because the shutter speeds can be adjusted in fine steps, the same shutter speed or aperture value may be displayed after the exposure is compensated.

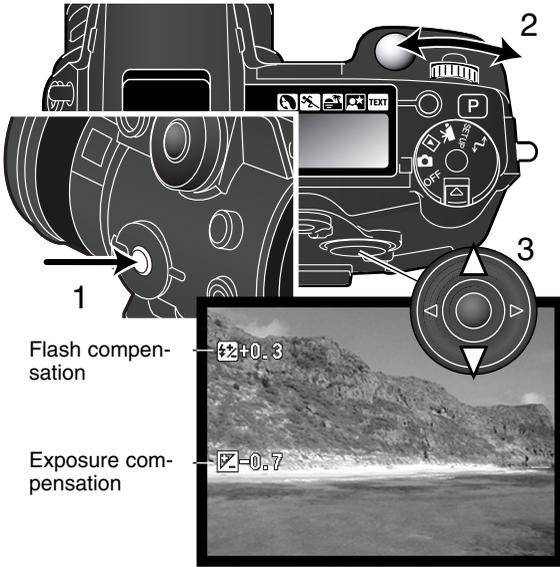

2 Set the digital effects switch to the exposure-compensation position.

Press and hold the digital-effects button (1) in the center of the switch and adjust the exposure compensation by turning the control dial (2), or the flash compensation by using the up/down key of the controller (3).

Release the digital-effects button (1) to set the adjustment.

Flash compensation

+0.3

Exposure compensation

-0.7

Shooting tips

Sometimes the camera's exposure meter is deceived by certain conditions. Changing the exposure value can compensate for these situations. For example, a very bright scene, such as a snowy landscape or a white sandy beach, can appear too dark in the captured image. Before taking the picture, adjusting the exposure by +1 or +2 EV will result in an image with normal tonal values.

In this example, the dark scene appears bright and washed-out on the LCD monitor. By decreasing the exposure by -1.5 EV, the richness of the sunset is preserved.



When using the fill-flash to reduce harsh shadows on the subject's face caused by bright illumination or direct sunlight, flash compensation can be used to change the ratio between the highlights and shadows. The fill-flash will affect the darkness of the shadows without affecting the area illuminated by the main light source. By decreasing the flash output with a negative Ev setting, the shadows will receive less light than with normal fill-flash and be harder, but will bring out subtle details in the shadows that would not appear without the flash. Increasing the flash output by using a positive Ev setting will soften and can even nearly eliminate shadows.



Positive compensation



No compensation




Negative compensation

CONTRAST COMPENSATION



The contrast of a scene can be adjusted within seven levels (± 3) with the digital effects controller. If a scene is too contrasty, information will be lost; if a scene is flat, the image information is not optimized for the recording ability of the camera. Control over the contrast gives photographers the ability to maximize the image information at the scene.

The contrast must be set before the image is captured. When changing the contrast setting, an icon will appear in the live image. The monitors will indicate if an increase (+) or decrease (-) in contrast has been made. If contrast is set to any other value than zero, the icon will remain on the displays as a warning.

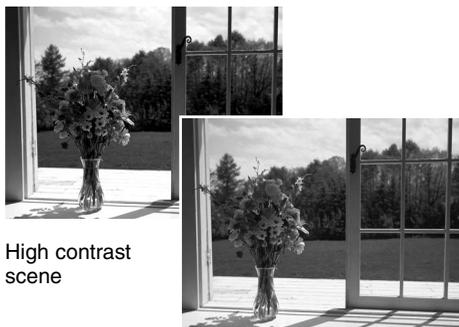

High contrast scene

After compensation




Flat scene

After compensation

Shooting tips

Unlike the display on a computer monitor, changes to contrast and color saturation can be difficult to see in the EVF and LCD monitor. To ensure the optimum level of contrast or color saturation, make an automatic bracket (p. 62) or manual bracket of the scene.


COLOR-SATURATION COMPENSATION

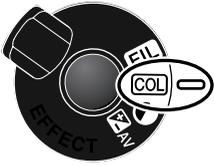

The color saturation of a scene can be adjusted within seven levels (± 3) with the digital effects controller. Colors can be accented or subdued.

The color saturation must be set before the image is captured. When changing the color-saturation setting, an icon will appear in the live image. The monitors will indicate if an increase (+) or decrease (-) in saturation has been made. If color saturation is set to any other value than zero, the icon will remain on the displays as a warning.

FILTER

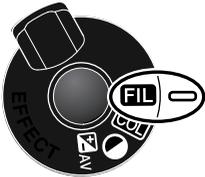

The overall color of a scene can be adjusted with the digital effects controller. The Filter effects differ between the color mode in use, see the color examples on page 155.

The filter must be set before the image is captured. When changing the setting, an icon and numeral will indicate the filter controls in effect. Any changes are immediately applied to the monitor image. If the Filter is set to any other setting than zero, the icon will remain on the displays as a warning.

When used with Natural Color, Vivid Color or Adobe RGB, the Filter can be adjusted in seven levels from +3 to -3. A positive adjustment acts like a warming filter. A negative adjustment has the opposite effect and makes the image cooler.

When used with the black-and-white color mode, the Filter can tone the neutral monochrome image in eleven steps. The Filter effect cycles from neutral to red, to green, to magenta, to blue, and returning to neutral. The zero position is neutral. Black and white filter settings have no effect on RAW images.

A SHORT GUIDE TO PHOTOGRAPHY

Photography can be a rewarding pursuit. It is a broad and disciplined field that can take years to master. But the pleasure in making photographs and the joy of capturing a magical moment cannot be compared. The guide is an introduction to some basic photographic principles.

The lens aperture controls not only exposure, but also depth of field; the area between the closest object in focus and the furthest object in focus. The larger the aperture value, the greater the depth of field and the longer the shutter speed needed to make the exposure. The smaller the aperture value, the shallower the depth of field and the faster the shutter speed needed to make the exposure. Usually landscape photographs use a large depth of field (large aperture value) to keep the foreground and background in focus, and portraits use a shallow depth of field (small aperture value) to separate the subject from the background.



Depth of field also changes with focal length. The smaller the focal length, the greater the depth of field; the longer the focal length, the shallower the depth of field.

The shutter controls not only exposure, but also the ability to stop motion. Fast shutter speeds are used in sport photography to stop action. Slow shutter speeds can be used to show the flow of motion such as water cascading over a waterfall. The use of a tripod is recommended with slow shutter speeds.



The change in aperture and shutter speed is not apparent in the live image. Unlike film cameras, test photographs can be taken and immediately viewed. For critical work, take a test photograph at the set aperture or shutter speed and view the result in Quick View (p. 34). The image can be deleted if not acceptable and another test image can be taken at a different setting.

WHAT IS AN EV? WHAT IS A STOP?

Ev stands for exposure value. Stop refers to click stops in mechanical cameras. A change of one Ev or one stop will adjust the exposure calculated by the camera by a factor of two – +1.0 Ev is twice as much light, -1.0 Ev is one half as much light, +2.0 Ev is four times as much light, and -2.0 Ev is one quarter as much light.

NAVIGATING THE RECORDING-MODE MENU

In recording mode, press the menu button (1) to activate the menu. The menu button also turns off the recording-mode menu after making settings. The four-way key of the controller (2) are used to move the cursor in the menu. Pressing the central button of the controller will enter a setting.



Activate the recording-mode menu with the menu button (1). The “Basic” tab at the top of the menu will be highlighted. Use the left/right keys of the controller (2) to highlight the appropriate menu tab; the menus will change as the tabs are highlighted.



When the desired menu section is displayed, use the up/down key (2) to scroll through the menu options. Highlight the option whose setting needs to be changed.




Press the right controller key to display the settings; the current setting is indicated by an arrow. To return to the menu options, press the left key.



Use the up/down key to highlight the new setting.



Press the central button of the controller to select the highlighted setting.

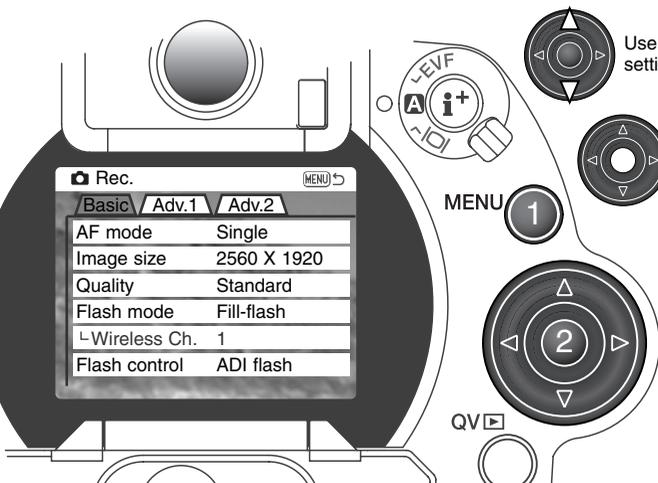

Once a setting has been selected, the cursor will return to the menu options and the new setting will be displayed. Changes can continue to be made. To return to the recording mode, press the menu button.


Basic	
AF mode	Single Continuous
Image size	2560 X 1920 1600 x 1200 1280 X 960 640 X 480
Quality	RAW Super fine Extra fine Fine Standard
Flash mode	Fill-flash Red-eye Rear sync. Wireless
Wireless Ch.	1 – 4
Flash control	ADI flash Pre-flash TTL Manual

Advanced 1	
Spot AF/AEL	AF/AE hold AF/AE toggle AE hold AE toggle
Mag. button	Digital zoom Elec. mag.
Interval	1 – 10, 15, 20, 30, 45, 60 min.
Frames	2 – 99 frames
Interval mode	Still image Movie
UHS movie	On / Off

Advanced 2	
Data imprint	Off YYYY/MM/DD MM/DD/hr:min Text Text + ID#
Color mode	Vivid (sRGB) Nat. (sRGB) Adobe RGB B&W Solarization
Sharpness	Hard (+) Normal Soft (-)
Exp. bracket	0.3, 0.5, 1.0Ev
Instant playback	10 sec/2 sec/Off
Voice memo	15 sec/5 sec/Off

Please refer to the following sections for descriptions of the menu options and their settings.



See page 82 for information on the electronic keyboard.

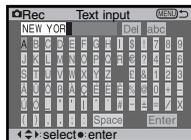

ELECTRONIC KEYBOARD

The electronic keyboard is used to enter text for imprinting data or for naming new folders. The keyboard automatically appears when text needs to be entered.

To enter text, simply use the four-way keys of the controller to highlight the desired character and then press the central button of the controller to enter it. Entering the case key will switch between upper and lower case; the change is immediately displayed on the keyboard. When complete, highlight the enter key and press the controller to enter the text and complete the operation. To cancel the operation, press the menu button.

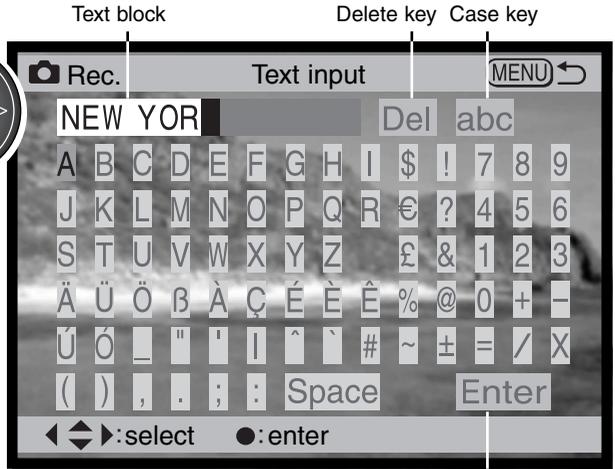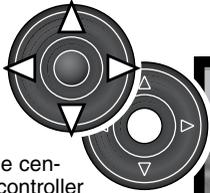

To delete text, move the cursor into the text block at the top of the screen. Use the cursor to highlight the character to be deleted. Press the down key; the delete key will be highlighted. Press the center of the controller to delete the character.

To replace a character, repeat the previous procedure, but when the delete key is highlighted, use the four-way keys to highlight the character to replace the one highlighted in the text box; press the controller to replace the character.

AUTOFOCUS MODES

This digital camera has two autofocus modes. The single and continuous AF are selected in the basic section of the recording-mode menu (p. 80).

Single AF – for general purpose photography and static subjects. When the shutter-release button is pressed partway down, the autofocus system locks onto the subject in the focus area and will remain locked until the shutter button is released. Direct Manual focus (p. 125) can be used with single AF.

Continuous AF – for moving subjects. When the shutter-release button is pressed partway down, the autofocus system will activate and continue to focus until the exposure is made. When using continuous AF with the wide focus area (p. 44), the AF sensors used to indicate the point of focus will not be displayed.

The continuous AF mode may have difficulty focusing on extremely fast subjects. In this situation, use manual focus to focus on a point in the subject's path and release the shutter just before the subject reaches that point; there is a slight delay between the time the shutter-release button is pressed and the shutter opens.



Single AF indicator – focus confirmed and locked.



Continuous AF indicator – focus confirmed.



Red focus indicator – the subject is too close or a special situation is preventing the AF system from focusing. The shutter can be released.

Do not confuse these icons with the metering-mode icons on page 51.

IMAGE SIZE

Changing image size affects the number of pixels in each image. The greater the image size, the larger the file size. Choose image size based on the final use of the image – smaller images will be more suitable for web sites whereas larger sizes will produce higher quality prints.

Image size must be set before the picture is taken. Changes made to image size are displayed on the data panel, EVF, and LCD monitor. Image size must be reset manually. See navigating the recording-mode menu on page 80.

Data panel	EVF and LCD monitor	Number of pixels (hor. X vert.)	Image size
SIZE ■■■■	2560	2560 X 1920	FULL
SIZE ■■■	1600	1600 X 1200	UXGA
SIZE ■■	1280	1280 X 960	SXGA
SIZE ■	640	640 X 480	VGA

ABOUT THE FRAME COUNTER

The frame counter indicates the approximate number of images that can be stored on the memory card at the camera's image quality and size settings. If the settings are changed, the frame counter adjusts accordingly. Because the calculation is based on average file sizes, the actual image may not change the counter or may decrease it by more than one.

IMAGE QUALITY

This camera has five image quality settings: raw, super fine, extra fine, fine, and standard. Always select the desired setting before taking the picture. See navigating the recording-mode menu on page 80.

Image quality controls the rate of compression, but has no effect on the number of pixels in the image. The higher the image quality, the lower the rate of compression and the larger the file sizes. The super-fine mode will produce the highest quality image and the largest image files. If the economical use of the memory card is important, use the standard mode; standard image quality is sufficient for normal usage.

File formats vary with the image quality setting. Super fine images are saved as a TIFF file. The extra fine, fine, and standard settings are formatted as a JPEG file. Super fine, extra fine, fine, and standard files are saved as 24-bit color or 8-bit monochrome images. RAW creates a high-quality file format that can only be read with the DiMAGE Viewer software.

If the image quality is changed, the data panel will display the approximate number of images that can be recorded at that setting on the installed memory card. One memory card can contain images with differing qualities.

Data panel	EVF and LCD monitor	
RAW QUAL 	RAW	RAW data
QUAL 	S. FIN	Super fine
QUAL 	X.FIN	Extra fine
QUAL 	FINE	Fine – the default setting.
QUAL 	STD.	Standard

ABOUT SUPER-FINE AND RAW IMAGE QUALITY

Because super-fine and RAW data files are so large, the UHS continuous-advance drive mode cannot be used with these image-quality settings. After capturing five RAW or three super fine images successively, there will be a few minutes delay while the images are being saved to the memory card. The access lamp will glow and the monitors will be blank during this period.

In the RAW image-quality mode, the image size is set at full and cannot be changed. The image size will not be displayed on the monitors. The digital zoom, enlarged playback, data imprinting, and print functions cannot be used.

Unlike the other image-quality modes, RAW image data is unprocessed and requires image processing before it can be used. To view the RAW data, the DiMAGE Viewer software is required. This software can reconstruct the image and apply the same image processing controls as the camera. RAW data is saved as a 12-bit file; the DiMAGE Viewer software can convert this data into 24-bit or 48-bit TIFF files.

A RAW image is stored with a file header that contains white-balance information, changes made to contrast, saturation, and color with the Digital Effects Control, any image processing applied in a subject-program setting, and changes to sharpness. The changes in camera sensitivity are applied to the RAW data; ISO values can be manually set to control noise (p. 48).

The camera's image-processing controls apply the affect of the color modes to the live image displayed on the monitors, but the stored data may not be influenced by the setting. The black and white color mode has no effect on the final image; a raw image taken in the black-and-white color mode can be restored to a color picture. However, black and white filter effects (p. 77) are not applied to a RAW image. The saturation difference between the Natural Color and Vivid Color modes is preserved in the RAW data, but the solarization color mode does not alter the image data. For more on color modes, see page 98.

IMAGE-FILE SIZE AND MEMORY CARD CAPACITY

The number of images that can be stored on a memory card is determined by the size of the card and the file size of the images. The actual file size is determined by the scene; some subjects can be compressed further than others. The tables below list approximate file sizes based on average file sizes.

Approximate file sizes.				
Image size	2560 X 1920	1600 X 1200	1280 X 960	640 X 480
Image quality				
RAW	9.6MB	–	–	–
Super fine	14.2MB	5.6MB	3.6MB	1.0MB
Extra fine	4.0MB	1.7MB	1.3MB	530KB
Fine	2.1MB	1.0MB	680KB	280KB
Standard	1.1MB	620KB	420KB	200KB
Approximate number of images that can be stored on a 16MB CompactFlash card.				
RAW	1	–	–	–
Super fine	1	2	4	15
Extra fine	2	7	11	36
Fine	5	14	21	48
Standard	10	23	33	65

FLASH MODES

The flash mode can be changed in the basic section of the recording-mode menu (p. 80). For the flash to fire, the unit must be manually lifted. The flash will fire in the selected mode regardless of the amount of ambient light. When the flash is used, the camera sensitivity is automatically set between ISO 100 and 200. This setting can be changed using the function dial (p. 48). The auto-white-balance setting will give priority to the flash's color temperature. If preset or custom white-balance settings are used, priority is given to the active setting's color temperature.

Data panel	EVF & LCD monitor	
–		Fill-flash
		Red-eye reduction
–		Rear flash sync
WL		Wireless

FILL FLASH

Fill-flash can be used as the main or supplementary light. In low-light conditions, the flash will act as the main source of illumination and overpower the ambient light. Under strong sunlight or in backlit situations, the fill-flash can reduce harsh shadows.



RED-EYE REDUCTION

Red-eye reduction is used when taking photographs of people or animals in low-light conditions. The red-eye effect is caused by light reflected from the retina of the eye. The camera will fire a pre-flash before the main flash to contract the pupils of the subject's eyes.

REAR FLASH SYNC

Rear flash sync is used with long exposures to make trailing lights or blurring appear to follow rather than precede the subject. The effect is not apparent if the shutter speed is too fast and stops the subject's motion.

When the shutter is released, a pre-flash will fire. This pre-flash does not expose the subject, but is used in the calculation of the flash exposure. The flash will fire again just before the shutter closes.



Camera Notes

Slow shutter sync can be set in P and A exposure modes. This flash mode controls the shutter and aperture to balance the ambient and flash illumination. When photographing a subject outside at night, the ambient-light exposure will be balanced to bring out the details in the background with the flash exposure for the subject. Because shutter speeds can be longer than usual, the use of a tripod is recommended.

1. Set the camera to the P or A exposure mode (p. 48).
2. Set "AE hold" or "AE toggle" in the Spot AF/AEL option of the advanced 1 section of the recording-mode menu (p. 80).
3. Frame the subject on the monitors.
4. Press the spot AF lock button to lock the exposure.
5. Press the shutter-release button partway down to lock the focus. Compose the image on the monitors.
6. Press the shutter-release button all the way down to take the picture.

WIRELESS/REMOTE FLASH




On-camera flash.

Wireless/Remote flash allows the camera to control an off-camera Minolta 5600HS(D) and 3600HS(D) flash unit without the need of a cable. Single or multiple flash units can be placed around the subject to create different lighting effects.

The camera's built-in flash fires to control the off-camera flash units rather than to illuminate the subject. See your local camera dealer about Minolta lighting accessories.


Wireless/Remote flash.

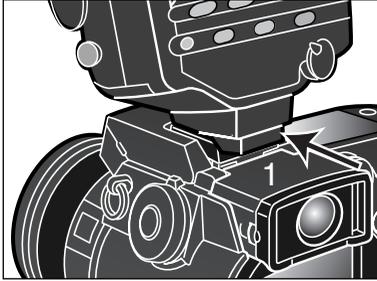


Slide the cap off the accessory shoe (p. 72).

Slide the Minolta 5600HS(D) or 3600HS(D) flash on the accessory shoe until the safety lock engages (1).


Turn on the camera and flash unit.

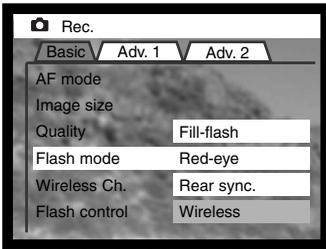

Set the camera to the wireless flash mode in the basic section of the recording-mode menu (p. 80). This will simultaneously set the flash to the wireless mode and set the camera to the flash's wireless channel.

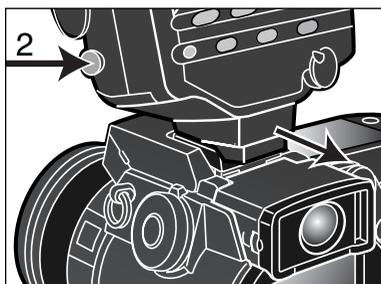


Press and hold the mounting-foot-release button (2) to disengage the safety catch to remove the flash unit from the camera.

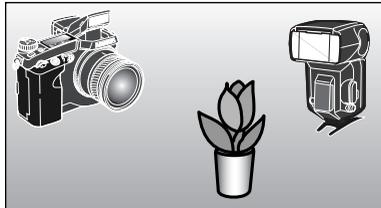


Position the camera and flash around the subject. See the following page for the camera-to-subject and flash-to-subject ranges. Make sure no objects come between the camera and flash unit.

Raise the built-in flash on the camera. The wireless flash indicator (WL) will be displayed in the top left corner of the live image. The number next to it indicates the channel in use. Press the shutter-release button partway down to charge the built-in flash; the flash signal will turn white when charged.

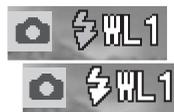


When the 5600HS(D) and 3600HS(D) flash is charged, the AF illuminator on the front of the unit will blink (3). Take a picture as described in the basic recording section on page 27.

The flash units can be test fired by pressing the spot AE lock button on the camera. If the flash does not fire, change the camera, flash, or subject position. The spot AF/AEL option in the basic section of the recording-mode menu must be set to AE hold or AE toggle. If AF/AE hold or AF/AE toggle is active, the flash will not fire. The slow-shutter-sync function will be active in P and A exposure modes (p. 89).

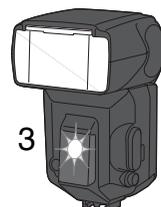

WIRELESS/REMOTE CAMERA AND FLASH RANGES

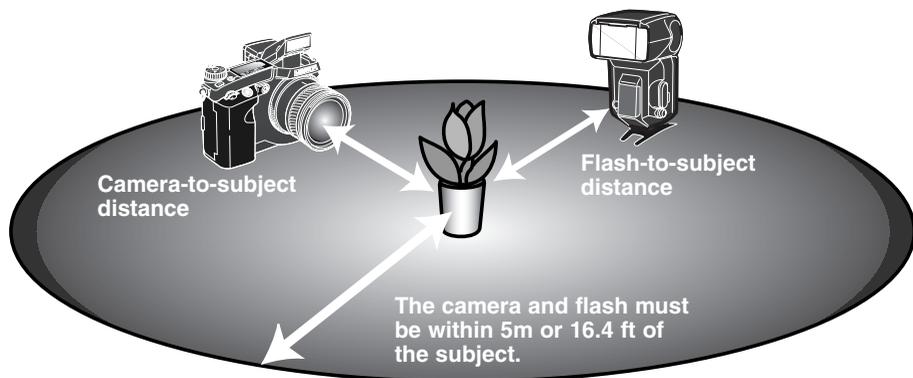

Minimum camera-to-subject distance

Aperture	Camera sensitivity setting			
	ISO 100	ISO 200/AUTO	ISO 400	ISO 800
f/2.8	1.4 m / 4.6 ft	2.0 m / 6.6 ft	2.8 m / 9.2 ft	3.9 m / 12.8 ft
f/4	1.0 m / 3.2 ft	1.4 m / 4.6 ft	2.0 m / 6.6 ft	2.8 m / 9.2 ft
f/5.6	0.7 m / 2.3 ft	1.0 m / 3.2 ft	1.4 m / 4.6 ft	2.0 m / 6.6 ft
f/8	0.5 m / 1.6 ft	0.7 m / 2.3 ft	1.0 m / 3.2 ft	1.4 m / 4.6 ft

Minimum flash-to-subject distance

f/2.8	1.0 m / 3.2 ft	1.4 m / 4.6 ft	2.0 m / 6.6 ft	2.8 m / 9.2 ft
f/4	0.7 m / 2.3 ft	1.0 m / 3.2 ft	1.4 m / 4.6 ft	2.0 m / 6.6 ft
f/5.6	0.5 m / 1.6 ft ¹	0.7 m / 2.3 ft	1.0 m / 3.2 ft	1.4 m / 4.6 ft
f/8	0.4 m / 1.3 ft ²	0.5 m / 1.6 ft ¹	0.7 m / 2.3 ft	1.0 m / 3.2 ft

1 Maximum flash-to-subject distance for the 3600HS(D) for these conditions is 3.5 m / 11.5 ft.

2 Maximum flash-to-subject distance for the 3600HS(D) for these conditions is 2.5 m / 8.2 ft.

NOTES ON WIRELESS/REMOTE FLASH

Wireless/Remote flash performs best under subdued light or interior lighting. Under bright light sources, the flash may not be able to detect the control signals from the camera's built-in flash.

The wireless/remote system has four channels so that multiple lighting systems can be used in the same area without affecting each other. Once the camera and flash are separated, the wireless channel can be changed. On the camera, the channel can be selected in the basic section of the recording-mode menu (p. 80). Refer to the flash's instruction manual on how to set the wireless channel. The flash and the camera must be set to the same channel.

When not using off-camera flash units, always turn off the wireless flash mode in the basic section of the recording-mode menu, or inaccurate flash exposures will result. The 5600HS(D) and 3600HS(D) flash units can be reset simultaneously with the camera. Simply mount the flash unit in the accessory shoe and change the wireless flash mode setting on the menu to another flash mode.

This camera does not have a preset flash sync speed. In program (P) or aperture-priority (A) exposure mode, the shutter speed will not fall below the camera-shake limit unless the slow-sync function is activated (p. 89). When using shutter-priority (S) or manual (M) exposure mode, any shutter speed can be used in the exposure.

The flash can synchronize with the camera at any shutter speed, the 5600HS(D) and 3600HS(D) high-speed sync function is unnecessary. The Wireless/Remote Flash Controller is not compatible with this camera.

FLASH CONTROL

ADI, pre-flash TTL, and manual flash controls are available. Flash control is changed in the basic section of the recording-mode menu (p. 80).

ADI flash metering – Advanced Distance Integration. This mode combines distance information from the autofocus system with information from a pre-flash exposure. Unlike conventional TTL flash metering, ADI is not influenced by the reflectance of the subject or background ensuring optimum flash exposures.

Pre-flash TTL – calculates flash exposure with a pre-flash only. This mode must be used when using close-up filters or filters that reduce the amount of light entering the camera such as neutral density filters. Pre-flash TTL must be used when a diffuser is attached to the built-in flash or an external flash unit.


The camera will automatically switch from ADI metering to pre-flash TTL when a low-contrast subject is preventing the autofocus system from focusing. If the autofocus system cannot lock on the subject, press the AF/MF button and manually focus; the ADI metering will remain in effect.

Manual flash control – fires the flash at full power, 1/4 power, or 1/16 power. Because no pre-flash is used, it can be used to fire slave flash units.

Set the manual flash control on the menu and return to the recording mode. Set the digital effects switch to the exposure-compensation position (1).

Press and hold the digital-effects button (2) and adjust the flash power by using the up/down key of the controller (3).

Release the digital-effects button (2) to set the adjustment.

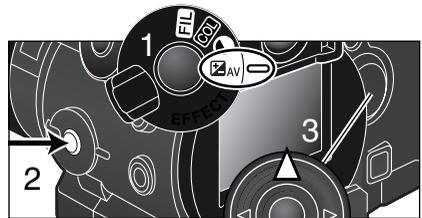

Flash power



The chart lists approximate guide numbers for manual flash calculations. The following equations are useful in determining the guide number, aperture (f_n), or flash-to-subject distance required for exposure.

Guide no. (for distance in meters / feet)				
Manual flash	Camera sensitivity (ISO)			
	100	200	400	800
Full (1/1)	8 / 26	11 / 36	16 / 52	22 / 72
1/4	4 / 13	5.6 / 18	8 / 26	11 / 36
1/16	2 / 6.6	2.8 / 9.2	4 / 13	5.6 / 18

$$\frac{\text{Guide no.}}{f_n} = \text{distance}$$

$$\text{Guide no.} = f_n \times \text{distance}$$

$$\frac{\text{Guide no.}}{\text{distance}} = f_n$$

MAGNIFICATION BUTTON AND ELECTRONIC MAGNIFICATION

The magnification button can be used to activate the digital zoom (p. 46) or enlarge the center of the image by 4X to aid manual focusing. The function of the magnification button is selected in the advanced 1 section of the recording-mode menu (p. 80).

When electronic magnification is selected on the menu, the digital zoom is canceled. Electronic magnification can only be used during manual focus. The magnified display cannot be used to set the exposure.

Press the magnification button on the back of the camera. The magnifier icon is displayed on the monitors when electronic magnification is in effect.

Pressing the magnification button a second time cancels the function. When the shutter-release button is pressed partway down, the magnified display is canceled showing the entire image area.



SPOT AF/AEL

When the spot-AE lock button is pressed and held, the exposure is locked. How the spot-AE lock button operates and what functions it controls can be changed in the advanced 1 section of the recording-mode menu (p. 80). If one of the AF/AE settings are selected, the metering mode set with the function dial will be employed when the spot-AE lock button is used.

Recording-mode menu setting	
AF/AE hold	While pressing and holding the spot-AE lock button, the focus and exposure are set and locked. These settings will remain in effect until the spot button is released.
AF/AE toggle	Pressing and releasing the spot-AE lock button will set and lock the focus and exposure. The settings are canceled when the spot-AE lock button is pressed again.
AE hold	The camera's default setting. While pressing and holding the spot-AE lock button, the exposure is set and locked based on the spot metering circle. This setting will remain in effect until the spot-AE lock button is released.
AE toggle	Pressing and releasing the spot-AE lock button will set and lock the exposure based on the spot metering circle. The setting is canceled when the spot button is pressed again.

The autofocus and auto-exposure settings will not reset after an image has been captured until the spot-AE lock button has been released (hold setting) or pressed again (toggle setting).

The AE hold or AE toggle setting can be used to active the slow-shutter-sync flash mode in P or A exposure modes (p. 89).

When the camera is set to continuous AF, focus can locked when the spot-AE lock button is set to AF/AE hold or toggle. If activated in the advanced 1 section of the setup menu, Direct Manual Focus (p. 125) can be used with continuous AF when the focus is locked.

DATA IMPRINTING

Data can be printed directly on the image. The imprinting function must be activated before the image is taken. Once activated, data will continue to be imprinted until the function is reset; a yellow bar is displayed behind the distance indicator and frame counter on the monitors to indicate the imprinting function is active. Data imprinting is controlled in the advanced 2 section of the recording-mode menu (p. 80). Data imprinting cannot be used with super fine or RAW images or with UHS continuous-advance drive mode.

Recording-mode menu setting	
No	Data imprinting function disabled.
YYYY/MM/DD	Prints the year, month, and day the image was taken. The date format can be changed in the advanced 2 section of the setup menu (p. 118).
MM/DD/hr:min	Prints the date and time the image was taken. The date and time can be set in the advanced 2 section of the setup menu (p. 118).
Text	Up to 16 characters can be printed on the image. When this setting is selected, the electronic keyboard will appear (p. 82).
Text + ID#	Up to ten characters and a serial number can be printed on the image. As each successive image is captured, the ID number will increase by one. When this setting is selected, the electronic keyboard will appear (p. 82). The serial number is reset every time the setting is made.

The data is imprinted in the lower right corner of the image when viewed horizontally. Only one imprinting format can be employed at one time. The data is printed directly on the photograph writing over the image information.

Camera Notes

Every time a still image is recorded, it is stored with an Exif tag that contains the date and time of recording as well as shooting information. This information can be viewed with the camera in the playback or quick-view mode, or on a computer with the DiMAGE Viewer software.

COLOR MODE

The color mode controls whether a still image is color or black and white. This must be set before the image is recorded. The color mode is set in the advanced 2 section of the recording-mode menu (p. 80). The live image on the monitors will reflect the selected color mode. The color mode has no effect on image file size.

Natural Color – reproduces the colors in the scene faithfully. This mode uses no monitor indicator when active. Employs the sRGB color space.





Vivid Color – increases the saturation of the colors in the scene. The increased saturation affects the RAW image data. Employs the sRGB color space.

Adobe RGB – like Natural Color, this color mode reproduces the colors in the scene faithfully, but uses the extended gamut of the Adobe RGB color space.

Black & White – produces monochrome images. Images can be toned using the Filter setting on the Digital Effects Control (p. 73).

Solarization – produces a partial reversal of tones in the image. The Digital Effects Control's exposure compensation function can be used to accentuate the solarization effect (p. 73). Contrast, saturation, and filter adjustments cannot be made. This color mode does not affect RAW images.

For more on RAW image quality and color mode, see page 86.

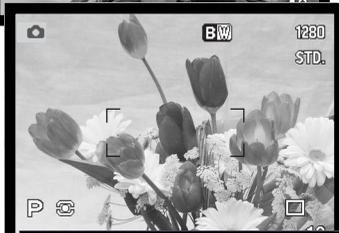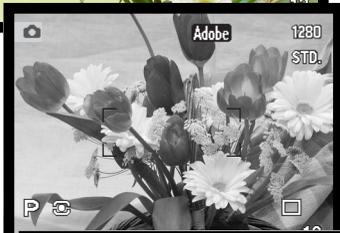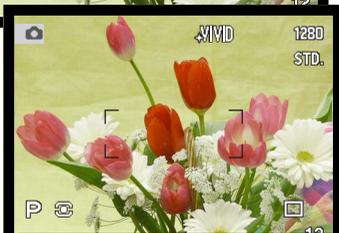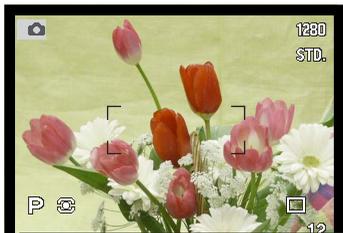

ABOUT ADOBE RGB

Adobe RGB has a larger color gamut than the more common sRGB. The size of the gamut limits the colors that can be reproduced; the larger the gamut, the more colors. If the image will be printed out with a high-quality printer, the use of the Adobe RGB color mode is recommended over the sRGB color modes of Natural and Vivid Color.

Color matching must be used when opening Adobe-RGB image files. When using the DiMAGE Viewer, the color matching function must be active and the color space set to Original Color Space (Adobe RGB) in the color preferences window, see color matching in the advanced setup section in the DiMAGE Viewer manual. DiMAGE Viewer version 2.1 or later is required to open Adobe RGB images.

When recording Adobe RGB images, it is recommended to embed the color space into the image file. Color profiles are embedded in the custom section of the setup menu (p. 118). For more on embedding color profiles, see page 131.

SHARPNESS

The sharpness of the image can be altered. This must be set before the image is recorded. Sharpness is set in the advanced 2 section of the recording-mode menu (p. 80). If any setting other than normal is selected, the sharpness icon will be displayed on the monitors with the degree of sharpness.

Recording-mode menu settings	EVF and LCD monitor display	
Hard (+)		Increases the sharpness of the image, accentuating details.
Normal	—	No filter applied.
Soft (–)		Softens the details of the image.

INSTANT PLAYBACK

After an image is captured, it can be displayed on the monitors for two or ten seconds before being saved. When using the continuous-advance, HS continuous advance, or bracketing mode, an index display is used. With UHS continuous advance, only the last frame of the series is displayed. Instant-playback is activated and the length of the playback period is set in the advanced 2 section of the recording-mode menu (80).




If the central button of the controller is pressed during the instant playback, the displayed image(s) will immediately be saved and the playback canceled.

QV



To delete an image during the instant playback, press the QV/delete button. A confirmation screen will appear.

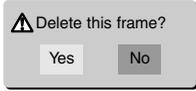

Use the left/right keys of the controller to highlight "YES." "NO" will cancel the operation.




Press the central button of the controller to delete the image. When a continuous or bracketed series of images is captured, the entire series will be erased.



Pressing the display-information button switches between displaying the image with and without the guidance bar.



VOICE MEMO

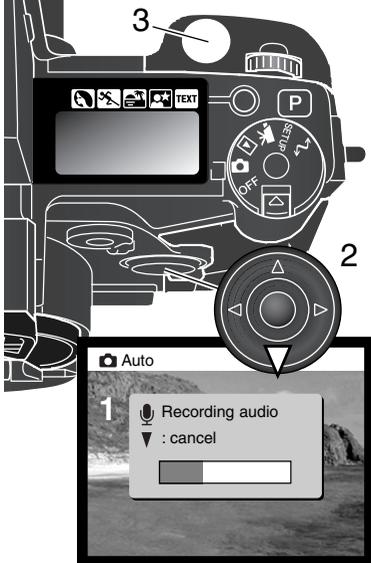

Voice memo allows a five or fifteen second audio track to be recorded with a still image. The function is activated and the length of the recording time is set in the advanced 2 section of the recording-mode menu (p. 80). When the function is active, the microphone icon is displayed on the data panel and LCD monitor. Voice memo must be set before taking a picture. It will remain in effect until reset.

After an image is captured, a screen will appear indicating the audio recording has started. A bar graph (1) will display the amount of recorded time. The recording will automatically stop when the set time has elapsed. To cancel the recording and erase the audio track, press the down key of the controller (2) or the shutter-release button (3) before the recording has finished.

Voice memo is attached to the last image of a continuous-advance or bracketing series (p. 58). Voice memo is disabled with the interval drive mode. The voice memo can be played back in Quick View and the playback mode (p. 34). Images with voice-memo audio tracks have a note icon displayed with them.


Recording Tips

When making audio recordings, be careful not to touch or cover the microphone. The quality of the recording is proportional to the subject to microphone distance. For best results, hold the camera approximately 20cm (8in) from your mouth.



MOVIE RECORDING

Up to sixty seconds of digital video with or without audio can be recorded. The motion JPEG image is 320 X 240 pixels (QVGA). The effective image area is 308 X 240 pixels; two thin lines will appear to the left and right of the image when played back.

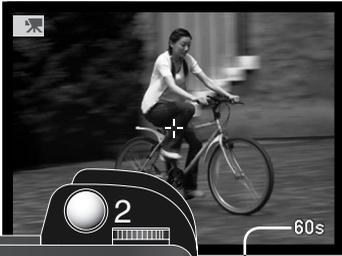

Set the main dial to movie recording (1) position. Before recording, the data-panel and monitor frame counters will show the maximum time in seconds that can be recorded with the next movie clip. 60 seconds will be displayed until the remaining number of seconds that can be recorded falls below one minute.

Total recording time for the next movie clip.



Shooting digital video is simple. Place the spot focus cross-hair sensor on the subject. Press the shutter-release button all the way down and release to start recording (2). The camera will continue to record until the recording time is used or the shutter-release button is pressed again. When recording, the monitor frame counter will countdown the remaining time.


Countdown in seconds Recording indicator

Movie files are recorded at approximately 297KB per second. A 16MB Compactflash card can store about 50 seconds of digital video. Actual time depends on the subject and the amount of image and audio data stored on the card.

Manual focus can be used before or during movie recording. The zooming ring can be used during recording, but the microphone may pick up the noise of the mechanism. The audio can be turned off with the movie menu. Digital Effects Controller (p. 73) can be used to adjust exposure, contrast, color saturation, and filter settings; the filter effect is disabled with Night Movies. The list below indicates which functions can be used, which are fixed, and which are disabled in movie mode.

- Movie menu — To set movie mode and audio (p. 104)
- Display information button — All displays available (p. 41)
- Macro mode — Available (p. 47)
- Focus mode (p. 81) — Continuous AF (without audio)
Single AF (with audio)
- Autofocus area — Spot (fixed)
- Exposure mode — Program (fixed) (p. 53)
- Metering mode — Center-weighted (fixed) (p. 51)
- Camera Sensitivity (ISO) — Auto (fixed) (p. 70)
- White balance — Auto white balance (fixed) (p. 68)
- Flash — Disabled
- Digital zoom (Electronic magnification) — Disabled
- Digital-subject-program button — Disabled
- Function Dial — Disabled
- Spot AE lock button — Disabled

NAVIGATING THE MOVIE MENU

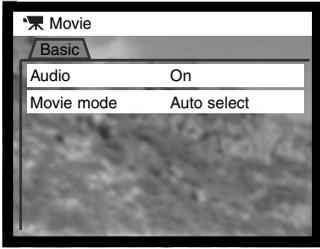

MENU



Press the menu button to activate the menu.



Use the up/down key to highlight the option whose setting needs to be changed.



Press the right controller key to display the settings; the current setting is indicated by an arrow. To return to the menu options, press the left key.




Use the up/down keys to highlight the new setting.



Press the central button of the controller to select the highlighted setting.

Once a setting is made, the cursor returns to the menu options and the new setting is displayed. To return to the movie mode, press the menu button.


The audio option allows a movie to be recorded with or without an audio track. The focus mode changes with the audio setting. If audio is on, the focus is fixed when recording begins. If audio is off, focus will continuously adjust during recording.

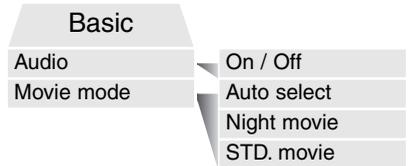

The movie mode option selects the type of movie recorded. Standard movie produces a color image. Night Movie can record under low light levels and produces a black and white movie file. Auto select automatically switch between the two movie modes depending on the lighting conditions. When recording, the mode is fixed. While Night Movies can be recorded under normal conditions, however bright outdoor lighting may be beyond the exposure control range.

PRO-AUTO BUTTON

Simply pressing the pro-auto button (1) resets the camera to programmed and automatic functions in the movie recording mode. The camera's systems work together to bring professional results leaving the operator free to concentrate on aesthetic decisions. The pro-auto button affects functions in either the recording (p. 42) or movie modes only when the mode is in use.

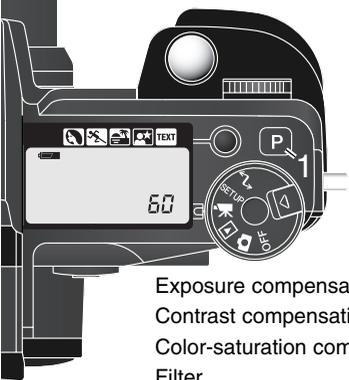

Exposure compensation

Contrast compensation

Color-saturation compensation

Filter

Movie mode

— 0.0 (p. 74)


— 0 (p. 76)

— 0 (p. 77)

— Normal (p. 77)

— Auto select (p. 104)

The last camera settings before the pro-auto button is pressed can be reset; press and hold the function button and press the pro-auto button.

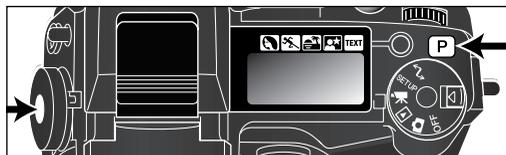

NAVIGATING THE PLAYBACK-MODE MENU

In playback mode, press the menu button (1) to activate the menu. The menu button also turns off the playback-mode menu when the settings have been completed. The four-way key of the controller (2) are used to move the cursor in the menu. Pressing the controller will enter a setting.




Activate the playback-mode menu with the menu button (1). The "Basic" tab will be highlighted. Use the left/right keys of the controller (2) to highlight the appropriate menu tab; the menus will change as the tabs are highlighted.



When the desired menu is displayed, use the up/down key (2) to scroll through the menu options. Highlight the option whose setting needs to be changed.



Press the right controller key to display the settings; the current setting is indicated by an arrow. To return to the menu options, press the left key.



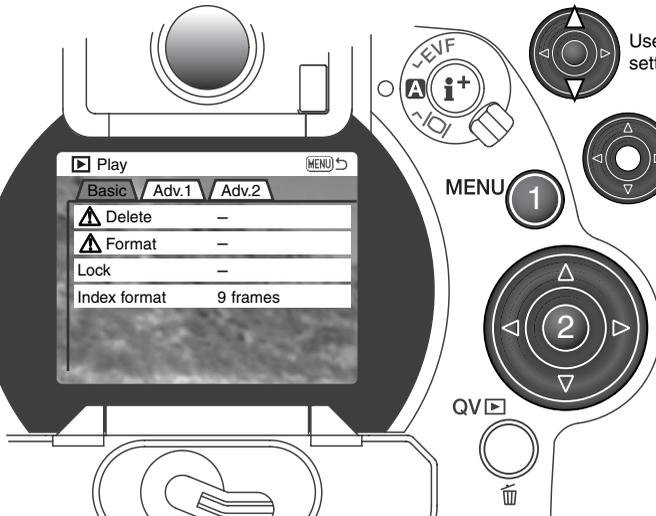


Use the up/down key to highlight the new setting.



Press the controller to select the highlighted setting.

Once a setting has been selected, the cursor will return to the menu options and the new setting will be displayed. Settings can continue to be made. To return to the playback mode, press the menu button.

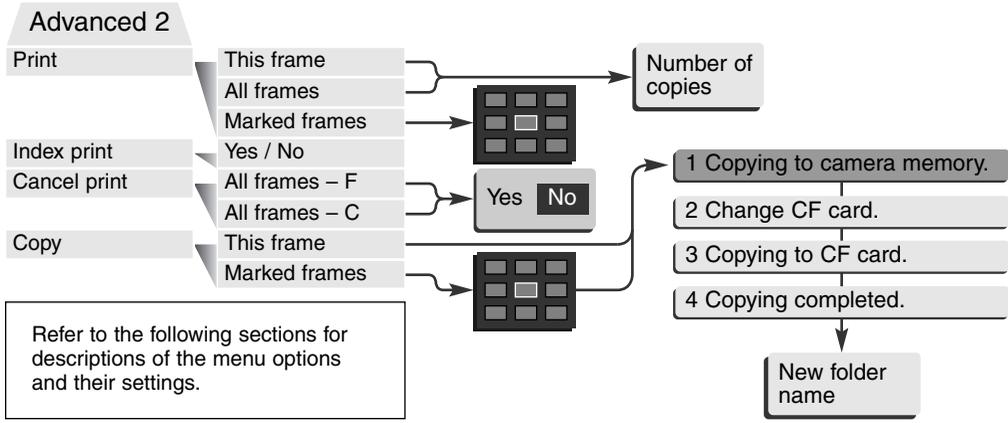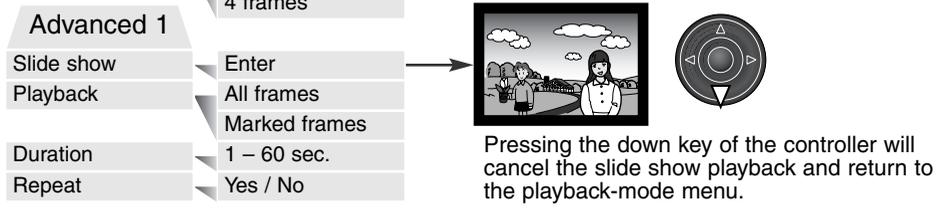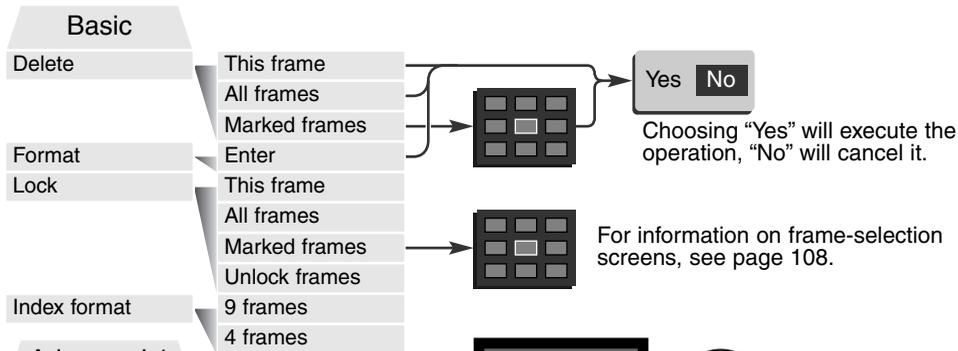

FRAME-SELECTION SCREEN


When a marked-frames setting is chosen on a menu, the frame selection screen will appear. This screen allows multiple files to be selected. The index format of the screen can be changed in the basic section of the playback-mode menu (p. 106).



The left/right keys of the controller move the yellow border to select the image.



The menu button cancels the screen and any operation made.

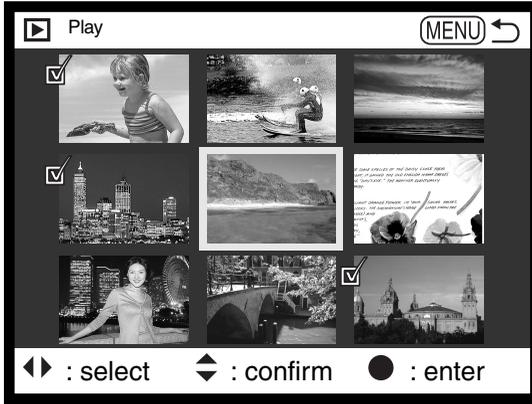

The up key of the controller selects the frame; when selected, an icon will appear next to the thumbnail. The down key will deselect the image removing the icon.



The garbage-can icon indicates the file is selected for deletion.



The key icon indicates the file is locked or selected to be locked.



The check icon indicates the file is selected for the slide show or to be copied to another memory card.



The printer icon indicates the image is selected for printing. The number next to the icon shows the number of copies requested.

DELETING IMAGES



Deleting permanently erases the image. Once deleted, an image cannot be recovered. Care should be taken when using the delete function.

Single, multiple, or all images in a folder can be deleted with the playback-mode menu. Before an image is deleted, a confirmation screen will appear; choosing “Yes” will execute the operation, “No” will cancel the operation. To delete images in other folders, the folder must first be selected in the advanced 1 section of the setup menu (p. 118). The delete option has three settings:

This frame – The image displayed or highlighted in playback mode will be deleted.

All frames – All unlocked images in the selected folder will be deleted.

Marked frames – To delete multiple images. When this setting is chosen, the frame-selection screen will be displayed. Use the left/right keys of the controller to highlight the first image to be deleted. Pressing the up key will mark the thumbnail with the garbage-can icon. To deselect an image for deletion, highlight it with the yellow border and press the down key; the garbage-can icon will disappear. Continue until all the images to be deleted are marked. Press the controller to continue (the confirmation screen will appear), or press the menu button to cancel the operation and return to the playback menu. On the confirmation screen, highlighting and entering “Yes” will delete the marked images.

The delete function will only erase unlocked images. If an image is locked, it must be unlocked before it can be deleted.

FORMATTING MEMORY CARDS



When a memory card is formatted, all data on the card is erased.

The formatting function is used to erase all data on a memory card. Before formatting a card, copy the data to a computer or storage device. Locking files will not protect them from being deleted when the card is formatted. Always format the memory card using the camera; never use a computer to format a card.

When the format option is selected and entered, a confirmation screen will appear. Choosing “Yes” will format the card, choosing “No” will cancel the formatting operation. never remove the card while it is being formatted. A screen will appear to indicate the card has been formatted; press the central button of the controller to return to the playback menu.

If the card-not-recognized message appears, the inserted card in the camera may need to be formatted. A memory card used in another camera may need to be formatted before being used. If the unable-to-use-card message appears, the card is not compatible with the camera and should not be formatted.

Minolta History



Innovation and creativity has always been a driving force behind Minolta products. The Electro-zoom X was purely an exercise in camera design. It was unveiled at Photokina in Germany in 1966.

The Electro-zoom X was an electronically controlled aperture-priority mechanical SLR with a built-in 30 – 120mm f/3.5 zoom lens giving twenty 12 X 17mm images on a roll of 16mm film. The shutter-release button and battery chamber are located in the grip. Only a few prototypes were built making it one of Minolta's rarest cameras.

LOCKING IMAGES

Single, multiple, or all images in a folder can be locked. A locked image cannot be deleted by either the playback-mode menu functions or the QV/delete button. Important images should be locked. To lock images in other folders, the folder must first be selected in the advanced 1 section of the setup menu (p. 118). The lock option has four settings:

This frame – The image displayed or highlighted in playback mode will be locked.

All frames – All images in the folder will be locked.

Marked frames – To lock or unlock multiple images. When this setting is chosen, the frame-selection screen (p. 108) will be displayed. Use the left/right keys of the controller to highlight the image to be locked. Pressing the up key will mark the thumbnail with the key icon. To unlock an image, highlight it with the yellow border and press the down key; the key icon will disappear. Continue until all the images are marked. Press the controller to lock the marked frames, or press the menu button to cancel the operation and return to the playback menu.

Unlock frames – All images in the folder will be unlocked.

Locking an image will protect it from a delete function. However, the formatting function will erase all files on a memory card whether locked or not.

CHANGING THE INDEX PLAYBACK FORMAT

The index format option allows the index playback to be displayed with four or nine images. This affects all index displays.



SLIDE SHOW

The advanced 1 section of the playback-mode menu controls the slide-show function. This function automatically displays all still images in a folder in order.



Image count-down / total number of images in the presentation.



Press the central button of the controller to pause and restart the presentation.



To cancel the presentation, press the down key of the controller.

Menu options	Settings	
Slide show	Enter	To start the slide-show presentation. Pressing the central button of the controller will pause the presentation. During the slide show, press the down key of the controller to stop the presentation and return to the playback-mode menu.
Playback	All frames	To select all the images in the folder to be displayed in the slide-show presentation.
	Marked Frames	To select specific images in the folder to be displayed in the slide-show presentation. When this setting is chosen, the frame-selection screen (p. 108) will be displayed. Use the left/right keys of the controller to highlight the image to be included in the presentation. Pressing the up key will mark the image with a check icon. To deselect a marked image, highlight it with the yellow border and press the down key; the check icon will disappear. Continue until all the images have been edited. Press the controller to set the marked frames, or press the menu button to cancel the operation and return to the playback menu.
Duration	1 – 60s.	To select the period each image will be displayed during the slide show.
Repeat	Yes/No	Selecting “Yes” will cause the slide show to repeat until it is canceled using the down key of the controller. “No” will end the slide show presentation and return to the playback-mode menu when all the images have been displayed once.

ABOUT DPOF

This camera is supported by DPOF™ version 1.1. The DPOF (Digital Print Order Format) allows direct printing of still images from digital cameras. After the DPOF file is created, the memory card is simply taken to a photofinishing service or inserted into the memory -card slot of DPOF compatible printers. When a DPOF file is created, a misc. folder is automatically made on the memory card to store it (p. 140). DPOF print files cannot be made for RAW images or images with embedded color profiles (p. 131).

CREATING A DPOF PRINT ORDER

The print menu option is used to set an order for standard prints from images in a specific folder. Single, multiple, or all images can be printed. If a memory card has multiple folders, a printing file must be created for each folder. Folders are selected in the advanced 1 section of the setup menu (p. 118).

This-frame – To create a DPOF file for the image displayed or highlighted in playback mode.

All-frames – To create a DPOF file for all images in the folder specified in the advanced 1 section of the setup menu.

Marked frames – To chose a group of images to be printed or when the number of copies for each image varies. When selected, the frame selection screen will appear (p. 108). Use the left/right keys of the controller to highlight an image to be printed. Pressing the up key will mark the image with the printer icon. The number next to the icon indicates the number of copies of that image will be printed. Pressing the up key will increase the number of copies, pressing the down key will decrease the number. A maximum of nine copies can be ordered. To deselect an image for printing, press the down key until the the number of copies reaches zero and the printer icon disappears. Continue until all the images to be printed are marked. Press the controller to create the DPOF file, or press the menu button to cancel the operation and return to the playback menu.

When the this-frame or all-frames setting is chosen, a screen will appear requesting the number of copies of each image; a maximum of nine copies can be ordered. Use the up/down keys of the controller to set the number of copies desired. If the all-frames setting was used to create a print order, any additional images saved afterwards in the folder will not be included in the order.

DPOF files cannot be created for images captured with another camera. DPOF data created on other cameras will not be recognized.

ORDERING AN INDEX PRINT

To create an index print of all the images in the folder, select the Yes option. To cancel an index print, simply change the setting to "No." If an index-print order is created, any additional images saved afterwards in the folder will not be included in the index print. The number of images printed per sheet differs between printers. The information printed with the thumbnails can vary.



CANCELING A DPOF PRINT ORDER

The cancel-print option deletes the DPOF files. When the setting is selected, a confirmation screen will appear; choosing and entering "Yes" will execute the operation and cancel the print and index-print order. After the pictures have been printed, the DPOF file will still remain on the memory card and must be canceled manually.

All frames C – To cancel all printing files on the memory card.

All frames F – To cancel the printing file in the folder.

COPYING IMAGES



Image files can be copied from one memory card to another. Up to 15MB of data can be transferred. Every time the copy function is used, a new folder is automatically created for the image(s).

This frame – To copy the image currently displayed.

Marked frames – To copy single or multiple images. When selected, the frame-selection screen (p. 108) will appear; highlight the images to be copied with the yellow border and then press the up key of the controller to mark it with the check icon. To deselect an image, highlight the selected thumbnail and press the down key; the check icon will disappear. Continue until all the images are marked. Press the central button of the controller to continue, or press the menu button to cancel the operation and return to the playback menu.


If too many images have been selected, a warning will appear and the copy routine will be canceled. Divide the number of images into two or three batches.

When the controller is pressed, a screen with four messages will be displayed; the messages are highlighted as the copying procedure is executed.

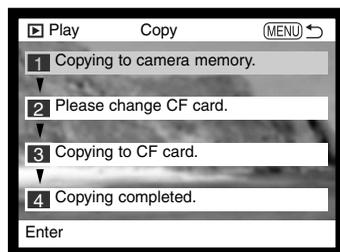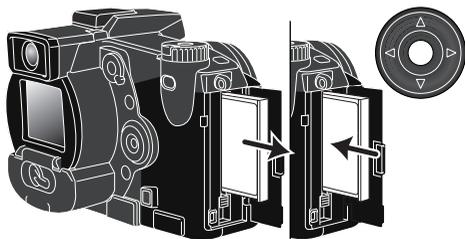

When the change-CF-card message is highlighted, remove the camera's memory card and insert the card to which the image should be copied. Press the central button of the controller to continue.

Wait until the copy-completed message is highlighted. A new screen will appear to indicate the name of the new folder containing the copied images; press the central button of the controller to return to the play-back menu.

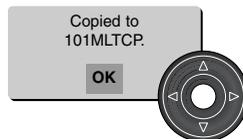

The copy-unsuccessful message will appear when one or all of the files could not be copied. Check the second memory card to see which files were copied and then repeat the procedure for the files that could not be transferred.


If the images were copied to a new card, the no-images message will be displayed when viewed on the camera. Select the copy folder in the advanced 1 section of the setup menu (p. 118).

Minolta History

On February 20th, 1962, John Glenn became the first American to orbit the Earth. On board his Friendship 7 spacecraft was a Minolta Hi-matic camera to record that historic event. The 4 hour, 55 minute, and 23 second flight orbited the Earth three times at an average speed of 28,000 kph (17,500 mph).

Mr. Glenn visited our Sakai camera factory in Japan on May 24th, 1963 to plant a palm tree to celebrate the occasion. The palm tree is still in the courtyard of the factory and stands over eight meters tall (26ft).

The camera? It was not lost. It is on display at the Smithsonian Institution's National Air and Space Museum in Washington D.C. This and other objects from John Glenn's Friendship 7 Mercury flight can be found in galley 210, "Apollo to the Moon."

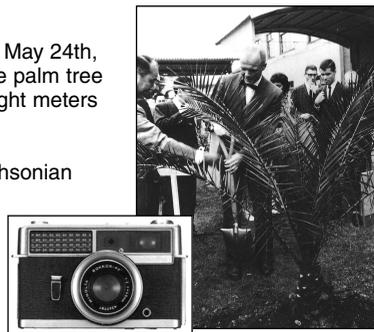

NAVIGATING THE SETUP MENU

To access the menu, simply turn the main dial to the setup position. The four-way keys of the controller (1) are used to move the cursor in the menu. Pressing the controller will enter a setting.



The “Basic” tab will be highlighted. Use the left/right key of the controller to highlight the appropriate menu tab; the menus will change as the tabs are highlighted.



When the desired menu is displayed, use the up/down key to scroll through the menu options. Highlight the option whose setting needs to be changed.



Press the right controller key to display the settings; the current setting is indicated by an arrow.


- To return to the menu options, press the left key.



Use the up/down key to highlight the new setting.



Press the central button of the controller to select the highlighted setting.

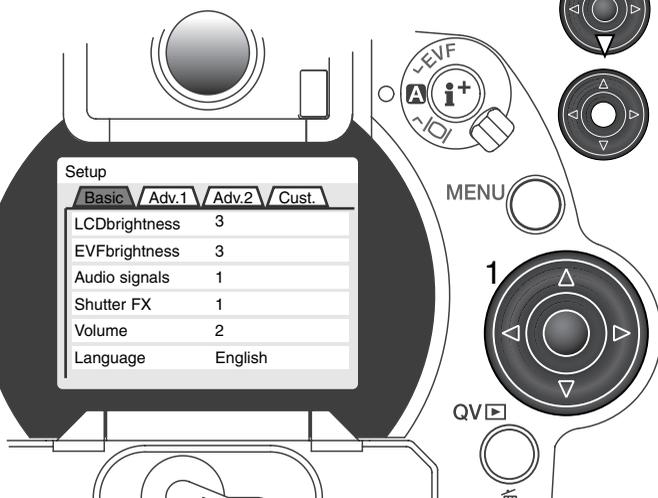

Once a setting has been selected, the cursor will return to the menu options and the new setting will be displayed. Setting can continue to be made.

Basic

LCD brightness	1 – 5
EVF brightness	1 – 5
Audio signals	Off
	1
	2
Shutter FX	Off
	1
	2
Volume	3 (High)
	2
	1 (Low)
Language	English
	Deutsch
	Français
	Español

Advanced 1

File # memory	On / Off
Folder name	Std. form
	Date form
	(folder names)
Select folder	Enter
New folder	Enter
Display mode	Std. display
	Focus frame
	Histogram
	Grid
	Scale
	Image only
Direct MF	On
	Off



Use the right key to select the display modes (p. 124).


Advanced 2

Reset default	Enter
EVF autoSwitch	Auto EVF/LCD
	EVF auto on
Date/Time set	Enter
Date format	YYYY/MM/DD
	MM/DD/YYYY
	DD/MM/YYYY
Video output	NTSC / PAL
Power save	1, 3, 5, 10 min.

Choosing “Yes” will execute the operation, “No” will cancel it.




To set the clock and calendar, see page 128.

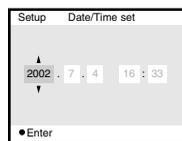

Custom

Memory recall	Function Dial
	DSP button
Ctrl dial (M)	Shutter speed
	Aperture
Manual shift	On / Off
Bracketing	DEC control
	Exposure
Color profile	Not embedded
	Embed
Delete conf.	“Yes” / “No”

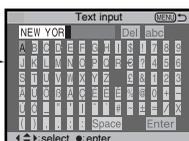

For more information about the electronic keyboard, see page 82.

EVF AND LCD MONITOR BRIGHTNESS

The brightness of the EVF and LCD monitor is set independently of each other. Brightness is controlled in five levels from 1 (low) to 5 (high). As each setting is highlighted, the monitor will adjust accordingly; the central button of the controller must be pressed to set the highlighted level. When the LCD brightness or EVF brightness setting is selected, the corresponding monitor will activate automatically.

AUDIO SIGNALS

Every time a button is pressed, an audio signal will give a positive confirmation of the operation. The audio signals can be turned off in the basic section of the setup menu (p. 118). The tone of the signal can also be changed; signal 1 is electrical and signal 2 is mechanical.

SHUTTER FX

An AF confirmation signal and shutter sound effect gives positive audio confirmation when pictures are being captured. The sound effects can be turned off in the basic section of the setup menu (p. 118). Two shutter effects are available. Signal 1 uses the AF signal from the Dynax/Maxxum 7, and shutter sound from the Dynax/Maxxum 9 SLR. Signal 2 uses an electronic AF signal with a mechanical shutter sound taken from the legendary Minolta CLE.



VOLUME

The volume of the audio signals and sound effects can be increased or decreased in the basic section of the setup menu (p. 118). This affects the camera's audio signals as well as the playback levels of an audio track.

LANGUAGE

The language used in the menus can be changed.

FILE NUMBER (#) MEMORY

When file number memory is selected, if a new folder is created, the first file stored in the folder will have a number one greater than the last file saved. This allows multiple folders to be created to store images by category, place, or date, but the image file numbers will be in the order in which they were shot. If the file number memory is disabled, the image file name will have a number one greater than the last image saved in the folder.

If file number memory is active and the memory card is changed, the first file saved to the new card will have a number one greater than the last file saved on the previous card if the new card does not contain an image with a greater file number. If it does, the file number of the new image will be one greater than the greatest on the card.

FOLDER NAME

All recorded images are stored in folders on the memory card. Folder names come in two formats: standard and date.

Standard folders have an eight character name. The initial folder is named 100MLT10. The first three digits are the folder's serial number, which will increase by one each time a new folder is created. The next three letters refer to Minolta, and the last two numbers indicate the camera used; 10 indicates a DiIMAGE 7Hi.

A date folder name also starts with the three digit serial number and is followed by one register for the year, two register for the month, and two registers for the day: 100YMMDD. The folder 10120412 was created in 2002 on April 12th.

With the date folder format selected, when an image is recorded a new folder with the day's date will be created. All images recorded that day will be placed in that folder. Images recorded on a different day will placed in a new folder with the corresponding date. When a new folder is created, the serial number in the image-file name is reset to 0001 unless file number memory is active. For more information on folder organization and file names, see page 140.



100MLT10

(Standard)



10120412

(Date)

SELECT FOLDER

This option allows the selection of existing folders. In quick view or playback mode, only the images in the selected folder can be viewed or edited. In recording mode, the folder-name option on in the advanced 1 section of the setup menu must be set to standard form in order to select the folder in which to place the subsequent recorded images.

Except for the all-frames-C setting in the advanced 2 section of the playback-mode menu, changes made with menus only affect the images in the selected folder. To make changes to all images in multiple folders, each folder must be selected and the menu operation repeated for each folder. Formatting a memory card in the basic section of the playback menu, erases all folders regardless if they are selected or not.

NEW FOLDER

This allows the creation of new folders. The folder-name option on in the advanced 1 section of the setup menu must be set to standard form in order to use the new-folder function. When selected, the electronic keyboard (p. 82) automatically appears so the folder name can be entered. Once the name is typed in and the enter button on the keyboard is highlighted and entered, the folder will be created and the name will be listed in the select-folder option.

Every folder name begins with a three digit index number. When the electronic keyboard activates, three digits will be displayed in the register. This number cannot be changed. Every time a new folder is created, the folder number will increase automatically by one greater than the highest folder number on the memory card. A five-character folder name must be entered after the number; only capital letters, numbers, and the underbar can be used. To cancel the electronic-keyboard display without creating a new folder, press the menu button.

DISPLAY MODE



Standard display




Focus frame only



Real-time histogram

The recording mode displays activated by the display-information button (p. 41) can be selected in the advanced 1 section of the setup menu. The display cycle is the same as the order shown on the menu.

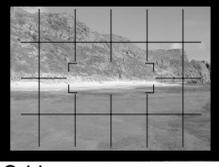


Grid



Scale



Live image only

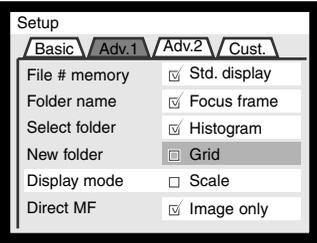

Display-mode settings with a check mark are included in the display cycle. To change displays used, highlight the setting using the controller, and then press the right key (1) to check or uncheck the box.



DIRECT MANUAL FOCUS

Direct manual focus allows manual adjustments to be made after the AF system has locked onto the subjects. Direct manual focus is activated in the advanced 1 section of the setup menu (p. 118). Direct manual focus is canceled when continuous AF (p. 83) or manual focus (p. 43) is in use.

As described in the basic recording operation section (p. 27), press the shutter-release button partway down to lock the focus and exposure (1); the shutter speed and aperture display will turn black and the focus signal will turn white. "DMF" will be displayed next to the drive-mode indicator.

The camera can be manually focused until the shutter button is released. The approximate focusing distance is displayed next to the frame counter.

Electronic magnification (p. 95) can be used by pressing the focus mode button (2) or the display-information button (3) while direct manual focus is active. The magnification button can be used if electronic magnification is selected in the magnification-button option in the advanced 1 section of the recording-mode menu.



RESET DEFAULT

Unlike the pro-auto button (p. 42, 105), this function affects not only the recording mode, but also the movie, playback, and setup modes. When selected, a confirmation screen will appear; choosing “Yes” resets the following functions and settings, “No” cancels the operation.

	Default Setting	Page
Exposure mode	Program	52
Focus mode	Single AF	83
Focus area	Wide focus area	44
Digital zoom	Canceled	46
White balance	Auto white balance	67
Exposure compensation	0.0	74
Flash compensation	0.0	74
Contrast compensation	0	76
Color-saturation compensation	0	77
Filter	0	77
Image quality	Standard	85
Image size	2560 X 1920	84
Camera sensitivity (ISO)	Auto	70
Drive mode	Single-frame advance	58
Metering mode	Multi-segment	51
Custom white balance	Daylight	68
Memory	All five registers are reset	50
Flash mode	Fill flash	88
Wireless channel	1	90
Flash control	ADI metering	94
Manual flash control	1/4 power	94
Exposure bracket	0.3 Ev	62
Interval capture	1 minute	64
Number of frames (interval)	2 frames	64
Interval mode	Still image	64

	Default Setting	Page
UHS continuous-advance movie	Off	61
Voice memo	Off	101
Spot-AE lock button	AE hold	96
Magnification button	2X digital zoom	46
Sharpness	Normal	99
Color mode	Natural Color	98
Data imprinting	Off	97
Instant playback	Off	100
Movie mode	Auto select	104
Audio (movie mode)	On	104
Index playback format	9 frames	111
Duration (Slide Show)	5 seconds	112
Repeat (Slide Show)	No	112
LCD monitor brightness	3	120
EVF brightness	3	120
Audio signals	1	120
Shutter FX	1	120
Volume	2	121
Folder name	Standard	122
Display mode	Standard display, focus frame only, real-time histogram, image only	124
Direct manual focus	Off	125
Auto-power-save period	1 minute	129
File number memory	Off	121
EVF auto switch	Auto EVF/LCD	128
Memory recall	Function dial	129
Control dial (M)	Shutter speed	130
Bracketing	DEC control	131
Manual shift	Off	130
Color profile	Not embedded	131
Delete confirmation	"No"	131

EVF AUTO SWITCH – CONTROLLING THE AUTO-DISPLAY FUNCTION




This option controls the auto-display function in the recording and movie mode (p. 40). The auto-EVF/LCD setting allows the display to switch between the EVF and LCD monitor automatically. The EVF-auto-on setting turns off the LCD monitor and uses the eye sensors to activate only the EVF when in use. This setting will help conserve battery power.

SETTING THE DATE AND TIME

It is important to accurately set the clock. When a still image or a movie clip is recorded, the date and time of the recording are saved with the image and are displayed during playback or can be read with the DiIMAGE Viewer software included on the CD-ROM. The camera's clock is also used with data imprinting.

When the Date/Time-set option is selected and entered, the date/time screen will be displayed. The left/right keys of the controller are used to select the item to be changed and the up/down keys are used to change the value. From left to right, the screen shows the year, month, day, hour, and minute. When the date and time have been adjusted, set the clock by pressing the central button of the controller.

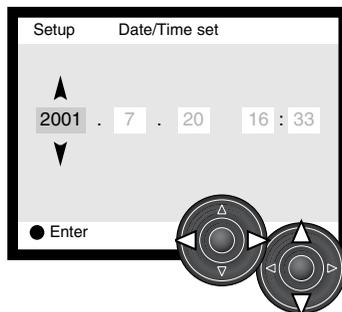

SETTING THE DATE FORMAT

The date format that is displayed or imprinted can be changed: YYYY/MM/DD (year, month, day), MM/DD/YYYY (month, day, year), DD/MM/YYYY (day, month, year). Simply select the format and enter it by pressing the central button of the controller; the new format will be displayed on the menu. This has no affect on the date folder name (p. 122).

VIDEO OUTPUT

Camera images can be displayed on a television (p. 39). The video output can be changed between NTSC and PAL. North America uses the NTSC standard and Europe uses the PAL standard. Check which standard is used in your region to play back images on your television set.

AUTO POWER SAVE

The camera will turn off the EVF and data panel to conserve battery power if no operation is made within a certain period. The length of this period can be changed to 1, 3, 5, or 10 minutes. The auto-power-save option will not affect the display period of LCD monitor; it will shut down after 30 seconds. To restore the displays when they shut down, simply press the shutter-release button or the display-information button. When the camera is connected to the computer, the auto-power-save period is set to ten minutes. This period cannot be changed.

MEMORY RECALL

The control used to recall saved camera settings stored in memory (p. 50) can be changed. Two settings are available:

Function Dial – saved settings are recalled using the function dial only, see page 50 for description.

DSP button – settings can be recalled using the digital-subject-program button (1). Each time the button is pressed, the memory registers are cycled in order. The digital-subject-program indicator shows the selected register. The memory registers can still be selected with the function dial, but the digital subject programs cannot be used. The function dial must be used to store a new set of camera settings (p. 50).





CONTROL DIAL (M)

In manual exposure mode (p. 56), the operation to change the aperture and shutter speed can be reversed. Two settings are available:

Shutter speed – the camera's initial setting as described on page 56. The control dial changes the shutter speed (1). To change the aperture, set the digital effects switch to the exposure compensation position (2), and turn the control dial while pressing the digital effects button (3).

Aperture – the control dial changes the aperture (1). To change the shutter speed, set the digital effects switch to the exposure compensation position (2), and turn the control dial while pressing the digital effects button (3).

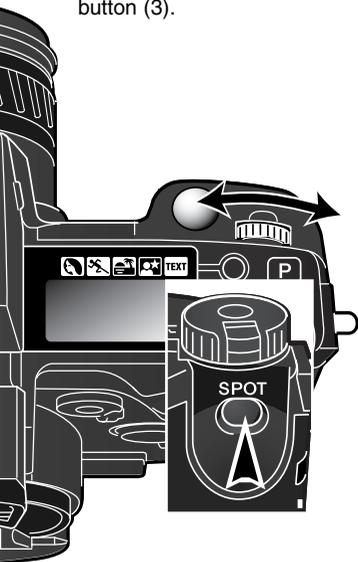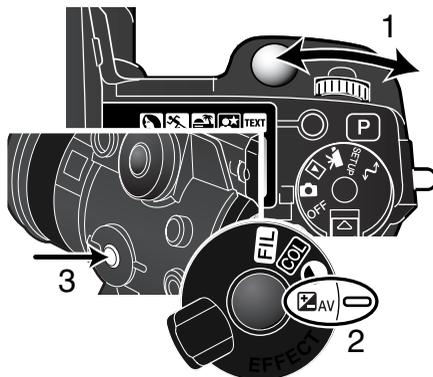

MANUAL SHIFT

In manual exposure mode (p. 56), the shutter speed and aperture value can be changed relative to each other without affecting the total exposure. When this function is active, simply press and hold the spot-AE lock button and turn the control dial to change the shutter speed and aperture combination.

BRACKETING

In the bracketing drive mode (p. 62), the bracket can be changed between the type indicated by the digital-effects switch and exposure brackets only. Two settings are available:

DEC control – the camera's initial setting as described on page 62. The type of bracket depends on the position of the digital-effects switch.

Exposure – only exposure brackets will be made regardless of the position of the digital-effects switch.

COLOR PROFILE

Both the camera's sRGB and Adobe RGB color profile can be automatically embedded into the image file as the picture is captured. To ensure accurate color reproduction when using the Adobe RGB color mode, it is recommended to embed the color profile.

DiMAGE Viewer version 2.1 or later must be used to open images from this camera. When using the Viewer's color-matching function with images with embedded color profiles, the default color space, Original Color Space (sRGB), in the color preference window will automatically distinguish between the camera's sRGB and Adobe-RGB color spaces (p. 99). If the profile is not embedded, the color space must be specified manually between Original Color Space (sRGB) or Original Color Space (Adobe RGB). For more on color matching, refer to the DiMAGE Viewer manual.

DELETE CONFIRMATION

Each time a delete command is used a confirmation screen appears confirming the action to erase the image data. When this screen opens, the no button is highlighted. This function allows the yes button to be initially highlighted to make deleting images easier. Care should be taken when deleting images as the data cannot be retrieved once erased.



DATA-TRANSFER MODE

Read this section carefully before connecting the camera to a computer. Details on using and installing the DiMAGE Viewer software are found in the supplied software manual. The DiMAGE manuals do not cover the basic operation of computers or their operating systems; please refer to the manual supplied with your computer.

SYSTEM REQUIREMENTS

For the camera to be connected directly to the computer and used as a mass-storage device, the computer must be equipped with a USB port as a standard interface. The computer and the operating system must be guaranteed by their manufacturers to support USB interface. The following operating systems are compatible with the camera:

IBM PC / AT Compatible	Macintosh
Windows 98, 98SE, Me, 2000 Professional, and XP.	Mac OS 8.6 ~ 9.2.2 and Mac OS X 10.1 – 10.1.5


Check the Minolta web site for the latest compatibility information:
North America: <http://www.minoltausa.com>
Europe: http://www.minoltaeurope.com/pe/digital/languages_stage.html.

Users with Windows 98 or 98 second edition will need to install the driver software on the included DiMAGE software CD-ROM (p. 136). Users with Mac OS 8.6 will need to download and install a USB mass-storage device from the Apple web site (p. 139). No special driver software is required for other Windows or Macintosh operating systems.


Customers who have bought a DiMAGE 7, 5, S304, S404, X, or 2330 digital camera and have installed the Windows 98 driver software must repeat the installation procedure. The updated version of the driver software included on the supplied DiMAGE software CD-ROM is required for the operation of the DiMAGE 7Hi with a computer. The new software will have no effect on the performance of the DiMAGE 7, 5, S304, S404, X, or 2330.

CONNECTING THE CAMERA TO A COMPUTER

A fresh set of batteries should be used when the camera is connected to a computer. The use of the AC adapter (sold separately) is recommended over the use of batteries. For users with Windows 98 and Mac OS 8.6, read the respective sections on how to connect to the operating system before connecting the camera to a computer.

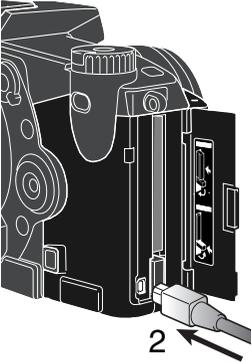


- 1 Start up the computer. The computer must be turned on before connecting the camera.
- 2 Open the card-slot door. Attach the smaller plug of the USB cable to the camera. Make sure the plug is firmly attached.
- 3 Attach the other end of the USB cable to the computer's USB port. Make sure the plug is firmly attached. The camera should be connected directly to the computer's USB port. Attaching the camera to a USB hub may prevent the camera from operating properly.

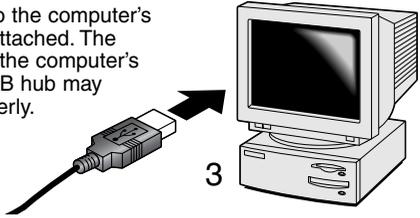

4 With a memory card in the camera, set the mode dial to the data-transfer position; the data-transfer menu will be displayed. To change the card while the camera is connected to a computer, see page 135.

- 5 After using the four-way key of the controller to highlight the USB option in the USB section of the data-transfer menu, press the the right key of the controller; "Enter" should appear on the right side of the screen.
- 6 Press the center of the controller to send a signal to the computer to initiate the USB connection. A screen will appear to indicate the beginning of the connection process. When the signal has been received by the computer, the camera's monitors will turn off.

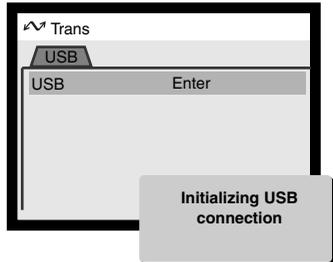




Windows XP


When the camera is properly connected to the computer, a drive icon, or volume, will appear. When using Windows XP or Mac OS X, a window will open requesting instructions on what to do with the image data; follow the directions in the window. If the computer does not recognize the camera, disconnect the camera and restart the computer. Repeat the connection procedure above.



Mac OS X

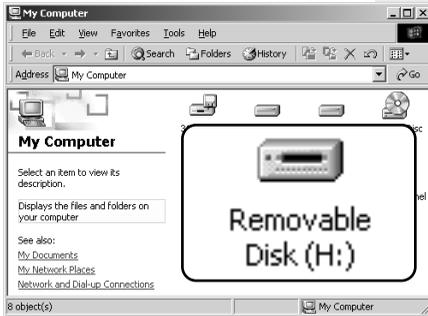

Windows

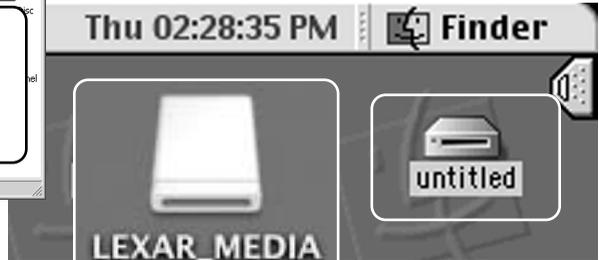

Mac OS X

Mac OS

The volume name varies between memory cards.

CHANGING THE MEMORY CARD (DATA-TRANSFER MODE)



Care should be taken when changing memory cards while the camera is attached to the computer. Data could be lost or damaged if the camera is not properly disconnected. Always confirm the access lamp is out before removing the memory card.

WINDOWS 98 / 98 SECOND EDITION

1. Turn off the camera.
2. Change the memory card.
3. Turn on the camera.
4. Use the data-transfer menu to remake the USB connection.

WINDOWS ME, 2000 PROFESSIONAL, AND XP

1. Stop the USB connection using the unplug-or-eject-hardware routine (p. 142).
2. Turn off the camera.
3. Change the memory card.
4. Turn on the camera.
5. Use the data-transfer menu to remake the USB connection.

MACINTOSH

1. Stop the USB connection by dragging the drive icon into the trash (p. 143).
2. Turn off the camera.
3. Change the memory card.
4. Turn on the camera.
5. Use the data-transfer menu to remake the USB connection.

CONNECTING TO WINDOWS 98 / 98 SECOND EDITION

The driver needs only to be installed once. If the driver cannot be installed automatically, it can be installed manually with the operating system's add-new-hardware wizard; see the instructions on the following page. During installation, if the operating system requests the Windows 98 CD-ROM, inset it into the CD-ROM drive and follow the accompanying instructions on the screen. No special driver software is required for other Windows operating systems.

AUTOMATIC INSTALLATION



Before connecting the camera to the computer, place the DiIMAGE software CD-ROM in the CD-ROM drive. The DiIMAGE installer menu should automatically activate. To automatically install the Windows 98 USB driver, click on the starting-up-the-USB-device-driver-installer button. A window will appear to confirm that the driver should be installed; click "Yes" to continue.

When the driver has been successfully installed, a window will appear. Click "OK." The camera can now be attached to the computer (p. 133).



MANUAL INSTALLATION

To install the Windows 98 driver manually, follow the instruction in the connecting-the-camera-to-a-computer section on page 133.


When the camera is plugged into the computer, the operating system will detect the new device and the add-new-hardware-wizard window will open. Place the DiMAGE software CD-ROM in the CD-ROM drive. Click “Next.”



Choose to specify the location of the driver. The browse window can be used to indicate the driver location. When the location is shown in the window, click “Next.” The driver should be located in the CD-ROM drive at :\\Win98\\USB.




Choose the recommended search for a suitable driver. Click “Next.”

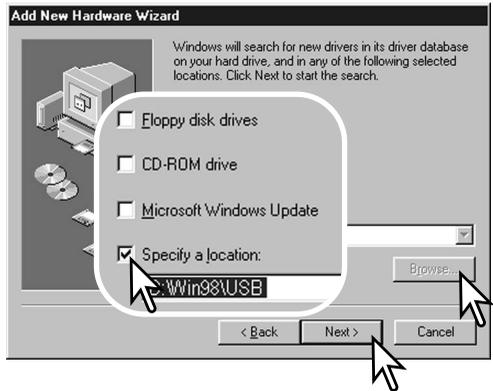



The add new hardware wizard will confirm the location of the driver. One of three drivers may be located: MNLVNUM.inf, USBPDR.inf, or USBSTRG.inf. The letter designating the CD-ROM drive will vary between computers. Click "Next" to install the driver in the system.

The last window will confirm the driver has been installed. Click "Finish" to close the add new hardware wizard.

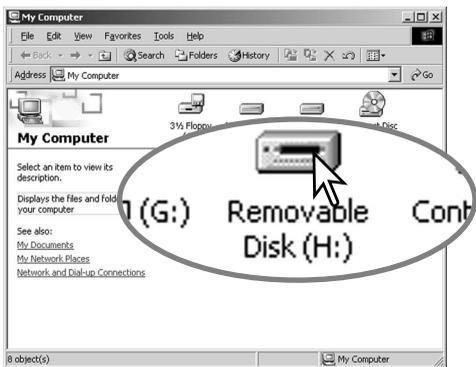

When the my-computer window is opened, a new removable-disk icon will be displayed. Double click on the icon to access the camera's memory card, see page 140.

CONNECTING TO MAC OS 8.6

To access this camera with a computer with Mac OS 8.6, the USB storage support software must be installed first. This software is supplied by Apple Computer, Inc. free of charge. The latest version can be downloaded from the Apple Software Updates web site at <http://www.apple.com/support>.



USB Storage Support 1.3.5.smi

To download and install this software, follow the instruction on the Apple web site. Always read the attached terms and conditions before installing any new software.

QUICKTIME SYSTEM REQUIREMENTS

To install QuickTime, follow the instructions in the installer. Macintosh users can download the latest version of QuickTime free of charge from the Apple Computer web site at <http://www.apple.com>.


IBM PC / AT compatible
Pentium-based computer
Windows 95, 98, 98SE, NT, Me, 2000 Professional, or XP.
32MB or more of RAM
Sound Blaster or compatible sound card
DirectX 3.0 or later recommended

AUTO POWER SAVE (DATA-TRANSFER MODE)

If the camera does not receive a read or write command within ten minutes, it will shut down to save power. When the camera shuts down, an unsafe-removal-of-device warning may appear on the computer monitor. Click "OK." Neither the camera or computer will be damaged in this operation.

Pressing the shutter-release button will reactivate the camera. Remake the USB connection with the data-transfer menu (steps 5 and 6 on page 133).

MEMORY CARD FOLDER ORGANIZATION

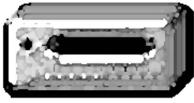

Drive Icon

Once the camera is connected to the computer, image and audio files can be accessed by double clicking on icons. Image folders are located in the DCIM folder. To copying images and audio recordings, simply drag and drop the file icon into a location in the computer. Files and folders on the memory card can be deleted using the computer. Changing file names or adding other types of data to the card with a computer may cause the camera to malfunction. Never format the memory card from the computer; always use the camera to format the card.



Dcim



Misc

The misc. folder contains DPOF print files (p. 114).



100MLT10



10120801



102MLTCP

From left to right: standard folder, date folder (p. 122), and copy folder (p. 116).



PICT0001.TIF



PICT0002.MRW



PICT0003.JPG

Extra fine, fine, or standard image



PICT0004.JPG



PICT0004.THM

Extra fine, fine, or standard image with an embedded color profile.



PICT0005.MOV



PICT0004.THM

Movie clip



PICT0001.THM

Super-fine image



PICT0002.THM

RAW image



PICT0003.WAV

PICT0003's voice-memo file

Image and audio file names begin with "PICT" followed by a four-digit file number and a tif, mrw, jpg, jpe, mov, or thm extension. Voice-memo files have a wav extension and the file name corresponds to its image file. The thumbnail images (thm) are used in camera and DiIMAGE Viewer software operation.

When a new folder is created, the first three digits in the folder name will be one greater than the largest folder number on the card. When the file number in the image file name exceeds 9,999, a new folder will be created with a number one greater than the greatest folder number on the memory card: e.g. from 100MLT10 to 101MLT10.

The file number on the image file may not correspond to its frame number on the camera. As images are deleted in the camera, the frame counter will adjust itself to show the number of images on the card and reassign the frame numbers accordingly. The file numbers on the image files will not change when an image is deleted. When a new image is recorded, it will be assigned a number one greater than the largest file number in the folder. File numbers can be controlled with the file-number-memory function in the advanced 1 section of the setup menu (p. 118).

Camera Notes

Image files contain exif tag data. This data includes the time and date the image was recorded as well as the camera settings used. This data can be viewed with the camera or the DiIMAGE Viewer software.

If a camera image is opened in a photo-retouching application that does not support Exif tags, and then the image is saved overwriting the original data, the exif tag information is erased. When using software other than the DiIMAGE Viewer, always rename the image file to protect the exif tag data.

Camera Notes

To view images correctly on your computer, the monitor's color space may need to be adjusted. Refer to your computer manual on how to calibrate the display to the following requirements: sRGB, with a color temperature of 6500K, and a gamma of 2.2.

DISCONNECTING THE CAMERA FROM THE COMPUTER



Never disconnect the camera when the access lamp is lit – the data or memory card may permanently be damaged.

WINDOWS 98 / 98 SECOND EDITION

Confirm that the access lamp is not lit. Turn the mode dial to another position and then disconnect the USB cable.

WINDOWS ME, 2000 PROFESSIONAL, AND XP



To disconnect the camera, click once on the unplug-or-eject-hardware icon located on the task bar. A small window will open indicating the device to be stopped.



Click on the small window to stop the device. The safe-to-remove-hardware window will open. Turn the mode dial to another position and then disconnect the USB cable.



When more than one external device are connected to the computer, repeat the procedure above except right click on the unplug-or-eject-hardware icon. This will open the unplug-or-eject-hardware window after clicking on the small window indicating the unplug-or-eject-hardware routine.



The hardware devices to be stopped will be displayed. Highlight the device by clicking on it then click "Stop."

A confirmation screen will appear to indicate the devices to be stopped. Clicking "OK" will stop the device.

A third and final screen will appear to indicate the camera can be safely disconnected from the computer; click OK. Turn the mode dial to another position and then disconnect the USB cable.



MACINTOSH

Confirm that the access lamp is not lit and then drag the mass-storage device icon and drop it into the trash. Disconnect the USB cable.



TROUBLESHOOTING

The section covers minor problems with basic camera operation. For major problems or damage to the camera or charger, or if a problem continues to reoccur frequently, contact a Minolta service facility listed on the back cover of this manual.

Problem	Symptom	Cause	Solution
The camera will not work.	Nothing displayed on the data panel or the monitors.	The batteries are dead.	Replace batteries (p. 20).
		The batteries are inserted incorrectly.	Reinsert the batteries taking care that the negative and positive terminals are orientated as indicated on the inside of the battery chamber door (p. 20).
		The AC adapter is not connected properly.	Check that the adapter is connected to the camera and a live electrical outlet (p. 22).
	"Err" displayed on the data panel	The camera is hot or it has been left in a very hot environment.	Turn off the camera and allow it to cool. If "Err" is still displayed on the camera after it cools, remove and replace the batteries or power cord.
Shutter will not release.	"000" is displayed on the frame counter.	Memory card is full and unable to store an image at the image-quality or image-size setting on the camera.	Insert a new memory card (p. 22), delete some images (p. 106), or change the image-quality or image-size setting (p. 80).

Problem	Symptom	Cause	Solution
Shutter will not release.	No-card warning appears on the monitors.	No memory card in the camera.	Insert a memory card (p. 22).
Pictures are not sharp.	Focus signal is red.	Subject is too close.	Make sure the subject is within the autofocus range (0.5m – ∞ / 1.6 ft – ∞) or use the macro mode (p. 47).
		The camera is in macro mode.	Cancel the macro mode setting (p. 47).
		A special situation is preventing the autofocus system from focusing (p. 29)	Use the focus-lock function to focus on an object at the same distance as the subject (p. 28) or use manual focus (p. 43).
	Pictures are taken indoors or in low-light situations without flash.	Slow shutter speeds result in blurred images when the camera is hand-held.	Use a tripod, change the camera sensitivity to a higher setting (p. 70), or use the flash (p. 30).
While using flash, the pictures are too dark.		The subject is beyond the flash range (p. 71).	Move closer to the subject or change the camera sensitivity to a higher setting (p. 70).
A shadow appears on the bottom of the image.	Lens hood mounted when using flash.	The lens hood blocks the light from the built-in flash.	Always remove the lens hood when using the built-in flash.

Problem	Symptom	Cause	Solution
Shooting data is displayed, but live image is entirely black or white.	Camera set to manual-exposure mode (M).	Shutter speed and aperture combination is extremely under or overexposing the live image.	Change the shutter speed or aperture value until an image appears on the monitor (p. 56).
Live image turns black and white.	Camera used under low-light conditions.	With still images, automatic monitor amplification activates under low-light conditions (p. 28). Although the live image is black and white, the recorded still image will be color. In movie recording, the Night Movie mode will record black and white images.	

If the camera does not function normally, turn it off, remove and reinsert the batteries, or unplug and reconnect the AC adapter. Always turn the camera off using the mode dial otherwise the memory card may be damaged and camera settings reset.

The camera temperature rises with extended periods of use. Care should be taken to avoid burns when handling the camera, batteries, or memory card.

WHEN USING FILTERS

Polarizing filters and close-up lenses may cause vignetting at the wide-angle range of the lens (below the 50mm mark on the zooming ring). With very powerful close-up lenses, such as a +3 or Minolta No. 2, vignetting may be noticeable below 100mm. Most step-up rings will cause vignetting. The Minolta Step-up Adapter 49mm to 62mm can be used.

REMOVING THE DRIVER SOFTWARE – WINDOWS

1. Insert a memory card in the camera and connect it to the computer with the USB cable. Other devices must not be connected to the computer during this procedure.

2. Right click on the My-computer icon. Select “properties” from the drop-down menu.

Windows XP: from the start menu go to the control panel. Click on the performance and maintenance category. Click “System” to open the system properties window.

3. Windows 2000 and XP: select the hardware tab in the properties window and click the device-manager button.

Windows 98 and Me: click the device-manager tab in the properties window.

4. The driver file will be located in the universal-serial-bus-controller or other-devices location of the device manager. Click on the locations to display the files. The driver should be indicated with the camera name. Under certain conditions, the driver name may not contain the camera name. However, the driver will be indicated by either a question mark or exclamation point.

5. Click on the driver to select it.

6. Windows 2000 and XP: click on the action button to display the drop-down menu. Select “uninstall.” A confirmation screen will appear. Clicking “Yes” will remove the driver from the system.

Windows 98 and Me: click the remove button. A confirmation screen will appear. Clicking “Yes” will remove the driver from the system.

7. Disconnect the USB cable and turn off the camera. Restart the computer.

CARE AND STORAGE

CAMERA CARE

- Do not subject the camera to shock or impact.
- Turn off the camera when transporting.
- This camera is neither waterproof nor splashproof. Inserting or removing batteries or the memory card, or operating the camera with wet hands may damage the camera.
- When at the beach or near water, take care not to expose the camera to water or sand. Water, sand, dust, or salt can damage the camera.
- Do not leave the camera under direct sunlight. Do not point the lens directly at the sun; the CCD may be damaged.

CLEANING

- If the camera or the outside of the lens is dirty, gently wipe it with a soft, clean, dry cloth. If the camera or lens comes in contact with sand, gently blow away loose particles. Wiping may scratch the surface.
- To clean the lens surface, first blow away any dust or sand, then, if necessary, moisten a lens tissue or soft cloth with lens cleaning fluid and gently wipe the lens.
- Never use organic solvents to clean the camera.
- Never touch the lens surface with your fingers.

STORAGE

- Store in a cool, dry, well-ventilated area away from dust and chemicals. For long periods of disuse, store the camera in an airtight container with a silica-gel drying agent.
- Remove the batteries and memory card from the camera when not in use for extended periods.
- Do not store the camera in an area with naphthalene or mothballs.
- During long periods of storage, operate the camera occasionally. When taking the camera out of storage, check that the camera is functioning properly before using.

OPERATING TEMPERATURES AND CONDITIONS

- This camera has been designed for use in temperatures from 0°C to 40°C (32°F to 104°F).
- Never leave the camera exposed to extreme high temperatures, such as in a car parked in the sun, or to extreme humidity.
- When taking the camera from a cold to a warm environment, place it in a sealed plastic bag to prevent condensation from forming. Allow the camera to come to room temperature before removing it from the bag.

MEMORY CARD CARE AND HANDLING

- The following may cause data loss or damage.
 1. Improper use of the card.
 2. Static electrical discharge or electromagnetic fields near the card.
 3. Removing the card or interrupting the power supply while the camera or computer is accessing the card (reading, writing, formatting, etc.).
 4. The disuse of a card for an extended period.
 5. Using the card beyond its life.

The storage capability of the CompactFlash card will diminish with extended use. It may be necessary to purchase a new card periodically.

Minolta has no responsibility for any loss or damage to data.

It is recommend that a copy of the card data be made on another media such as a computer hard disk or CD-ROM.

- Do not bend, drop, or subject the card to impact.
- Do not touch the electrical contacts of the card with your fingers or metal objects.
- Keep away from heat, moisture, and direct sunlight.
- Keep away from small children.
- When using an IBM Microdrive, do not subject the camera to vibrations.

BATTERIES

- Battery performance decreases with temperature. In cold environments, we recommend keeping spare batteries in a warm place, such as the inside of a coat. Batteries can recover their power when they warm up. As the performance of Ni-MH batteries are less affected by temperature, their use is recommended when shooting in cold environments.
- Remove the batteries when the camera is not in use for an extended period. Leaking battery fluid may damage the battery-chamber.
- Occasionally, when using alkaline batteries, the battery-condition indicator will give a false low-battery-power warning, even though there is enough power capacity. Continue to use the camera; the low-battery indicator will disappear.
- If batteries have been exhausted when used in the camera, do not reload them even if their charge seems to recover over time. These batteries will interfere with normal camera operation.
- A special built-in battery supplies power to the camera clock. If the clock resets when the camera is on, the battery is exhausted. The battery must be replaced at a Minolta service facility. The battery life is approximately five years.

ABOUT NI-MH BATTERIES

- When using Ni-MH batteries, clean both battery terminals with dry cloth to wipe off any dirt or residue. Because of the sophisticated computer system, the camera critically monitors power levels. If the battery terminals are dirty, the camera may give a false low-battery warning. If battery performance is unusually low, wipe the battery terminals with a clean, dry cloth.
- Ni-MH battery performance will decrease if the batteries are often recharged before they have been fully discharged. Completely exhaust the Ni-MH batteries using the camera before charging.
- Recharge the batteries in a battery set simultaneously. It is recommended that the batteries used with the camera are not used with any other device. Always follow the directions and safety instructions in the charger manual.
- When initially using new Ni-MH batteries or Ni-MH batteries that have been stored for a long period, battery performance is not optimal. The performance increases with use; repeat the cycle of fully charging the batteries and then completely discharging them by using the camera several times to increase performance.

LCD MONITOR CARE

- Although the LCD monitor is manufactured using high precision technology, there may occasionally be a lack of color or bright points on the LCD monitor.
- Do not apply pressure to the surface of the LCD monitor; it may be permanently damaged.
- In a cold environment, the LCD monitor may become temporarily dark. When the camera warms up, the display will function normally.
- The LCD monitor may be slow to react in low temperatures or may turn dark in a hot environment. When the camera reaches normal operating temperature, the display will function normally.
- If fingerprints are on the LCD monitor surface, gently wipe with a soft, clean, dry cloth.

COPYRIGHT

- TV program, films, video tapes, photographs, and other materials may be copyrighted. Unauthorized recording or duplication of such material may be contrary to copyright laws. Taking pictures or images of performances, exhibitions, etc. is prohibited without approval and can infringe on copyright. Images protected by copyright can only be used under the provisions within the copyright laws.

BEFORE IMPORTANT EVENTS OR JOURNEYS

- Check the camera's operation; take test pictures and purchase spare batteries.
- Minolta has no responsibility for any damage or loss incurred by equipment malfunction.

QUESTIONS AND SERVICE

- If you have questions about your camera or charger, contact your local camera dealer or write to the Minolta distributor in your area.
- Before shipping your camera or charger for repair, please contact a Minolta Service Facility.

TECHNICAL SPECIFICATIONS

Number of effective pixels:	5.0 million
CCD:	2/3-type interline primary-color CCD with a total of 5.2 million pixels.
Camera sensitivity (ISO):	Auto and 100, 200, 400, and 800 ISO equivalents.
Aspect ratio:	4:3
Lens construction:	16 elements in 13 groups.
Maximum aperture:	f/2.8 (wide-angle position), f/3.5 (telephoto position)
Focal length:	7.2 – 50.8 mm (35mm equivalent: 28 – 200mm)
Focusing range (from the CCD):	0.5 m – infinity (1.6 ft – infinity) 0.25 – 0.6 m (11.8 – 23.6 in) macro mode: telephoto 0.3 – 0.6 m (9.8 – 23.6 in) macro mode: wide-angle
Filter diameter:	49 mm
Autofocusing system:	Video AF
Shutter:	CCD electronic shutter plus mechanical shutter
Built-in flash recycling time:	7s (approx)
Viewfinder LCD:	Ferroelectric 4.8 mm reflective liquid crystal microdisplay.
Monitor LCD:	46 mm (1.8 inch) TFT low-temperature polysilicon display
Field of view:	Approximately 100%
A/D conversion:	12 bits
Recording media:	Type I and II CompactFlash cards, 170MB, 340MB, 512MB, and 1GB IBM Microdrives.
File formats:	JPEG, TIFF, Motion JPEG (mov), WAV, and RAW. DCF 1.0 and DPOF compliant.
Printing output control:	Exif print, PRINT Image Matching II
Menu languages:	English, German, French, and Spanish
Video output:	NTSC and PAL

Batteries:	4 AA Ni-MH or alkaline batteries
Battery performance (recording):	Approx. number of recorded images: 220 frames Based on Minolta's standard test method: 1850mAh Ni-MH batteries, full-size images (2560 X 1920), standard image quality, EVF on, LCD monitor off, flash used with 50% of the frames, no instant playback, no voice memo.
Battery performance (playback):	Approx. continuous playback time: 120 min. Based on Minolta's standard test method: 1850mAh Ni-MH batteries, LCD monitor on, EVF off.
External power source:	AC adapter (AC-1L or AC-2L) High-power battery pack (EBP-100)
Dimensions:	117.0 (W) X 90.5 (H) X 112.5 (D) mm 4.61 (W) X 3.56 (H) X 4.43 (D) in
Weight:	Approximately 530g (18.7 oz) (without batteries or memory card)
Operating temperature:	0° – 40°C (32° – 104°F)
Operating humidity:	5 – 85% (noncondensing)

Specifications are based on the latest information available at the time of printing and are subject to change without notice.

SYSTEM ACCESSORIES

A variety of Minolta accessories can be used with this camera to extend its performance. For more details on the items listed below and in other sections of this manual, contact your local Minolta dealer.

Close-up Diffuser CD-1000

Used directly on the camera with the built-in flash to provide soft lighting for close-up photography.

Several high-quality Minolta flash units can be used with this camera:

Program Flash 3600HS(D)

Program Flash 5600HS(D)

Macro Ring Flash 1200 with Macro Flash Controller

Macro Twin Flash 2400 with Macro Flash Controller

Camera Notes

Minolta Program Flash 3600HS(D), Program Flash 5600HS(D), Macro Ring Flash 1200, and Macro Twin Flash 2400 are compatible with this camera. ADI flash metering (p. 94) will work with both program flashes attached to the accessory shoe. The use of other flash units is not recommended.

With the Program Flash units, the flash-metering mode will automatically switch to pre-flash TTL when the bounce-flash or wireless/remote function is used, or the flashes are connected to the camera with an off-camera cable. Pre-flash TTL (p. 94) automatically activates when using the macro flash units.



When using the Program Flashes, if the flash illumination is uneven at the camera's wide-angle setting, attach the wide-angle adapter to the flash units. With the 3600HS(D), also change the flash metering mode to pre-flash TTL. When the auto-zoom function is used with the Program Flashes, the flash's zoom setting will be wider than the lens setting.

When using the Macro Ring Flash 1200 or Macro Twin Flash 2400 in macro mode (p. 47), light fall off toward the edges of the frame may be noticeable at the wide-angle macro lens position.

FILTER

Filter levels
with color images

For more on Filter effects,
see page 77.

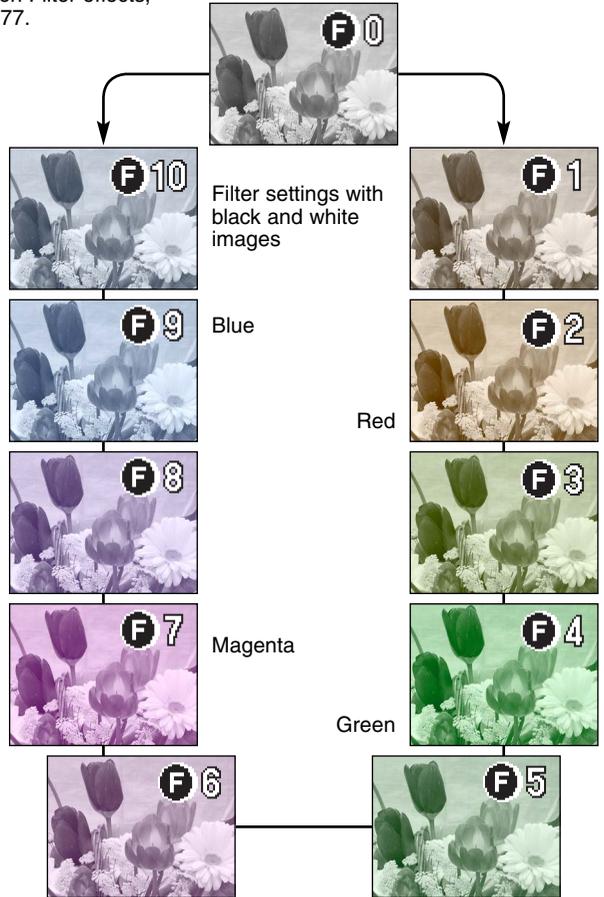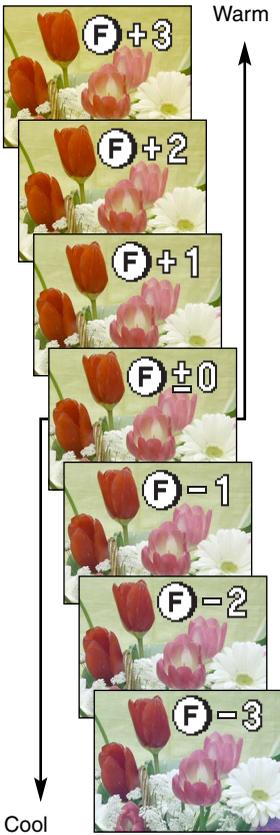



© 2002 Minolta Co., Ltd. under the Berne Convention
and the Universal Copyright Convention.

0-43325-53120-0

Printed in Germany